



# Traction

## Elevator Controller Manual



GAL Manufacturing  
Corp.  
50 East 153rd Street  
Bronx, NY 10451  
**Technical Support:**  
**1-877-425-7778**

## **Foreword**

G.A.L. has developed this manual with usability and safety in mind. General and specific safety notices and precautions are defined in the manual. However, G.A.L. cannot be responsible for any injury to persons or damage to property (including the elevator equipment) resulting from negligence, misuse of the equipment, misinterpretation of instructions included in this manual, or due to any other cause beyond the control of G.A.L.

All drawings, illustrations and information herein are the property of G.A.L. and must not be made public or reproduced by any individual or entity other than the purchaser hereof without the express written permission of G.A.L.

Rev 3.3.15 September 16<sup>th</sup>, 2017

# Table of Contents

Introduction .....	1
1.1 Physical Layout of the Controller .....	2
1.2 Typical Physical Layout.....	2
Figure 1.0: Typical Physical Layout.....	3
1.3 Selector System.....	4
1.4 Tape Selector System.....	4
Figure 1.1: Tape Selector .....	4
Figure 1.2: Tapeless System – Absolute Encoder.....	5
Figure 1.2A: Tapeless System – CAN Open Encoder .....	6
1.5 Tapeless System .....	7
1.6 Secondary Speed Feedback .....	7
1.7 Modes of Operation.....	7
1.8 Operating Sequence.....	7
1.9 Reset Mode .....	8
1.10 Safety String Open Mode .....	9
1.11 Controller Inspection Mode.....	9
1.12 Car Top Inspection Mode.....	9
1.13 Access Mode .....	10
1.14 Independent Service Mode.....	10
1.15 Load Weighing Bypass Mode .....	10
1.16 Attendant Service Mode .....	11
1.17 Code Blue Hospital Service Mode .....	11
1.18 Fire Service Phase I Mode .....	12
1.19 Fire Service Phase I Alternate Return Mode.....	12
1.20 Fire Service Phase II Mode .....	13
1.21 Emergency Power .....	13
1.22 Earthquake Mode .....	13
1.23 Stalled Mode .....	14
1.24 Automatic Mode .....	14
Section 2 - Product Description .....	15
2.1 General Information .....	15
2.2 Site Selection.....	15

2.3 Environmental Considerations.....	15
2.4 Wiring Guidelines and Instructions.....	15
2.5 The Wiring Prints.....	15
2.6 Ground Wiring.....	16
2.7 Hoistway Wiring.....	16
2.8 Elevator Car Wiring .....	16
2.9 Machine Room Wiring .....	16
2.10 Wiring to Top of Car Selector.....	16
2.11 Slowdown Limits .....	16
Table 1: Slowdown Distances from Terminal Landings .....	17
2.12 Normal and Final Limit Switches.....	18
2.13 Tape Selector Installation .....	18
Figure 2.0: Typical Tape Mounting & Magnet Placement .....	20
Figure 2.1: Typical Mounting of Selector .....	23
Figure 2.2: Selector Board GALX-1011BN .....	24
Figures 2.3 & 2.4: Selector Tape Layout & Magnet Placement .....	25
2.14 Tapeless Selector Installation .....	26
Figure 2.5: Tapeless Selector Mounted on Crosshead.....	26
Figure 2.5a: Tapeless Selector Magnet Placement.....	27
Figure 2.6: Door Zone Template Used to Set Selector Distance.....	27
Figures 2.7: Sensor Orientation and Wiring.....	28
Figure 2.8: Sensor Orientation Upside Down .....	29
Figures 2.9 & 2.10: Door Zone Template .....	30
Figure 2.11: Tapeless Selector - Sensor Adjustment.....	31
Figure 2.12: Tapeless Selector – Close-up of Notch & Sensor .....	32
2.15 Tapeless Selector Assembly Installation .....	33
Figure 2.13 Selector, Door zone and Normal Terminal Slowdown Limit Mounting.....	34
Figure 2.14 Placement of Sensor Labels on Selector Box .....	35
Figure 2.15 Typical Selector Box Installation .....	35
Figure 2.16 Typical Slowdown Bracket Installation .....	36
2.16 Transfer Relay Diagram.....	37
Figure 2.13 – All Controllers Off.....	37
Figure 2.14 – Leftmost Controller Off .....	37

Section 3 - Adjustment of the GALaxy controller DSD 412 Drive .....	38
3.1 General Information .....	38
3.2 Check Main Line Voltage.....	38
3.3 SCR Drive Motor Field Current.....	38
3.4 Set Toggle Switches.....	39
3.5 Make Sure the Car Is Safe .....	39
3.6 Check Controller Voltage .....	39
3.7 Verify the Main CPU is Operating .....	39
3.8 Preset Adjustable Variables on Safety Processor Board and Main CPU.....	39
3.9 1066 LCD interface "Adj Var" Menu .....	40
3.10 1021/1101/1005 LCD interface "Adjustable Variables -> Car Motion" Submenu.....	40
3.11 Place Stop Switch in Run Position.....	41
3.12 Hoist Motor Data .....	41
3.13 SCR Drive Self Tune .....	42
3.14 Pre-set the Digital Speed Clamps.....	42
3.15 Ready to Run On Inspection.....	43
Figure 3.1: Inspection String .....	44
3.16 Adjust the Brake Voltage .....	44
3.17 Check the Run Direction .....	45
3.18 Car Runs in the Wrong Direction .....	45
3.19 Drive Trips Immediately.....	45
3.20 Check Inspection Speed .....	46
3.21 Verify Controller Encoder Direction.....	46
3.22 Verify Selector and Slowdown Inputs.....	47
3.23 Verify Car Speed on Safety Processor Board .....	47
3.24 Correct Car Speed When Using a Tape Installed in Hoistway.....	47
3.25 Correct Car Speed When Using 485 Tapeless System .....	47
3.26 Correct Car Speed When Using CAN Open Tapeless System.....	48
3.27 Learn the Hoistway .....	48
3.28 Automatic Run .....	49
3.29 Fine Tune the Ride Quality.....	49
3.30 Adjust the Stop.....	49
Figure 3.2: S-Curve Parameters .....	50

3.31 Adjust the Start .....	50
3.32 Verify Top Speed .....	51
3.33 Adjust Safety Processor Board Speed Clamps .....	51
3.34 Adjust Digital Slowdown Speed Clamps.....	52
Table 3.1: Slowdown Clamps .....	52
3.35 Verify Inspection Velocity Clamp On Safety Processor Board .....	52
3.36 Analog Load Weigher Setup.....	53
3.37 Empty Car Setup.....	53
3.38 Full Car Setup .....	53
3.39 Load Weighing Calibration Sequence .....	54
3.40 Adjust the Motor Pre-torque .....	54
3.41 Verify the Doors Are Safe.....	55
3.42 Fine Tune the Ride Quality.....	55
Section 4 - Adjustment of the GALaxy controller HPV-600/900 (Induction Motor- Geared Machine).....	57
4.1 General Setup .....	57
4.2 Check Main Line Voltage.....	57
4.3 Set Toggle Switches.....	57
4.4 Make Sure the Car Is Safe .....	58
4.5 Check Controller Voltage .....	58
4.6 Verify the Main CPU is Operating .....	58
4.7 Preset Adjustable Variables on Safety Processor Board And Main CPU.....	58
4.8 1066 LCD interface "Adj Var" Menu .....	58
4.9 1021/1101/1005 LCD interface "Adjustable Variables -> Car Motion" Submenu .....	59
4.10 Place Stop Switch in Run Position .....	59
4.11 Hoist Motor Data .....	60
4.12 Pre-set the Digital Speed Clamps.....	61
4.13 Ready to Run On Inspection.....	61
Figure 4.1: Inspection String .....	63
4.14 Adjust the Brake Voltage .....	63
4.15 Check the Run Direction .....	64
4.16 Car Runs the Wrong Direction .....	64
4.17 Drive Trips Immediately .....	65
4.18 Car Runs Extremely Slow .....	66

4.19 Check Inspection Speed .....	66
4.20 Verify Controller Encoder Direction.....	67
4.21 Verify Car Speed on Safety Processor Board .....	67
4.22 Correct Car Speed When Using a Tape .....	68
4.23 Correct Car Speed When Using 485 Tapeless System .....	68
4.24 Correct Car Speed When Using CAN Open Tapeless System.....	68
4.25 Learn the Hoistway .....	69
4.26 Automatic Run .....	70
4.27 Drive Adaptive Tune.....	70
4.28 Fine Tune the Ride Quality.....	70
4.29 Adjust the Stop.....	71
Figure 4.2: S-Curve Parameter .....	72
4.30 Adjust the Start .....	72
4.31 Verify Top Speed .....	72
4.32 Adjust Safety Processor Board Speed Clamps .....	72
4.33 Adjust Digital Slowdown Speed Clamps.....	73
Table 4.1: Slowdown Clamps .....	74
4.34 Verify Inspection Velocity Clamp on Safety Processor Board.....	74
4.35 Analog Load Weigher Setup.....	74
4.36 Empty Car Setup.....	75
4.37 Full Car Setup .....	75
4.38 Load Weighing Calibration Sequence .....	76
4.39 Adjust the Motor Pre-torque .....	76
4.40 Verify the Doors Are Safe.....	77
4.41 Fine Tune the Ride Quality.....	77
Section 5 - Adjustment of the GALaxy Non- Distance Feedback controller - HPV-600/900.....	79
5.1 General Setup .....	79
5.2 Check Main-line Voltage .....	79
5.3 Set Toggle Switches.....	79
5.4 Make Sure the Car Is Safe .....	80
5.5 Check Controller Voltage .....	80
5.6 Verify the Main CPU is Operating .....	80
5.7 Preset Adjustable Variables on Safety Processor Board And Main CPU.....	80

5.8 1066 LCD interface "Adj Var" Menu .....	80
5.9 1021/1101/1005 LCD interface "Adjustable Variables -> Car Motion" Submenu .....	81
5.10 Place Stop Switch in Run Position .....	81
5.11 Hoist Motor Data .....	81
5.12 HPV 900/600 Drive.....	81
5.13 GPD 515 Drive .....	84
5.14 Ready to Run On Inspection.....	85
Figure 5.1: Inspection String Circuit .....	86
5.15 Adjust the Brake Voltage .....	87
5.16 Check Run Direction.....	87
5.17 Car Runs Wrong Direction.....	88
5.18 Verify Encoder Connection .....	88
5.19 Check Inspection Speed .....	89
5.20 Check Selector Inputs.....	89
5.21 Verify Slowdown Limits.....	89
5.22 Verify Car Speed on Safety Processor Board .....	90
5.23 Correct Car Speed When Using a Tape .....	90
Figure 5.2: Selector Magnet Placement .....	90
5.24 Automatic Run .....	91
5.25 Adjust the Drive Speed Profile .....	91
5.26 Drive Adaptive Tune (HPV 900 /600 Only).....	92
5.27 Adjust the Stop.....	92
5.28 Adjust the Start .....	93
5.29 Adjust Safety Processor Board Speed Clamps .....	93
Table 5.1: Slowdown Clamps .....	94
5.30 Verify Inspection Velocity Clamp on Safety Processor Board .....	95
5.31 Analog Load Weigher Setup.....	95
5.32 Empty Car Setup.....	95
5.33 Full Car Setup .....	96
5.34 Load Weighing Calibration Sequence .....	97
5.35 Check the Doors .....	97
5.36 Fine Tune Ride and Stops.....	97
Section 6 - Adjustment of the GALaxy Controller DC Quattro Drive.....	98

6.1 General Information .....	98
6.2 Check Main Line Voltage.....	98
6.3 Set Toggle Switches.....	98
6.4 Make Sure the Car Is Safe .....	99
6.5 Check Controller Voltage .....	99
6.6 Verify the Main CPU is Operating .....	99
6.7 Preset Adjustable Variables on Safety Processor Board and Main CPU .....	99
6.8 1066 LCD interface "Adj Var" Menu.....	99
6.9 1021/1101/1005 LCD interface "Adjustable Variables ->Car Motion" Submenu .....	100
6.10 Place Stop Switch in Run Position .....	100
6.11 Hoist Motor Data .....	101
6.12 Quattro Drive Self-Tune .....	101
6.13 Pre-set the Digital Speed Clamps.....	102
6.14 Ready to Run On Inspection.....	103
Figure 6.1: Inspection String Circuit .....	104
6.15 Adjust the Brake Voltage .....	105
6.16 Check the Run Direction .....	105
6.17 Car Runs in The Wrong Direction.....	105
6.18 Drive Trips Immediately .....	106
6.19 Check Inspection Speed .....	106
6.20 Verify Controller Encoder Direction.....	107
6.21 Verify Selector and Slowdown Inputs.....	107
6.22 Verify Car Speed on Safety Processor Board .....	107
6.23 Correct Car Speed When Using A Tape Installed In Hoistway .....	108
6.24 Correct Car Speed When Using 485 Tapeless System.....	108
6.25 Correct Car Speed When Using CANOpen Tapeless System .....	108
6.26 Learn the Hoistway .....	109
6.27 Automatic Run .....	110
6.28 Fine Tune the Ride Quality.....	110
Figure 6.2: S-Curve Parameters.....	110
6.29 Adjust the Stop.....	111
6.30 Adjust the Start .....	112
6.31 Verify Top Speed .....	112

6.32 Adjust Safety Processor Board Speed Clamps .....	112
6.33 Adjust Digital Slowdown Speed Clamps.....	113
Table 6.1: Slowdown Clamps .....	114
6.34 Verify Inspection Velocity Clamp On Safety Processor Board .....	114
6.35 Analog Load Weigher Setup.....	114
6.36 Empty Car Setup.....	115
6.37 Full Car Setup .....	115
6.38 Load Weighing Calibration Sequence .....	116
6.39 Adjust the Motor Pre-torque.....	116
6.40 Verify the Doors Are Safe.....	117
6.41 Fine Tune the Ride Quality.....	117
Section 7 - Adjustment of the GALaxy Combivert F5 AC Drive .....	119
7.1 General Setup .....	119
7.2 Check Main Line Voltage.....	119
7.3 Set Toggle Switches.....	119
7.4 Make Sure the Car Is Safe .....	120
7.5 Check Controller Voltage .....	120
7.6 Verify the Main CPU is Operating .....	120
7.7 Preset Adjustable Variables On Safety Processor Board And Main CPU .....	120
7.8 1066 LCD interface "Adj Var" Menu .....	120
7.9 1021/1101/1005 LCD interface "Adjustable Variables -> Car Motion" Submenu .....	121
7.10 Place Stop Switch in Run Position .....	121
7.11 Hoist Motor Data .....	122
7.12 Pre-set the Digital Speed Clamps.....	123
7.13 Adjust the Brake Voltage .....	124
7.14 Motor Learn Procedure .....	124
7.15 Encoder Learn Procedure, v1.62 (Unroped machine).....	125
7.16 Encoder Learn Procedure, v1.72 (Unroped or Roped machine).....	125
7.17 Check Inspection Speed .....	126
7.18 Verify Controller Encoder Direction.....	127
7.19 Run The Car On Inspection With The Ropes On The Sheave Of The Motor .....	127
7.20 Ready to Run On Inspection.....	127
Figure 7.1: Inspection String Circuit.....	129

7.21 Verify Selector and Slowdown Inputs .....	129
7.22 Verify Car Speed on Safety Processor Board .....	130
7.23 Correct Car Speed When Using a Tape.....	130
7.24 Correct Car Speed When Using 485 Tapeless System .....	130
7.25 Correct Car Speed When Using CAN Open Tapeless System .....	131
7.26 Learn the Hoistway .....	131
7.27 Automatic Run .....	132
7.28 Fine Tune the Ride Quality.....	133
7.29 Adjust the Stop.....	133
7.30 Adjust the Start .....	134
Figure 7.2: Speed clamps .....	136
7.31 Adjust Safety Processor Board Speed Clamps .....	136
7.32 Adjust Digital Slowdown Speed Clamps.....	137
Table 7.1: Slowdown Clamps .....	137
7.33 Verify Inspection Velocity Clamp on Safety Processor Board .....	138
7.34 Analog Load Weigher Setup.....	138
7.35 Empty Car Setup.....	138
7.36 Full Car Setup .....	139
7.37 Load Weighing Calibration Sequence .....	140
7.38 Adjust the Motor Pre-torque .....	140
7.39 Verify the Doors Are Safe.....	141
7.40 Fine Tune the Ride Quality.....	141
Section 8 - Adjustment of the GALaxy - HPV- 900 Permanent Magnet AC Gearless Motor .....	143
8.1 General Setup .....	143
8.2 Check Main Line Voltage.....	143
8.3 Set Toggle Switches.....	143
8.4 Make Sure the Car Is Safe .....	143
8.5 Check Controller Voltage .....	144
8.6 Verify the Main CPU is Operating .....	144
8.7 Preset Adjustable Variables on Safety Processor Board And Main CPU.....	144
8.8 1066 LCD interface "Adj Var" Menu .....	144
8.9 1021/1101/1005 LCD interface "Adjustable Variables -> Motion" Submenu .....	145
8.10 Place Stop Switch in Run Position .....	145

8.11 Hoist Motor Data .....	145
8.12 Pre-set the Digital Speed Clamps .....	147
8.13 PM Start-Up Procedure .....	148
8.14 Adjust the Brake Voltage .....	148
8.15 Encoder Learn Procedure and Motor Auto Tune Procedure .....	148
8.16 Check Inspection Speed .....	149
8.17 Verify Controller Encoder Direction.....	149
8.18 Ready to Run On Inspection.....	150
Figure 8.1: Inspection String Circuit .....	151
8.19 Verify Selector and Slowdown Inputs .....	151
8.20 Verify Car Speed on Safety Processor Board .....	152
8.21 Correct Car Speed When Using a Tape .....	152
8.22 Correct Car Speed When Using 485 Tapeless System .....	152
8.23 Correct Car Speed When Using CAN Open Tapeless System .....	153
8.24 Learn the Hoistway .....	153
8.25 Automatic Run .....	154
8.26 Fine Tune the Ride Quality.....	154
Figure 8.2: S-Curve Parameters.....	155
8.27 Adjust the Stop.....	155
8.28 Adjust the Start .....	156
8.29 Verify Top Speed .....	156
8.30 Adjust Safety Processor Board Speed Clamps .....	157
8.31 Adjust Digital Slowdown Speed Clamps .....	157
Table 8.1: Slowdown Clamps .....	158
8.32 Verify Inspection Velocity Clamp On Safety Processor Board .....	158
8.33 Analog Load Weigher Setup.....	158
8.34 Empty Car Setup.....	159
8.35 Full Car Setup .....	159
8.36 Load Weighing Calibration Sequence .....	160
8.37 Adjust the Motor Pre-torque .....	160
8.38 Verify the Doors Are Safe.....	161
8.39 Fine Tune the Ride Quality.....	161
Section 9 - Troubleshooting .....	163

9.1 General Information.....	163
9.2 Microprocessor CPU.....	163
9.3 Input/Output Boards.....	163
Figure 9.0 - High Voltage & Low Voltage .....	164
Figure 9.1 Run Sequence.....	165
Figure 9.2 – Safety Processor Board.....	166
9.4 System Faults .....	167
Section 10 – 1021/1101/1005 LCD Interface.....	168
10.1 Operating the 1021/1101/1005 LCD Interface .....	168
10.2 1021/1101/1005 LCD Interface Main Menu.....	169
10.3 Elevator Status .....	169
10.4 Elevator Service.....	170
10.5 Fault Status .....	170
10.6 Elevator Status .....	173
10.7 Door Status.....	173
10.8 Rear Door Status .....	174
10.9 Set Calls and Lockouts.....	175
10.10 Car Call Test.....	175
10.10a CAN Encoder Comm Status Submenu.....	176
10.10b UPS Comm Status Submenu .....	176
10.11 Lockouts Front Car Calls.....	176
10.12 Car/Group Inputs & Outputs.....	176
10.13 Job Statistics – Clear Job Statistics .....	176
10.14 Adjustable Variables .....	177
10.15 Car Timers .....	177
10.16 Date and Time.....	177
10.17 Diagnostics .....	177
10.18 View System Status.....	177
10.19 Group Comm Status.....	177
10.20 Car Comm Status.....	178
10.21 Drive Comm Status .....	178
10.22 Software Utilities.....	178
10.23 LCD Interface - SD Card Read - Write Data Submenu.....	178

10.24 LCD Interface - Power-Up Mode .....	178
10.25 LCD Interface - Update - Verify Program Submenu .....	178
10.26 Select Video Display .....	178
10.27 Display Hoistway Table .....	179
10.28 Auto/Inspection Learn Hoistway .....	179
10.29 DZ & DZ Offset, Sel Cnt .....	179
10.30 FL & FL Offset Count .....	179
10.31 Reset Update Count Trig, Pulse Count Update Data.....	179
10.32 Elevator Setup/Speed Clamps.....	180
10.33 Inspection Open – Close Doors.....	180
10.34 Lift Brake on Inspection .....	180
10.35 Load Weigher Setup.....	180
10.36 View - Modify Load Weigher Limits .....	180
10.37 Calibrate Load Weigher .....	180
10.38 Counterweight & Buffer Test .....	181
10.39 Overspeed Test .....	181
10.40 Reset Gripper Menu.....	181
10.41 Fault Log.....	181
LCD Interface Flowcharts .....	182
LCD Interface Main Menu .....	182
LCD Interface Main Menu - Elevator Status.....	183
LCD Interface - Set Calls and Lockouts .....	184
LCD Interface - Car Call Test Submenu.....	185
LCD Interface - Lockout Front Car Calls Submenu .....	186
LCD Interface Main Menu - Inputs and Outputs.....	187
LCD Interface Main Menu - Job Statistics .....	188
LCD Interface Main Menu - Adjustable Variables.....	189
LCD Interface Main Menu - Car Timers Submenu .....	190
LCD Interface Main Menu - Date and Time .....	191
LCD Interface Main Menu - Diagnostics.....	192
LCD Interface - View System Status Log Submenu .....	193
LCD Interface - Group Comm Status Submenu.....	194
LCD Interface – Car Comm Status Submenu.....	195

LCD Interface CAN Encoder Comm Status .....	196
LCD Interface – UPS Comm Status Submenu .....	197
LCD Interface - Drive Comm Status Submenu .....	198
LCD Interface Main Menu - Software Utilities .....	199
LCD Interface - SD Card Read - Write Data Submenu .....	200
LCD Interface - Power-Up Mode .....	201
LCD Interface - Update - Verify Program Submenu .....	202
LCD Interface Main Menu - Select Video Display .....	203
LCD Interface Main Menu - Hoistway Tables – Display - Mod Hoistway Tables Submenu .....	204
LCD Interface - Hoistway Tables - Learn Hoistway Submenu .....	205
LCD Interface Main Menu - DZ & DZ Offset, Sel Cnt Submenu.....	206
LCD Interface Main Menu - FL & FL Offset, Sel Cnt Submenu .....	207
LCD Interface Main Menu - Reset Update Count Trig, Pulse Count Update Data Submenu.....	208
LCD Interface Main Menu - Elevator Setup .....	209
LCD Interface - Open - Close doors .....	210
LCD Interface - Lift Brake On Inspection Submenu.....	211
LCD Interface - Load Weigher Setup Submenu.....	212
LCD Interface - View - Modify Load Weigher Limits .....	213
LCD Interface - Calibrate Load Weigher.....	214
LCD Interface - Car Buffer Test Submenu .....	215
LCD Interface – Overspeed Test Submenu .....	215
LCD Interface - Reset Gripper Fault .....	217
LCD Interface - Fault Log .....	218
Section 10a - Service Activation Timers .....	219
LCD Interface Main Menu - Service Activation Timer .....	221
LCD Interface - Set Month/Day Timers Submenu.....	222
LCD Interface - Clear Timer Submenu.....	223
LCD Interface - Copy Day of Week Timers Submenu .....	223
LCD Interface – View/Modify Timer Status Submenu .....	224
LCD Interface - Set Timer Service Submenu .....	225
LCD Interface - Set Day of Week Timers Submenu.....	226
Section 11 Main CPU Faults .....	227
Determining “Gripper/EBK Fault” Device .....	296

11.1 Detailed Faults .....	297
Car Com Device Reset – HC Com Device Reset.....	306
Serial Hall Calls – Secondary Device.....	307
Serial RGB Car Stations – Secondary Device & Specific I/O .....	307
Section 12 Combined Field Adjustable Variables.....	309
Section 13 - Safety Processor 1066 LCD Interface.....	403
Operating the 1066 LCD Interface .....	403
Safety Processor Functions .....	405
1066 LCD Interface Main Menu .....	406
1066 LCD Interface Elevator Service .....	407
Table 1: Safety Processor Elevator Service.....	408
1066 LCD Interface Car Speed.....	409
1066 LCD Interface Encoder Comm .....	409
1066 LCD Interface Encoder Status.....	410
1066 LCD Interface Pulse Count.....	411
1066 LCD Interface Adjustable Variables.....	412
1066 LCD Interface Inputs & Outputs .....	413
Table 3: Safety Processor Inputs & Outputs .....	414
1066 LCD Interface Limit Velocity .....	416
1066 LCD Interface Faults .....	417
Table 2: Safety Processor Faults .....	418
1066 LCD Interface Clear Faults .....	421
1066 LCD Interface Reset Fault Latch .....	421
1066 LCD Interface Board Temperature .....	422
1066 LCD Interface External Temperature .....	422
Section 14 - GALX-0320AN NTSD Board.....	423
Appendix A - Mnemonics.....	429
Appendix B - Compliance Testing .....	436
1.0 Overspeed Test on a DSD-412 .....	437
2.0 Overspeed Test on a KEB Drive (For AC Geared & PM Gearless) .....	438
3.0 Overspeed Test on a HPV-600/900 W Distance Feedback (Also For Quattro Cube).....	438
4.0 Buffer Test.....	439
5.0 Normal Terminal Slowdown Test.....	440

6.0 Emergency Terminal Limit Test.....	441
7.0 Reset Gripper Fault or Emergency Brake Fault .....	442
AppendixC – GALX-1100 CPU.....	443
GALX-1100 CPU (Replacement CPU for TS-5300board) .....	444
GALX-1100 CPU .....	444
GALX-1100 CPU Board Replacement- Installation .....	444
LCD Display .....	446
Software UtilitiesMenu.....	448
SD Card Read/WriteData .....	450
Detailed Fault Data.....	453

The label **WARNING** identifies procedures and practices that may result in personal injury and/or equipment damage if not correctly followed.

The label **NOTE** identifies information intended to be helpful in the described procedure or practice.

**WARNING:** Installation and wiring must be in accordance with the national electrical code, all local codes, and all elevator safety codes and standards. The 3-phase AC power supply to the equipment must originate from a properly fused disconnect or circuit breaker (not capable of delivering more than 10,000 RMS symmetrical amperes). Improper motor branch circuit protection will void warranty and may create a hazardous condition.

**WARNING:** Wiring to the controller terminals must be installed in a careful, neat manner. Stranded wire conductors must not have strands left out of the terminals. Leaving strands of wire out of the terminals creates potential shorts. All terminals and cable connectors must be seated properly.

**WARNING:** Elevator control products must be installed by elevator personnel who have been trained in the construction, maintenance, repair, inspection, and testing of elevator equipment. The elevator personnel must comply with all applicable safety codes and standards.

**WARNING:** This equipment is an O.E.M. product designed and built to comply with CSA B44.1/ASME A17.5, and the national electrical code, and it must be installed by a qualified contractor. It is the responsibility of the contractor to make sure that the installation is performed safely, and that it complies with all applicable codes.

**WARNING:** Proper grounding is vitally important to the safe and successful operation of this system. A separate ground wire should be installed from the building earth ground to the earth ground terminal in each controller. Proper conductor size must be utilized for grounding. In order to minimize resistance to ground, the shortest possible route should be used for the ground conductor. See national electrical code article or related local applicable code.

**WARNING:** Use only the correct rated fusing for controller protection. Use of improperly rated fusing will void the warranty.

**NOTE:** Every precaution, whether or not specifically stated in this document, should be taken when installing, adjusting or servicing any elevator. All safety precautions should be followed to make sure life and limb of the service person and public is not endangered.

**NOTE:** Keep the control room/control space clean. Do not install the controller in a dusty area. Do not install the controller in a carpeted area. Keep control room/control space temperature between 32 F and 110 F. Avoid condensation on the equipment. Do not install the controller in a hazardous location and where excessive amounts of vapors or chemical fumes may be present. Make sure that the power supply feeding the elevator controller does not fluctuate more than +/- 10 percent

# Introduction

The GALaxy traction elevator controller is a computer-based system that offers superior performance, flexibility and reliability. It has been designed to save time in installation and troubleshooting, but it is still very important that the field personnel familiarize themselves with this manual before attempting to install the equipment.

## Specifications:

- Environment:
- 35° F to 110° F ambient
- 12,000 feet altitude
- 95% humidity

## Standard Features:

- CSA B44.1 / ASME A17.5
- Inspection Operation (car top and controller)
- Access Operation
- Independent Service
- Fire Service Phase I
- Fire Service Phase I Alternate Return
- Fire Service Phase II
- Emergency Power
- Earthquake Service
- On Board Diagnostics LEDs
- On Board LCD Interface
- Motor Protection Timers
- Door Motor Protection Timer
- Field Adjustable Parameters
- Elevator Duty Rated NEMA Motor

## Optional Features:

- Selective Rear Doors

- Attendant Service
- Code Blue Hospital Service
- Security
- Remote Diagnostics
- Emergency Power

## 1.1 Physical Layout of the Controller

### 1.2 Typical Physical Layout

Figure 1.0 shows a typical layout of the GALaxy controller in a standard G.A.L. cabinet. Below, is a brief description of each block:

1. Main Control Board: The 1064 main control board contains input and output devices, controller switches, fuses and field wiring terminal connections.
2. Safety Processor Board: The Safety Processor board uses a microprocessor and a PAL device to implement the independent speed and redundancy checks required for A17.1-2000 compliance. This board has its own LCD interface for parameter adjustment and diagnostics.
3. Main CPU: The TS-5300 computer board is a single board IBM compatible computer (see Appendix C for GALX-1100 information.). It executes the program and turns on and off the inputs and outputs.
4. LCD Interface: The 1021/1101/1005 LCD Interface board provides a user interface to all controller adjustment and setup parameters. It also shows diagnostic information.
5. Power Supply: The power supply provides power to the computer and its peripheral boards. It is a 5-volt DC regulated power supply rated at 3 amps with overvoltage, and short circuit protection.
6. Dynamic Braking Resistors: Additional space for dynamic braking resistors and brake resistors.
7. Options: This section of the controller can be used for options such as the Hall Call I/O board, job specific I/O expansion and a digital PI display driver.
8. Transformer: The system transformer is located in the lower part of the cabinet. It is usually a 500VA building power to 120VAC transfer. It is used to convert the building power to a lower voltage for the signals and other controller functions.
9. Contactors: These are various contactors used for the brake, brake cooling, and run control.
10. Drive: Magnetek DSD-412 DC SCR Drive, Magnetek DC Quattro, HPV- 600/900/900 PM or KEB Combivert F5.
11. Motor Contactors: DC or AC rated motor contactor sized for each specific job.
12. Ground Terminal: The ground terminal block is where the earth ground is attached.

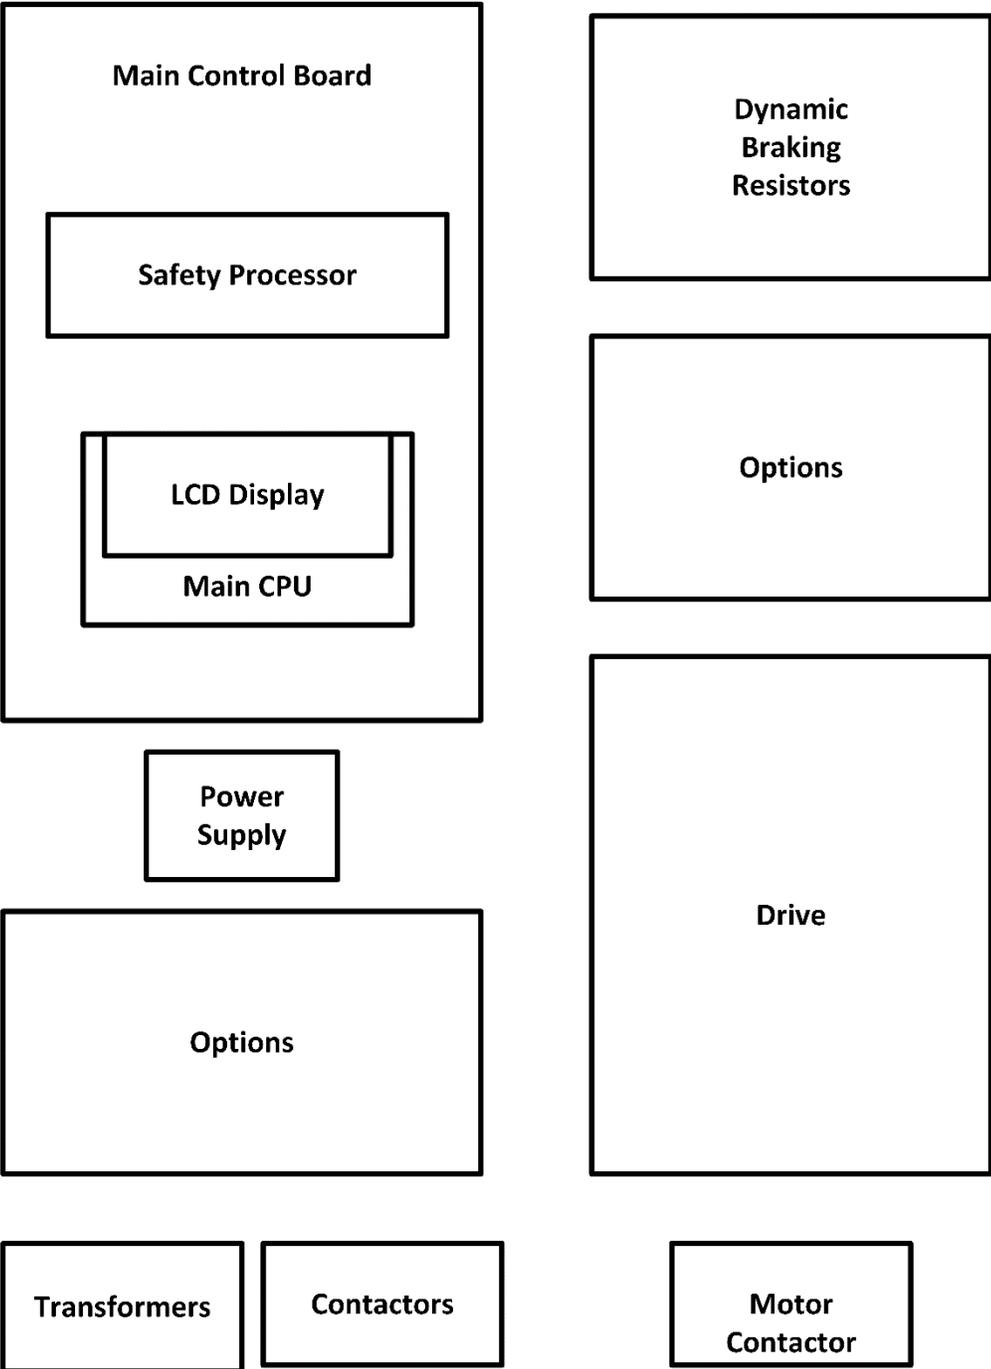


Figure 1.0: Typical Physical Layout

### 1.3 Selector System

The selector system for the GALaxy controller can be either a tape system or tapeless one.

### 1.4 Tape Selector System

The tape system uses a perforated steel tape that is hung the length of the Hoistway. A set of magnets are placed on the tape at each floor having one 8" magnet as the door zone magnet and one to five smaller 2" magnets as binary position preset magnets. The selector is mounted on the car and is guided along the tape by nylon guides to keep the tape and magnets the proper distance from the selector sensors. The controller uses the door zone magnet to determine the elevator's level position relative to the floor. At the dead level position, the binary preset inputs are read in order to verify that the car is at the correct floor. A block diagram of the tape system is shown in Figure 1.1.

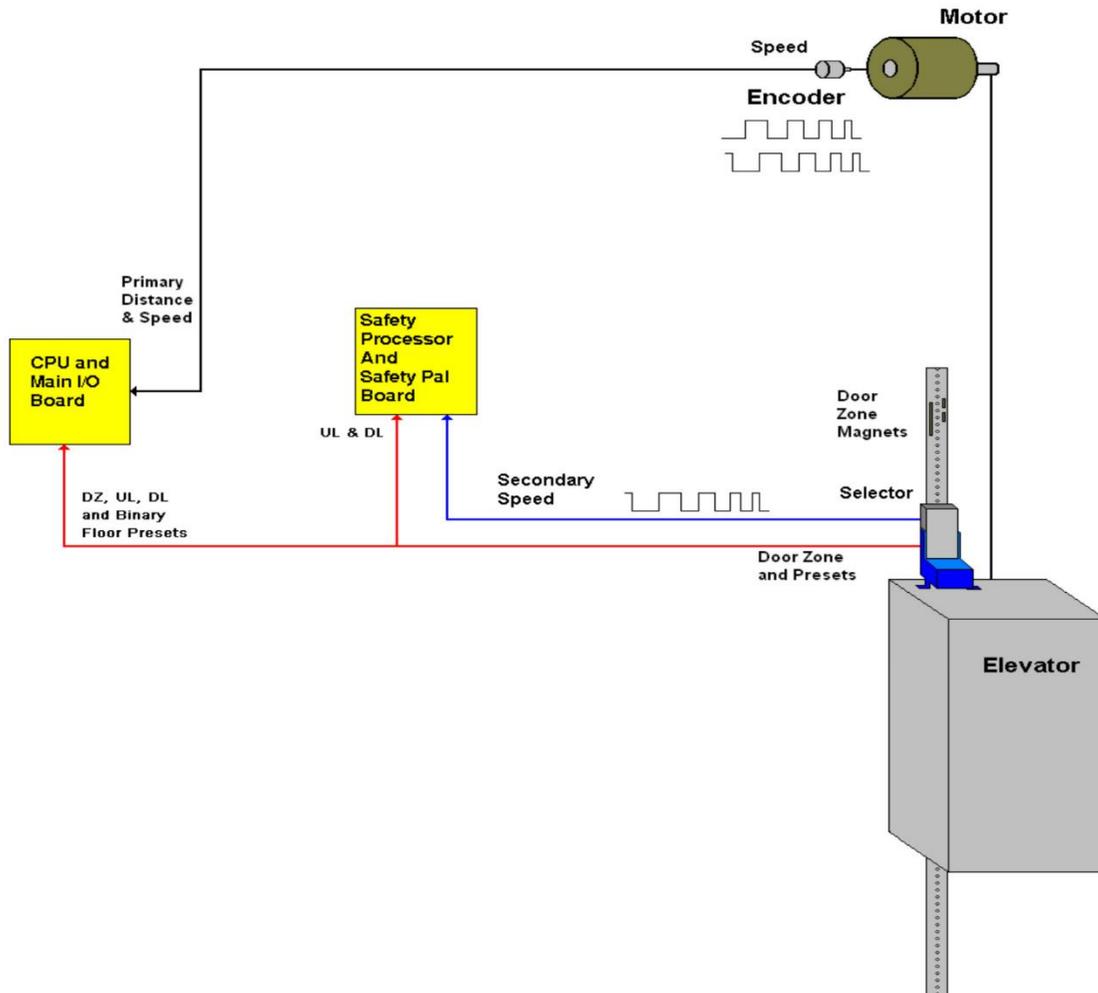


Figure 1.1: Tape Selector

Figure 1.2: Tapeless System – Absolute Encoder


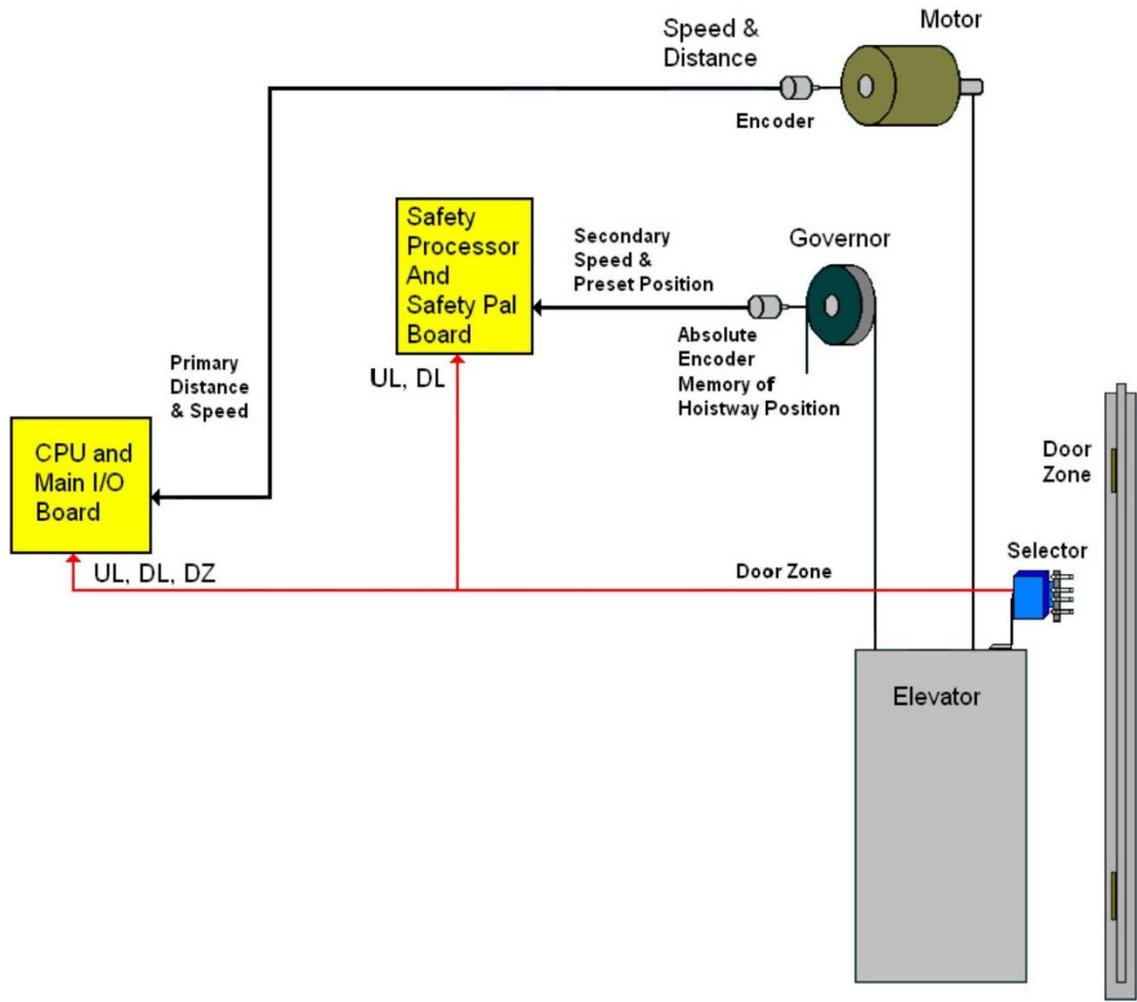


Figure 1.2A: Tapeless System – CAN Open Encoder

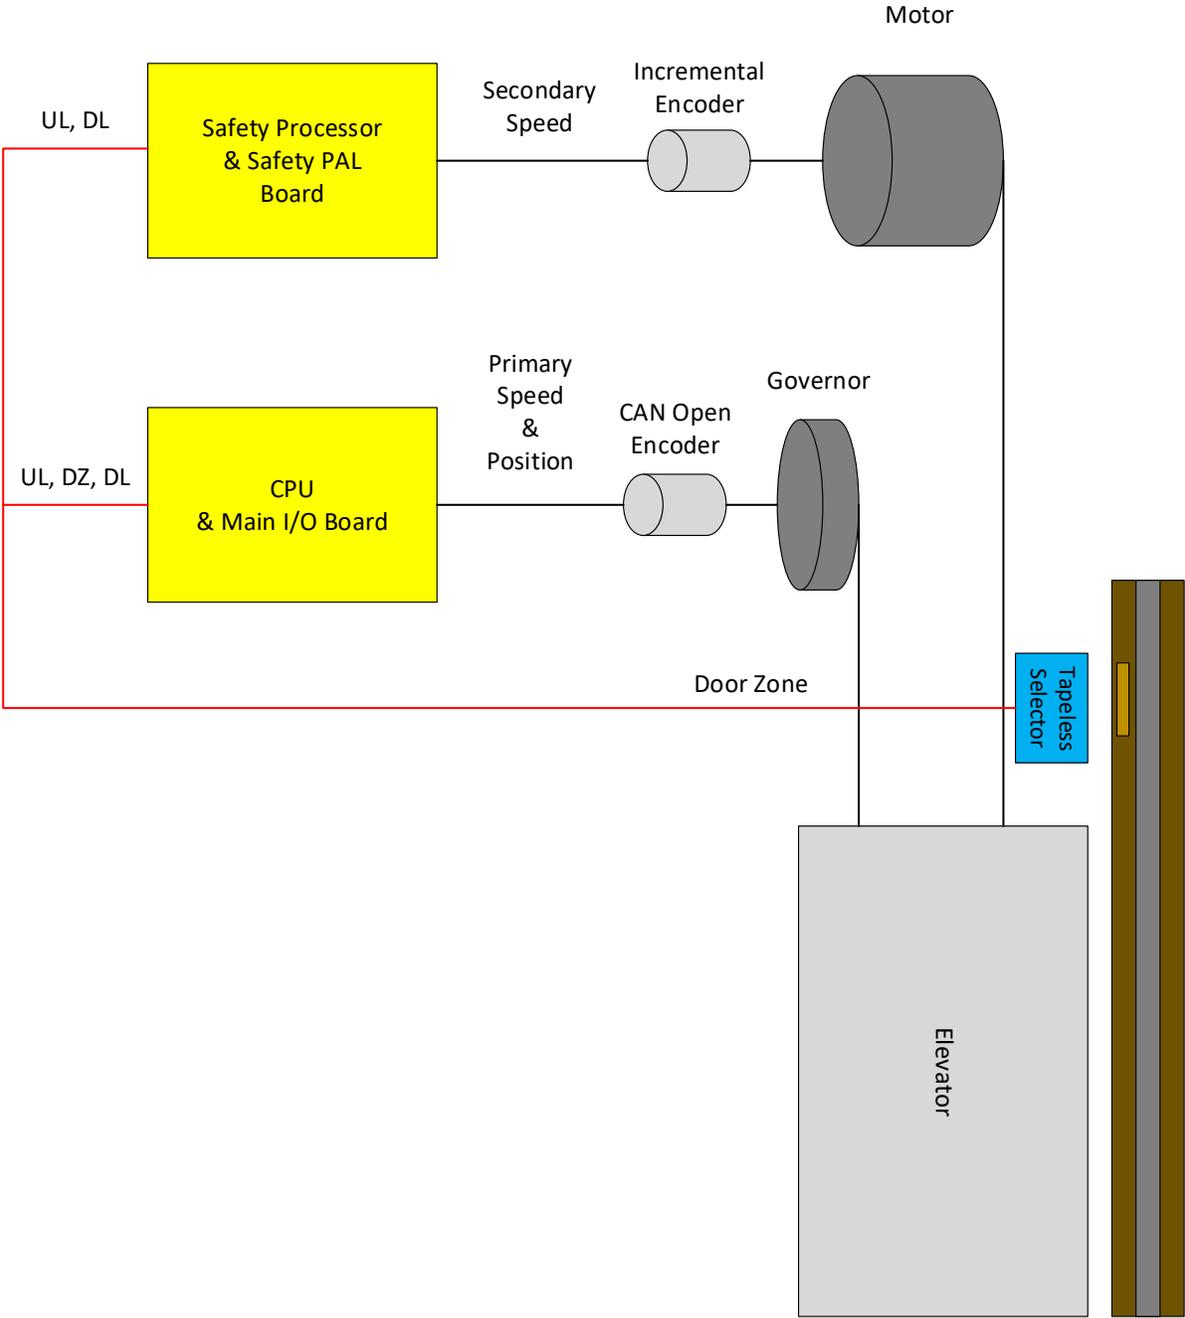

## 1.5 Tapeless System

The tapeless system uses an absolute encoder mounted on the governor and a four sensor selector on the car top to read the door zone magnet for each floor. The door zone magnets are placed in the corner of the rail. There are two configurations of the tapeless system; 485 configuration and CAN Open configuration. The 485 configuration uses the governor mounted encoder for secondary speed feedback and for absolute position of the car. The CAN Open configuration uses the governor mounted encoder for the primary speed feedback and position of the car. The encoder is coupled to a rotating shaft on the governor. If the governor on the job does not have a rotating shaft, it must be replaced with one that does

The door zone sensors are used for exact floor position on stop and re-leveling the car. A block diagram of the tapeless selector system using an Absolute Encoder is shown in Figure 1.2. The tapeless selector system using an CAN Open Encoder is shown in Figure 1.2A.

## 1.6 Secondary Speed Feedback

With a tape system, the tape is perforated with 3/8 inch holes every 3/8 of an inch. A sensor is mounted on the selector to provide a secondary speed feedback to the Safety Processor Board. With the 485 tapeless system, the Safety Processor receives position information from the absolute encoder and uses the change in position to calculate velocity. With the CAN open tapeless system, the Safety Processor receives position information from the machine mounted incremental encoder and uses the change in position to calculate velocity. With all three methods, the Safety Processor uses this velocity to verify that the car is traveling at a safe speed when slowdown limits are activated, when the car doors are open and when running on inspection. There are two type of inputs used to verify the car speed at the terminal landing. The "UT & DT" slowdown limits are always used to verify the velocity of the car at the terminal landings. The emergency slowdown limits "UTS & DTS" are used on traction cars greater than 200 fpm, traction cars with reduced stroke buffers and all hydro cars. Traction cars less than 200 fpm read the "UTS & DTS" velocity values but will not shut the car down from the velocity check. For all control systems, the "UT & DT" limits are used to verify the operation of "UTS & DTS" and vice versa.

## 1.7 Modes of Operation

### 1.8 Operating Sequence

Normal elevator operation, Automatic Mode, is selective-collective. When the elevator is traveling upwards to answer calls, all up hall calls at floors above the car are answered in the order reached by the car, regardless of the order in which the calls were registered. Upon reaching each landing with a car call or hall call registered, the car and hall doors at that floor are automatically opened.

The doors stay opened for a dwell time that is field adjustable. There are three different dwell times depending on whether it is a lobby call, car call, or hall call. The door will close before the set dwell time has elapsed if a passenger presses the door close button. The door will reopen before it is fully closed if the door open button is pressed, if a passenger pushes on the safety edge, if the photo-eye light beam is

interrupted, or if a call for that floor in the direction of travel is pushed. The door will close when the door opening condition is eliminated. When the door has fully closed, the calls are answered.

When all up hall calls and car calls above the car have been answered, the elevator reverses direction and travels downward to answer car calls and down hall calls placed below the car. The calls are answered as previously described for up calls. When all calls below a down car are answered, the car reverses direction to repeat the cycle. In short, an elevator traveling up will bypass down hall calls, and an elevator traveling down will bypass up hall calls.

In buildings with more than one elevator grouped together, the actual time of arrival, “real time”, is used to estimate how long each elevator will take to answer a hall call. The elevator that can respond the fastest takes the call. Real time based dispatching permits the controllers to quickly respond to actual demand for elevator service. Some of the criteria used to estimate the time of arrival are listed below:

- Actual elevator floor to floor runs times.
- Actual run time to the floor whether it is a multi-floor run or a one floor run.
- Whether the elevator is in or out of service.
- Whether the elevator is in load weigh bypass mode.
- The direction and position of each elevator in the group.
- The average door cycle time at each stop.
- Status of each elevator, accelerating, full speed, decelerating, actual time in motion.
- Number of stops required due to car calls.
- Number of stops required due to previously assigned hall calls.
- System demand.

The above performance criteria are continuously measured and stored for improved accuracy in the dispatching algorithm. All of the above data is continuously scanned and the hall calls are reassigned if the conditions change and another car can respond faster. The ability to measure actual hall waiting time virtually eliminates long waiting and improves the average hall call waiting intervals throughout the building.

## **1.9 Reset Mode**

Reset mode is initiated when the elevator power is first turned on, or when the system is reset. When the reset mode is initiated, the controller program is automatically loaded, and internal tests are run to ensure that both the car and controller are electrically operational before putting the car into service. The car will not move until reset mode is completed. Some of the internal tests that the controller performs are as follows: is the safety string made up; is the elevator on inspection operation; is the door close limit open; are the interlocks made up; is hoistway position correct. If all the safeties are made up, and the elevator is on automatic operation, and it is at floor level, the elevator will go into automatic mode. If the elevator is not at floor level, it will run slow speed down to the nearest floor, level into the floor, and reset the floor position count.

## 1.10 Safety String Open Mode

Safety string open mode is initiated when a safety is open. Some of the safeties are listed below:

- Reverse phase relay.
- Top final
- Bottom final
- Pit switch
- Car top stop switch
- Governor over speed switch
- Safety operated switch
- Drive Ready relay

When the safety string is made back up, the elevator will go back to reset mode.

## 1.11 Controller Inspection Mode

The controller inspection mode is initiated by placing the “INSP” switch on the 1064 board in the inspection position (down). Controller inspection mode permits operation of the car from the machine room. This mode performs the following operations:

- Enables the controller inspection “ENABLE”, “UP” and “DOWN” push buttons
- Door locks are active and must be closed to move the car.
- Pressing the controller “ENABLE” and “UP” push-button causes elevator to move at inspection speed in the up direction.
- Pressing the controller “ENABLE” and “DOWN” pushbutton causes the elevator to move at inspection speed in the down direction.

## 1.12 Car Top Inspection Mode

This inspection mode is initiated by placing the inspection switch on top of the car in the inspection position. Inspection mode permits operation of the car from the car top inspection station. This mode performs the following operations:

- Disables access top and access bottom hall switches.
- Disables the controller "ENABLE", "UP" and "DOWN" push buttons.
- Door locks are active and must be closed to move the car.
- Enables the car top inspection station "SAFE", "UP" and "DOWN" push buttons

- Pressing the inspection station "UP" and "SAFE" push buttons causes the elevator to move at inspection speed in the up direction.
- Pressing the inspection station "DOWN" and "SAFE" push buttons causes the elevator to move at inspection speed in the down direction.

### **1.13 Access Mode**

The access mode is initiated by placing the key operated access switch located in the car operating panel to the on position. Access mode allows entrance into the Hoistway by qualified and authorized elevator personnel for equipment inspection and service. Access to the top of the car is possible from the top landing, and access to the pit is possible from the bottom landing. Enabling this mode permits the following operation:

- Enables the access key switches at the top and bottom landing in the entrance door jambs.
- Bypasses the gate switch to allow car movement with the car door open.
- Bypasses the top or bottom landing hall door lock, depending on which terminal access switch is being keyed.
- Turning the access key switch to the up position causes the elevator to move at inspection speed in the up direction.
- Turning the access key switch to the down position causes the elevator to move at inspection speed in the down direction.

### **1.14 Independent Service Mode**

The independent service mode is initiated by placing the key operated independent switch located in the car operating panel to the on position, or by placing the controller toggle switch "IND" to the down position. Independent mode permits operation of the car with an operator. This mode performs the following operations:

- Hall initiated calls are ignored.
- Hall lanterns and gongs are disabled.
- The doors open automatically and stay open until closed by the operator.
- Closing the doors requires constant pressure on the door close button.
- When the car door is closed, the car answers the nearest car initiated call in the direction of travel.

### **1.15 Load Weighing Bypass Mode**

The load weighing bypass mode is initiated when the car is loaded to a predetermined percentage of full capacity, by closing a connection between terminals "LC" and "LW" or from serial communication from a

load weighing device. Load weigh bypass mode allows the car to answer car calls and lighten the load before answering any more hall calls. This mode performs the following operations:

- Hall initiated calls are ignored.
- All other elevator functions operate as if on full automatic service.

### 1.16 Attendant Service Mode

The attendant service mode is initiated by placing the key operated attendant switch located in the car operating panel to the on position. Attendant mode permits operation of the car with an attendant. This mode performs the following operations:

- The doors open automatically and stay open until closed by the attendant.
- Closing the doors requires a momentary pressure on the door close button, or the up or down buttons located in the car operating panel.
- Hall initiated calls are answered unless there is constant pressure on the bypass button.
- Hall lanterns and gongs are enabled.
- The direction of preference can be specified by momentary pressure on the up or down buttons located in the car operating panel.

### 1.17 Code Blue Hospital Service Mode

Code blue hospital service mode is initiated by turning one of the code blue switches, located at each floor where medical emergency service is required, to the on position. A car is selected to respond to the code blue call. That car will perform the following:

- Cancel all car calls
- Any hall calls previously assigned will be transferred to another car.
- If traveling toward the code blue call, it will proceed nonstop to the code blue call floor.
- If traveling away from the code blue call, it will slow down and stop at the nearest floor, maintain doors closed, reverse direction and proceed nonstop to the code blue call floor.
- If at a floor other than the code blue call floor, the elevator will close the doors and proceed nonstop to the code blue call floor.
- Once at the code blue call floor, the doors will open and remain open.
- The code blue in car switch located in the car operating panel must then be turned to the on position. If the code blue in car switch is not turned to the on position within 60 seconds from the time the doors reach full open on the code blue call floor, the car will revert back to normal operation.

- Upon activation of the key switch, it will allow the car to accept a car call for any floor, close the doors, and proceed nonstop to the floor desired.
- The return of the code blue in car key switch to the normal position will restore the car to normal service.

### **1.18 Fire Service Phase I Mode**

Fire service phase I is initiated when the primary smoke sensor is activated or the fire key switch located in the hall station on the primary return floor is turned to the on position. The primary return floor is usually the lobby floor, but could be another landing if it better serves the needs of emergency personnel when fighting a fire or performing rescues. When fire service phase I is enabled:

- The fire emergency return light illuminates and the fire buzzer sounds.
- The emergency stop switch is disabled when the door closes.
- The car travels to the primary return floor without answering any calls, then parks with the door open. The fire buzzer turns off, but the fire emergency return light stays illuminated.
- If the car is at a landing with the doors open, the doors will close, and the car will return nonstop to the primary return floor.
- If the car is traveling away from the primary return floor, the car will stop at the next landing, and then go immediately to the primary return floor.
- Turning the fire service key switch to the bypass position will restore the elevator to normal service.
- The elevator will perform per ASME A17.1 requirement 2.27.3 unless otherwise specified.

### **1.19 Fire Service Phase I Alternate Return Mode**

Fire service phase I alternate return is initiated when the smoke sensor in front of the elevator at the primary return floor is activated. When fire service phase I alternate return is enabled:

- The fire emergency return light illuminates and the fire buzzer sounds.
- The emergency stop switch is disabled when the door closes.
- The car travels to the alternate return floor without answering any calls, then parks with the door open. The fire buzzer turns off, but the fire emergency return light stays illuminated.
- If the car is at a landing with the doors open, the doors will close, and the car will return nonstop to the alternate return floor. If the car is traveling away from the alternate return floor, the car will stop at the next landing, and then go immediately to the alternate return floor.
- Turning the fire service key switch to the bypass position will restore the elevator to normal service.

- The elevator will perform per ASME A17.1 requirement 2.27.3 unless otherwise specified.

## 1.20 Fire Service Phase II Mode

To initiate fire service phase II, the car must first have been placed in fire service phase I, and, as a result, be parked at the designated level with the door fully open. Following that, the key operated fire service phase II switch, located in the car operating panel must be placed in the on position. Fire service phase II permits operation of the car by a fire fighter. This mode performs operations in accordance with ASME A17.1 requirement 2.27.3 as follows:

- The doors close only with constant pressure on the door close button, after they have been fully opened.
- The doors open only with constant pressure on the door open button, after they have been fully closed.
- Hall lanterns and gongs are disabled. Safety edge and electric eye are disabled
- All registered car calls can be canceled with momentary pressure on the call cancel button located in the car operating panel.
- All hall calls are disabled.
- To remove the car from fire service phase II the car must be at the fire return landing with the doors in the full open position and the phase II switch turned to the off position.
- See ASME A17.1 requirement 2.27.3 for specific operation of fire service phase II.

## 1.21 Emergency Power

Emergency power is initiated when a connection is made between terminals “HC” and “EMP”. This mode performs the following operations:

- All cars are returned to the bottom floor one at a time, and remain there with their doors open.
- If a car is selected to run it will go back into normal operation.
- Removing the connection between terminals “HC” and “EMP” will remove the cars from emergency power operation.

## 1.22 Earthquake Mode

Earthquake mode is initiated upon activation of a seismic switch or counterweight derailment switch. This mode performs the following operations:

- If in motion, and the seismic switch is activated, the car will decelerate into slow speed, proceed to the nearest available floor, open the doors and shut down.

- If in motion, and the counterweight derailment switch is activated, and the car is moving away from the counterweight, then the car will decelerate into slow speed, and proceed to the nearest available floor, open the doors and shut down.
- If in motion, and the counterweight derailment switch is activated, and the car is moving toward the counterweight, then the car will perform an emergency stop, then move at slow speed away from the counterweight to the nearest available floor. After stopping at the nearest floor, the doors will open and the car will shut down.

### **1.23 Stalled Mode**

Stalled mode is initiated when the elevator has been in run mode longer than the field adjustable anti-stall timer. This mode performs the following operations:

- Shuts down the elevator.
- Does not allow the elevator to restart until elevator is put on inspection or main line switch is cycled.
- The door open button remains active.

### **1.24 Automatic Mode**

Since this is the normal operating mode, the controller automatically enters this mode if none of the previously described modes are activated, and if no fault is detected. The following operations are performed in automatic mode:

- The car operates in selective- collective control sequence when answering calls.
- Hall calls and car calls are functional.
- Hall lanterns and gongs are operational.
- Simplex Cars Park at the last call answered unless simplex lobby parking has been enabled in the program. In a multi-car group, a car is always parked at the lobby if no other demand exists.
- The doors remain closed when the car is parked

## **Section 2 - Product Description**

### **2.1 General Information**

This section provides basic guidelines and recommendations for the proper installation of the controller equipment. These guidelines should be used as general instructions. They are not intended to usurp local codes and regulations.

### **2.2 Site Selection**

When choosing the installation site of the controller, several factors should be considered. If at all possible, the controller should be installed in a location where the mechanic has a good view of the machine when he is standing in front of the controller. There should be no obstructions around the controller that would prevent proper routing of necessary conduits entering the controller. The controller doors should have enough room to fully open and close. All clearances, working space, lighting, and guarding should comply with governing codes.

### **2.3 Environmental Considerations**

The standard controller package is provided with a NEMA 1 enclosure. This type of controller should be installed in a clean and dry environment. Ideally, the equipment room should be temperature controlled between 70 and 90 degrees F. However, control equipment will function properly within an ambient temperature range of 32 to 110 degrees F. If temperatures remain at the upper and lower extremes of this range for an extended period of time, the life expectancy of the control equipment may be shortened. If wet, dusty, or corrosive environments are expected, then optional non-standard enclosures can be provided. For example, NEMA 4, NEMA 12, or NEMA 4X.

The control system is designed to have a high immunity to electrical noise, radio frequency radiation, and magnetic interference. However, high levels of these items could cause interference with certain parts of the control system.

The power supply feeding the controller should have a fluctuation of no greater than + or - 10%.

### **2.4 Wiring Guidelines and Instructions**

### **2.5 The Wiring Prints**

A complete set of wiring schematics will be provided for each job. Each set of wiring schematics is job specific. The job name and number will be listed in the bottom right corner of each page of the print.

## **2.6 Ground Wiring**

Proper grounding of the power supply, controller, elevator car, and hoistway is required. Separate conductors should be run for EG (earth ground) and GND terminals. These terminals and conductors are detailed on the wiring schematics.

## **2.7 Hoistway Wiring**

All hoistway wiring is detailed on the wiring schematics. The number of hoistway conductors is calculated and listed per job on the wiring schematics. A job specific "pull sheet" is also provided with the wiring schematics.

## **2.8 Elevator Car Wiring**

All elevator car wiring is detailed on the wiring schematics. The number of traveling cable conductors is calculated and listed per job on the wiring schematics. A job specific "pull sheet" is also provided with the wiring schematics.

## **2.9 Machine Room Wiring**

All machine room wiring is detailed on the wiring schematics. All wire sizes are listed for main power supply, motor wiring, brake wiring (traction only), and field wiring.

## **2.10 Wiring to Top of Car Selector**

The car top selector is wired according to the schematics for the job. When using tape selector system, special attention should be given to wiring the pulse sensor on the selector since the output on this device uses +15VDC. Terminal PPS on the selector is wired to PPS on the controller and selector terminal PP/US is wired to PP on the controller.

## **2.11 Slowdown Limits**

There are two sets of slowdown switches used, the UT/DT switches (including UT1, UT2, UT3, DT1, DT2, and DT3) and the UTS/DTS switches. UT, UT1, UT2, UT3 & DT, DT1, DT2, DT3 are used to clamp the speed command to the drive at the terminal landings independent of the control of the CPU.

UTS & DTS are emergency slowdown limit switches used on cars with a top speed greater than 200 fpm or having reduced stroke buffers. These switches are used as the slowdown speed verification points by the Safety Processor board. If the car hits the limit at a speed greater than the preset speed parameter, power is immediately removed from the motor and brake for an emergency stop independent of the main CPU.

The UT & DT limit switches are also used as speed verification points by the Safety Processor board. When the limit is first activated, the Safety Processor counts an adjustable number of pulse counts from the activation point to determine the velocity trip point. Since cars with only one slowdown limit would activate the limit at high speed when performing a recovery run, the extra pulse counts from allows the car to slow down before the trip point is reached.

The Safety Processor board uses the UT & DT limits to verify the operation of the UTS & DTS limits. The pulse input is also verified while running on automatic.

The distance that the limits are placed from the terminal landing depends on the speed of the car. Table 1 shows the slowdown limit locations with respect to contract speed. All distances are show in inches.

**Table 1: Slowdown Distances from Terminal Landings**

FPM	UT/ DT	UT1/ DT1	UT2/ DT2	UT3/ DT3	UT4/ DT4	UT5/ DT5	UT6/ DT6	UT7/ DT7	UTS/ DTS	UTS/ DTS (Reduced Stroke buffer)
50	10"								Not Used	8"
100	21"								Not Used	17"
150	31"								Not Used	28"
200	41"								Not Used	39"
250	52"								36"	36"
300	31"	62"							40"	40"
350	40"	80"							52"	52"
400	50"	99"							66"	66"
450	60"	120"							81"	81"
500	71"	143"							98"	98"
600	65"	130"	195"						137"	137"
700	85"	170"	255"						181"	181"
800	80"	160"	240"	320"					232"	232"
900	98"	196"	293"	391"					289"	289"
1000	93"	187"	280"	374"	467"				353"	353"
1100	110"	219"	329"	439"	548"				380"	380"
1200	106"	211"	317"	422"	528"	633"			448"	448"
1300	103"	206"	310"	413"	516"	619"	723"		521"	521"
1400	102"	204"	306"	408"	510"	612"	714"	816"	600"	600"

## 2.12 Normal and Final Limit Switches

The up and down directional limit switches UN & DN should be set to open two inches past the terminal floor levels. The top and bottom final limit switches should be set to open four inches past the terminal floor levels.

## 2.13 Tape Selector Installation

When installing the selector, please follow all steps below.

1. Mount one of the tape brackets to the rail mounting bracket as shown in Figure 2.0
2. Mount the tape to the tape bracket as show, only FINGER TIGHTEN bolts. This is necessary for proper tape alignment.
3. Measure the distance from the rail to the tape.
4. Unreel the tape from the top of the car while running down on inspection.
5. At the bottom feed the remaining tape down next to the car. Then move the car back up out of the way.
6. Mount the spring mounted tape brackets to the rail mounting bracket as shown in Figure 2.0 ensure that the distance to the rail is the same as what was measured at the top.
7. Connect the bottom of the tape to the mounting bracket with proper spring tension.
8. With tape under tension tighten top tape bolts. And double check tape position.

**NOTE:** At this time the tape should be parallel to the rail in all directions. This is a requirement to maximize the life of the nylon guides, and minimize tape noise. While the tape head is allowed to move, it should not need to move.

9. Mount the selector couple to the tape by the nylon guides. It is preferred to mount the selector to the car sling for maximum stability. The selector location should be adjusted so the tape head is located in the center of the slot, and the tape head pivot bolts are horizontal and equally supporting the head.

**NOTE:** As a check, observe that the head is centered in both directions when the car is at the top and bottom of the hoistway.

Figure 2.1 shows a typical mounting of the selector to the crosshead. Figure 2.2 shows the new selector board (PCB-1011BN).

1. To install floor magnets, level the door exactly at the desired floor. And mark tape at the top left of the selector through a factory cut guide hole

2. Move the car to gain access to the section of tape that was marked while the car was at floor level.
3. Place the door zone template, provided by G.A.L., at the door zone mark just made.
4. Remove backing and adhere binary preset magnets in the appropriate template locations. The location of each magnet is shown in Figure 2.3. & Figure 2.4.
5. Repeat steps 10 thru 13 for each floor.

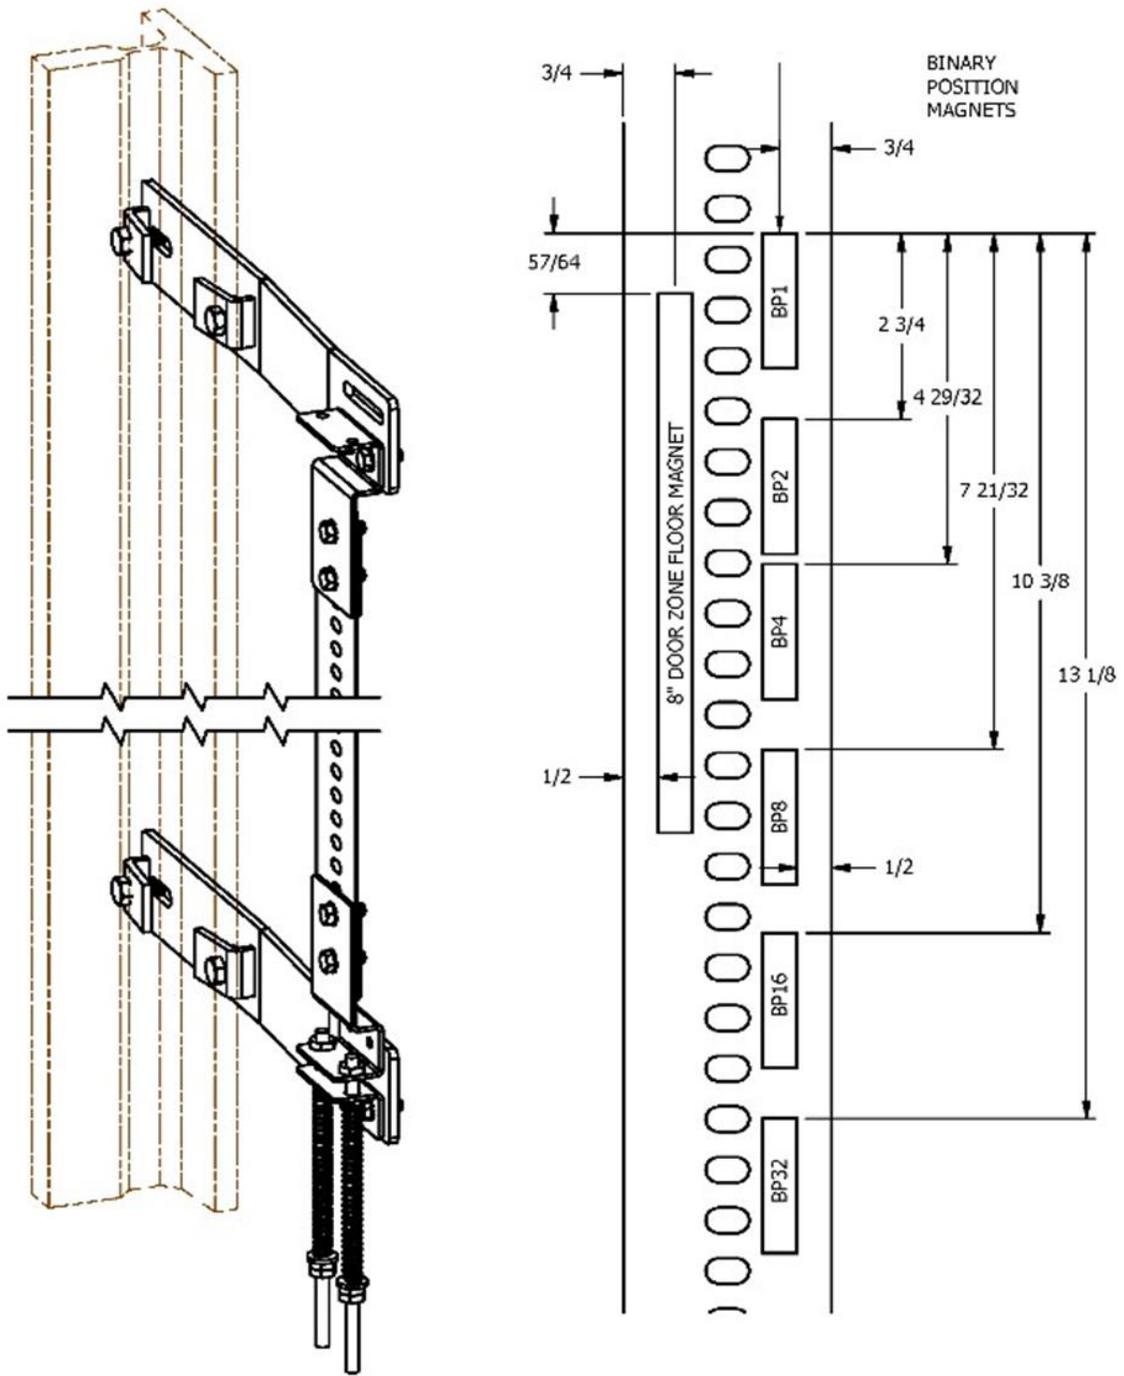


Figure 2.0: Typical Tape Mounting & Magnet Placement

Binary Preset Magnets						
Floor	BP32	BP16	BP8	BP4	BP2	BP1
1	0	0	0	0	0	1
2	0	0	0	0	1	0
3	0	0	0	0	1	1
4	0	0	0	1	0	0
5	0	0	0	1	0	1
6	0	0	0	1	1	0
7	0	0	0	1	1	1
8	0	0	1	0	0	0
9	0	0	1	0	0	1
10	0	0	1	0	1	0
11	0	0	1	0	1	1
12	0	0	1	1	0	0
13	0	0	1	1	0	1
14	0	0	1	1	1	0
15	0	0	1	1	1	1
16	0	1	0	0	0	0
17	0	1	0	0	0	1
18	0	1	0	0	1	0
19	0	1	0	0	1	1
20	0	1	0	1	0	0
21	0	1	0	1	0	1
22	0	1	0	1	1	0
23	0	1	0	1	1	1
24	0	1	1	0	0	0
25	0	1	1	0	0	1
26	0	1	1	0	1	0
27	0	1	1	0	1	1
28	0	1	1	1	0	0
29	0	1	1	1	0	1
30	0	1	1	1	1	0

**Binary Preset Magnets**

Floor	BP32	BP16	BP8	BP4	BP2	BP1
31	0	1	1	1	1	1
32	1	0	0	0	0	0
33	1	0	0	0	0	1
34	1	0	0	0	1	0
35	1	0	0	0	1	1
36	1	0	0	1	0	0
37	1	0	0	1	0	1
38	1	0	0	1	1	0
39	1	0	0	1	1	1
40	1	0	1	0	0	0
41	1	0	1	0	0	1
42	1	0	1	0	1	0
43	1	0	1	0	1	1
44	1	0	1	1	0	0
45	1	0	1	1	0	1
46	1	0	1	1	1	0
47	1	0	1	1	1	1
48	1	1	0	0	0	0
49	1	1	0	0	0	1
50	1	1	0	0	1	0
51	1	1	0	0	1	1
52	1	1	0	1	0	0
53	1	1	0	1	0	1
54	1	1	0	1	1	0
55	1	1	0	1	1	1
56	1	1	1	0	0	0
57	1	1	1	0	0	1
58	1	1	1	0	1	0
59	1	1	1	0	1	1
60	1	1	1	1	0	0
61	1	1	1	1	0	1
62	1	1	1	1	1	0
63	1	1	1	1	1	1

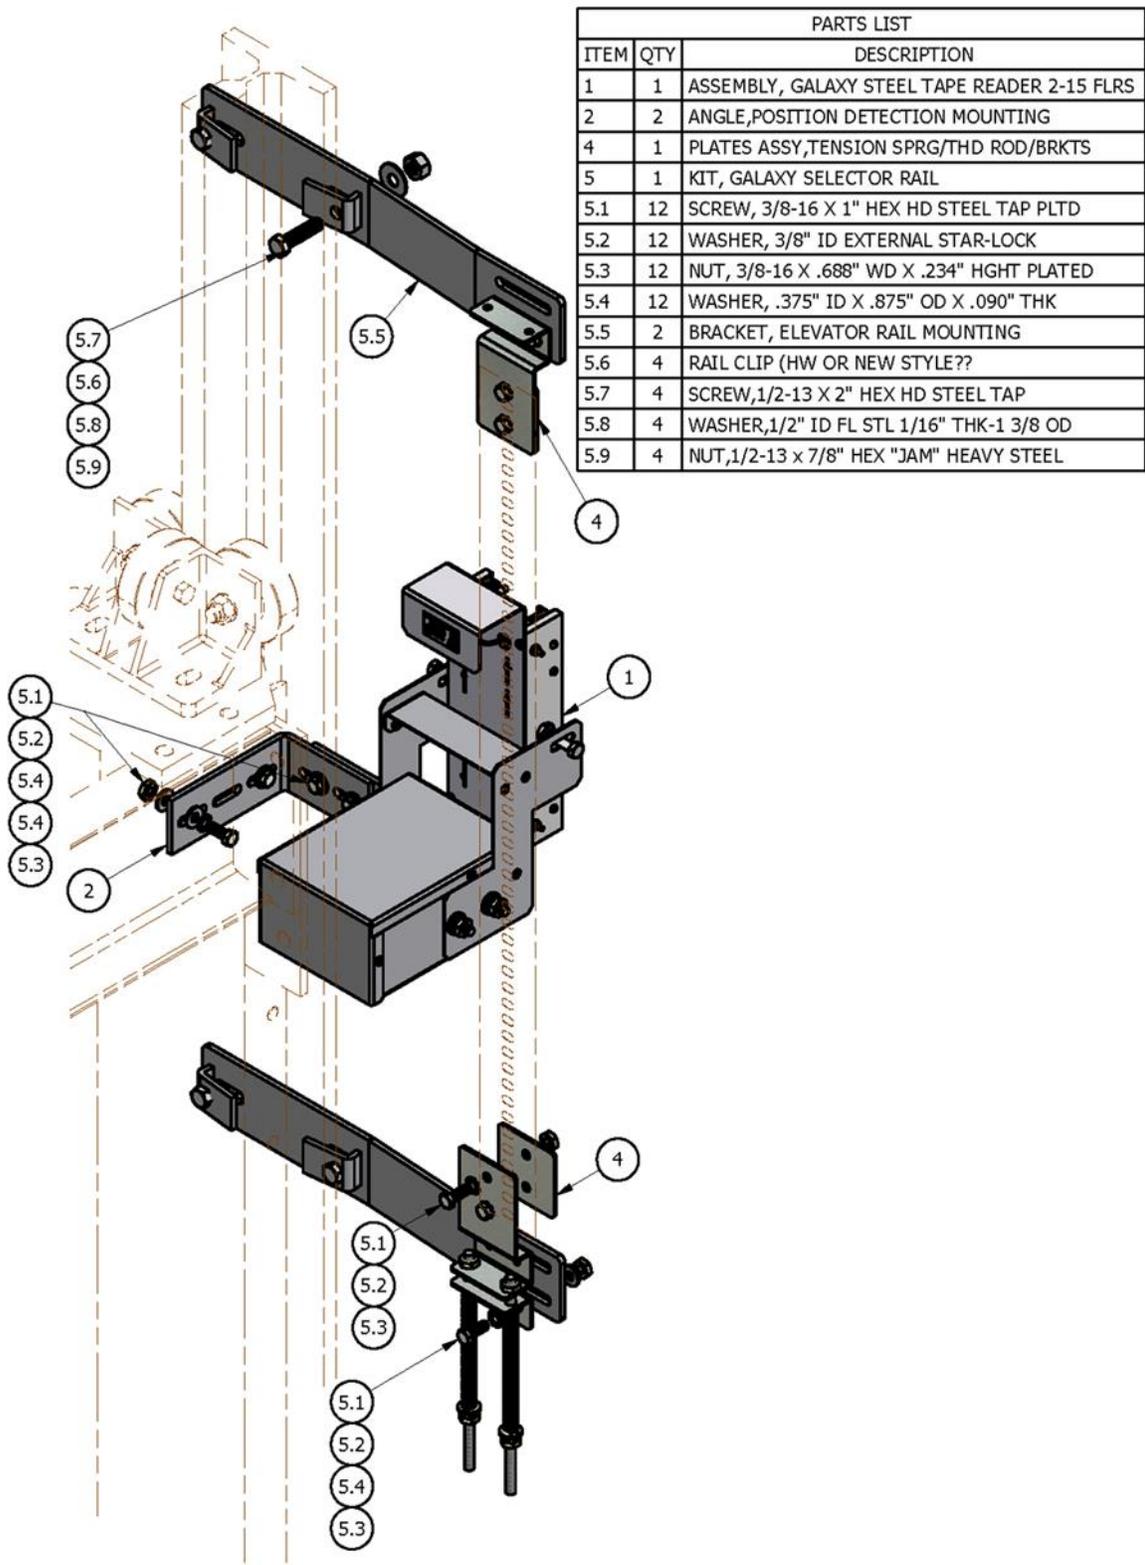


Figure 2.1: Typical Mounting of Selector

**NOTE:**

1. Use shielded twisted pair for PP and PPS

2. If PP LED is not flashing, then bring sensor closer to the perforated tape.

From PP Sensor:  
Brown wire →  
Blue wire →  
Black wire →

To decrease the number of re-levels due to rope stretch enable UL1 & DL1.  
NOTE: Disable on Hydros. →


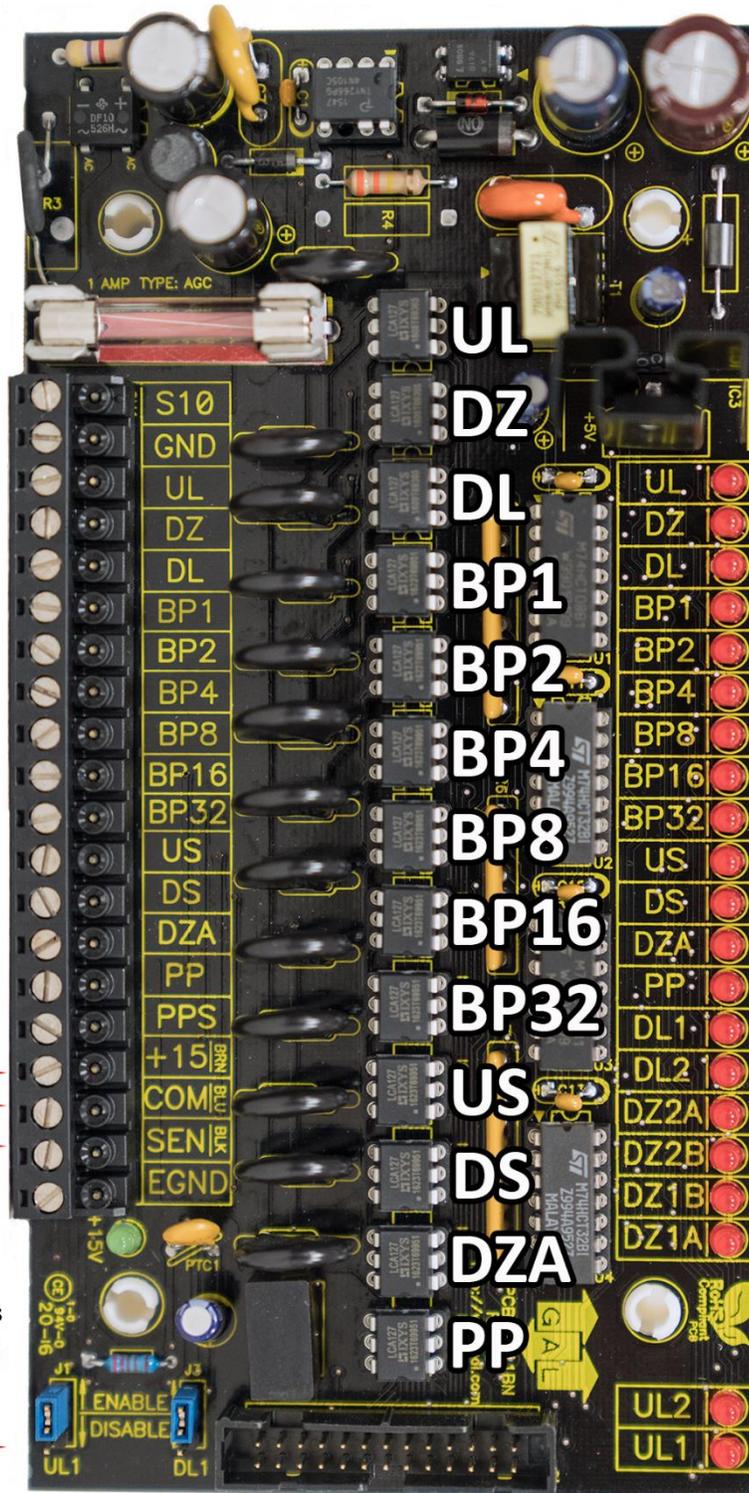


Figure 2.2: Selector Board GALX-1011BN

Figures 2.3 & 2.4: Selector Tape Layout & Magnet Placement

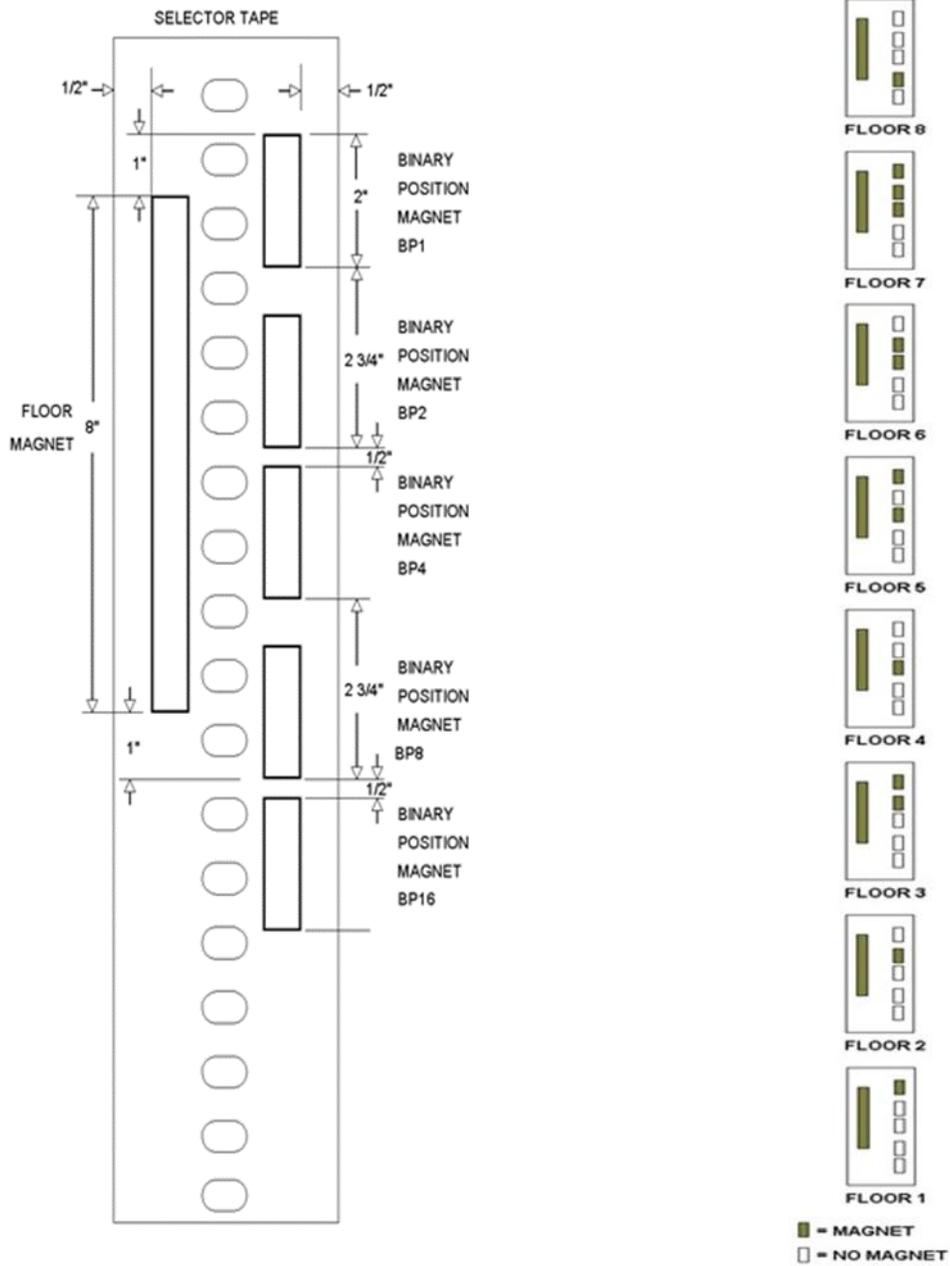

## 2.14 Tapeless Selector Installation

Installation of the tapeless selector begins with replacing the existing governor if it does not have a rotating shaft to one that does. Mount the encoder on the governor and connect the encoder cable to the Safety Processor Board as per the job prints.

Mount the selector box on top the car with the provided brackets, see figures 2.5 and 2.5A and 2.6.

The magnets will be placed in the corner of the rail. The door zone sensors will face the magnet and make a 45-degree angle with the face of the rail.

Use the template to position the selector head the correct distance from the rail, see figure 2.5 and 2.5a and 2.6. The mounting screws on the selector box and on the brackets are slotted to make the necessary alignments.

**Figure 2.5: Tapeless Selector Mounted on Crosshead**



Figure 2.5a: Tapeless Selector Magnet Placement




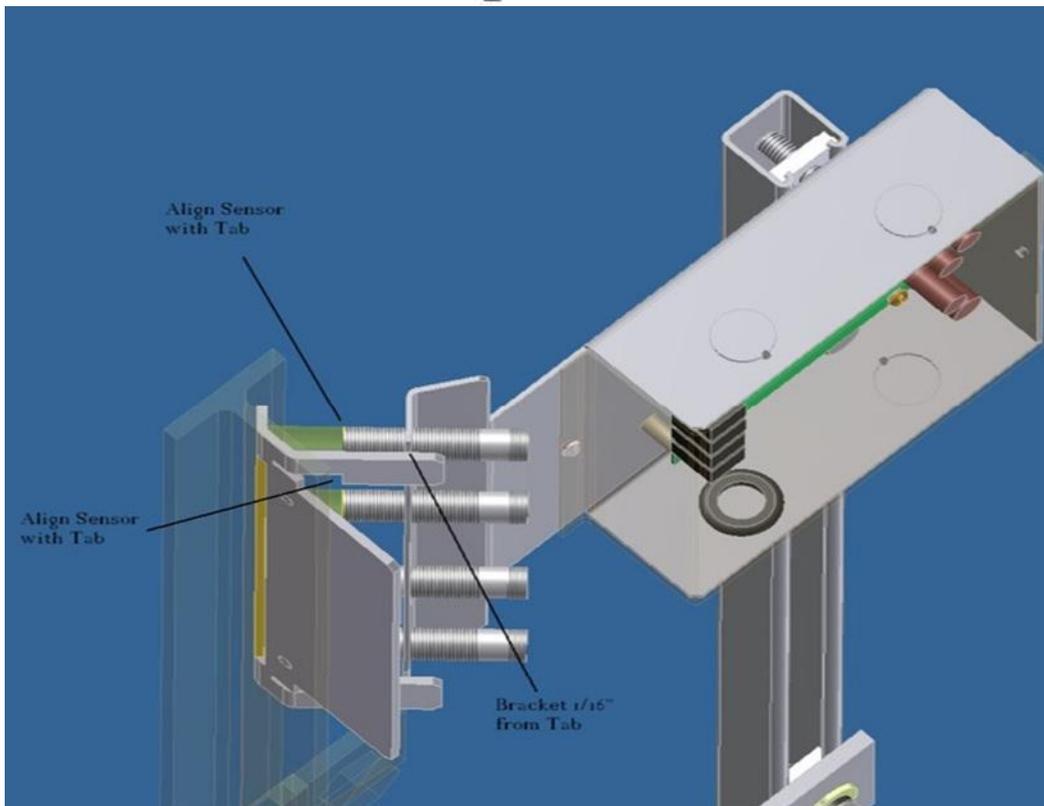


Figure 2.6: Door Zone Template Used to Set Selector Distance

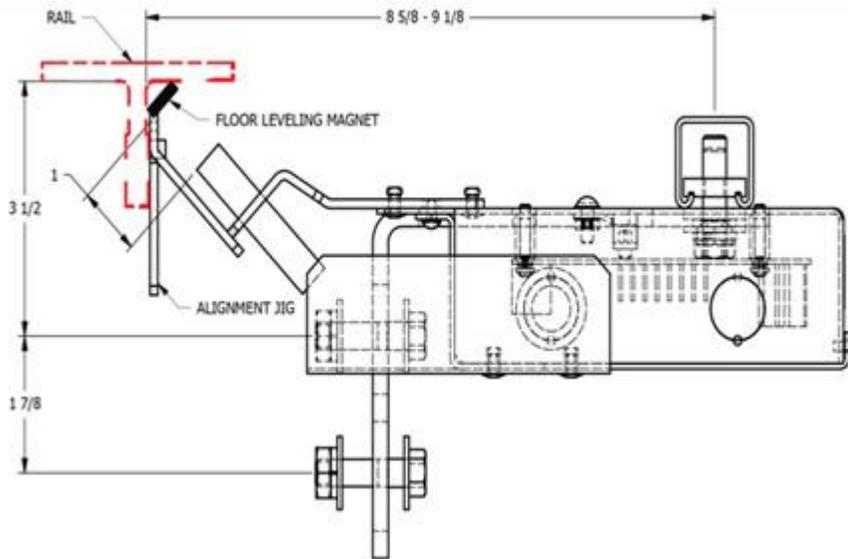

Figures 2.7: Sensor Orientation and Wiring

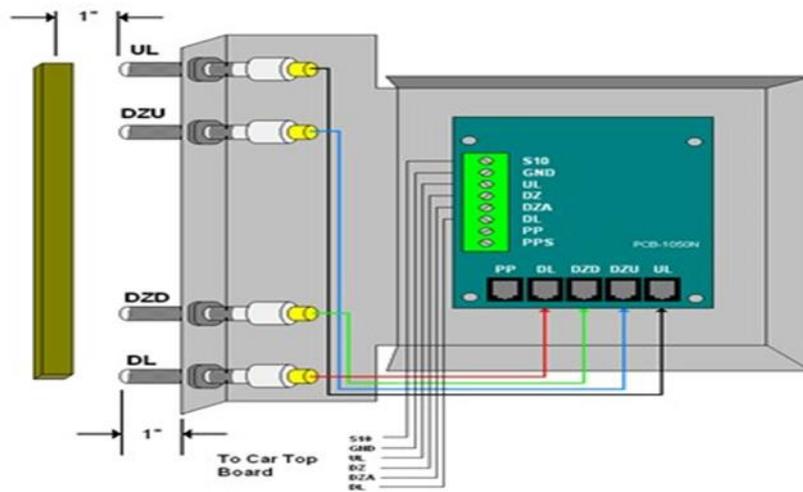

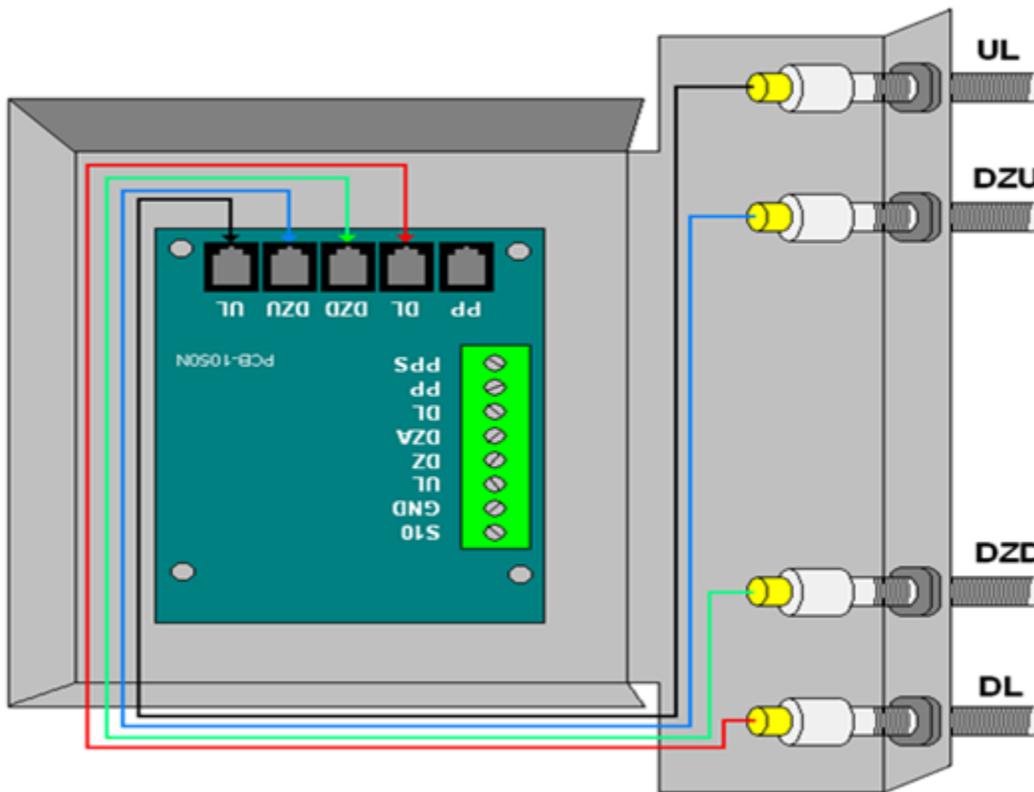


**Figure 2.8: Sensor Orientation Upside Down**


The selector head can be mounted with a left or right vertical orientation. Each of the sensor wires are individually plugged into the selector board according to the orientation of how the box is mounted. The sensors are wired with UL at the top then DZU, DZD and finally DL at the bottom, see Figure 2.7. If the box has to be mounted upside down (having the PC board upside down) simply re-wire the sensors in the order listed above always starting with the top sensor as UL, see figure 2.8. Since the PC board mounting holes are symmetrical, the board can be rotated to the right side up position. With the selector and car top box mounted on the car top, wire the selector board to the car top board. The UL and DL sensors are mounted in slotted holes to allow fine adjustment of the "floor level zone" after the elevator is running on automatic operation. However, these sensors should be set in the middle of the adjustment slot as a starting point prior to final adjustment.

After the selector installation is complete and the car is running on inspection, door zone magnets can be placed at each floor. With the car dead level at the floor, place the template in the corner of the rail with the tab lined up with top of the selector door zone sensor bracket see figure 2.9.

Make a mark across the flat edge of the template. Move the car down then place the template on the rail and align the position mark. Place the magnet in the slot and remove the template. It is important to limit the side-to-side movement of the car to 1/4" between the rails to maintain consistent floor levels. After final adjustment, magnets should be secured with an adequate amount of adhesive caulk in order to prevent movement.

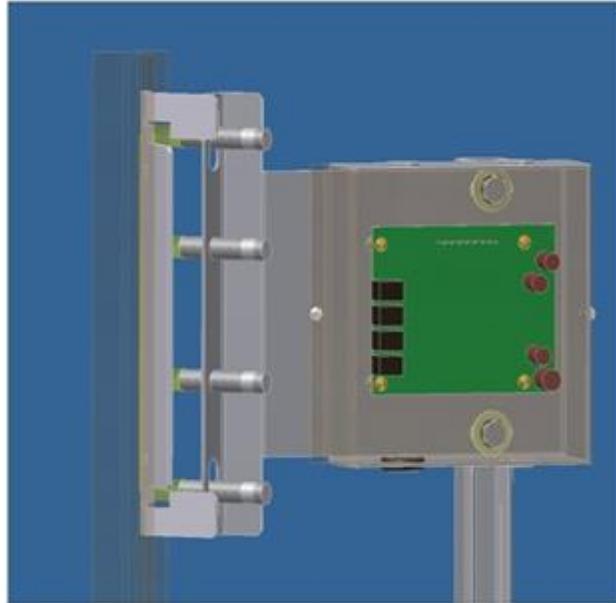

**Figures 2.9 & 2.10: Door Zone Template**

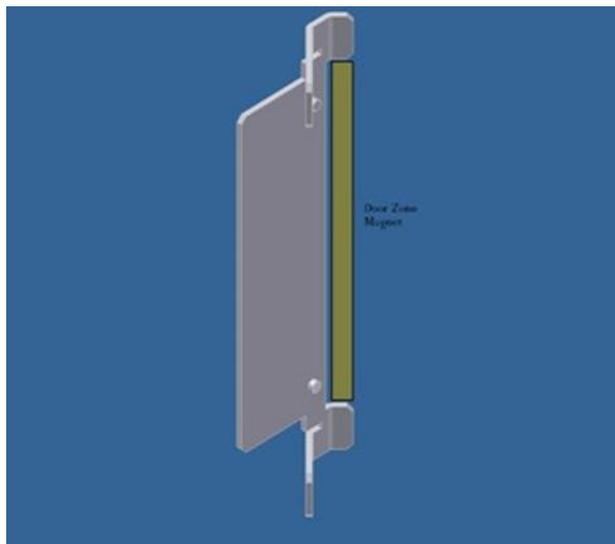

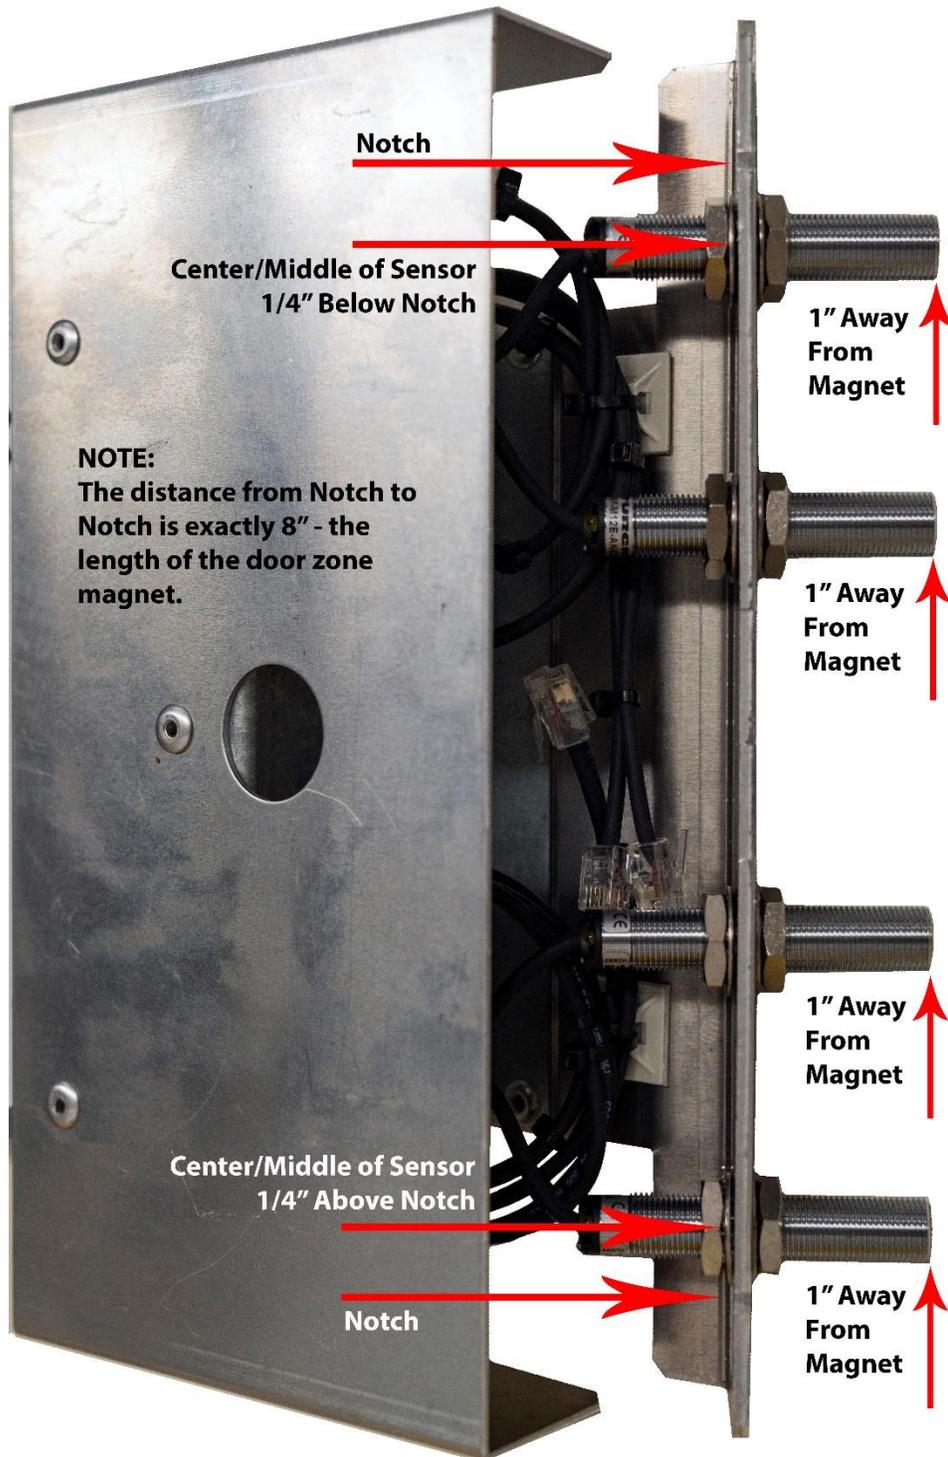


Figure 2.11: Tapeless Selector - Sensor Adjustment

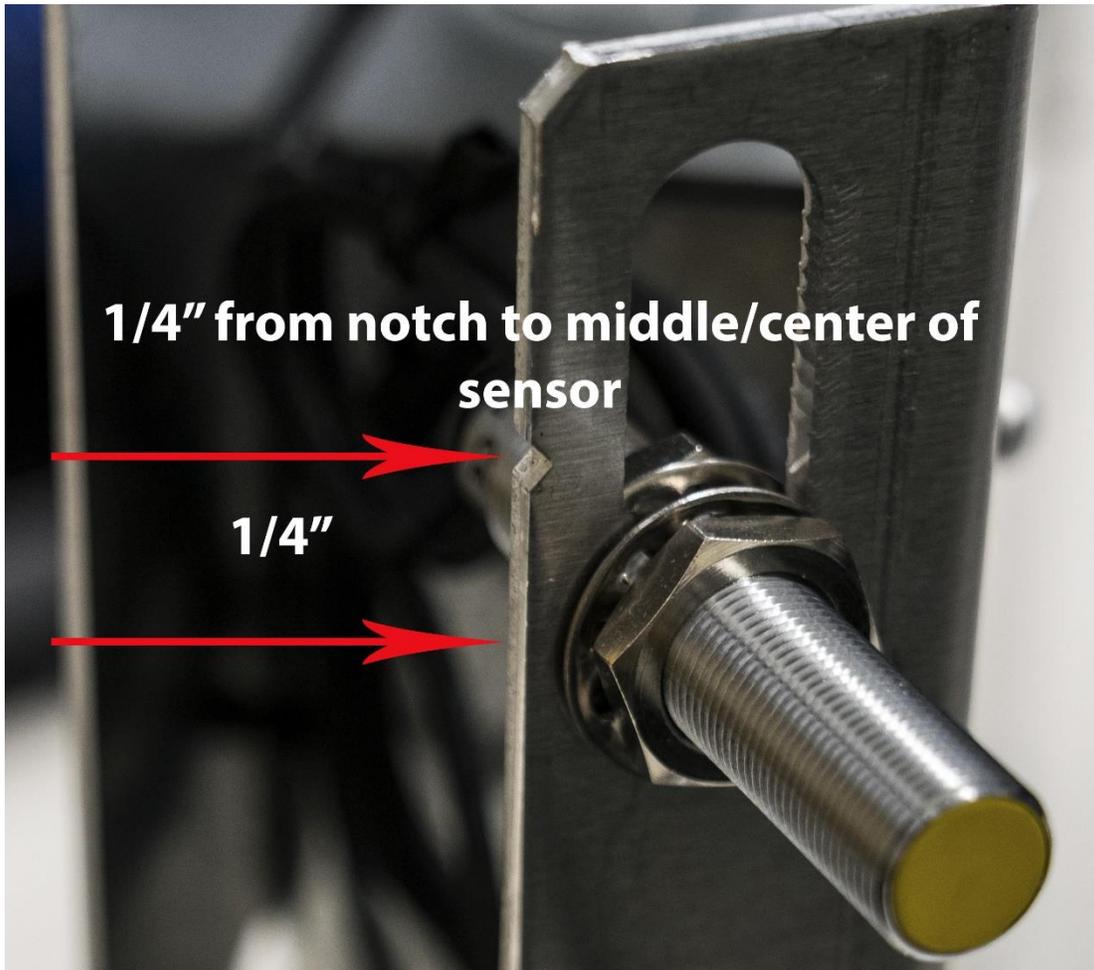


Figure 2.12: Tapeless Selector – Close-up of Notch & Sensor

## 2.15 Tapeless Selector Assembly Installation

Place the car dead level at any intermediate floor. Mount the selector box on the elevator cross head with the bracket provided. Notice that the box mounting holes are slotted to adjust the position of the box. Refer to figure 2.13 for an overall view setup of the selector box and the door zone and slowdown limit brackets. Mount one of the slim door zone metal strips on the far end of a rail bracket. Mount the door zone/rail bracket on the rail where the door zone metal strip lines up with the door zone sensors on the selector box. Make sure that the rail bracket is pushed completely on to the rail while tightening the adjacent rail clip bolt. Place the door zone magnet on the slim metal strip and complete the alignment of the selector box and the door zone in the correct position. This will ensure that all the door zone and slowdown magnets line up with the correct sensor. Adjust the door zone sensors to be 1 inch from the door zone magnet.

Continue to mount the door zones using the slim door zone/rail brackets at all the intermediate floors or if preferred, proceed to a terminal landing to work from one particular end of the hoistway.

Bring the car dead level to a terminal landing. There will be two wide door zone plates included that are specifically used for the terminal landings. These plates have three large holes to mount the normal limit magnets. The down normal limit DN is placed in the middle hole of the plate. The up normal limit UN is placed in the top hole of the plate. Notice that the bottom hole becomes the top hole if the plate is rotated 180 degrees. The door zone magnet is placed adjacent to the three normal limit holes but in line with the mounting screw holes. Mount the bracket at the terminal floor so that the door zone magnet lines up with the door zone sensors. Make sure that when at the top terminal floor, the magnet for the up normal limit is at the top of the door zone magnet. The down normal magnet at the bottom terminal floor will appear to be at the middle of the door zone magnet. Because of the placement of the limit sensors on the selector box, the up normal limit will activate 2 inches above the top floor and the bottom one will activate 2 inches below the bottom floor.

The selector box should be marked on the top to show the location of each slowdown sensor. If the box is not marked, use a black marker and mark the locations from the picture in figure 2.14. Using the slowdown distance table in section 3, mount each slowdown rail bracket at the measured distance. The appropriate slowdown flat metal extension strip mounts on the rail bracket depending on the limit location on the selector box. Look at which side of the rail the selector box is mounted for the specific elevator. The slowdown limits that line up in between the rail and the door zone use the short straight flat metal strip. These metal strips are mounted vertically on the rail bracket. The slowdown limits that line up outside of the door zone from the rail will use the long slowdown flat metal extension strips and will mount diagonally from the rail bracket. Mount the magnet on the metal extension strip and verify the alignment. Make sure that the magnet is  $\frac{1}{2}$  inch to  $\frac{3}{4}$  inch from the slowdown sensor.

Once the top of car is wired and power is supplied to the selector, verify the activation of each door zone and slowdown magnet. Since the slowdown sensors will latch from passing a magnet, the sensor can possibly be initially set incorrectly. To change the state of the sensor, pass a magnet across the sensor. The LEDs on the door zone sensors and on the selector board will aid in verifying the setup off all the door zone and slowdown limit magnets. Review the pictures in figures 2.15 and 2.16 for a typical tapeless installation.

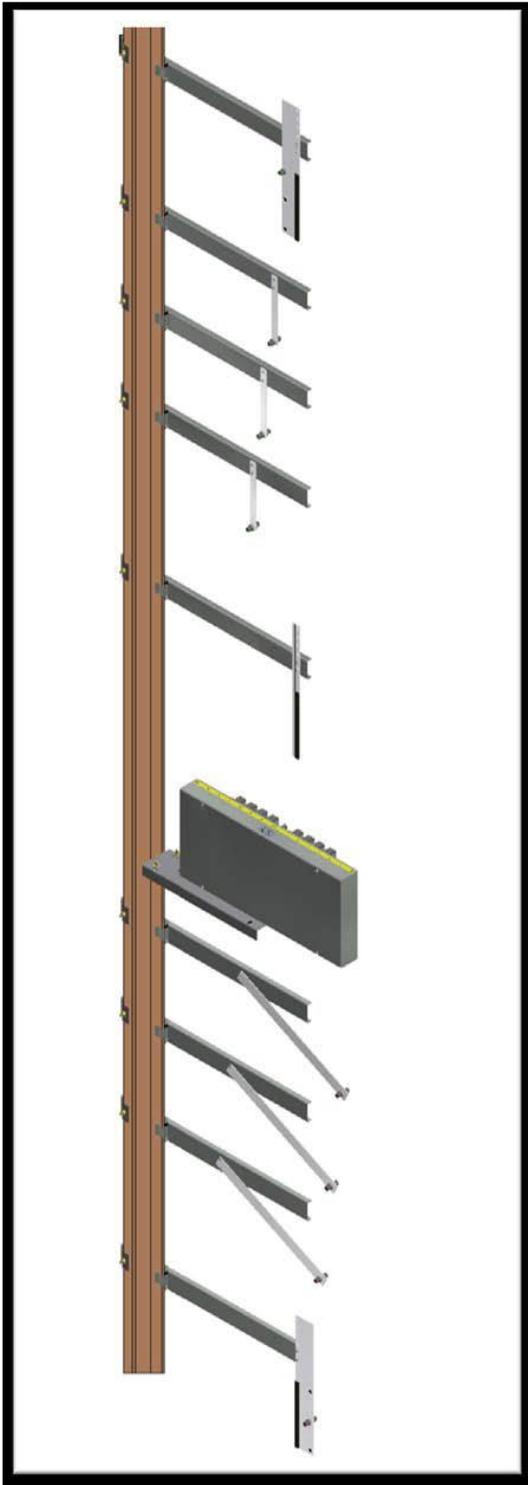


Figure 2.13 Selector, Door zone and Normal Terminal Slowdown Limit Mounting.

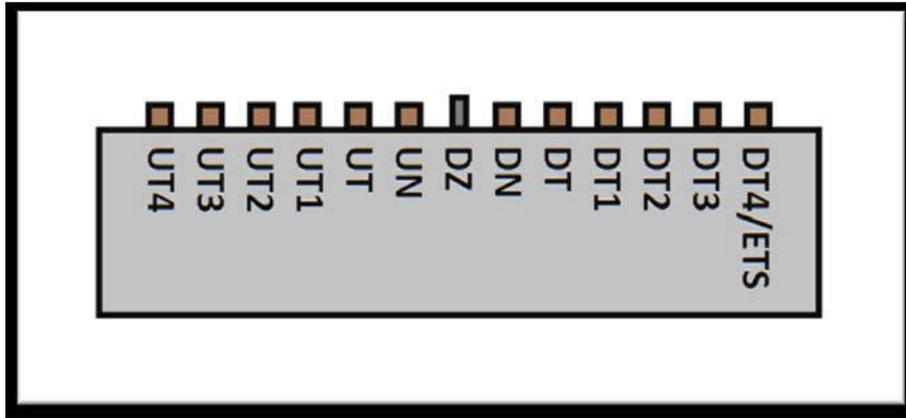
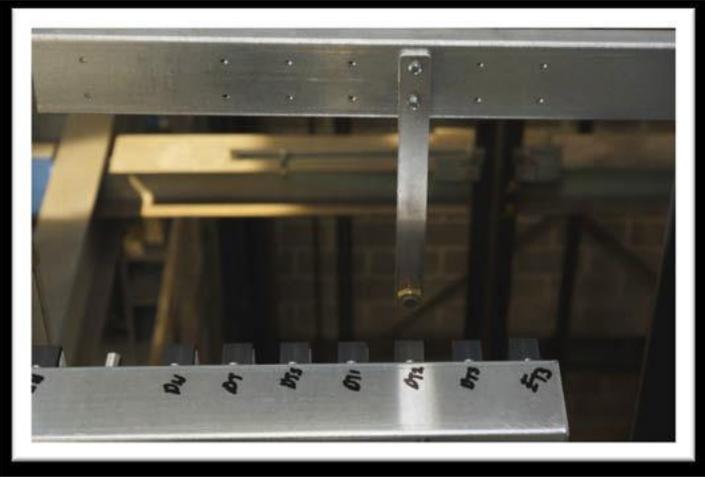


Figure 2.14 Placement of Sensor Labels on Selector Box

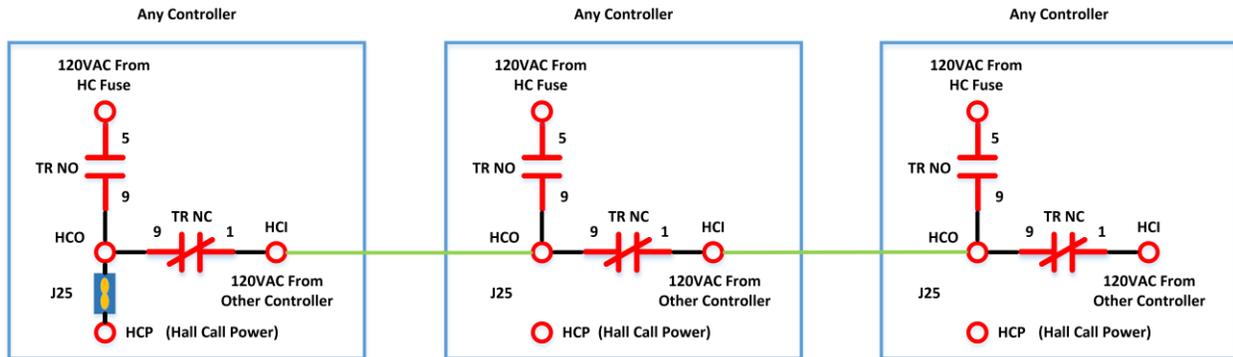


Figure 2.15 Typical Selector Box Installation


Figure 2.16 Typical Slowdown Bracket Installation



## 2.16 Transfer Relay Diagram



**Figure 2.13 – All Controllers Off**

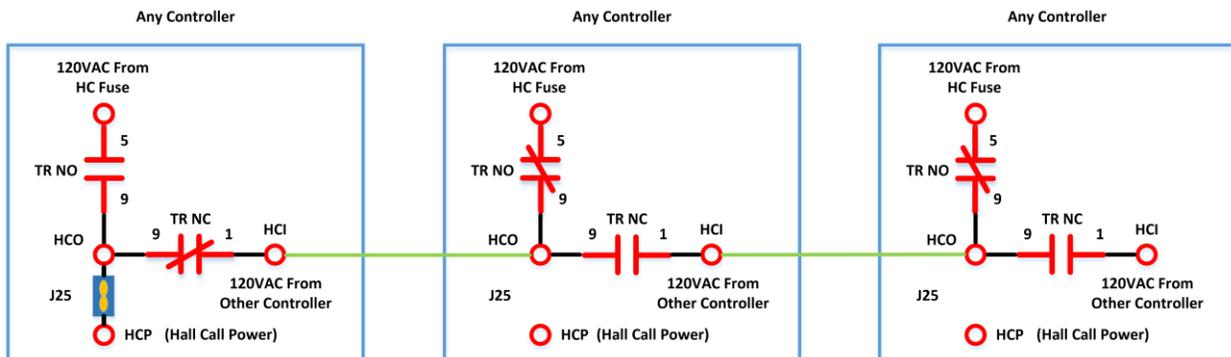

**Figure 2.14 – Leftmost Controller Off**

Hall Call boards can be mounted in any controller in the group. The controller that has the hall call boards will have the “In Dispatcher Car Only” jumper (J25) installed. These diagrams illustrate transfer power for hall calls but applies to any type of power transfer.

Actual “Dispatcher Car” is set in Adjustable Variables->Group Options->Dispatcher Car. This parameter is usually left at “0” making Car 1 the Dispatcher Car.

Figure 2.13 shows all controllers with power disconnected.

Figure 2.14 shows the leftmost controller off and the other two on, as if the power was disconnected on the controller with the hall call boards. As can be seen the leftmost controller now uses the 120VAC from the middle controller to power the hall call boards

- TR Relay – NO / NC Contacts**
- HCI – Transfer Power Input**
- HCO – Transfer Power Output**
- HCP – Transfer Power**

## ***Section 3 - Adjustment of the GALaxy controller DSD 412 Drive***

In order to obtain a running platform in "car top inspection", see the "Quick Start-up Guide for GALaxy Controller DSD-412 DC Drive with Distance Feedback". This procedure should be used only for installation purposes. When installation of all equipment is complete, and unit is ready for adjustment, proceed to **Section 3.2, Check Main Line Voltage**, and follow instructions.

### **3.1 General Information**

Before adjustment begins the following items must be completed.

1. All field wiring and safety circuits installed
2. Temporary jumpers from terminal HC to terminals MES & ALT
3. All hoistway limit switches installed
4. All car and hoistway doors and interlocks installed and pre-adjusted
5. Selector installed and magnets pre- adjusted
6. Familiarize yourself with all wiring schematics
7. Familiarize yourself with the DSD-412 SCR drive, drive manual, parameter adjustment, etc.
8. Motor encoder should be properly installed and wired.
9. Car should be properly counterbalanced.
10. Initial Power-up

### **3.2 Check Main Line Voltage**

With the main-line disconnect in the off position, check the line-side voltage with a volt meter to ensure the voltage matches the controller name tag "Input Power" voltage. Check to ensure all three phases are present. If voltage is not correct or all three phases are not present, do not proceed until corrected.

### **3.3 SCR Drive Motor Field Current**

Verify that the rated motor field current is set properly on the SCR drive unit by first checking the name plate field current on the hoist motor. Compare the name plate field current with the setting of the S1 dip switch on the SCR drive unit, and verify that the setting is correct.

### 3.4 Set Toggle Switches

Set all toggle switches on the 1064 board as follows:

- DOOR LOCKS "OFF"
- IND - "IND"
- AUTO DOOR - "OFF"
- STOP - "STOP"
- INSPECTION - "INSP"

### 3.5 Make Sure the Car Is Safe

Verify that all elevator doors are closed and that all safety circuits are functional.

### 3.6 Check Controller Voltage

Turn the main-line disconnect to the on position. Check the voltage at L1, L2, and L3 on the SCR drive. Verify that all three phases are present. Check the voltage at fuses L1, L2, and L3 (if present) on controller. If correct, check the voltage at terminal LIN with respect to GND. The voltage should read 120VAC. If correct, check the voltage at terminals S10, LC, & HC with respect to GND. All should read 120VAC. If not, check wiring diagram to determine the problem before continuing.

### 3.7 Verify the Main CPU is Operating

Check to make sure that the "axy" of GALaxy on the 1021/1101/1005 LCD interface display is blinking. If the "axy" is blinking, continue to the next step. If not, check voltage at terminals 5V to 0V on the 1064 board to insure 5VDC. If 5VDC is present and the "axy" on the 1021/1101/1005 LCD interface is not blinking, then contact factory.

### 3.8 Preset Adjustable Variables on Safety Processor Board and Main CPU

The 1066 LCD interface (safety processor board) and the 1021/1101/1005 LCD interface (main CPU) are normally preset prior to leaving the factory. However, it is prudent to check the setup values for the proper settings. Refer to **Section 13** of this manual for the operation of the 1066 LCD interface, and refer to **Section 10** for operation of the 1021/1101/1005 LCD interface. The following adjustable variables must be set properly.

**NOTE:** If the controller uses an NTS board please refer to **Section 14, GALX-0320AN NTSC Board.**

### 3.9 1066 LCD interface "Adj Var" Menu

- Top Spd (contract speed)
- Enc RPM (if Fdbk Typ=0 (Tape), not applicable) (if Fdbk Typ=1 (Encoder), set to rpm of governor) (if Fdbk Typ=4 (Incremental Encoder), set to value of Function #11 in DSD 412 drive, MOTOR RPM)
- Enc PPR (if Fdbk Typ=0 (Tape), not applicable) (if Fdbk Typ=1 (Encoder), set to 8192) (if Fdbk Typ=4 (Incremental Encoder), set to PPR of machine/motor encoder)
- Fdbk Typ (0=tape, 1=enc, 4=InEnc)
- Ctrl Typ (2=Tract DF)
- 2 Stop (0=Mult, 1=2 stop)
- RearDoor (0=Front only, 1=Rear)
- UTS Vel (Set to top speed)
- DTS Vel (Set to top speed)
- INS Vel (Set to 140)
- LEV Vel (Set to 140)
- UT Vel (Set to top speed)
- DT Vel (Set to top speed)
- UL Vel (Set to 160 if Non-DF)
- DL Vel (Set to 160 if Non-DF)
- SoftStop (Set to 3)

**NOTE:** The velocity values for the terminal limit switches above are only temporary settings until car is running high speed. In the final adjustment procedure, these variables must be set according to the procedures in **Section 3.33, Adjust Safety Processor Board Speed Clamps.**

### 3.10 1021/1101/1005 LCD interface "Adjustable Variables -> Car Motion" Submenu

- Top Speed (set to contract speed)
- Inspect Speed (set to 25 fpm)
- Encoder PPR (set to machine/motor encoder PPR)
- Encoder RPM (if tape selector, set to value of Function #11 in DSD 412 drive, MOTOR RPM), (if 485 tapeless selector, set to value of Function #11 in DSD 412 drive, MOTOR RPM), (if CAN open tapeless selector, set to governor rpm)

- DON Start Control (set to 1)

**NOTE:** See **Section 3.25, Correct Car Speed When Using 485 Tapeless System**, for determining governor rpm.

### 3.11 Place Stop Switch in Run Position

Flip the “STOP” toggle switch on the 1064 board to the up position. Verify that input LED’s for “LC, HC, DN, UN, SS, GTS, RDY and CS” are all on. If not, then correct field wiring.

### 3.12 Hoist Motor Data

At this time the hoist motor data must be entered into the SCR drive. The following functions must be entered or verified using the drive display unit (SCDU). Follow the instructions in the SCR drive manual to enter the following data for each function:

- Function #3 - RATED ARM AMP (from machine/motor nameplate)
- Function #7 - RATED ARM V (from machine/motor nameplate)
- Function #10 - ENCODER P/R (PPR of encoder on machine/motor)
- Function #11 - MOTOR RPM (from machine/motor nameplate)

**NOTE:** The MOTOR RPM value may need to be fine-tuned to provide the correct rpm to run the machine/motor at controller demanded speed.

- Function #17 - RATED FT/MIN (from controller data)
- Function #21 - ACC RATE FT/SEC2 (~ 4.2)
- Function #40 - RESPONSE (~ 6.0)
- Function #41 - SYSTEM INERTIA (~ 2.5)
- Function #49 - WEAK FIELD AMP (from controller data)
- Function #50 - FULL FIELD AMP (from controller data)
- Function #52 - RATED FIELD VDC (from controller data)
- Function #53 - STANDING FIELD AMP (from controller data)
- Function #56 - FIELD STRENGTH SPEED (~ 75)
- Function #57 - FIELD WEAKEN SPEED (~ 75)
- Function #994 - to save data just entered

After Function #994 has been performed successfully, proceed to the next step.

### 3.13 SCR Drive Self Tune

To have the SCR drive unit learn the parameters of the hoist motor the drive self-tune must be performed. Remove the drive reset "RST" wire from TB1 pin 49 of the drive. Turn on the main disconnect. Perform a FUNCTION #997 (see SCR drive manual) to self-tune the hoist motor. During this test, the "MC" contactor will energize for short period of time. After the self-tune is performed correctly, "PASS" will appear on the drive unit display. If a fault appears on the drive unit display, the problem must be corrected and the self-tune performed again. If the self-tune is successful, then the following FUNCTIONS must be viewed and recorded.

- Function #613
- Function #614
- Function #615

The value of Function #613 should be manually entered into Function #4 - ARM OHMS.

The value of Function #614 should be manually entered into Function #6 - ARM L.

The value of Function #615 should be manually entered into Function #51 - FIELD L/R.

### 3.14 Pre-set the Digital Speed Clamps

Pre-set the software digital speed clamps from the 1021/1101/1005 LCD interface under the "Elevator Setup Menu". The submenus for the clamp speeds are as follows:

Set INS/Leveling Clamp

Set DT/UT Slowdown Clamp Set DT1/UT1 Slowdown Clamp Set DT2/UT2 Slowdown Clamp Set DT3/UT3 Slowdown Clamp Set DTS/UTS Slowdown Clamp

Set the speed for Ins/Leveling for 140 fpm and all the remaining slowdown limit speeds to the contract speed of the car. Please note that the displayed value of "Clamp Speed" is the value the clamp should be set to. The slowdown limit "Clamp Speed:" will show 0000 until the car is run into the limits and the speed is recorded. Please refer to **Section 10, 1021/1101/1005 LCD Interface**, for the Elevator Setup Menu.

**NOTE:** The values of the clamp speed velocities above are only temporary settings until the car is running high speed. In the final adjustment procedure, these values must be set according to the procedures in **Section 3.34, Adjust Digital Slowdown Speed Clamps**.

### 3.15 Ready to Run On Inspection

The car should be ready to run on inspection if all is wired correctly. Select the “Elevator Status” on the 1021/1101/1005 LCD interface. The display should show “Out of Service” on the first line and “Inspection Mode” on the second. The 1066 LCD interface will display one of the following types of inspection:

- “MR INS” (Motor Room)
- “CT INS” (Car Top)
- “ACCESS” (Access)
- “IC INS” (In Car)
- “AUTO” (Not on Inspection)

To run the car from the motor room, “MR INS” should be displayed.

The “inspection string” consists of contacts from the inspection switches and the gate and lock bypass switches in series. One and only one of the five inspection inputs should be on for the car to run. Starting from the car top inspection input, the five inspection inputs are, “INS” for car top, “ACC” for access, “ICI” for in-car, “MRI” for motor room, and “AUTO” for automatic (no inspection). The inspection string circuit is shown in Figure 3.1.

**Note:** Any one of the following conditions will cause an inspection error:


More than one inspection input is on

No inspection input is on

Gate or Lock bypass switch is open and the car is not on car top inspection

If the controller is not on motor room inspection at this point, then verify all switch positions and wiring before proceeding.

**Figure 3.1: Inspection String**

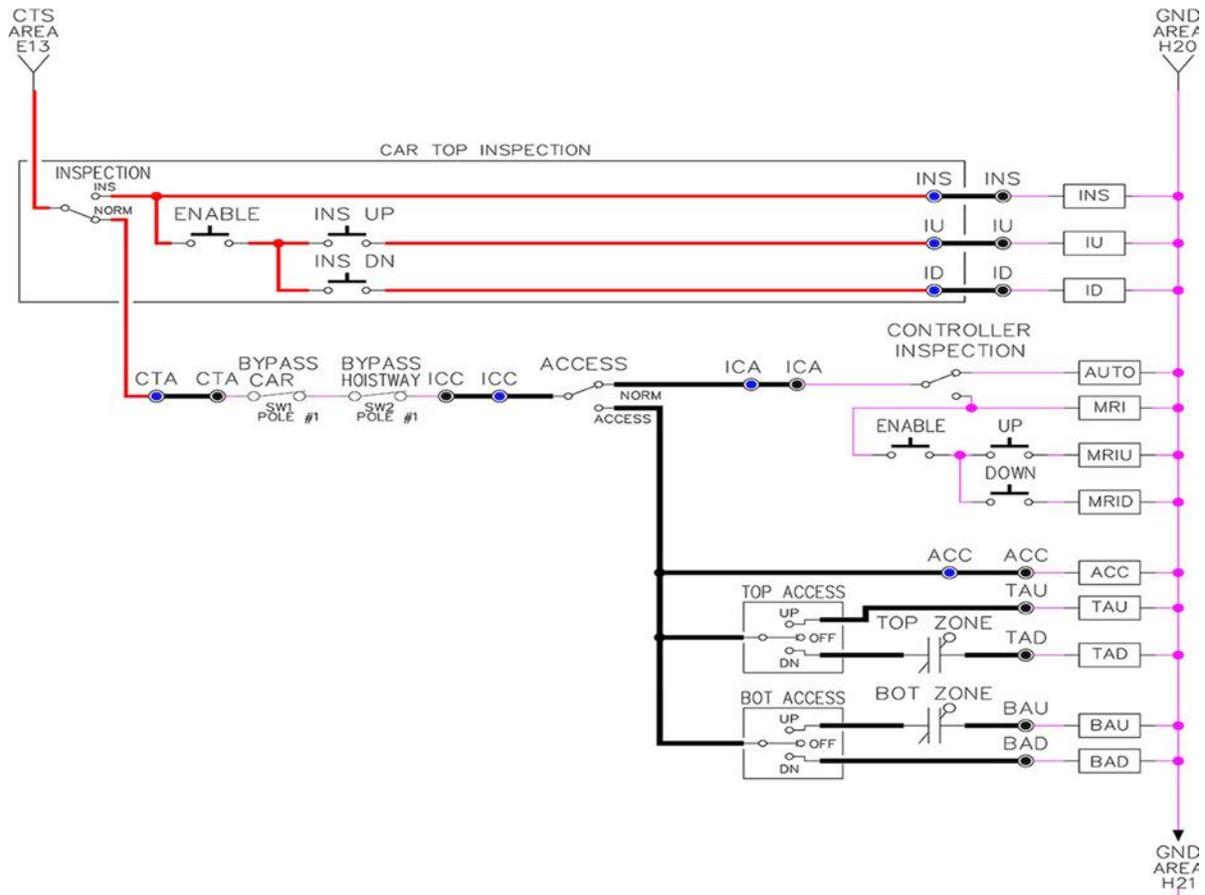

### 3.16 Adjust the Brake Voltage

Momentarily push the inspection UP or DOWN push button on the 1064 board while checking the DC brake voltage with a meter. If the voltage is not correct, it must be adjusted according to the following procedures.

If the controller utilizes an electronic brake board 1047 or 1051, then the brake voltage is adjusted through the 1021/1101/1005 LCD interface, "Car Brake" sub- menu. If the controller utilizes resistors and rectifiers for the brake coil circuit, then the brake voltage is adjusted by moving the adjustable tap on the brake resistor.

**NOTE:** Remove power before adjusting the resistor taps.

To adjust the brake voltage when using an electronic brake board, navigate to the "Adjustable Variables" menu, "Car Brake" and adjust "Brake Pick Volt", "Brake Hold Volt" and "Brk AC L-L Volt" to the proper values. Make sure that the brake is lifting and setting properly before proceeding.

### 3.17 Check the Run Direction

Momentarily push the inspection “UP” or “DOWN” push button on the 1064 board. One of the following should take place:

The elevator will run controlled, in the correct direction (up for “UP” button, down for “DOWN” button) with no drive faults. If so, proceed to “Check Inspection Speed”.

The elevator will run controlled, but in the wrong direction (down for “UP” button, up of “DOWN” button) with no drive faults. If so, proceed to **Section 3.18, Car Runs in the Wrong Direction**.

The elevator will try to run, but immediately trip on a drive fault #99. If so, proceed to **Section 3.19, Drive Trips immediately**.

### 3.18 Car Runs in the Wrong Direction

If the elevator runs controlled but in the wrong direction, with no drive faults, then turn off the main disconnect, swap the hoist motor field wires.

Also swap the encoder direction by swapping the encoder wires or if an encoder isolation board (1022N) is used, move J5 and J7 on the encoder board. Refer to the jumper diagram on the board.

J5 swaps **A & A NOT** – J7 swaps **B & B NOT**.

To change the encoder direction at the drive, swap the following wires:

A+ (TB3-2) with B+ (TB3-4)

A- (TB3-3) with B- (TB3-5)

Turn the main disconnect on, run the elevator on inspection again, and it should run controlled and in the correct direction. If so, proceed to **Section 3.20, Check Inspection Speed**. If not contact the factory.

### 3.19 Drive Trips Immediately

If the elevator tries to run, but immediately trips on a drive fault #99, then turn off the main disconnect, and swap the encoder direction by swapping the wires or if an encoder isolation board (1022N) is used, move J5 and J7 on the encoder board. Refer to the jumper diagram on the board.

J5 swaps **A & A NOT** – J7 swaps **B & B NOT**.

To change the encoder direction at the drive, swap the following wires:

A+ (TB3-2) with B+ (TB3-4)

A- (TB3-3) with B- (TB3-5)

Turn on the main disconnect and run the elevator on inspection again. If the elevator runs controlled and in the correct direction, proceed to next section.

If the elevator runs controlled but in the wrong direction, then go back and follow the directions in **Section 3.17, Car Runs the Wrong Direction.**

If the car still trips immediately on a drive fault #99, then contact the factory.

### **3.20 Check Inspection Speed**

With a hand held tachometer, check the speed of the elevator while running on inspection. The elevator should be running at 25 FPM. Also run the elevator while monitoring Function #600 on the SCR drive display. This parameter should also read 25 FPM. If speed is not correct, re-check drive data in FUNCTION #10 and FUNCTION #11.

From the 1021/1101/1005 LCD interface select the "Elevator Status" menu, navigate until the display shows "Dmd" and "Vel". While running on inspection, monitor the controller demand speed "Dmd", and the speed feedback "Vel". These values should both display 25. **If the demand and feedback on the 1021/1101/1005 LCD interface is incorrect, check the Encoder RPM and PPR parameters from the "Adjustable Variables" menu. These variables should be set according to the procedures in Section 3.8.**

If the speed on the hand held tachometer and on "Dmd" and "Vel" all read approximately 25 fpm (within +/-2 fpm) continue to the next step. If not, contact the factory.

### **3.21 Verify Controller Encoder Direction**

From the 1021/1101/1005 LCD interface "Elevator Status" menu, navigate to display "Dir" and "DP". While moving the car on inspection, monitor "Dir" (direction) and "DP" (pulse counts). "Dir" should display "Up" when the car is moving up, and "Dn" when the car is moving down. The value of "Dp" should increment when the car is moving up, and should decrement when the car is moving down.

**If the direction is wrong or the pulse counts change in the wrong direction, then the encoder direction to the controller must be changed. If an encoder isolation board (1022N) is used, move J1 and J3 on the encoder board. Refer to the jumper diagram on the board.**

J1 swaps **A & A NOT** – J3 swaps **B & B NOT**.

If no encoder isolation board is used, the A+ and A- encoder wires from the drive must be swapped. Note that the motor encoder wires are daisy chained from the encoder to the drive and then from the drive to the controller encoder board. Only the A+ and A- wires from the drive to the controller board must be swapped. The wires from the encoder to the drive must remain on the same terminal locations on the drive.

If the encoder is counting properly continue to the next step. If not, contact the factory.

### 3.22 Verify Selector and Slowdown Inputs

Run the elevator up on inspection until it stops on the up normal limit. The up and down normal limits should be set two inches above and below the terminal floors respectively. Verify the selector inputs are being set properly on the controller by running the elevator down until it stops on the down normal limit.

As the car approaches floor level going down, "DL" turns on first, then "DZ" and then finally "UL". At floor level, "UL, DL, and DZ" inputs should all be on at the same time. Leaving the floor going down "DL" will turn off first, then "DZ" and last "UL".

Also verify that the up and down terminal slowdown limits inputs "UT, UTS, DT & DTS" are breaking at the proper distances as shown in the slowdown table 2.0. "UT, UTS, DT & DTS" turn off when active.

### 3.23 Verify Car Speed on Safety Processor Board

Run the car in either direction or check the car speed on the 1066 LCD interface. The speed shown should match the car's actual speed. If the speed does not match and the secondary feedback comes from pulses from the tape go to "Correct Car Speed When Using a Tape". If using 485 tapeless, go to "Correct Car Speed When Using 485 tapeless". If using CAN Open tapeless, go to "Correct Car Speed When Using CAN Open tapeless". If the correct speed is shown proceed to **Section 3.27, Learn the Hoistway**.

### 3.24 Correct Car Speed When Using a Tape Installed in Hoistway

The tape has holes every 3/8" that are 3/8" in diameter. On the selector unit adjust the PP sensor closer to the tape until the orange LED at the end of the sensor turns on. Then turn the sensor inwards another 1/8" and lock in the sensor. While running on top of car inspection verify that the orange LED at the end of the PP sensor turns on and off as it passes by the holes on the tape. The safety processor measures the time between each pulse to calculate the velocity. If the velocity is not displayed correctly first make sure that the feedback type in the safety processor board adjustable variable is set to 0 for a tape application. Next, while the car is running, make sure that the PULSE LED on this board is pulsing. As the car increases in speed the LED will glow solid on. If the LED does not pulse, try swapping the wires at the PPS and PP terminals. If the LED still does not work, contact the factory. If the correct speed is shown proceed to **Section 3.27, Learn The Hoistway**.

### 3.25 Correct Car Speed When Using 485 Tapeless System

When using the 485 tapeless system, the secondary speed feedback comes from the encoder mounted on the governor. The 1066 board uses a serial interface to a Turck absolute encoder, part # T8.5882.3FOB.3001.

In the 1066 LCD interface "Adj Var" menu, set the "Fdbk Typ = 1", and set the "Enc PPR = 8192". The "Enc RPM" value must be calculated as described below. To calculate the RPM, divide the contract speed of the car by the distance traveled in one revolution with the governor as shown below:

RPM = Speed fpm/ (diameter GOV \* pi)

For a 1 ft. diameter governor:  $RPM = 350 / (1 * \pi) = 350 / 3.1415 = 111.4$

For a 16 in diameter governor (16/12 = 1.33ft):  $RPM = 350 / (1.33 * 3.1415) = 350 / 4.188 = 83.5$

### 3.26 Correct Car Speed When Using CAN Open Tapeless System

When using the CAN Open tapeless system, the secondary speed feedback comes from the incremental encoder mounted on the machine/motor.

In the 1066 LCD interface "Adj Var" menu, set the "Fdbk Typ = 4", and set the "Enc PPR" equal to the PPR of the machine/motor-mounted incremental encoder, and set the "Enc RPM" to the rpm of the machine/motor at contract speed.

On the 1066 LCD interface, navigate to the "Pls Cnt" menu. While running the elevator on inspection, verify that the pulse count value increments when running up and decrements when running down. The "Pls Cnt" value can be considerably out of range but will automatically correct during the "Learn Hoistway" procedure. To reverse the direction of pulse counting, navigate on the 1066 LCD interface to the "Adj Var" menu, "Enc Dir" and set to "0" for clockwise or "1" for counter-clockwise.

Navigate on the 1066 LCD interface to the "Car Spd" menu. Monitor the "Car Spd" while running the car at a known inspection speed. The value displayed should match the actual car speed measured with a hand held tachometer. If not, re-check the values set in "Enc RPM" and "Enc PPR" in the 1066 LCD interface. If the speed is correct, proceed to **Section 3.27, Learn The Hoistway.**

### 3.27 Learn the Hoistway

Run the elevator down on inspection until it stops on the down normal limit switch. Verify that the "DN and DL" input LED's are both off and that the "UL" and "DZ" LED's are on. From the 1021/1101/1005 LCD interface navigate to the "Elevator Setup" menu, "Learn Hoistway". The learn procedure can be performed automatically by choosing "Auto" from the menu items, or performed manually by choosing "Insp" from the menu items. After choosing the learn method, follow the instructions displayed on 1021/1101/1005 LCD interface.

In general, the car will run up from the "down normal limit" to the "up normal limit" at 30 fpm. During this learn run, the DP count for each floor level and each limit switch will be stored in memory.

**NOTE: The car must run the entire hoistway without stopping.**

As the elevator moves up the hoistway, navigate to the "Hoistway Tables" menu, "Disp/Mod Hoistway Table", and verify that the "DP" count is incrementing as the elevator moves up. Also as the elevator passes each floor, the pulse count and distance for that floor should change and be stored. Verify that the floor distances are valid. The pulse count for the terminal slowdowns will also be stored. The elevator will stop when it reaches the up normal limit. Follow the instructions on the 1021/1101/1005 LCD interface by putting the car on inspection, and then the message "Hoistway Learn Complete" should be displayed.

Move the elevator on inspection until the “DZ and DL” LED’s are on. Set the "INS" switch on the 1064 board to the "NORMAL" position and the elevator should level down to floor level at the top floor. If so, proceed to final adjustment.

If the car levels down but does not run, then check “Elevator Status” and “View Fault Log” on the 1021/1101/1005 LCD interface for any fault information. Correct items causing faults and perform hoistway learn again. After problem is corrected, and a successful hoistway learn is performed, proceed to final adjustment.

### 3.28 Automatic Run

The elevator should now be sitting idle at the top floor. The "AUTO DOOR" switch should be set to the "OFF" position and the "IND" switch should be set to the "IND" position. If the learn procedure was successful, the elevator should be ready to make an automatic run.

The default parameter settings for the ride quality should be adequate for an initial run. From the 1021/1101/1005 LCD interface navigate to the "Set Calls and Lockouts" menu, "Setup Car Calls" and enter a car call. The elevator should run to answer the call. When the elevator levels in and stops at the floor, the doors will remain closed.

The acceleration and deceleration of the car should be smooth and stepless regardless of the distance of the run. If the elevator does not function as described above, then the problem should be analyzed before proceeding.

### 3.29 Fine Tune the Ride Quality

In order to fine tune the ride quality, refer to Figure 3.2 which describes what part of the S-curve that the different parameters effect. In general, higher numbers in the given parameters, cause quicker and more abrupt changes from one mode to the next during a run. All of the S-curve parameters have a minimum and maximum value. The controller will not allow you to enter values that are not valid. After adjusting the S- curve parameters, proceed to the next step.

### 3.30 Adjust the Stop

When at floor level the “UL, DL, & DZ” input LEDs should be on. If the elevator continually tries to seek floor level by leveling up and down, check the motor field voltage to be at the nameplate voltage while leveling. If the motor field voltage is correct but the car seems sluggish then increase the response of the drive by increasing the value of Function #40 in the drive. If the car still re-levels at the floor, try the following steps to correct the problem:

- Reduce the leveling and re-leveling velocity parameters from the 1021/1101/1005 LCD interface "Adjustable Variables" menu, "Car Motion", "Leveling Speed" and "Relevel Speed".
- If the car still oscillates, adjust the "floor level zone" on the selector. The "floor level zone" is increased by moving the "UL" and "DL" sensors closer together.

- If the car stops hard on the brake, then make the following adjustments. From the 1021/1101/1005 LCD interface navigate to the "Adjustable Variables" menu, "Car Motion", and adjust both "Brake Drop Del" (brake drop delay) and "Soft Stop Time". These variables should be adjusted so that zero speed is observed at the end of the run prior to the brake setting. The controller should hold the car at zero speed for the duration of the "Soft Stop Time" which should continue while the brake is setting and for a short time after the brake sets. The "Soft Stop Time" MUST be set to at least 0.5 seconds LONGER than the "Brake Drop Del".


**NOTE:** The "Soft Stop Time" setting in the 1021/1101/1005 LCD interface should be compared with the setting in the 1066 LCD interface "Adj Var" menu, "SoftStop". The setting of "SoftStop" in the 1066 LCD interface should be greater than the "Soft Stop Time" setting in the 1021/1101/1005 LCD interface.

If the car spots when approaching the floor, the cause is usually due to the car not tracking (the drive response is set too low) or the speed profile into the floor is too aggressive. First try to increase the response of the drive by increasing the value of Function #40 in the drive.

If the car still spots, from the 1021/1101/1005 LCD interface, navigate to the "Adjustable Variables" menu, "Car Motion" and increase the value of "Floor Targ Dis" (floor targeting distance). The default value for the floor targeting distance is 12 inches. Increase it by steps of 2 or 3 and continue retesting until the parameter is adjusted to 18. If no change is noticed, start again from 12 and decrease the value.

The deceleration rate can also be reduced to help remove the spotting. Once the proper stop is achieved, proceed to "Adjust the Start".

**Figure 3.2: S-Curve Parameters**

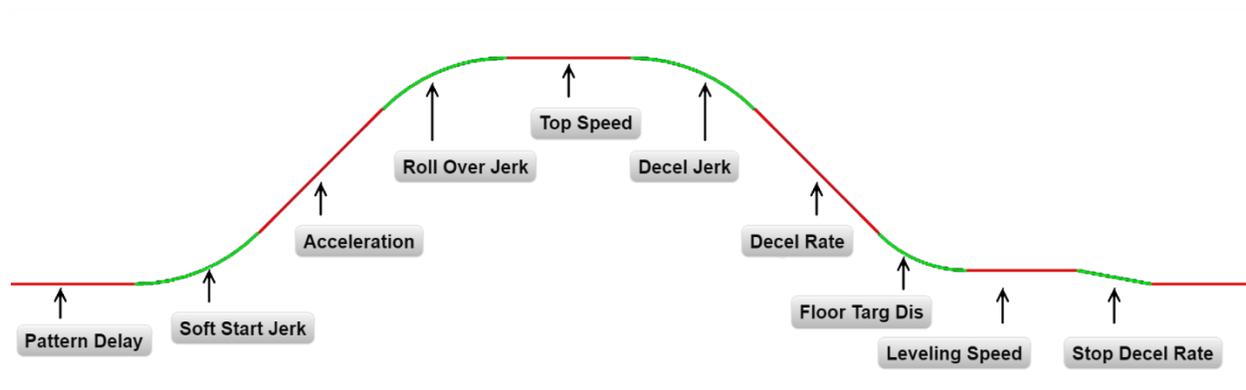

### 3.31 Adjust the Start

To provide a proper start, from the 1021/1101/1005 LCD interface, navigate to the "Adjustable Variables" menu, "Car Motion" and adjust "Brake Pick Del" (brake pick delay), "Pattern Delay", and "Soft Start Jerk". Initially, set the brake pick delay to 0 and increase the pattern delay by 0.1 seconds until the controller picks the brake completely before the motor starts to move. If roll back occurs, then reduce the pattern delay until there is no roll back. Sometimes, the timing works out better if the brake pick

delay is set to 0.1 second. If load weighing is used, pre-torquing can be used to provide a smoother start. See **Section 3.40, Adjust the Motor Pre-torque.**

Increase the soft start jerk rate in order to provide a quicker transition from the start to constant acceleration. Keep in mind that the larger the soft start number, the quicker the start. The ride should now be acceptable.

### 3.32 Verify Top Speed

To fine tune high speed, make high speed runs while monitoring Function #600 on the SCR drive display. The display should read contract speed.

If the speed is slightly under contract speed, then verify that Function #10 Encoder PPR and Function #11 Rated Motor RPM are set properly. The speed displayed at Function #600 should match the speed displayed on the 1021/1101/1005 LCD interface, "Elevator Status" menu, "Dmd" and "Vel". This speed should also match the speed displayed on the 1066 LCD interface, "Car Spd" menu. When all of these speeds are the same (+/- 2 fpm), then proceed to the next step.

### 3.33 Adjust Safety Processor Board Speed Clamps

The 1066 Safety Processor Board monitors the speed of the elevator at the terminal landings independently from the main CPU.

When the "UT, DT, UTS, and DTS" limit switches are activated, the 1066 board calculates the velocity of the elevator and compares that velocity with a stored value of speed clamp. If the velocity when the switch activates is greater than the speed clamp value, then the 1066 board will generate a fault that stops the elevator.

From the 1066 LCD interface, navigate to the "Lim Vel" menu, and view the recorded velocities displayed for the "UT, DT, UTS & DTS" slowdown limits. "UTS & DTS" are used on cars with reduced stroke buffers or with a top speed greater than 200 fpm. The velocity value is shown from the "LIM VEL" menu on the 1066 LCD interface.

The velocity value shown on the display for the "UT or DT" limit is the value after the car activates the limit then counts an adjustable number of counts set from the 1066 LCD interface, "Adj Var" menu, "UT Count" or "DT Count". These count values can be adjusted to provide adequate distance, following the limit switch activation, to allow the elevator to begin its normal decel pattern. The default "UT Count" and "DT Count" values are normally adequate. However, these values may need to be field adjusted to allow enough distance for the car to begin its normal decel pattern. If the "UT Count" and "DT Count" values are modified, the limit velocities must be re-checked

Run the car again to the top repeatedly from 2 floors, then 3 floors, etc., until top speed is reached. From the 1066 LCD interface "Lim Vel" menu, record the limit velocities displayed each time the car stops at the top floor.

Make the same runs to the bottom floor starting from 1 floor, then 2 floors, then 3 floors, etc., until top speed is reached. From the 1066 LCD interface "Lim Vel" menu, record the limit velocities displayed each time the car stops at the bottom floor.

Take the highest speed value recorded in the runs above and add 20 fpm to that value to use as the clamp speed values for the respective limit switches. Enter these clamp speed values into the 1066 LCD interface "Adj Var" menu, "UT Vel", "DT Vel", "UTS Vel", "DTS Vel" respectively.

### 3.34 Adjust Digital Slowdown Speed Clamps

Having just made several runs into the top and bottom landings, the main CPU has also recorded the car's velocity when the slowdown limits were activated. If the car has been powered down prior to this step, several runs must be made to the terminal landings to allow the main CPU to record the limit velocity values.

From the 1021/1101/1005 LCD interface, navigate to the "Elevator Setup" menu, "Set DT/UT Slowdown Clamp" and view the speed displayed for "Clamp Speed". Add 20 fpm to this "Clamp Speed" value and enter it into the "DT/UT Limit" value.

Adjust speed clamps for each slowdown limits used as determined by the elevator's contract speed.

The number of slowdown limits depends on the speed of the car as show in the table below:

**Table 3.1: Slowdown Clamps**

Car Speed	Number of Slowdown Limits	Clamp Number	Limit Used
<= 250 fpm	1	2	UT, DT
300-500 fpm	2	3	UT1, DT1
600-700 fmp	3	4	UT2, DT2
800 + fpm	4	5	UT3, DT3

### 3.35 Verify Inspection Velocity Clamp On Safety Processor Board

Place the car on inspection operation. From the 1066 LCD interface, navigate to the "Adj Var" menu, "Ins Vel" and set the speed clamp velocity to 25 fpm. From the 1021/1101/1005 LCD interface, navigate to the "Adjustable Variables" menu, "Car Motion" and set the "Inspect Speed" to 50 fpm. Run the car in either direction and verify that the car shuts down when the speed rises above 25 fpm.

From the 1066 LCD interface, navigate to the "Adj Var" menu, "Ins Vel" and set the speed clamp to 140 fpm. From the 1021/1101/1005 LCD interface, navigate to the "Adjustable Variables" menu, "Car Motion" and set the "Inspect Speed" to the desired value.

### 3.36 Analog Load Weigher Setup

If the job uses an analog load weigher purchased from G.A.L., complete the following procedure.

**NOTE:** It is recommend using two people, one moving the weights and one in the machine room to set up the load weigher.

Mount the load weigher as described by the manufacturer. The load weigher control box will also contain a board supplied by G.A.L. that connects to the controller serial CAN bus and reads in the analog output from the load weighing device. Wire the load weigher and G.A.L. board according to the controller schematics.

Calibrate the load weighing device hardware according to the manufacturer's instructions. Following proper installation of the load weighing device, proceed to **Section 3.37, Empty Car Setup**.

### 3.37 Empty Car Setup

Verify that the load weighing device is communicating to the main CPU by performing the following steps. From the 1021/1101/1005 LCD interface, navigate to the "Diagnostics" menu, "Car Comm Status", "Car to LW Board" and verify that "On- line = 1". If "On-line = 0" then verify wiring and installation of load weighing device.

From the 1021/1101/1005 LCD interface, navigate to the "Elevator Setup" menu, "Load Weigher Setup", "Setup Load Weigher" and follow the instructions on the display as you go through the procedure.

It is okay to exit the setup screen to place a call and then return to it while the setup is being performed.

Run the car to the bottom floor and press Enter on the 1021/1101/1005 LCD interface when prompted to do so to start the automatic setup sequence. If the car is at the bottom floor and the doors are not closed (the doors will not close automatically from turning off the auto-door switch) then place a car call to run the car up one floor, then back again. The doors will close when the call is placed.

When the automatic sequence is activated, the car will run to each floor and measure the empty load value. The 1021/1101/1005 LCD interface will indicate when the sequence if finished.

### 3.38 Full Car Setup

**NOTE:** The empty car setup must be successfully completed to run the full load setup.

Once the empty car setup is complete, run to the loading floor and set the "AUTO DOOR" switch to the "ON" position to allow weights to be loaded on the car. With the car fully loaded, set the "AUTO DOOR" switch to the "OFF" position and run the car to the bottom floor. Again if the doors are not closed, make a one floor run to force the doors to close.

With the car at the bottom floor, follow the instructions on the 1021/1101/1005 LCD interface to start the full load setup sequence. The car will automatically run to each floor and measure the full load value. When the full load measurement is complete, the car can be run to the loading floor and the weights removed.

After the weights are removed, cycle the doors to complete the procedure. From the 1021/1101/1005 LCD interface, navigate to the "Elevator Setup" menu, "Load Weigher Setup", "View/Modify LW Setup" and verify the load weigher status, "LW Device Stat: ON OK". If the status is "ON OK", then the load weigher should be accurately measuring the car load in real time. The percent load will be displayed, "Load: \_%".

The percent load values for different service options can now be set. From the 1021/1101/1005 LCD interface, navigate to the "Adjustable Variables" menu, "Service Options", and set the following variables:

- "Load Bypass"
- "Load Antinuisance"
- "Load Dispatch"
- "Load Overload"

**NOTE:** Setting the values of the variables above to 0% will disable that particular option.

### 3.39 Load Weighing Calibration Sequence

The load weigher is automatically calibrated once each week. If an error is detected during this calibration sequence, the load weigher and the pre-torque feature (if used) is disabled.

A load weighing calibration sequence can be manually activated by performing the following procedure. From the 1021/1101/1005 LCD interface, navigate to the "Elevator Setup" menu, "Load Weigher Setup", "Load Weigher Calibration" and follow the instructions on the display.

### 3.40 Adjust the Motor Pre-torque

**NOTE: The motor pre-torque uses the load value obtained from the analog load weigher and will only work if the load weigher has been installed properly, and the "Load Weigher Setup" has been performed successfully.**

To enable pre-torquing on the drive, set Function #114 on the DSD-412 drive to "ON". Remember to go to Function #994 to save any changed parameters. Run the empty car to a middle floor. From the 1021/1101/1005 LCD user interface, navigate to the "Adjustable Variables" menu, "Car Motion" and adjust the following parameters:

- "Balanced Load = 40" (typically car is 40% counterbalanced, but verify counterbalance percentage for each specific job)
- "Torque Amount = 10"
- "Pattern Delay = 2.5"
- "Brake Pick Del = 0.1"

The long pattern delay will allow an exaggerated amount of roll back in order for the pre-torquing to be set accurately. Make a one floor run down and observe the roll back when the brake picks at the start of the run. Increase the "Torque Amount" variable and continue to monitor the roll back while performing one floor runs in the down direction. As the "Torque Amount" is increased, the roll back should be minimized until the car will hold zero speed for the entire "Pattern Delay" time. A typical value for the "Torque Amount" is 40%. If the value is too large, the car will roll forward during the "Pattern Delay" time.

**Note:** The pattern delay must be at least 0.15 seconds (150 milliseconds). Setting the torque amount to 0.00 will disable the pre-torque feature. Also if the load weighing calibration sequence detects a load weighing error, the pre-torque feature is also automatically disabled.

### 3.41 Verify the Doors Are Safe

The elevator should now be adjusted. Verify that all door locks, gate switches, and safety circuits are operational. Set the "INSP" switch to the "NORM" position and set the "AUTO DOOR" switch to the "ON" position. The elevator should level into the floor and open the doors. If the doors do not open, check the door operator wiring and cam adjustment. If the doors do open, the elevator is now on independent service.

### 3.42 Fine Tune the Ride Quality

Ride the elevator and evaluate the ride quality. Fine tune ride quality by navigating to the "Adjustable Variables" menu, "Car Motion" and adjusting the variables shown in Figure 3.2. Keep in mind that if acceleration or deceleration values are changed, the speed clamps for the safety processor board and the S-curve board may need to be re-adjusted.

To fine tune the floor level accuracy, determine if the controller is set to stop when "UL" and "DL" signals turn on, or if controller is set to stop off of the position count. From the 1021/1101/1005 LCD interface, navigate to the "Adjustable Variables" menu, "Car Motion" and view the "Stop On Pos Cnt" variable. If "Stop On Pos Cnt = 0" then controller is set to stop when the "UL and "DL" signals turn on. If "Stop On Pos Cnt = 1" then controller is set to stop on a combination of the floor level magnet and the position count.

With "Stop On Pos Cnt = 0", the floor levels should be set by adjusting the floor level magnet at each floor. For proper operation, the floor magnets should be set to exactly floor level. After the floor levels are set properly, perform another hoistway learn procedure.

With "Stop On Pos Cnt = 1", the floor levels are set by using both the floor magnet and the position count. For proper operation with this setting, the floor magnet should be set to exactly floor level. The final stop can then be fine-tuned by performing the following adjustments.

From the 1021/1101/1005 LCD interface, navigate to the "Hoistway Tables" menu, "DZ & LZ Offset, Sel Cnt" and adjust "Dn Lev Dist" and "Up Lev Dist". The units for these variables are in "pulse counts". With "Stop On Pos Cnt =1" the car will continue to move for the "Dn Lev Dist" or "Up Lev Dist" after "UL and DL" turn on. Use the "Dn Lev Dist" and the "Up Lev Dist" parameters to make level changes at all floors.

To make level changes at individual floors, perform the following adjustments. From the 1021/1101/1005 LCD interface, navigate to the "Hoistway Tables" menu, "FL and FL Offset Count", and the offset count can be adjusted. These variables introduce an offset (+/-) to the stored floor count that was determined in the hoistway learn procedure.

**NOTE:** The number of pulse counts per inch can be viewed from the 1021/1101/1005 LCD interface, "Hoistway Tables", "DZ & LZ Offset, Sel Cnt", "Pulses/Inch".

**NOTE:** Regardless if "Stop On Pos Cnt=0" or if "Stop On Pos Cnt =1", the floor magnet must be set properly at floor level. If too large of values are entered into "Dn Lev Dist", "Up Lev Dist", or "Offset", the car will drive past the floor level magnet and re-level.

Check all signal devices for proper operation and remove all temporary jumpers. The adjustment should now be complete.

## **Section 4 - Adjustment of the GALaxy controller HPV-600/900 (Induction Motor- Geared Machine)**

In order to obtain a running platform in "car top inspection", see the "Quick Start-up Guide for GALaxy Controller HPV 600/900 with Distance Feedback". This procedure should be used only for installation purposes. When installation of all equipment is complete, and unit is ready for adjustment, proceed to **Section 4.2, Check Main Line Voltage**, and follow instructions.

### **4.1 General Setup**

Before adjustment begins the following items must be completed.

1. All field wiring and safety circuits installed.
2. Temporary jumpers from terminal "HC" to terminals "MES & ALT".
3. All hoistway limit switches installed.
4. All car and hoistway doors and interlocks installed and pre-adjusted.
5. Selector installed and magnets pre- adjusted.
6. Familiarize yourself with all wiring schematics.
7. Familiarize yourself with the Magnetek HPV 900/600 AC Vector Elevator Drive Technical Manual.
8. Verify that the AC motor is properly wired.
9. Verify that the motor encoder is connected properly.
10. Car should be properly counterbalanced.

### **4.2 Check Main Line Voltage**

With main-line disconnect in the off position, check the line-side voltage with a volt meter to insure the voltage matches the controller name tag "Input Power" voltage. Check to insure all three phases are present. If voltage is not correct or all three phases are not present, do not proceed until corrected.

### **4.3 Set Toggle Switches**

Set all toggle switches on the 1064 board down except for the gate and lock bypass switches as follows:

- DOOR LOCKS - "OFF"
- IND - "IND"
- AUTO DOOR - "OFF"

- STOP - "STOP"
- INSPECTION - "INSP"

#### 4.4 Make Sure the Car Is Safe

Verify that all elevator doors are closed and that all safety circuits are functional.

#### 4.5 Check Controller Voltage

Turn the main-line disconnect to the on position. Check the voltage at R, S, and T on the AC drive. Verify that all three phases are present. Check the voltage at fuses L1 and L2 on controller. If correct, check the voltage at terminal "LIN" with respect to "GND". The voltage should read 120VAC. If correct, check the voltage at terminals "S10, LC, & HC" with respect to "GND". All should read 120VAC. If not, check wiring diagram to determine problem before continuing.

#### 4.6 Verify the Main CPU is Operating

Check to make sure that the "axy" of GALaxy on the 1021/1101/1005 LCD interface is blinking. If the "axy" is blinking, continue to the next step. If not, check voltage at terminals 5V to 0V on the 1064 board to insure 5VDC. If 5VDC is present and the "axy" on the 1021/1101/1005 LCD interface is not blinking, then contact factory.

#### 4.7 Preset Adjustable Variables on Safety Processor Board And Main CPU

The 1066 LCD interface (safety processor board) and the 1021/1101/1005 LCD interface (main CPU) are normally preset prior to leaving the factory. However, it is prudent to check the setup values for the proper settings. Refer to **Section 13** of this manual for the operation of the safety processor board 1066 LCD interface. The following adjustment variables must be set properly:

**NOTE:** If the controller uses an NTS board please refer to **Section 14, GALX-0320AN NTSD Board.**

#### 4.8 1066 LCD interface "Adj Var" Menu

- Top Spd (contract speed)
- Enc RPM (if Fdbk Typ=0 (Tape), not applicable) (if Fdbk Typ=1 (Encoder), set to rpm of governor) (if Fdbk Typ=4 (Incremental Encoder), set to value of "CONTRACT MTR SPD" parameter in HPV 900/600 drive)
- Enc PPR (if Fdbk Typ=0 (Tape), not applicable) (if Fdbk Typ=1 (Encoder), set to 8192) (if Fdbk Typ=4 (Incremental Encoder), set to PPR of motor encoder)

- Fdbk Typ (0=tape, 1=enc, 4=InEnc)
- Ctrl Typ (2=Tract DF)
- 2 Stop (0=Mult, 1=2 stop)
- RearDoor (0=Front only, 1=Rear)
- UTS Vel (Set to top speed)
- DTS Vel (Set to top speed)
- INS Vel (Set to 140)
- LEV Vel (Set to 140)
- UT Vel (Set to top speed)
- DT Vel (Set to top speed)
- UL Vel (Set to 160 if Non-DF)
- DL Vel (Set to 160 if Non-DF)
- SoftStop (Set to 3)

**NOTE:** The velocity values for the terminal limit switches above are only temporary settings until car is running high speed. In the final adjustment procedure, these variables must be set according to the procedures in **Section 4.32, Adjust Safety Processor Board Speed Clamps.**

## 4.9 1021/1101/1005 LCD interface "Adjustable Variables -> Car Motion" Submenu

- Top Speed (set to contract speed)
- Inspect Speed (set to 25 fpm)
- Encoder PPR (set to motor encoder PPR)
- Encoder RPM (if tape selector, set to value of "CONTRACT MTR SPD" in HPV 900/600 drive), (if 485 tapeless selector, set to value of "CONTRACT MTR SPD" in HPV 900/600 drive), (if CAN open tapeless selector, set to governor rpm)

**NOTE:** See **Section 4.23, Correct Car Speed When Using 485 Tapeless System,** for determining governor rpm.

## 4.10 Place Stop Switch in Run Position

Set the "STOP" toggle switch on the 1064 board to the "RUN" position. Verify that input LED's for "LC, HC, DN, UN, SS, GTS, RDY and CS" are all on. If not, then correct field wiring.

## 4.11 Hoist Motor Data

At this time the hoist motor data must be entered into the AC drive. The following functions must be entered or verified using the drive digital operator. Follow the instructions in the HPV 900 or HPV 600 drive manual to enter the following data:

### DRIVE A1 Sub Menu

- CONTRACT CAR SPD (from controller data)
- CONTRACT MTR SPD (from motor nameplate RPM)  
**NOTE:** The CONTRACT MTR SPD value may need to be fine-tuned to provide the correct rpm to run the machine/motor at controller demanded speed.
- ENCODER PULSES (PPR from encoder on motor)

### MOTOR A5 Sub Menu

- RATED MTR PWR (from motor nameplate)
- RATED MTR VOLTS (from motor nameplate)
- RATED MOTOR CURR (from motor nameplate) MOTOR POLES
- For 1800rpm motor set MOTOR POLES to 4.
- For 1200rpm motor set MOTOR POLES to 6.
- For 900rpm motor set MOTOR POLES to 8.
- RATED MTR SPEED (RPM from motor nameplate) **NOTE:** This is a preliminary setting for the RATED MTR SPEED parameter. The final value of this parameter will be set in the "Adaptive Tune" procedure after the car is running high speed.

Most of the drive parameters have been preset to values required for your specific job. Other parameters not listed here may need to be adjusted in the field. Please refer to the Magnetek HPV Technical manual for more parameter information and troubleshooting guidelines.

From the digital operator for the drive, reset any active faults and clear the fault history log.

## 4.12 Pre-set the Digital Speed Clamps

Pre-set the software digital speed clamps from the 1021/1101/1005 LCD interface under the "Elevator Setup Menu". The submenus for the clamp speeds are as follows:

- Set Ins / Leveling Clamp
- Set DT/UT Slowdown Clamp
- Set DT1/UT1 Slowdown Clamp
- Set DT2/UT2 Slowdown Clamp
- Set DT3/UT3 Slowdown Clamp
- Set DTS/UTS Slowdown Clamp

Set the speed for Ins/Leveling for 140 fpm and all the remaining slowdown limit speeds to the contract speed of the car. Please note that the displayed value of "Clamp Speed" is the value the clamp should be set to. The slowdown limit "Clamp Speed:" will show 0000 until the car is run into the limits and the speed is recorded. Please refer to **Section 10, 1021/1101/1005 LCD Interface**, for the Elevator Setup Menu.

**NOTE:** The values of the clamp speed velocities above are only temporary settings until the car is running high speed. In the final adjustment procedure, these values must be set according to the procedures in **Section 4.33, Adjust Digital Slowdown Speed Clamps**.

## 4.13 Ready to Run On Inspection

The car should be ready to run on inspection if all is wired correctly. Select the "Elevator Status" on the 1021/1101/1005 LCD interface. The display should show "Out of Service" on the first line and "Inspection Mode" on the second. The 1066 LCD interface will display one of the following types of inspection:

- "MR INS" (Motor Room)
- "CT INS" (Car Top)
- "ACCESS" (Access)
- "IC INS" (In Car)"
- "AUTO" (Not on Inspection)

To run the car from the motor room, "MR INS" should be displayed.


The "inspection string" consists of contacts from the inspection switches and the gate and lock bypass switches in series. One and only one of the five inspection inputs should be on for the car to run. Starting from the car top inspection input, the five inspection inputs are, "INS" for car top, "ACC" for access, "ICI" for in-car, "MRI" for motor room, and "AUTO" for automatic (no inspection). The inspection string circuit is shown in Figure 4.1

Note that any one of the following conditions will cause an inspection error:

- More than one inspection input is on
- No inspection input is on
- Gate or Lock bypass switch is open and the car is not on car top inspection

If the controller is not on motor room inspection at this point, then verify all switch positions and wiring before proceeding.

**Figure 4.1: Inspection String**

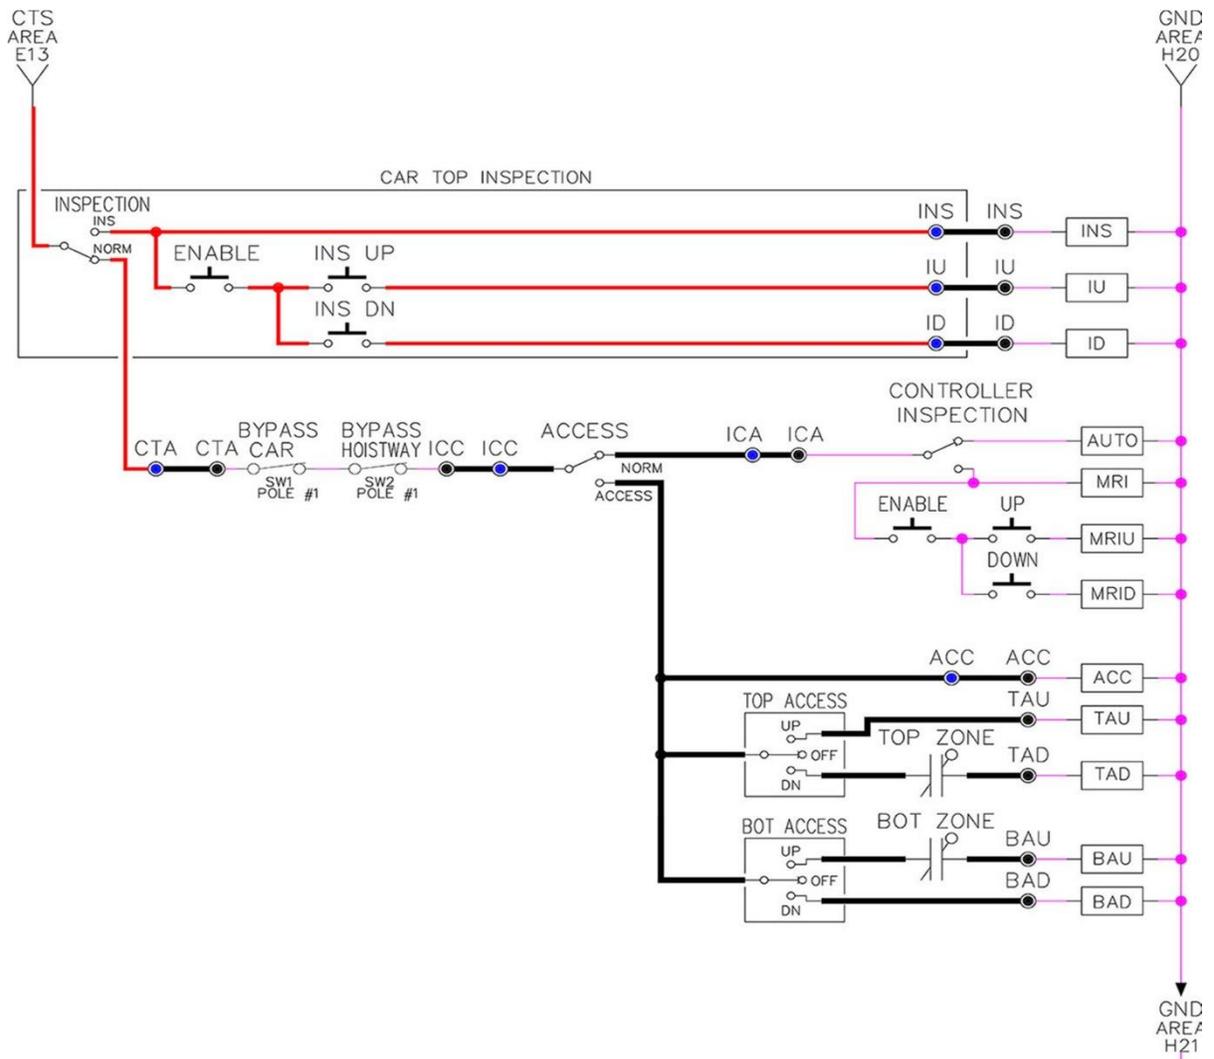

#### 4.14 Adjust the Brake Voltage

Momentarily push the inspection “UP” or “DOWN” push button on the 1064 board while checking the DC brake voltage with a meter. If the voltage is not correct, it must be adjusted according to the following procedures.

If the controller utilizes an electronic brake board 1047 or 1051, then the brake voltage is adjusted through the 1021/1101/1005 LCD interface, "Car Brake" sub- menu. If the controller utilizes resistors and rectifiers for the brake coil circuit, then the brake voltage is adjusted by moving the adjustable tap on the brake resistor.

**NOTE:** Remove power before adjusting the resistor taps.

To adjust the brake voltage when using an electronic brake board, navigate to the "Adjustable Variables" menu, "Car Brake" and adjust "Brake Pick Volt", "Brake Hold Volt" and "Brk AC L-L Volt" to the proper values.

Make sure that the brake is lifting and setting properly before proceeding.

#### **4.15 Check the Run Direction**

Again momentarily push the inspection "UP" or "DOWN" push button on the 1064 board. One of the following should take place:

- The elevator will run controlled, in the correct direction (up for "UP" button, down for "DOWN" button) with no drive faults. If so, proceed to "Check Inspection Speed".
- The elevator will run controlled, but in the wrong direction with no drive faults. If so, proceed to "Car Runs The Wrong Direction"
- The elevator will try to run, but immediately trips on a drive ENCODER FLT. If so, proceed to "Drive Trips Immediately".
- The elevator runs much slower than the inspection speed demand. If so, follow the steps in **Section 4.18, Car Runs Extremely Slow.**

#### **4.16 Car Runs the Wrong Direction**

If the elevator runs controlled but in the wrong direction with no drive faults, then change the run direction of the motor by one of the following two ways.

Change the motor rotation on the drive from forward to reverse.

USER SWITCHES C1 MOTOR ROTATION

Run the elevator on inspection again and verify that the car runs controlled and in the correct direction. If so, proceed to "Check Inspection Speed". If not contact the factory.

Turn off the main line disconnect and swap 2 of the motor leads. Also, reverse the encoder direction. If an encoder isolation board is not used, then change the encoder direction by swapping the wires at the drive as shown below:

HPV900 – A+ (TB1-21 with A- (TB1-20)

HPV600 – A+ (63) with A- (62)

If an encoder isolation board (1022N) is used, move J5 and J7 on the encoder board instead of moving the encoder wires at the drive. Refer to the jumper diagram on the board.

J5 swaps **A & A NOT** – J7 swaps **B & B NOT**.

Turn the main disconnect on and run the elevator on inspection again.

The car should run controlled and in the correct direction. If so proceed to “Check Inspection Speed”. If not contact the factory.

#### 4.17 Drive Trips Immediately

If the elevator tries to run, but immediately trips on a drive ENCODER FLT, recheck the drive motor parameters. This fault is most likely caused by improper parameter settings. Carefully review the drive MOTOR A5 parameters to match the motor data. Correct any invalid parameters and re-test the car.

If the parameters are correct, then measure the voltage of the encoder at the drive terminals as shown below:

- Voltage between A+ and A- should read greater than 1.5 VDC. For the HPV 900 drive, check terminals A (TB1-21) and A- (TB1-20). For the HPV 600 drive, check terminals A+ (63) and A- (62).
- Voltage between B+ and B- should read greater than 1.5 VDC. For the HPV 900 drive check terminals B+ (TB1-23) and B- (TB1-22). For the HPV 600 drive, check terminals B+ (65) and B- (64).
- Voltage between +5 and 0V should read roughly 5 VDC. For the HPV 900 drive check terminals +5 (TB1-25) and 0V (TB1-19). For the HPV 600 drive, check terminals +5 (67) and 0V (61).

If the voltage is incorrect then verify the encoder cable connections. Refer to the job schematics to correct any wiring error. If no error is found, then contact the factory.

If the voltage is correct then change the encoder direction.

Turn off the main disconnect. If an encoder isolation board is not used, then change the encoder direction by swapping the wires at the drive as shown below:

HPV 900 - A+ (TB1-21) with A- (TB1-20)

HPV 600 - A+ (63) with A- (62)

If an encoder isolation board (1022N) is used, move J5 and J7 on the encoder board instead of moving the encoder wires at the drive. Refer to the jumper diagram on the board.

J5 swaps **A & A NOT** – J7 swaps **B & B NOT**.

Turn on the main disconnect and run the elevator on inspection again. If the elevator runs controlled and in the correct direction, proceed to "Check Inspection Speed". If the elevator runs controlled but in the wrong direction, the go back and follow the directions in **Section 4.16, Car Runs The Wrong Direction**.

If the car still trips immediately on an ENCODER FLT, then contact the factory.

#### **4.18 Car Runs Extremely Slow**

If the car runs much slower than the inspection speed demand, then change the encoder direction.

Turn off the main disconnect. If an encoder isolation board is not used, then swap the encoder direction by swapping the wires at the drive as shown below:

HPV 900 - A+ (TB1-21) with A- (TB1-20)

HPV 600 - A+ (63) with A- (62)

If an encoder isolation board (1022N) is used, move J5 and J7 on the encoder board instead of moving the encoder wires at the drive. Refer to the jumper diagram on the board.

J5 swaps **A & A NOT** – J7 swaps **B & B NOT**.

Turn on the main disconnect and run the elevator on inspection again. If the elevator runs controlled and in the correct direction, proceed to "Check Inspection Speed". Otherwise contact the factory.

#### **4.19 Check Inspection Speed**

With a hand held tachometer, check the speed of the elevator while running on inspection. The elevator should be running at 25 fpm. Also run the elevator while monitoring the HPV 900/600 digital operator, D1 menu, "SPEED FEEDBACK". The display should read 25 fpm.

From the 1021/1101/1005 LCD interface, "Elevator Status" menu, navigate until the display shows "Dmd" and "Vel". While running on inspection, monitor the controller demand speed "Dmd", and the speed feedback "Vel". These values should both display 25.

If the demand and feedback on the 1021/1101/1005 LCD interface is incorrect, check the Encoder RPM and PPR parameters from the "Adjustable Variables" menu. These variables should be set to the values listed in **Section 4.9, 1021/1101/1005 LCD interface "Adjustable Variables -> Car Motion" Submenu**.

If the speed on the hand held tachometer and on "Dmd" and "Vel" all read approximately 25 fpm (within +/-2 fpm) continue to the next step. If not, contact the factory.

## 4.20 Verify Controller Encoder Direction

From the 1021/1101/1005 LCD interface "Elevator Status" menu, navigate to display "Dir" and "DP". While moving the car on inspection, monitor "Dir" (direction) and "DP" (pulse counts). "Dir" should display "Up" when the car is moving up, and "Dn" when the car is moving down. The value of "Dp" should increment when the car is moving up, and should decrement when the car is moving down.

If the direction is wrong or the pulse counts change in the wrong direction, then the encoder direction to the controller must be changed.

If an encoder isolation board (1022N) is used, move J1 and J3 on the encoder board. Refer to the jumper diagram on the board.

J1 swaps **A & A NOT** – J3 swaps **B & B NOT**.

If no encoder isolation board is used, the A+ and A- encoder wires from the drive must be swapped. Note that the motor encoder wires are daisy chained from the encoder to the drive and then from the drive to the controller encoder board. Only the A+ and A- wires from the drive to the controller board must be swapped. The wires from the encoder to the drive must remain on the same terminal locations on the drive.

If the encoder is counting properly continue to the next step. If not, contact the factory.

Verify Selector and Slowdown Inputs

Run the elevator up on inspection until it stops on the up normal limit. The up and down normal limits should be set two inches above and below the terminal floors respectively. Verify the selector inputs are being set properly on the controller by running the elevator down until it stops on the down normal limit.

As the car approaches floor level going down, "DL" turns on first, then "DZ" and then finally "UL". At floor level, "UL, DL, and DZ" inputs should all be on at the same time. Leaving the floor going down "DL" will turn off first, then "DZ" and last "UL".

Also verify that the up and down terminal slowdown limits inputs "UT, UTS, DT & DTS" are breaking at the proper distances as shown in the slowdown table 2.0. "UT, UTS, DT & DTS" turn off when active.

## 4.21 Verify Car Speed on Safety Processor Board

Run the car in either direction and check the car speed on the 1066 LCD interface. The speed shown should match the car's actual speed. If the speed does not match and the secondary feedback comes

from pulses from the tape go to "Correct Car Speed When Using A Tape". If using 485 tapeless, go to "Correct Car Speed When Using 485 tapeless". If using CAN Open tapeless, go to "Correct Car Speed When Using CAN Open tapeless". If the correct speed is shown proceed to **Section 4.25, Learn the Hoistway.**

## 4.22 Correct Car Speed When Using a Tape

The tape has holes every 3/8" that are 3/8" in diameter. On the selector unit adjust the PP sensor closer to the tape until the orange LED at the end of the sensor turns on. Then turn the sensor inwards another 1/8" and lock in the sensor. While running on top of car inspection verify that the orange LED at the end of the PP sensor turns on and off as it passes by the holes on the tape. The safety processor board on the controller measures the time between each pulse to calculate the velocity. If the velocity is not displayed correctly first make sure that the feedback type in the safety processor board adjustable variable is set to 0 for a tape application. Next, while the car is running, make sure that the PULSE LED on this board is pulsing. As the car increases in speed the LED will glow solid on. If the LED does not pulse, try swapping the wires at the PPS and PP terminals. If the LED still does not work, contact the factory. If the correct speed is shown proceed to "Learn the Hoistway".

## 4.23 Correct Car Speed When Using 485 Tapeless System

When using the 485 tapeless system, the secondary speed feedback comes from the encoder mounted on the governor. The 1066 board uses a serial interface to a Turck absolute encoder, part # T8.5882.3F0B.3001.

In the 1066 LCD interface "Adj Var" menu, set the "Fdbk Typ = 1", and set the "Enc PPR = 8192". The "Enc RPM" value must be calculated as described below. To calculate the RPM, divide the contract speed of the car by the distance travel in one revolution with the governor as shown below:

$$\text{RPM} = \text{Speed fpm} / (\text{diameter GOV} * \pi)$$

For a 1 ft. diameter governor:  $\text{RPM} = 350 / (1 * \pi) = 350 / 3.1415 = 111.4$

For a 16 in diameter governor (16/12 = 1.33ft):  $\text{RPM} = 350 / (1.33 * 3.1415) = 350 / 4.188 = 83.5$

## 4.24 Correct Car Speed When Using CAN Open Tapeless System

When using the CAN Open tapeless system, the secondary speed feedback comes from the incremental encoder mounted on the machine/motor.

In the 1066 LCD interface "Adj Var" menu, set the "Fdbk Typ = 4", and set the "Enc PPR" equal to the ppr of the machine/motor-mounted incremental encoder, and set the "Enc RPM" to the rpm of the machine/motor at contract speed.

On the 1066 LCD interface, navigate to the "Pls Cnt" menu. While running the elevator on inspection, verify that the pulse count value increments when running up and decrements when running down. The "Pls Cnt" value can be considerably out of range but will automatically correct during the "Learn Hoistway" procedure. To reverse the direction of pulse counting, navigate on the 1066 LCD interface to the "Adj Var" menu, "Enc Dir" and set to "0" for clockwise or "1" for counter-clockwise.

Navigate on the 1066 LCD interface to the "Car Spd" menu. Monitor the "Car Spd" while running the car at a known inspection speed. The value displayed should match the actual car speed measured with a hand held tachometer. If not, re-check the values set in "Enc RPM" and "Enc PPR" in the 1066 LCD interface. If the speed is correct, proceed to **Section 4.25, Learn the Hoistway**.

## 4.25 Learn the Hoistway

Run the elevator down on inspection until it stops on the down normal limit switch. Verify that the "DN and DL" input LED's are both off and that the "UL" and "DZ" LED's are on. From the 1021/1101/1005 LCD interface navigate to the "Elevator Setup" menu, "Learn Hoistway". The learn procedure can be performed automatically by choosing "Auto" from the menu items, or performed manually by choosing "Insp" from the menu items. After choosing the learn method, follow the instructions displayed on 1021/1101/1005 LCD interface.

In general, the car will run up from the "down normal limit" to the "up normal limit" at 30 fpm. During this learn run, the DP count for each floor level and each limit switch will be stored in memory.

**NOTE:** The car must run the entire hoistway without stopping.

As the elevator moves up the hoistway, navigate to the "Hoistway Tables" menu, "Disp/Mod Hoistway Table", and verify that the "DP" count is incrementing as the elevator moves up. Also as the elevator passes each floor, the pulse count and distance for that floor should change and be stored. Verify that the floor distances are valid. The pulse count for the terminal slowdowns will also be stored. The elevator will stop when it reaches the up normal limit. Follow the instructions on the 1021/1101/1005 LCD interface by putting the car on inspection, and then the message "Hoistway Learn Complete" should be displayed.

Move the elevator on inspection until the "DZ and DL" LED's are on. Set the "INS" switch on the 1064 board to the "NORMAL" position and the elevator should level down to floor level at the top floor. If so, proceed to final adjustment.

If the car levels down but does not run, then check "Elevator Status" and "View Fault Log" on the 1021/1101/1005 LCD interface for any fault information. Correct items causing faults and perform hoistway learn again. After problem is corrected, and a successful hoistway learn is performed, proceed to final adjustment.

#### **4.26 Automatic Run**

The elevator should now be sitting idle at the top floor. The "AUTO DOOR" switch should be set to the "OFF" position and the "IND" switch should be set to the "IND" position. If the learn procedure was successful, the elevator should be ready to make an automatic run.

The default parameter settings for the ride quality should be adequate for an initial run. From the 1021/1101/1005 LCD interface navigate to the "Set Calls and Lockouts" menu, "Setup Car Calls" and enter a car call. The elevator should run to answer the call. When the elevator levels in and stops at the floor, the doors will remain closed.

The acceleration and deceleration of the car should be smooth and stepless regardless of the distance of the run. If the elevator does not function as described above, then problem should be analyzed before proceeding.

#### **4.27 Drive Adaptive Tune**

To complete the setup of the drive, an adaptive tune is required. It is necessary that the car run 70% of contract speed when running this test so that the drive does not go into flux weakening. In the DRIVE A1 Sub Menu, set the CONTRACT MTR SPD parameter to 70% of the rated motor RPM. If this value was adjusted to correct the top speed of the car, use 70% of the adjusted value. To calculate 70%, multiply the value by 0.7. For example, if the motor RPM is 1050 then 70% of the motor RPM is  $(1050 \times 0.7 = 735)$ .

This procedure will also require a balanced load in the car. Follow the adaptive tune procedure set in the Magnetek HPV 900 or HPV 600 Technical Manual. After completing the adaptive tune, reset the CONTRACT MTR SPD parameter and then proceed to the next step.

#### **4.28 Fine Tune the Ride Quality**

In order to fine tune the ride quality, refer to Figure 4.2 which describes what part of the S-curve that the different parameters effect. In general, higher numbers in the given parameters, cause quicker and more abrupt changes from one mode to the next during a run. All of the S-curve parameters have a minimum and maximum value. The controller will not allow you to enter values that are not valid. After adjusting the S-curve parameters for the desired ride, proceed to the next step.

## 4.29 Adjust the Stop

When at floor level the "UL, DL, & DZ" input LED's should be on. If the elevator continually tries to seek floor level by leveling up and down, try the following steps to correct the problem:

Increase the response of the drive by increasing the value of A1 RESPONSE in the HPV 900/600 drive, and retesting the car.

Reduce the leveling and re-leveling velocity parameters from the 1021/1101/1005 LCD interface "Adjustable Variables" menu, "Car Motion", "Leveling Speed" and "Relevel Speed".

If the car still oscillates, adjust the "floor level zone" on the selector. The "floor level zone" is increased by moving the "UL" and "DL" sensors closer together.

If the car stops hard on the brake, then make the following adjustments. From the 1021/1101/1005 LCD interface navigate to the "Adjustable Variables" menu, "Car Motion", and adjust both "Brake Drop Del" (brake drop delay) and "Soft Stop Time". These variables should be adjusted so that zero speed is observed at the end of the run prior to the brake setting. The controller should hold the car at zero speed for the duration of the "Soft Stop Time" which should continue while the brake is setting and for a short time after the brake sets. The soft stop time MUST be set to at least 0.5 seconds LONGER than the "Brake Drop Del".


**NOTE:** The "Soft Stop Time" setting in the 1021/1101/1005 LCD interface should be compared with the setting in the 1066 LCD interface "Adj Var" menu, "SoftStop". The setting of "SoftStop" in the 1066 LCD interface should be greater than the "Soft Stop Time" setting in the 1021/1101/1005 LCD interface.

If the car spots when approaching the floor, the cause is usually due to the car not tracking (the drive response is set too low) or the speed profile into the floor is too aggressive. First try to increase the response of the drive by increasing the value of parameter A1 RESPONSE in the drive.

If the car still spots: from the 1021/1101/1005 LCD interface, navigate to the "Adjustable Variables" menu, "Car Motion" and increase the value of "Floor Targ Dis" (floor targeting distance). The default value for the floor targeting distance is 12 inches. Increase it by steps of 2 or 3 and continue retesting until the parameter is adjusted to 18. If no change is noticed, start again from 12 and decrease the value.

The deceleration rate can also be reduced to help remove the spotting. Proceed with adjusting the start once the proper stop is achieved.

**Figure 4.2: S-Curve Parameter**

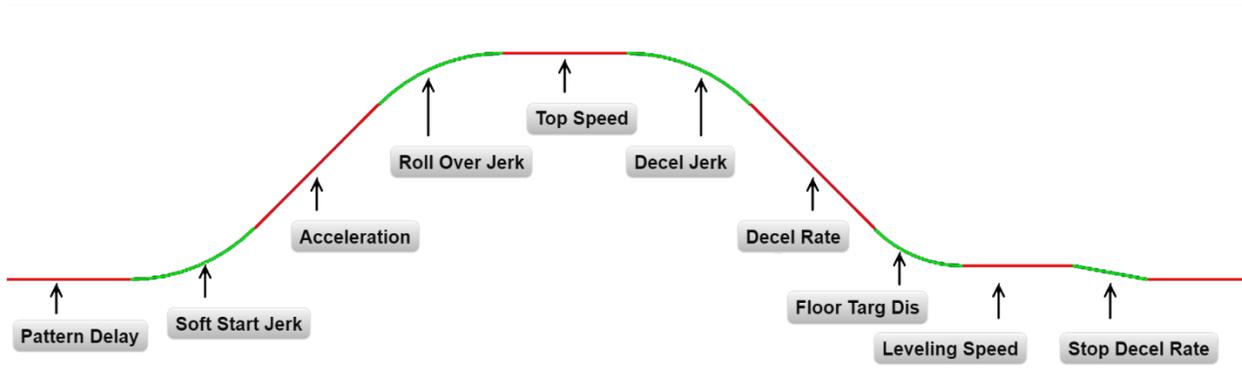

### 4.30 Adjust the Start

To provide a proper start, from the 1021/1101/1005 LCD interface, navigate to the "Adjustable Variables" menu, "Car Motion" and adjust "Brake Pick Del" (brake pick delay), "Pattern Delay", and "Soft Start Jerk". Initially, set the brake pick delay to 0 and increase the pattern delay by 0.1 seconds until the controller picks the brake completely before the motor starts to move. If roll back occurs, then reduce the pattern delay until there is no roll back. Sometimes, the timing works out better if the brake pick delay is set to 0.1 second. If load weighing is used, pre-torquing can be used to provide a smoother start. See **Section 4.39, Adjust the Motor Pre-torque**.

Increase the soft start jerk rate in order to provide a quicker transition from the start to constant acceleration. Keep in mind that the larger the soft start number, the quicker the start. The ride should now be acceptable.

### 4.31 Verify Top Speed

To fine tune high speed, make high speed runs while monitoring the SPEED FEEDBACK in the D1 submenu on the HPV drive display. The display should read contract speed, and it should match the speed displayed on the 1021/1101/1005 LCD interface, "Elevator Status" menu, "Dmd" and "Vel". This speed should also match the speed displayed on the 1066 LCD interface, "Car Spd" menu. If all of these values are the same (+/- 2 fpm), then proceed to the next step. If the speed is not correct increase or decrease drive parameter A1 CONTACT MTR SPD until the AC drive display reads contract speed. When the speed displayed is correct, proceed to the next step.

### 4.32 Adjust Safety Processor Board Speed Clamps

The 1066 Safety Processor Board monitors the speed of the elevator at the terminal landings independently from the main CPU.

When the "UT, DT, UTS, and DTS" limit switches are activated, the 1066 board calculates the velocity of the elevator and compares that velocity with a stored value of speed clamp. If the velocity when the switch activates is greater than the speed clamp value, then the 1066 board will generate a fault that stops the elevator.

To set the speed clamps, make a one floor run to the top floor.

From the 1066 LCD interface, navigate to the "Lim Vel" menu, and view the recorded velocities displayed for the "UT, DT, UTS & DTS" slowdown limits. "UTS & DTS" are used on car with reduced stroke buffers or with a top speed greater than 200 fpm. The velocity value is shown from the "LIM VEL" menu on the 1066 LCD interface.

The velocity value shown on the display for the "UT or DT" limit is the value after the car activates the limit then counts an adjustable number of counts the 1066 LCD interface, "Adj Var" menu, "UT Count" or "DT Count". These count values can be adjusted to provide adequate distance, following the limit switch activation, to allow the elevator to begin its normal decel pattern. The default "UT Count" and "DT Count" values are normally adequate. However, these values may need to be field adjusted to allow enough distance for the car to begin its normal decel pattern. If the "UT Count" and "DT Count" values are modified, the limit velocities must be re- checked.

Run the car again to the top repeatedly from 2 floors, then 3 floors, etc., until top speed is reached. Record the limit velocities each time the car stops at the top floor. From the 1066 LCD interface "Lim Vel" menu, record the limit velocities displayed each time the car stops at the top floor.

Make the same runs to the bottom floor starting from 1 floor, then 2 floors, then 3 floors, etc., until top speed is reached. From the 1066 LCD interface "Lim Vel" menu, record the limit velocities displayed each time the car stops at the bottom floor.

Take the highest speed value recorded in the runs above and add 20 fpm to that value to use as the clamp speed values for the respective limit switches. Enter these clamp speed values into the 1066 LCD interface "Adj Var" menu, "UT Vel", "DT Vel", "UTS Vel", "DTS Vel" respectively.

### **4.33 Adjust Digital Slowdown Speed Clamps**

Having just made several runs into the top and bottom landings, the main CPU has also recorded the car's velocity when the slowdown limits were activated. If the car has been powered down prior to this step, several runs must to be made to the terminal landings to allow the main CPU to record the limit velocity values.

From the 1021/1101/1005 LCD interface, navigate to the "Elevator Setup" menu, "Set DT/UT Slowdown Clamp" and view the speed displayed for "Clamp Speed". Add 20 fpm to this "Clamp Speed" value and enter it into the "DT/UT Limit" value.

The number of slowdown limits depends on the speed of the car as show in the table below:

**Table 4.1: Slowdown Clamps**

Car Speed	Number of Slowdown Limits	Clamp Number	Limit Used
<= 250 fpm	1	2	UT, DT
300-500 fpm	2	3	UT1, DT1
600-700 fpm	3	4	UT2, DT2
800 + fpm	4	5	UT3, DT3

Adjust speed clamps for each slowdown limits used as determined by the elevator’s contract speed.

#### **4.34 Verify Inspection Velocity Clamp on Safety Processor Board**

Place the car on inspection operation. From the 1066 LCD interface, navigate to the "Adj Var" menu, "Ins Vel" and set the speed clamp velocity to 25 fpm. From the 1021/1101/1005 LCD interface, navigate to the "Adjustable Variables" menu, "Car Motion" and set the "Inspect Speed" to 50 fpm. Run the car in either direction and verify that the car shuts down when the speed rises above 25 fpm.

From the 1066 LCD interface, navigate to the "Adj Var" menu, "Ins Vel" and set the speed clamp to 140 fpm. From the 1021/1101/1005 LCD interface, navigate to the "Adjustable Variables" menu, "Car Motion" and set the "Inspect Speed" to the desired value.

#### **4.35 Analog Load Weigher Setup**

If the job uses an analog load weigher purchased from G.A.L., complete the following procedure.

Mount the load weigher as described by the manufacturer. The load weigher control box will also contain a board supplied by G.A.L. that connects to the controller serial CAN bus and reads in the analog output from the load weighing device. Wire the load weigher and G.A.L. board according to the controller schematics.

Calibrate the load weighing device hardware according to the manufacturer's instructions. Following proper installation of the load weighing device, proceed to **Section 4.36, Empty Car Setup**.

**NOTE:** It is recommended using two people, one moving the weights and one in the machine room to set up the load weigher.

### 4.36 Empty Car Setup

Verify that the load weighing device is communicating to the main CPU by performing the following steps. From the 1021/1101/1005 LCD interface, navigate to the "Diagnostics" menu, "Car Comm Status", "Car to LW Board" and verify that "On-line = 1". If "On-line = 0" then verify wiring and installation of load weighing device.

From the 1021/1101/1005 LCD interface, navigate to the "Elevator Setup" menu, "Load Weigher Setup", "Setup Load Weigher" and follow the instructions on the display as you go through the procedure.

It is okay to exit the setup screen to place a call and then return to it while the setup is being performed.

Run the car to the bottom floor and press Enter on the 1021/1101/1005 LCD interface when prompted to do so to start the automatic setup sequence.

If the car is at the bottom floor and the doors are not closed (the doors will not close automatically from turning off the auto-door switch) then place a car call to run the car up one floor then back again. The doors will close when the call is placed.

When the automatic sequence is activated, the car will run to each floor and measure the empty load value. The 1021/1101/1005 LCD interface will indicate when the sequence is finished.

### 4.37 Full Car Setup

**NOTE:** The empty car setup must be successfully completed to run the full load setup.

Once the empty car setup is complete, run to the loading floor and set the "AUTO DOOR" switch to the "ON" position to allow weights to be loaded on the car. With the car fully loaded, set the "AUTO DOOR" switch to the "OFF" position and run the car to the bottom floor. Again if the doors are not closed, make a one floor run to force the doors to close.

With the car at the bottom floor, follow the instructions on the 1021/1101/1005 LCD interface to start the full load setup sequence. The car will automatically run to each floor and measure the full load value. When the full load measurement is complete, the car can be run to the loading floor and the weights removed.

After the weights are removed, cycle the doors to complete the procedure. From the 1021/1101/1005 LCD interface, navigate to the "Elevator Setup" menu, "Load Weigher Setup", "View/Modify LW Setup" and verify the load weigher status, "LW Device Stat: ON OK". If the status is "ON OK", then the load weigher should be accurately measuring the car load in real time. The percent load will be displayed, "Load: \_%".

The percent load values for different service options can now be set. From the 1021/1101/1005 LCD interface, navigate to the "Adjustable Variables" menu, "Service Options", and set the following variables:

- "Load Bypass"
- "Load Antinuisance"
- "Load Dispatch"
- "Load Overload"

**NOTE:** Setting the values of the variables above to 0% will disable that particular option.

### **4.38 Load Weighing Calibration Sequence**

The load weigher is automatically calibrated once each week. If an error is detected during this calibration sequence, the load weigher and the pre-torque feature (if used) is disabled. A load weighing calibration sequence can be done manually by performing the following procedure. From the 1021/1101/1005 LCD interface, navigate to the "Elevator Setup" menu, "Load Weigher Setup", "Load Weigher Calibration" and follow the instructions on the display.

### **4.39 Adjust the Motor Pre-torque**

**NOTE:** The motor pre-torque uses the load value obtained from the analog load weigher and will only work if the load weigher has been installed properly, and the "Load Weigher Setup" has been performed successfully.

On the HPV-600 or HPV-900 drive under User Switches C1 parameter, set Pre-Torque source to serial. Run the empty car to a middle floor. The long pattern delay will allow an exaggerated amount of roll back in order for the pre-torquing to be set accurately. Make a one floor run down and observe the roll back when the brake picks at the start of the run. Increase the "Torque Amount" variable and continue

to monitor the roll back while performing one floor runs in the down direction. As the "Torque Amount" is increased, the roll back should be minimized until the car will hold zero speed for the entire "Pattern Delay" time. A typical value for the "Torque Amount" is 40%. If the value is too large, the car will roll forward during the "Pattern Delay" time.

**NOTE:** Pattern delay must be at least 0.15 seconds (150 milliseconds). Setting the torque amount to 0.0 will disable the pre-torque feature. Also if the load weighing calibration sequence detects a load weighing error, the pre-torque feature is also automatically disabled.

#### 4.40 Verify the Doors Are Safe

The elevator should now be adjusted. Verify that all door locks, gate switches, and safety circuits are operational. Set the "INSP" switch to the "NORM" position and set the "AUTO DOOR" switch to the "ON" position. The elevator should level into the floor and open the doors. If the doors do not open, check the door operator wiring and cam adjustment. If the doors do open, the elevator is now on independent service.

#### 4.41 Fine Tune the Ride Quality

Ride the elevator and evaluate the ride quality. Fine tune ride quality by navigating to the "Adjustable Variables" menu, "Car Motion" and adjusting the variables shown in Figure 4.2. Keep in mind that if acceleration or deceleration values are changed, the speed clamps for the safety processor board and the S-curve board may need to be re-adjusted.

To fine tune the floor level accuracy, determine if the controller is set to stop when "UL" and "DL" signals turn on, or if controller is set to stop off of the position count. From the 1021/1101/1005 LCD interface, navigate to the "Adjustable Variables" menu, "Car Motion" and view the "Stop On Pos Cnt" variable. If "Stop On Pos Cnt = 0" then controller is set to stop when the "UL and "DL" signals turn on. If "Stop On Pos Cnt = 1" then controller is set to stop on a combination of the floor level magnet and the position count.

With "Stop On Pos Cnt = 0", the floor levels should be set by adjusting the floor level magnet at each floor. For proper operation, the floor magnets should be set to exactly floor level. After the floor levels are set properly, perform another hoistway learn procedure.

With "Stop On Pos Cnt = 1", the floor levels are set by using both the floor magnet and the position count. For proper operation with this setting, the floor magnet should be set to exactly floor level. The final stop can then be fine-tuned by performing the following adjustments.

From the 1021/1101/1005 LCD interface, navigate to the "Hoistway Tables" menu, "DZ & LZ Offset, Sel Cnt" and adjust "Dn Lev Dist" and "Up Lev Dist". The units for these variables are in "pulse counts". With "Stop On Pos Cnt =1" the car will continue to move for the "Dn Lev Dist" or "Up Lev Dist" after "UL and DL" turn on. Use the "Dn Lev Dist" and the "Up Lev Dist" parameters to make level changes at all floors.

To make level changes at individual floors, perform the following adjustments. From the 1021/1101/1005 LCD interface, navigate to the "Hoistway Tables" menu, "FL and FL Offset Count", and the offset count can be adjusted. These variables introduce an offset (+/-) to the stored floor count that was determined in the hoistway learn procedure.

**NOTE:** The number of pulse counts per inch can be viewed from the 1021/1101/1005 LCD interface, "Hoistway Tables", "DZ & LZ Offset, Sel Cnt", "Pulses / Inch".

**NOTE:** Regardless if "Stop On Pos Cnt=0" or if "Stop On Pos Cnt =1", the floor magnet must be set properly at floor level. If too large of values are entered into "Dn Lev Dist", "Up Lev Dist", or "Offset", the car will drive past the floor level magnet and re-level.

Check all signal devices for proper operation and remove all temporary jumpers. The adjustment should now be complete.

## ***Section 5 - Adjustment of the GALaxy Non- Distance Feedback controller - HPV-600/900***

### **5.1 General Setup**

Before adjustment begins the following items must be completed.

1. All field wiring and safety circuits installed
2. Temporary jumpers from terminal "HC" to terminals "MES & ALT"
3. All hoistway limit switches installed
4. All car and hoistway doors and interlocks installed and pre-adjusted
5. Selector installed and magnets pre- adjusted
6. Familiarize yourself with all wiring schematics
7. Familiarize yourself with the appropriate Magnetek HPV 900 or HPV 600 AC Vector Elevator Drive Technical Manual.
8. Verify that the AC motor is properly wired.
9. Verify that the encoder (if closed loop) is connected properly.
10. Car should be properly counterbalanced.

### **5.2 Check Main-line Voltage**

With main-line disconnect in the off position, check the line-side voltage with a volt meter to insure the voltage matches the controller name tag "Input Power" voltage. Check to insure all three phases are present. If voltage is not correct or all three phases are not present, do not proceed until corrected.

### **5.3 Set Toggle Switches**

Set all toggle switches on the 1064 board as follows:

- DOOR LOCKS - "OFF"
- IND - "IND"
- AUTO DOOR - "OFF"
- STOP - "STOP"
- INSPECTION - "INSP"

## 5.4 Make Sure the Car Is Safe

Verify that all elevator doors are closed and that all safety circuits are functional.

## 5.5 Check Controller Voltage

Turn the main-line disconnect to the “On” position. Check the voltage at R, S, and T on the AC drive. Verify that all three phases are present. Check the voltage at fuses L1 and L2 on the controller. If correct, check the voltage at terminal “LIN” with respect to “GND”. The voltage should read 120VAC. If correct, check the voltage at terminals “S10, LC, & HC” with respect to “GND”. All should read 120VAC. If not, check wiring diagram.

## 5.6 Verify the Main CPU is Operating

Check to make sure that the “axy” of GALaxy on the 1021/1101/1005 LCD interface is blinking. If the “axy” is blinking, continue to the next step. If not, check voltage at terminals 5V to 0V on the 1064 board to insure 5VDC. If 5VDC is present and the “axy” on the 1021/1101/1005 LCD interface is not blinking, then contact factory.

## 5.7 Preset Adjustable Variables on Safety Processor Board And Main CPU

The 1066 LCD interface (safety processor board) and the 1021/1101/1005 LCD interface (main CPU) are normally preset prior to leaving the factory. However, it is prudent to check the setup values for the proper settings. Refer to **Section 13** of this manual for the operation 1066 LCD interface, and refer to **Section 10** for operation of the 1021/1101/1005 LCD interface. The following adjustment variables must be set properly:

## 5.8 1066 LCD interface "Adj Var" Menu

- Top Spd (contract speed)
- Fdbk Typ (0=tape)
- Ctrl Typ (1=Tr NDF)
- 2 Stop (0=Mult, 1=2 stop)
- RearDoor (0=Front only, 1=Rear)
- UTS Vel (Set to top speed)
- DTS Vel (Set to top speed)
- INS Vel (Set to 140)
- LEV Vel (Set to 140)

- UT Vel (Set to top speed)
- DT Vel (Set to top speed)
- UL Vel (Set to 160 if Non-DF)
- DL Vel (Set to 160 if Non-DF)
- SoftStop (Set to 3)

**NOTE:** The velocity values for the terminal limit switches above are only temporary settings until car is running high speed. In the final adjustment procedure, these variables must be set according to the procedures in **Section 5.29, Adjust Safety Processor Board Speed Clamps.**

## 5.9 1021/1101/1005 LCD interface "Adjustable Variables -> Car Motion" Submenu

- Top Speed (set to contract speed)
- Inspect Speed (set to 25 fpm)
- Encoder PPR (set to motor encoder PPR)
- Encoder RPM (if tape selector, set to value of "CONTRACT MTR SPD" in HPV 900/600 drive)

## 5.10 Place Stop Switch in Run Position

Set the "STOP" toggle switch on the 1064 board to the "RUN" position. Verify that input LED's for "LC, HC, DN, UN, SS, GTS, RDY and CS" are all on.

If not, then correct field wiring.

## 5.11 Hoist Motor Data

At this time the hoist motor data must be entered into the AC drive. The following functions listed in the appropriate drive section must be entered or verified using the specific drive interface tool. Proceed to the HPV 900/600 or GPD 515 drive section below.

## 5.12 HPV 900/600 Drive

Follow the instructions in the HPV 900 or HPV 600 drive manual to enter the following data:

### DRIVE A1 Sub Menu

- CONTRACT CAR SPD (from controller data)

- CONTRACT MTR SPD (from motor nameplate RPM)

**NOTE:** The CONTRACT MTR SPD value may need to be fine-tuned to provide the correct rpm to run the machine/motor at controller demanded speed.

- ENCODER PULSES (PPR from encoder on motor)

#### MOTOR A5 Sub Menu

- RATED MTR PWR (from motor nameplate)
- RATED MTR VOLTS (from motor nameplate)
- RATED EXCIT FREQ (from motor nameplate)
- RATED MOTOR CURR (from motor nameplate)

#### MOTOR POLES

- for 1800rpm motor set MOTOR POLES to 4
- for 1200rpm motor set MOTOR POLES to 6
- for 900rpm motor set MOTOR POLES to 8
- RATED MTR SPEED (RPM from motor nameplate) NOTE: This is a preliminary setting for the RATED MTR SPEED parameter. The final value of this parameter will be set in the "Adaptive Tune" procedure after the car is running high speed.
- % NO LOAD CURR (from motor nameplate)

#### S-CURVES A2 Sub Menu

- ACCEL RATE 0 = 2.5
- DECEL RATE 0 = 2.5
- ACCEL JERK IN 0 = 3.0
- ACCEL JERK OUT 0 = 3.0
- DECEL JERK IN 0 = 3.0
- DECEL JERK OUT 0 = 3.0

#### MULTISTEP A3 Sub Menu

- SPEED CMD 0 = 0
- SPEED CMD 1 = Lev Speed
- SPEED CMD 2 = Ins Speed

- SPEED CMD 3 = High
- SPEED CMD 4 = 0
- SPEED CMD 5 = 0
- SPEED CMD 6 = 0
- SPEED CMD 7 = 0
- SPEED CMD 8 = 0
- SPEED CMD 9 = 0

#### CONFIGURE C0 Sub Menu

- LOGIC INPUT 1 = Drive Enable
- LOGIC INPUT 2 = Run Up
- LOGIC INPUT 3 = Fault Reset
- LOGIC INPUT 4 = Run Down
- LOGIC INPUT 5 = Contact Confirm
- LOGIC INPUT 6 = Step Ref B0
- LOGIC INPUT 7 = Step Ref B1
- LOGIC INPUT 8 = no function

Most of the drive parameters have been preset to values required for your specific job. Other parameters not listed here may need to be adjusted in the field. Please refer to the Magnetek HPV 900 or HPV 600 Technical manual for more parameter information and troubleshooting guidelines.

From the digital operator for the drive, reset any active faults and clear the fault history log.

## 5.13 GPD 515 Drive

Follow the instructions in the GPD 515 drive manual to enter the follow data:

- C1-10 Acc/Dec Time Setting = 0
- C1-01 Accel Time 1 = Top Speed/150
- C1-02 Decel Time 1 = Top Speed/150

**Note:** This will set the accel and decel rates to 150 fpm/s or 2.5 f/s<sup>2</sup>. (0.66 for 100 fpm)

- C2-01 S-curve Accel Start = 0.2
- C2-02 S-curve Accel End = 0.2
- C2-03 S-curve Decel Start = 0.2
- C2-04 S-curve Decel End = 0.2
- D1-01 Frequency Ref = 0
- D1-02 Frequency Ref = Lev Speed
- D1-03 Frequency Ref = Ins Speed
- D1-04 Frequency Ref = High Speed
- D1-05 through D1-09 = 0
- E1-01 Input Voltage = Line Voltage
- E1-03 V/F Pattern = 1
- E1-04 Max Frequency = 60
- E2-01 Motor Current = Nameplate Motor Amps
- E2-03 No-Load Amps = Nameplate Motor  
No-Load Amps
- E2-04 Num of Poles = 4 (~1800 rpm) 6 (~1200 rpm) 8 (~900 rpm)
- H1-01 Multi-function = 24
- H1-02 Multi-function = 14
- H1-03 Multi-function = F
- H1-04 Multi-function = 3
- H1-05 Multi-function = 4
- H1-06 Multi-function = F
- H3-05 Multi-function = 1F

With Encoder

- F1-01 Encoder Const = Encoder PPR
- F1-05 PG Rotation = 0 CCW, 1 CW

The following data is set from the factory and is shown here for reference:

- A1-02 Control Method =0 (V/F if no encoder used)
- A1-02 Control Method =3 (Flux Vector if encoder used)
- A1-03 Initialize Parameters = 2220
- B1-01 Reference Selection = 1
- B1-02 Operation Method = 1
- B1-03 Stopping Method = 1
- B5-01 PID Control = 0
- H2-01 Operation Ready = 6

Most of the drive parameters have been preset to values required for your specific job. Other parameters not listed here may need to be adjusted in the field. Please refer to the Magnetek GPD 515 Technical manual for more parameter information and troubleshooting guidelines.

## 5.14 Ready to Run On Inspection

The car should be ready to run on inspection if all is wired correctly. Select the “Elevator Status” on 1021/1101/1005 LCD interface. The display should show “Out of Service” on the first line and “Inspection Mode” on the second. The 1066 LCD interface will display one of the following types of inspection:

- “MR INS” (Motor Room)
- “CT INS” (Car Top) “ACCESS” (Access)
- “IC INS” (In Car)
- “AUTO” (Not on Inspection)

To run the car from the motor room, “MR INS” should be displayed.

The “inspection string” (Figure 5.1) consist of contacts from the inspection switches and the gate and lock bypass switches in series. One and only one of the five inspection inputs should be on for the car to

run. Starting from the car top inspection input, the five inspection inputs are, “INS” for car top, “ACC” for access, “ICI” for in-car, “MRI” for motor room, and “AUTO” for automatic (no inspection).

Note that any of the following conditions will cause an inspection error:

- More than one inspection input is on
- No inspection input is on
- Gate or Lock bypass switch is open and the car is not on car top inspection

If the controller is not on motor room inspection at this point, then verify all switch positions and wiring before proceeding.

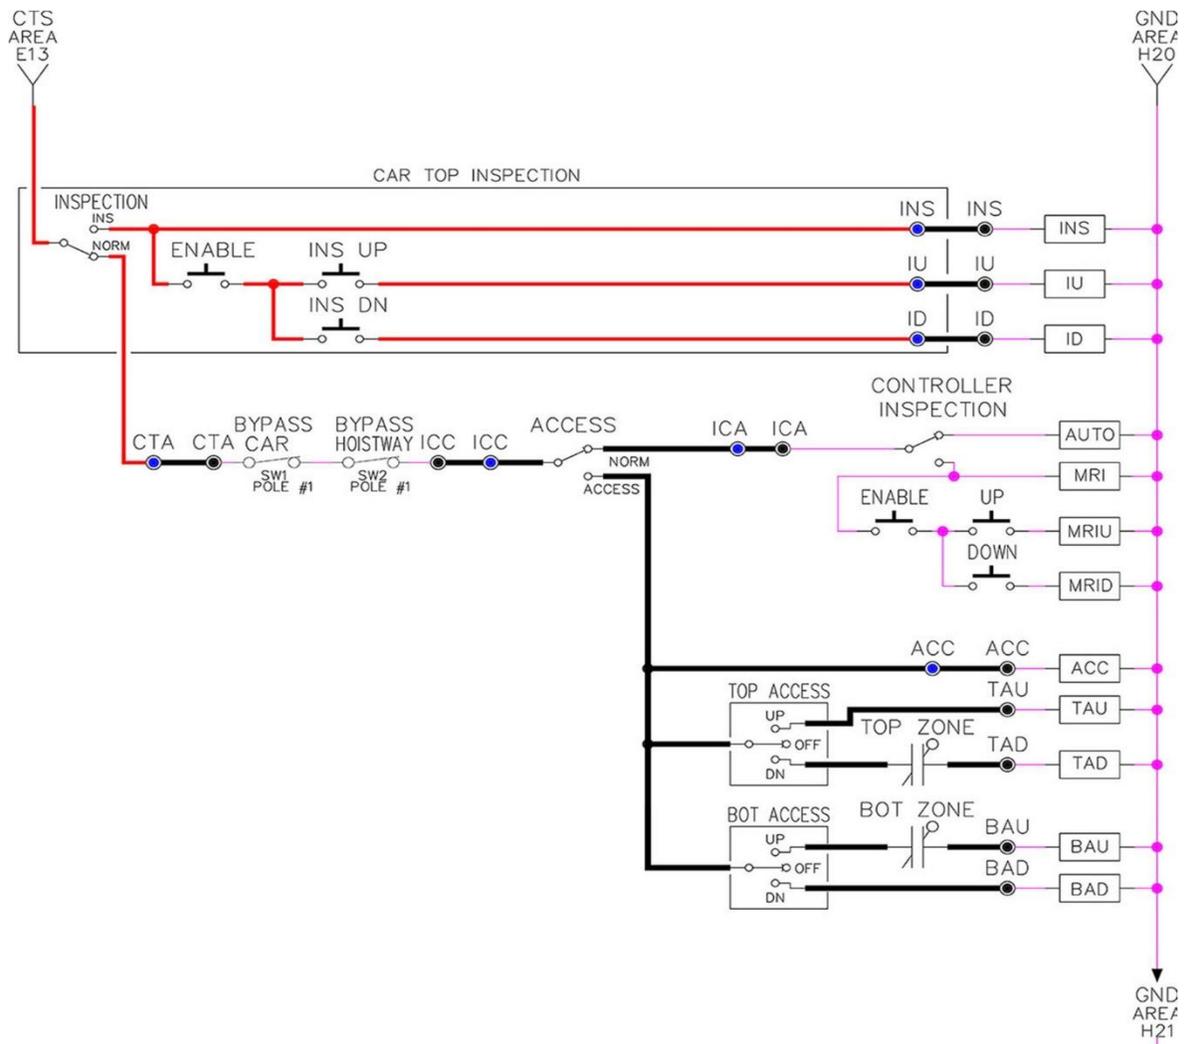


Figure 5.1: Inspection String Circuit

## 5.15 Adjust the Brake Voltage

Momentarily push the inspection “UP” or “DOWN” push button on the 1064 board while checking the DC brake voltage with a meter.

If the voltage is not correct, it must be adjusted according to the following procedures.

If the controller utilizes an electronic brake board 1047 or 1051, then the brake voltage is adjusted through the 1021/1101/1005 LCD interface, "Car Brake" sub- menu. If the controller utilizes resistors and rectifiers for the brake coil circuit, then the brake voltage is adjusted by moving the adjustable tap on the brake resistor.

**NOTE:** Remove power before adjusting the resistor taps.

To adjust the brake voltage when using an electronic brake board, navigate to the "Adjustable Variables" menu, "Car Brake" and adjust "Brake Pick Volt", "Brake Hold Volt" and "Brk AC L-L Volt" to the proper values. Make sure that the brake is lifting and setting properly before proceeding.

## 5.16 Check Run Direction

Momentarily push the inspection “UP” or “DOWN” push button on the 1064 board. One of the following should take place:

The elevator will run controlled, in the correct direction (up for “UP” button, down for “DOWN” button) with no drive faults. If so, proceed to “Check Inspection Speed”.

The elevator will run controlled, but in the wrong direction (down for “UP” button, up for “DOWN” button) with no drive faults. If so, proceed to "Car Runs the Wrong Direction".

The elevator will try to run, but immediately trips on a drive fault. Re-check the drive parameters. If an encoder is used and the drive records an ENCODER FLT proceed to “Verify Encoder Connection”. If no encoder is used, then contact the factory.

The elevator will run controlled but very slow; proceed to “Verify Encoder Connection”.

## 5.17 Car Runs Wrong Direction

If the elevator runs controlled but in the wrong direction, with no drive faults, then change rotation of the motor. For an HPV 900 or 600 drive the motor rotation can be changed from the drive command. For a GPD 515 drive the motor leads will need to be swapped.

With HPV 900 or HPV 600

USER SWITCHES C1 MOTOR ROTATION

With GPD 515

Turn off the power and switch any two motor leads. If an encoder is used, then swap the A+ and A- wires as follows:

A+ (TA1-4) with A- (TA1-5)

The motor should run controlled in the correct direction. If not then contact the factory, otherwise, proceed to “Run Inspection Speed”.

## 5.18 Verify Encoder Connection

If the elevator tries to run, but immediately trips on a drive ENCODER FLT or if the car runs very slow, then the drive encoder direction needs to be changed.

If the controller has an encoder isolation board (1022N), change the encoder direction for the drive by moving jumper J5 from “POS 1” to “POS 2”. This will swap the A and A- signals. Refer to the jumper diagram on the 1022 board.

J5 swaps **A & A NOT** – J7 swaps **B & B NOT**.

If the controller does not have an encoder isolation board, then turn off the main disconnect, and swap the encoder wires at the drive as follows:

With HPV 900 A+ (TB1-21) with A- (TB1-20)

With HPV 600 A+ (Encoder Card Terminal 63) with A- (Encoder Card Terminal 62)

With GPD 515

A+ (TA1-4) with A- (TA1-5)

Turn on the main disconnect, run the elevator on inspection again.

If the elevator runs controlled, in the correct direction, proceed to the next step. If the elevator runs controlled but in the wrong direction, with no drive faults, then turn off the main disconnect, and swap the hoist motor field wires. Also swap the encoder wires or the encoder isolation board jumpers back as they were to begin with. Turn the main disconnect on. The car should now run controlled in the correct direction. If not, contact the factory.

## 5.19 Check Inspection Speed

With a hand held tachometer, check the speed of the elevator while running on inspection. The elevator should be running at 25 fpm. Also run the elevator while monitoring speed feedback on the HPV 900, HPV 600 or GPD 515 drive display. The display should show the inspection speed value in feet per minute or in hertz. If the speed on both of these devices reads within +/- 2 fpm of the programmed speed, then continue to the next step. If not, contact the factory.

If using a GPD 515 drive, the speed display will be in hertz. Top speed will usually be 60Hz. The following formula is used to calculate the speed in Hz.

$$\text{Speed (Hz)} = (\text{Speed (fpm)} / \text{Top Speed (fpm)}) * 60$$

Example: Top Speed = 200 fpm Inspection Speed = 25 fpm Maximum Drive Frequency = 60 Hz Ins. Speed (Hz) = (25/200) \* 60 = 7.5 Hz

## 5.20 Check Selector Inputs

Run the elevator up on inspection until it stops on the up normal limit. The up and down normal limits should be set two inches above and below the terminal floors respectively. Verify the selector inputs are being set properly on the controller by running the elevator down until it stops on the down normal limit. As the car approaches floor level going down, "DL" turns on first, then "DZ" and then finally "UL". At floor level, "UL, DL, and DZ" inputs should all be on at the same time. Leaving the floor going down "DL" will turn off first, then "DZ" and last "UL".

## 5.21 Verify Slowdown Limits

As the car is running down verify that the up and down slowdown sensors for each floor, "US and DS", activate prior to reaching the landing. Also verify that the up and down terminal slowdown limits inputs "UT, UTS, DT & DTS" are breaking at the proper distances as shown in the slowdown table 2.0. "US and DS" turn on when active but "UT, UTS, DT & DTS" turn off when active.

"UT & DT" should turn off one inch closer to the terminal floor levels than when the "US & DS" inputs turn on.



## 5.24 Automatic Run

With the car on inspection, bring it to a normal limit at a terminal landing. Make sure the normal limit input is off. The "AUTO DOOR" switch should be set to the "OFF" position and the "IND" switch should be set to the "IND" position. Set the "INS" switch to the "NORMAL". The car should level into the floor. From the 1021/1101/1005 LCD interface navigate to the "Set Calls and Lockouts" menu, "Setup Car Calls" and enter a car call. The elevator should run to answer the call. When the elevator levels in and stops at the floor, the doors will remain closed.

## 5.25 Adjust the Drive Speed Profile

The S-Curve parameters in the drive adjust the ride and performance of the car. Since the slowdown distances for each floor are fixed distances, these parameters must be adjusted to bring the car into the floor without over shooting or spotting at the floor. The following parameters adjust the speed profile.

With HPV 900 or HPV 600

S-CURVE A2

- Accel Rate 0
- Decel Rate 0
- Accel Jerk In 0
- Accel Jerk Out 0
- Decel Jerk In 0
- Decel Jerk Out 0

MULTISTEP REF A3

- Speed Command 1
- Speed Command 2
- Speed Command 3
- Speed Command 4

With GPD 515

- C1-01 Accel Time 1
- C1-02 Decel Time 1
- C2-01 S-curve Accel Start

- C2-02 S-curve Accel End
- C2-03 S-curve Decel Start
- C2-04 S-curve Decel End
- D1-03 Freq Ref = Lev Speed
- D1-04 Freq Ref = High Speed
- D1-09 Freq Ref = Ins Speed

Perform a preliminary adjustment of the speed profile from the drive so that several successful runs from floor to floor can be made.

If using an HPV 900 or HPV 600, run the adaptive tune procedure next, otherwise, if using a GPD 515 proceed to adjust the stop. Keep in mind that the response of the drive may need to be adjusted.

## 5.26 Drive Adaptive Tune (HPV 900 /600 Only)

To complete the setup of the drive, an adaptive tune is required. It is necessary that the car run 70% of contract speed when running this test so that the drive does not go into flux weakening. In the DRIVE A1 Sub Menu, set the CONTRACT MTR SPD parameter to 70% of the rated motor RPM. If this value was adjusted to correct the top speed of the car, use 70% of the adjusted value. To calculate 70%, multiply the value by 0.7. For example, if the motor RPM is 1050 then 70% of the motor RPM is (1050 x 0.7 = 735). This procedure will also require balanced load in the car. Follow the adaptive tune procedure set in the Magnetek HPV 900 or HPV 600 Technical Manual. After completing the adaptive tune reset the CONTRACT MTR SPD parameter and then proceed to the next step.

## 5.27 Adjust the Stop

When at floor level the "UL, DL, & DZ" input LEDs should be on. If the elevator continually tries to seek floor level by leveling up and down, try the following steps to correct the problem:

- Increase the response of the drive and retest the car.
- Reduce the leveling and re-leveling velocity parameters in the car and retest.
- Make sure the brake is dropping quickly enough.

If the car still oscillates, adjust the "floor level" on the selector. The "floor level" is increased by moving the selector sensor boards closer together.

If the car spots when approaching the floor, the cause is usually due to the car not tracking. Try increasing the response of the drive again. The deceleration rate can also be reduced a little to help remove the spotting. Once the proper stop is achieved, proceed to the next step.

## 5.28 Adjust the Start

To provide a proper start, from the 1021/1101/1005 LCD interface, navigate to the "Adjustable Variables" menu, "Car Motion" and adjust "Brake Pick Del" (brake pick delay) and "Pattern Delay". Also adjust the start jerk rate in the drive.

Initially, set the brake pick delay to 0 and increase the pattern delay by 0.1 seconds until the controller picks the brake completely before the motor starts to move. If roll back occurs, then reduce the pattern delay until there is no roll back. Sometimes, the timing works out better if the brake pick delay is set to 0.1 second.

Adjust the drive start jerk rate to smooth out the start.

With the HPV 900 or HPV 600

Adjust Jerk Rate 1

With the GPD 515

Adjust C2-01 S-curve Accel Start

Refer to the GPD 515 manual for instructions to adjust the following parameters:

B6-01, B6-02, B6-03 and B6-04

Once the ride is acceptable, proceed to the next step.

## 5.29 Adjust Safety Processor Board Speed Clamps

The 1066 Safety Processor Board monitors the speed of the elevator at the terminal landings independently from the main CPU.

When the "UT, DT, UTS, and DTS" limit switches are activated, the 1066 board calculates the velocity of the elevator and compares that velocity with a stored value of speed clamp. If the velocity when the

switch activates is greater than the speed clamp value, then the 1066 board will generate a fault that stops the elevator.

To set the speed clamps, make a one floor run to the top floor.

After the car stops, record the velocity the car hit the "UT, DT, UTS & DTS" slowdown limits. "UTS & DTS" are used on car with reduced stroke buffers or with a top speed greater than 200 fpm. The velocity value is shown from the "LIM VEL" menu on the 1066 LCD interface.

The velocity value shown on the display for the "UT or DT" limit is the value after the car activates the limit then counts an adjustable number of counts set from the 1066 LCD interface, "Adj Var" menu, "UT Count" or "DT Count". These count values can be adjusted to provide adequate distance, following the limit switch activation, to allow the elevator to begin its normal decel pattern. The default "UT Count" and "DT Count" values are normally adequate. However, these values may need to be field adjusted to allow enough distance for the car to begin its normal decel pattern. If the "UT Count" and "DT Count" values are modified, the limit velocities must be re-checked.

Run the car again to the top repeatedly from 2 floors, then 3 floors, etc., until top speed is reached. From the 1066 LCD interface "Lim Vel" menu, record the limit velocities displayed each time the car stops at the top floor. Make the same runs to the bottom floor starting from 1 floor, then 2 floors, then 3 floors, etc., until top speed is reached. From the 1066 LCD interface "Lim Vel" menu, record the limit velocities displayed each time the car stops at the bottom floor. Take the highest speed value recorded in the runs above and add 20 fpm to that value to use as the clamp speed values for the respective limit switches. Enter these clamp speed values into the 1066 LCD interface "Adj Var" menu, "UT Vel", "DT Vel", "UTS Vel", "DTS Vel" respectively.

The number of slowdown limits depends on the speed of the car as show in the table below:

**Table 5.1: Slowdown Clamps**

Car Speed	Number of Slowdown Limits	Clamp Number	Limit Used
<= 250 fpm	1	2	UT, DT
300-500 fpm	2	3	UT1, DT1
600-700 fpm	3	4	UT2, DT2
800 + fpm	4	5	UT3, DT3

### 5.30 Verify Inspection Velocity Clamp on Safety Processor Board

Place the car on inspection operation. From the 1066 LCD interface, navigate to the "Adj Var" menu, "Ins Vel" and set the speed clamp velocity to 25 fpm. From the 1021/1101/1005 LCD interface, navigate to the "Adjustable Variables" menu, "Car Motion" and set the "Inspect Speed" to 50 fpm. Run the car in either direction and verify that the car shuts down when the speed rises above 25 fpm.

From the 1066 LCD interface, navigate to the "Adj Var" menu, "Ins Vel" and set the speed clamp to 140 fpm. From the 1021/1101/1005 LCD interface, navigate to the "Adjustable Variables" menu, "Car Motion" and set the "Inspect Speed" to the desired value.

### 5.31 Analog Load Weigher Setup

If the job uses an analog load weigher purchased from G.A.L., complete the following procedure.

**NOTE:** It is recommended using two people, one moving the weights and one in the machine room to set up the load weigher.

Mount the load weigher as described by the manufacturer. The load weigher control box will also contain a board supplied by G.A.L. that connects to the controller serial CAN bus and reads in the analog output from the load weighing device. Wire the load weigher and G.A.L. board according to the controller schematics.

Calibrate the load weighing device hardware according to the manufacturer's instructions. Following proper installation of the load weighing device, proceed to **Section 5.32, Empty Car Setup**.

### 5.32 Empty Car Setup

Verify that the load weighing device is communicating to the main CPU by performing the following steps. From the 1021/1101/1005 LCD interface, navigate to the "Diagnostics" menu, "Car Comm Status", "Car to LW Board" and verify that "On-line = 1". If "On-line = 0" then verify wiring and installation of load weighing device.

From the 1021/1101/1005 LCD interface, navigate to the "Elevator Setup" menu, "Load Weigher Setup", "Setup Load Weigher" and follow the instructions on the display as you go through the procedure.

It is okay to exit the setup screen to place a call and then return to it while the setup is being performed.

Run the car to the bottom floor and press Enter on the 1021/1101/1005 LCD interface when prompted, to start the automatic setup sequence.

If the car is at the bottom floor and the doors are not closed, (the doors will not close automatically from turning off the auto-door switch), then place a car call to run the car up one floor then back again. The doors will close when the call is placed.

When the automatic sequence is activated, the car will run to each floor and measure the empty load value. The 1021/1101/1005 LCD interface will indicate when the sequence is finished.

### 5.33 Full Car Setup

**NOTE:** The empty car setup must be successfully completed to run the full load setup.

Once the empty car setup is complete, run to the loading floor and set the "AUTO DOOR" switch to the "ON" position to allow weights to be loaded on the car. With the car fully loaded, set the "AUTO DOOR" switch to the "OFF" position and run the car to the bottom floor. Again if the doors are not closed, make a one floor run to force the doors to close.

With the car at the bottom floor, follow the instructions on the 1021/1101/1005 LCD interface to start the full load setup sequence. The car will automatically run to each floor and measure the full load value. When the full load measurement is complete, the car can be run to the loading floor and the weights removed.

After the weights are removed, cycle the doors to complete the procedure. From the 1021/1101/1005 LCD interface, navigate to the "Elevator Setup" menu, "Load Weigher Setup", "View/Modify LW Setup" and verify the load weigher status, "LW Device Stat: ON OK". If the status is "ON OK", then the load weigher should be accurately measuring the car load in real time. The percent load will be displayed, "Load: %".

The percent load values for different service options can now be set. From the 1021/1101/1005 LCD interface, navigate to the "Adjustable Variables" menu, "Service Options", and set the following variables:

- "Load Bypass"
- "Load Antinuisance"
- "Load Dispatch"
- "Load Overload"

**NOTE:** Setting the values of the variables above to 0% will disable that particular option.

### 5.34 Load Weighing Calibration Sequence

The load weigher is automatically calibrated once each week. If an error is detected during this calibration sequence, the load weigher and the pre-torque feature (if used) is disabled.

A load weighing calibration sequence can be manually activated by performing the following procedure. From the 1021/1101/1005 LCD interface, navigate to the "Elevator Setup" menu, "Load Weigher Setup", "Load Weigher Calibration" and follow the instructions on the display.

### 5.35 Check the Doors

The elevator should now be adjusted. Verify that all door locks, gate switches, and safety circuits are operational. Set the "INS" switch to the "NORM" position and set the "AUTO DOOR" switch to the "ON" position. The elevator should open the doors. If the doors do not open, check the door operator wiring and cam adjustment. If the doors do open, the elevator is now on independent service.

### 5.36 Fine Tune Ride and Stops

Ride the elevator and evaluate the ride quality. Fine-tune the ride quality with the drive S-Curve parameters in the drive. Fine-tune the floor level magnets. Check all signal devices for proper operation and remove any temporary jumpers. The adjustment should now be complete.

# ***Section 6 - Adjustment of the GALaxy Controller DC Quattro Drive***

## **6.1 General Information**

In order to obtain a running platform in "car top inspection", see the "Quick Start-up Guide for GALaxy Controller Quattro DC Drive with Distance Feedback". This procedure should be used only for installation purposes. When installation of all equipment is complete, and unit is ready for adjustment, proceed to **Section 6.2, Check Main Line Voltage**, and follow instructions.

Before adjustment begins the following items must be completed:

1. All field wiring and safety circuits installed
2. Temporary jumpers from terminal "HC" to terminals "MES & ALT"
3. All hoistway limit switches installed
4. All car and hoistway doors and interlocks installed and pre-adjusted
5. Selector installed and magnets pre-adjusted
6. Familiarize yourself with all wiring schematics
7. Familiarize yourself with the Quattro drive, drive manual, parameter adjustment, etc.
8. Motor encoder should be properly installed and wired.
9. Car should be properly counterbalanced.

## **6.2 Check Main Line Voltage**

With main-line disconnect in the "OFF" position, check the line-side voltage with a volt meter to insure the voltage matches the controller name tag "Input Power" voltage. Check to insure all three phases are present. If voltage is not correct or all three phases are not present, do not proceed until corrected.

## **6.3 Set Toggle Switches**

Set all toggle switches on the 1064 board as follows:

- DOOR LOCKS - "OFF"
- IND - "IND"
- AUTO DOOR - "OFF"

- STOP - "STOP"
- INSPECTION - "INSP"

## 6.4 Make Sure the Car Is Safe

Verify that all elevator doors are closed and that all safety circuits are functional.

## 6.5 Check Controller Voltage

Turn the main-line disconnect to the on position. Check the voltage at L1, L2, and L3 on the Quattro drive. Verify that all three phases are present. Check the voltage at fuses L1, L2, and L3 (if present) on controller. If correct, check the voltage at terminal "LIN" with respect to "GND". The voltage should read 120VAC. If correct, check the voltage at terminals "S10, LC, & HC" with respect to "GND". All should read 120VAC. If not, check wiring diagram to determine problem before continuing

## 6.6 Verify the Main CPU is Operating

Check to make sure that the "axy" of GALaxy on the 1021/1101/1005 LCD interface is blinking. If the "axy" is blinking, continue to the next step. If not, check voltage at terminals 5V to 0V on the 1064 board to insure 5VDC. If 5VDC is present and the "axy" on the 1021/1101/1005 LCD interface is not blinking, then contact factory.

## 6.7 Preset Adjustable Variables on Safety Processor Board and Main CPU

The 1066 LCD interface (safety processor board) and the 1021/1101/1005 LCD interface (main CPU) are normally preset prior to leaving the factory. However, it is prudent to check the setup values for the proper settings. Refer to **Section 13** of this manual for the operation of the 1066 LCD interface, and refer to **Section 10** for operation of the 1021/1101/1005 LCD interface. The following adjustable variables must be set properly:

**NOTE:** If the controller uses an NTS board please refer to **Section 14, GALX-0320AN NYSD Board.**

## 6.8 1066 LCD interface "Adj Var" Menu

- Top Spd (contract speed)
- Enc RPM (if Fdbk Typ=0 (Tape), not applicable) (if Fdbk Typ=1 (Encoder), set to rpm of governor) (if Fdbk Typ=4 ( , set to value of CONTRACT MTR SPD in Quattro drive)
- Enc PPR (if Fdbk Typ=0 (Tape), not applicable) (if Fdbk Typ=1 (Encoder), set to 8192) (if Fdbk Typ=4 (Incremental Encoder), set to ppr of machine/motor encoder)
- Fdbk Typ (0=tape, 1=enc, 4=InENC)

- Ctrl Typ (2=Tract DF)
- 2 Stop (0=Mult, 1=2 stop)
- RearDoor (0=Front only, 1=Rear)
- UTS Vel (Set to top speed)
- DTS Vel (Set to top speed)
- INS Vel (Set to 140)
- LEV Vel (Set to 140)
- UT Vel (Set to top speed)
- DT Vel (Set to top speed)
- UL Vel (Set to 160 if Non-DF)
- DL Vel (Set to 160 if Non-DF)
- SoftStop (Set to 3)

**NOTE:** The velocity values for the terminal limit switches above are only temporary settings until car is running high speed. In the final adjustment procedure, these variables must be set according to the procedures in **Section 6.32, Adjust Safety Processor Board Speed Clamps.**

## **6.9 1021/1101/1005 LCD interface "Adjustable Variables ->Car Motion"**

### **Submenu**

- Top Speed (set to contract speed)
- Inspect Speed (set to 25 fpm)
- Encoder PPR (set to machine/motor encoder PPR)
- Encoder RPM (if tape selector, set to value of CONTRACT MTR SPD in Quattro drive), (if 485 tapeless selector, set to value of CONTRACT MTR SPD in Quattro drive), (if CAN open tapeless selector, set to governor rpm)

**NOTE:** See **Section 6.24, Correct Car Speed When Using 485 Tapeless System**, for determining governor rpm.

## **6.10 Place Stop Switch in Run Position**

Set the "STOP" toggle switch on the 1064 board to the up position. Verify that input LED's for "LC, HC, DN, UN, SS, GTS, RDY and CS" are all on.

If not, then correct field wiring.

## 6.11 Hoist Motor Data

At this time the hoist motor data must be entered into the Quattro drive. The following functions must be entered or verified using the drive display unit. Follow the instructions in the Quattro drive manual to enter the following data for each function:

### Drive A1

- CONTRACT CAR SPD (from controller data)
- CONTRACT MTR SPD (from motor nameplate)

**NOTE:** The CONTRACT MTR SPD value may need to be fine-tuned to provide the correct rpm to run the machine/motor at controller demanded speed.

- ENCODER PULSES (PPR of encoder on machine/motor)

### Line Side Power Convert A5

- INPUT L-L VOLTS (measured at drive)

### Motor A6

- RATED MTR CURRENT (from machine/motor nameplate)
- ARMATURE VOLTAGE (from machine/motor nameplate)
- FULL FLD CURRENT (from controller data)
- WEAK FIELD CURRENT (from controller data)
- STANDBY FIELD (from controller data)

## 6.12 Quattro Drive Self-Tune

To have the Quattro drive unit learn the parameters of the hoist motor the drive self-tune must be performed. Place a temporary jumper from S10 to terminal MC on the GALX- 1064AN board. This will energize the MC contactor coil to enable the drive to perform a motor self-tune. Turn on the main disconnect. Navigate to the Auto Tune option under MS Pwr Convert A4 on the Magnetek Operator. The Magnetek Operator will display “Start Tune?” Press the enter key on the Magnetek operator to start the auto tune process. During this test, the “ME” contactor in the Quattro drive will energize for short period of time. After the self-tune is performed correctly, “Auto Tune Finish” will appear on the Magnetek Operator. If a fault appears on the Magnetek Operator, the problem must be corrected and the self-tune performed again. If the self-tune is successful, then the following functions must be viewed and recorded under MS Power Data D2.

- Auto Meas Arm L

- Auto Meas IRDrop
- Auto Meas Arm R
- Auto Field Res
- Auto Field TC

The value of MS Power Data D2 Auto Meas Arm L should be manually entered into Function MS Pwr Convert A4, Arm Inductance.

The value of MS Power Data D2 Auto Meas Arm R should be manually entered into Function MS Pwr Convert A4, Arm Resistance.

The value of MS Power Data D2 Auto Field Res should be manually entered into Function MS Pwr Convert A4, Motor Field Res.

The value of MS Power Data D2 Auto Field TC should be manually entered into Function MS Pwr Convert A4, Motor Field TC.

After these values are entered successfully, set parameter MS Pwr Convert A4, Gain Selection to “Use Self Tune”. Remove temporary jumper from S10 to MC on the GALX-1064AN board.

### **6.13 Pre-set the Digital Speed Clamps**

Pre-set the software digital speed clamps from the 1021/1101/1005 LCD interface under the “Elevator Setup Menu”. The submenus for the clamp speeds are as follows:

- Set Ins/Leveling Clamp
- Set DT/UT Slowdown Clamp
- Set DT1/UT1 Slowdown Clamp
- Set DT2/UT2 Slowdown Clamp
- Set DT3/UT3 Slowdown Clamp
- Set DTS/UTS Slowdown Clamp

Set the speed for Ins/Leveling for 140 fpm and all the remaining slowdown limit speeds to the contract speed of the car. Please note that the displayed value of “Clamp Speed” is the value the clamp should be set to. The slowdown limit “Clamp Speed:” will show 0000 until the car is run into the limits and the speed is recorded.

Please refer to **Section 10, 1021/1101/1005 LCD Interface**, for the Elevator Setup Menu.

**NOTE:** The values of the clamp speed velocities above are only temporary settings until the car is running high speed. In the final adjustment procedure, these values must be set according to the procedures in **Section 6.33, Adjust Digital Slowdown Speed Clamps**.

## 6.14 Ready to Run On Inspection

The car should be ready to run on inspection if all is wired correctly. Select the “Elevator Status” on the 1021/1101/1005 LCD interface. The display should show “Out of Service” on the first line and “Inspection Mode” on the second. The 1021/1101/1005 LCD interface on the Safety Processor Board will display one of the following types of inspection:

- “MR INS” (Motor Room)
- “CT INS” (Car Top)
- “ACCESS” (Access)
- “IC INS” (In Car)
- “AUTO” (Not on Inspection)

To run the car from the motor room, “MR INS” should be displayed.

The “inspection string” consists of contacts from the inspection switches and the gate and lock bypass switches in series. One and only one of the five inspection inputs should be on for the car to run. Starting from the car top inspection input, the five inspection inputs are, “INS” for car top, “ACC” for access, “ICI” for in- car, “MRI” for motor room, and “AUTO” for automatic (no inspection). The inspection string circuit is shown in Figure 6.1.

**NOTE:** Any one of the following conditions will cause an inspection error:

- More than one inspection input is on
- No inspection input is on
- Gate or Lock bypass switch is open and the car is not on car top inspection

If the controller is not on motor room inspection at this point, then verify all switch positions and wiring before proceeding.

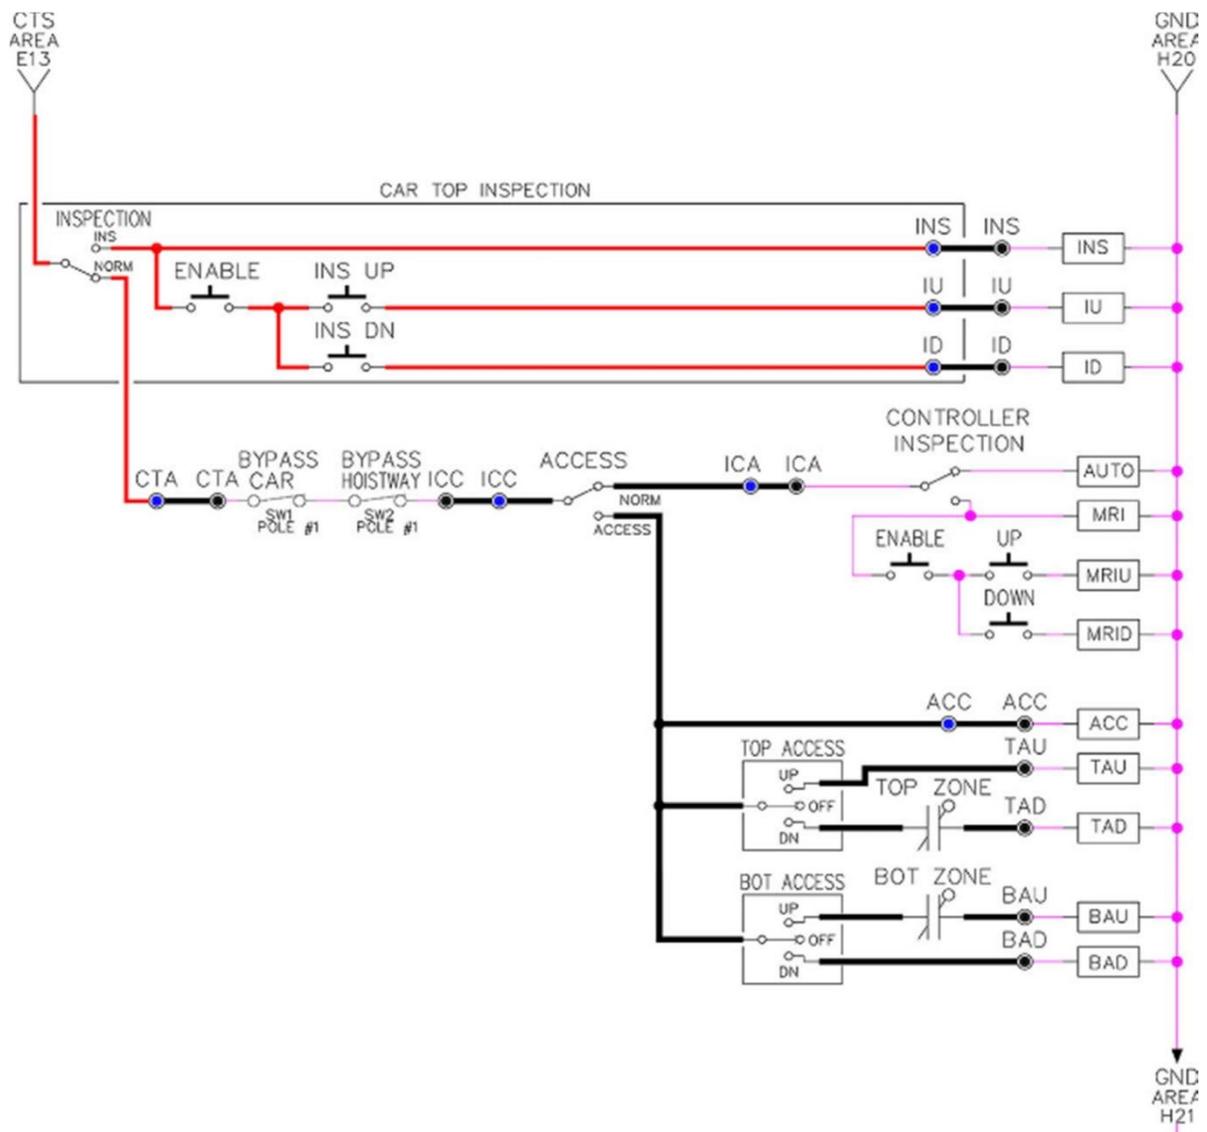


Figure 6.1: Inspection String Circuit

## 6.15 Adjust the Brake Voltage

Momentarily push the inspection “UP” or “DOWN” push button on the 1064 board while checking the DC brake voltage with a meter. If the voltage is not correct, it must be adjusted according to the following procedures.

If the controller utilizes an electronic brake board 1047 or 1051, then the brake voltage is adjusted through the 1021/1101/1005 LCD interface, "Car Brake" sub- menu. If the controller utilizes resistors and rectifiers for the brake coil circuit, then the brake voltage is adjusted by moving the adjustable tap on the brake resistor.

**NOTE:** Remove power before adjusting the resistor taps.

To adjust the brake voltage when using an electronic brake board, navigate to the "Adjustable Variables" menu, "Car Brake" and adjust "Brake Pick Volt", "Brake Hold Volt" and "Brk AC L-L Volt" to the proper values. Make sure that the brake is lifting and setting properly before proceeding.

## 6.16 Check the Run Direction

Momentarily push the inspection “UP” or “DOWN” push button on the 1064 board. One of the following should take place:

The elevator will run controlled, in the correct direction (up for “UP” button, down for “DOWN” button) with no drive faults. If so, proceed to “Check Inspection Speed”.

The elevator will run controlled, but in the wrong direction (down for “UP” button, up of “DOWN” button) with no drive faults. If so, proceed to **Section 6.17, Car Runs In The Wrong Direction**.

The elevator will try to run, but immediately trip on a drive fault “Encoder Fault”. If so, proceed to **Section 6.18, Drive Trips immediately**.

## 6.17 Car Runs in The Wrong Direction

If the elevator runs controlled but in the wrong direction, with no drive faults, then turn off the main disconnect, swap the hoist motor field wires.

Also swap the encoder direction by swapping the encoder wires or if an encoder isolation board (1022N) is used, move J5 and J7 on the encoder board. Refer to the jumper diagram on the board.

J5 swaps **A & A NOT** – J7 swaps **B & B NOT**.

To change the encoder direction at the drive, swap the following wires:

A+ (TB3-2) with B+ (TB3-4)

A- (TB3-3) with B- (TB3-5)

Turn the main disconnect on, run the elevator on inspection again, and it should run controlled and in correct direction. If so, proceed to “Check Inspection Speed”. If not, contact the factory.

### **6.18 Drive Trips Immediately**

If the elevator tries to run, but immediately trips on a drive fault “Encoder Fault”, then turn off the main disconnect, and swap the encoder direction by swapping the encoder wires or if an encoder isolation board (1022N) is used, move J5 and J7 on the encoder board. Refer to the jumper diagram on the board.

J5 swaps **A & A NOT** – J7 swaps **B & B NOT**.

Turn on the main disconnect and run the elevator on inspection again. If the elevator runs controlled and in the correct direction, proceed to next section.

If the elevator runs controlled but in the wrong direction, then go back and follow the directions in **Section 6.17, Car Runs The Wrong Direction**. If the car still trips immediately on a drive fault, then contact the factory.

### **6.19 Check Inspection Speed**

With a hand held tachometer, check the speed of the elevator while running on inspection. The elevator should be running at 25 f.p.m. Also run the elevator while monitoring Function Speed Feedback on the Quattro drive under Display D0, Elevator Data D1, and Speed Feedback. This function should also read 25 f.p.m.

From the 1021/1101/1005 LCD interface select the "Elevator Status" menu, navigate until the display shows "Dmd" and "Vel". While running on inspection, monitor the controller demand speed "Dmd", and the speed feedback "Vel". These values should both display 25. If the demand and feedback on the 1021/1101/1005 LCD interface is incorrect, check the Encoder RPM and PPR parameters from the “Adjustable Variables” menu. These variables should be set to values listed in **Section 6.9, 1021/1101/1005 LCD interface "Adjustable Variables ->Car Motion" Submenu**.

If the speed on the hand held tachometer and on "Dmd" and "Vel" all read approximately 25 fpm (within +/-2 fpm) continue to the next step. If not, contact the factory.

## 6.20 Verify Controller Encoder Direction

From the 1021/1101/1005 LCD interface "Elevator Status" menu, navigate to display "Dir" and "DP". While moving the car on inspection, monitor "Dir" (direction) and "DP" (pulse counts). "Dir" should display "Up" when the car is moving up, and "Dn" when the car is moving down. The value of "Dp" should increment when the car is moving up, and should decrement when the car is moving down.

If the direction is wrong or the pulse counts change in the wrong direction, then the encoder direction to the controller must be changed. If an encoder isolation board (1022N) is used, move J1 and J3 on the encoder board. Refer to the jumper diagram on the board.

J1 swaps **A & A NOT** – J3 swaps **B & B NOT**.

If no encoder isolation board is used, the A+ and A- encoder wires from the drive must be swapped. Note that the motor encoder wires are daisy chained from the encoder to the drive and then from the drive to the controller encoder board. Only the A+ and A- wires from the drive to the controller board must be swapped. The wires from the encoder to the drive must remain on the same terminal locations on the drive.

If the encoder is counting properly continue to the next step. If not, contact the factory.

## 6.21 Verify Selector and Slowdown Inputs

Run the elevator up on inspection until it stops on the up normal limit. The up and down normal limits should be set two inches above and below the terminal floors respectively. Verify the selector inputs are being set properly on the controller by running the elevator down until it stops on the down normal limit.

As the car approaches floor level going down, "DL" turns on first, then "DZ" and then finally "UL". At floor level, "UL, DL, and DZ" inputs should all be on at the same time. Leaving the floor going down "DL" will turn off first, then "DZ" and last "UL".

Also verify that the up and down terminal slowdown limits inputs "UT, UTS, DT & DTS" are breaking at the proper distances as shown in the slowdown table 2.0. "UT, UTS, DT & DTS" turn off when active.

## 6.22 Verify Car Speed on Safety Processor Board

Run the car in either direction and check the car speed on the 1066 LCD interface. The speed shown should match the car's speed actual speed. If the speed does not match and the secondary feedback comes from pulses from the tape go to "Correct Car Speed When Using A Tape". If using 485 tapeless, go to "Correct Car Speed When Using 485 tapeless". If using CAN Open tapeless, go to "Correct Car

Speed When Using CAN Open tapeless". If the correct speed is shown proceed to **Section 6.26, Learn the Hoistway.**

### **6.23 Correct Car Speed When Using A Tape Installed In Hoistway**

The tape has holes every 3/8" that are 3/8" in diameter. On the selector unit adjust the PP sensor closer to the tape until the orange LED at the end of the sensor turns on. Then turn the sensor inwards another 1/8" and lock in the sensor. While running on top of car inspection verify that the orange LED at the end of the PP sensor turns on and off as it passes by the holes on the tape. The safety processor measures the time between each pulse to calculate the velocity. If the velocity is not displayed correctly first make sure that the feedback type in the safety processor board adjustable variable is set to 0 for a tape application. Next, while the car is running, make sure that the PULSE LED on this board is pulsing. As the car increases in speed the LED will glow solid on. If the LED does not pulse, try swapping the wires at the PPS and PP terminals. If the LED still does not work, contact the factory. If the correct speed is shown proceed to "Learn the Hoistway".

### **6.24 Correct Car Speed When Using 485 Tapeless System**

When using the 485 tapeless system, the secondary speed feedback comes from the encoder mounted on the governor. The 1066 board uses a serial interface to a Turck absolute encoder, part # T8.5882.3F0B.3001.

In the 1066 LCD interface "Adj Var" menu, set the "Fdbk Typ = 1", and set the "Enc PPR = 8192". The "Enc RPM" value must be calculated as described below. To calculate the RPM, divide the contract speed of the car by the distance travel in one revolution with the governor as shown below:

$$\text{RPM} = \text{Speed fpm} / (\text{diameter GOV} * \pi)$$

$$\text{For a 1 ft. diameter governor: } \text{RPM} = 350 / (1 * \pi) = 350 / 3.1415 = 111.4$$

$$\text{For a 16 in diameter governor (16/12 = 1.33ft): } \text{RPM} = 350 / (1.33 * 3.1415) = 350 / 4.188 = 83.5$$

### **6.25 Correct Car Speed When Using CAN Open Tapeless System**

When using the CAN Open tapeless system, the secondary speed feedback comes from the incremental encoder mounted on the machine/motor.

In the 1066 LCD interface "Adj Var" menu, set the "Fdbk Typ = 4", and set the "Enc PPR" equal to the ppr of the machine/motor-mounted incremental encoder, and set the "Enc RPM" to the rpm of the machine/motor at contract speed.

On the 1066 LCD interface, navigate to the "Pls Cnt" menu. While running the elevator on inspection, verify that the pulse count value increments when running up and decrements when running down. The "Pls Cnt" value can be considerably out of range but will automatically correct during the "Learn

Hoistway" procedure. To reverse the direction of pulse counting, navigate, on the 1066 LCD interface, to the "Adj Var" menu, "Enc Dir" and set to "0" for clockwise or "1" for counter-clockwise.

Navigate on the 1066 LCD interface to the "Car Spd" menu. Monitor the "Car Spd" while running the car at a known inspection speed. The value displayed should match the actual car speed measured with a hand held tachometer. If not, re-check the values set in "Enc RPM" and "Enc PPR" in the 1066 LCD interface. If the speed is correct, proceed to **Section 6.26, Learn the Hoistway.**

## 6.26 Learn the Hoistway

Run the elevator down on inspection until it stops on the down normal limit switch. Verify that the "DN and DL" input LED's are both off. From the 1021/1101/1005 LCD interface navigate to the "Elevator Setup" menu, "Learn Hoistway". The learn procedure can be performed automatically by choosing "Auto" from the menu items, or performed manually by choosing "Insp" from the menu items. After choosing the learn method, follow the instructions displayed on 1021/1101/1005 LCD interface.

In general, the car will run up from the "down normal limit" to the "up normal limit" at 30 fpm. During this learn run, the DP count for each floor level and each limit switch will be stored in memory.

**NOTE:** The car must run the entire hoistway without stopping.

As the elevator moves up the hoistway, navigate to the "Hoistway Tables" menu, "Disp/Mod Hoistway Table", and verify that the "DP" count is incrementing as the elevator moves up. Also as the elevator passes each floor, the pulse count and distance for that floor should change and be stored. Verify that the floor distances are valid. The pulse count for the terminal slowdowns will also be stored. The elevator will stop when it reaches the up normal limit. Follow the instructions on the 1021/1101/1005 LCD interface by putting the car on inspection, and then the message "Hoistway Learn Complete" should be displayed.

Move the elevator on inspection until the "DZ and DL" LED's are on. Set the "INS" toggle switch on the 1064 board to the "NORMAL" position, and the elevator should level down to floor level at the top floor. If so, proceed to final adjustment.

If the car levels down but does not run, then check "Elevator Status" and "View Fault Log" on the 1021/1101/1005 LCD interface for any fault information. Correct items causing faults and perform hoistway learn again. After problem is corrected and a successful hoistway learn is performed, proceed to final adjustment.

## 6.27 Automatic Run

The elevator should now be sitting idle at the top floor. The "AUTO DOOR" switch should be set to the "OFF" position and the "IND" switch should be set to the "IND" position. If the learn procedure was successful, the elevator should be ready to make an automatic run.

The default parameter settings for the ride quality should be adequate for an initial run.


From the 1021/1101/1005 LCD interface navigate to the "Set Calls and Lockouts" menu, "Setup Car Calls" and enter a car call. The elevator should run to answer the call. When the elevator levels in and stops at the floor, the doors will remain closed.

The acceleration and deceleration of the car should be smooth and stepless regardless of the distance of the run. If the elevator does not function as described above, then the problem should be analyzed before proceeding.

## 6.28 Fine Tune the Ride Quality

In order to fine tune the ride quality, refer to Figure 6.2 which describes what part of the S-curve that the different parameters effect. In general, higher numbers in the given parameters, cause quicker and more abrupt changes from one mode to the next during a run. All of the S-curve parameters have a minimum and maximum value. The control will not allow you to enter values that are not valid. After adjusting the S-curve parameters, proceed to the next step.

Figure 6.2: S-Curve Parameters

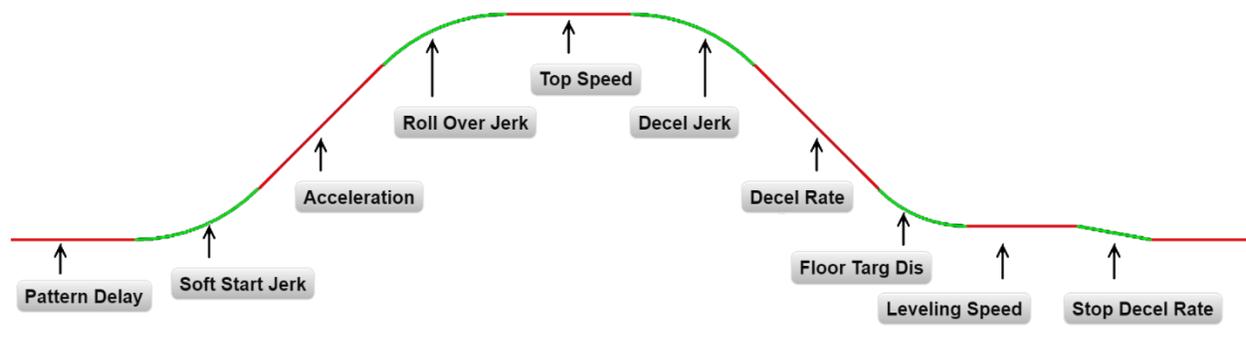

## 6.29 Adjust the Stop

When at floor level the "UL, DL, & DZ" input LED's should be on. If the elevator continually tries to seek floor level by leveling up and down, check the motor field voltage to be at the nameplate voltage while leveling. If the motor field voltage is correct but the car seems sluggish then increase the response of the drive by increasing the value of RESPONSE in the drive A1 submenu. If the car still re-levels at the floor, try the following steps to correct the problem:

1. Reduce the leveling and re-leveling velocity parameters from the 1021/1101/1005 LCD interface "Adjustable Variables" menu, "Car Motion", "Leveling Speed" and "Relevel Speed".
2. If the car still oscillates, adjust the "floor level zone" on the selector. The "floor level zone" is increased by moving the "UL" and "DL" sensors closer together.

If the car stops hard on the brake, then make the following adjustments. From the 1021/1101/1005 LCD interface navigate to the "Adjustable Variables" menu, "Car Motion", and adjust both "Brake Drop Del" (brake drop delay) and "Soft Stop Time". These variables should be adjusted so that zero speed is observed at the end of the run prior to the brake setting. The controller should hold the car at zero speed for the duration of the "Soft Stop Time" which should continue while the brake is setting and for a short time after the brake sets. The soft stop time MUST be set to at least 0.5 seconds LONGER than the brake drop delay.

The "Soft Stop Time" setting in the 1021/1101/1005 LCD interface should be compared with the setting in the 1066 LCD interface "Adj Var" menu, "SoftStop". The setting of "SoftStop" in the 1066 LCD interface should be greater than the "Soft Stop Time" setting in the 1021/1101/1005 LCD interface.

If the car spots when approaching the floor, the cause is usually due to the car not tracking (the drive response is set too low) or the speed profile into the floor is too aggressive. First try to increase the response by increasing the value of drive parameter A1 RESPONSE.

If the car still spots, from the 1021/1101/1005 LCD interface, navigate to the "Adjustable Variables" menu, "Car Motion" and increase the value of "Floor Targ Dis" (floor targeting distance). The default value for the floor targeting distance is 12 inches. Increase it by steps of 2 or 3 and continue retesting until the parameter is adjusted to 18.

If no change is noticed, start again from 12 and decrease the value.

The deceleration rate can also be reduced to help remove the spotting. Once the proper stop is achieved, proceed to "Adjust The Start".

### **6.30 Adjust the Start**

To provide a proper start, from the 1021/1101/1005 LCD interface, navigate to the "Adjustable Variables" menu, "Car Motion" and adjust "Brake Pick Del" (brake pick delay), "Pattern Delay", and "Soft Start Jerk". Initially, set the brake pick delay to 0 and increase the pattern delay by 0.1 seconds until the controller picks the brake completely before the motor starts to move. If roll back occurs, then reduce the pattern delay until there is no roll back. Sometimes, the timing works out better if the brake pick delay is set to 0.1 second. If load weighing is used, pre-torquing can be used to provide a smoother start. See **Section 6.39, Adjust the Motor Pre-torque**.

Increase the soft start jerk rate in order to provide a quicker transition from the start to constant acceleration. Keep in mind that the larger the soft start number, the quicker the start. The ride should now be acceptable.

### **6.31 Verify Top Speed**

To fine tune high speed, make high speed runs while monitoring Elevator Data Submenu D1, Speed Feedback on the Quattro drive display. The display should read contract speed.

If the speed is slightly under or over contract speed then verify that Drive A1 Submenu, Contract MTR SPD is set properly. The speed displayed on the drive should match the speed displayed on the 1021/1101/1005 LCD interface, "Elevator Status" menu, "Dmd" and "Vel". This speed should also match the speed displayed on the 1066 LCD interface, "Car Spd" menu. When all of these speeds are the same (+/- 2 fpm), then proceed to the next step. When the Quattro display reads contract speed, proceed to the next step.

### **6.32 Adjust Safety Processor Board Speed Clamps**

The 1066 Safety Processor Board monitors the speed of the elevator at the terminal landings independently from the main CPU.

When the "UT, DT, UTS, and DTS" limit switches are activated, the 1066 board calculates the velocity of the elevator and compares that velocity with a stored value of speed clamp. If the velocity when the switch activates is greater than the speed clamp value, then the 1066 board will generate a fault that stops the elevator.

To set the speed clamps, make a one floor run to the top floor. After the car stops, record the velocity the car hit the "UT, DT, UTS & DTS" slowdown limits. "UTS & DTS" are used on car with reduced

stroke buffers or with a top speed greater than 200 fpm. The velocity value is shown from the "LIM VEL" menu on the 1066 LCD interface.

The velocity value shown on the display for the "UT or DT" limit is the value after the car activates the limit then counts an adjustable number of counts set from the 1066 LCD interface, "Adj Var" menu, "UT Count" or "DT Count". These count values can be adjusted to provide adequate distance, following the limit switch activation, to allow the elevator to begin its normal decel pattern. The default "UT Count" and "DT Count" values are normally adequate. However, these values may need to be field adjusted to allow enough distance for the car to begin its normal decel pattern. If the "UT Count" and "DT Count" values are modified, the limit velocities must be re-checked.

Run the car again to the top repeatedly from 2 floors, then 3 floors, etc., until top speed is reached. From the 1066 LCD interface "Lim Vel" menu, record the limit velocities displayed each time the car stops at the top floor.

Make the same runs to the bottom floor starting from 1 floor, then 2 floors, then 3 floors, etc., until top speed is reached. From the 1066 LCD interface "Lim Vel" menu, record the limit velocities displayed each time the car stops at the bottom floor.

Take the highest speed value recorded in the runs above and add 20 fpm to that value to use as the clamp speed values for the respective limit switches. Enter these clamp speed values into the 1066 LCD interface "Adj Var" menu, "UT Vel", "DT Vel", "UTS Vel", "DTS Vel" respectively.

### 6.33 Adjust Digital Slowdown Speed Clamps

Having just made several runs into the top and bottom landings, the main CPU has also recorded the car's velocity when the slowdown limits were activated. If the car has been powered down prior to this step, several runs must be made to the terminal landings to allow the main CPU to record the limit velocity values.

From the 1021/1101/1005 LCD interface, navigate to the "Elevator Setup" menu, "Set DT/UT Slowdown Clamp" and view the speed displayed for "Clamp Speed". Add 20 fpm to this "Clamp Speed" value and enter it into the "DT/UT Limit" value.

The number of slowdown limits depends on the speed of the car as shown in the table below.

Adjust speed clamps for each slowdown limits used as determined by the elevator's contract speed.

The number of slowdown limits depends on the speed of the car as show in the table below:

**Table 6.1: Slowdown Clamps**

Car Speed	Number of Slowdown Limits	Clamp Number	Limit Used
<= 250 fpm	1	2	UT, DT
300-500 fpm	2	3	UT1, DT1
600-700 fpm	3	4	UT2, DT2
800 + fpm	4	5	UT3, DT3

### 6.34 Verify Inspection Velocity Clamp On Safety Processor Board

Place the car on inspection operation. From the 1066 LCD interface, navigate to the "Adj Var" menu, "Ins Vel" and set the speed clamp velocity to 25 fpm. From the 1021/1101/1005 LCD interface, navigate to the "Adjustable Variables" menu, "Car Motion" and set the "Inspect Speed" to 50 fpm. Run the car in either direction and verify that the car shuts down when the speed rises above 25 fpm.

From the 1066 LCD interface, navigate to the "Adj Var" menu, "Ins Vel" and set the speed clamp to 140 fpm. From the 1021/1101/1005 LCD interface, navigate to the "Adjustable Variables" menu, "Car Motion" and set the "Inspect Speed" to the desired value.

### 6.35 Analog Load Weigher Setup

If the job uses an analog load weigher purchased from G.A.L., complete the following procedure.

**NOTE:** It is recommended using two people, one moving the weights and one in the machine room to set up the load weigher.

Mount the load weigher as described by the manufacturer. The load weigher control box will also contain a board supplied by G.A.L. that connects to the controller serial CAN bus and reads in the analog output from the load weighing device. Wire the load weigher and G.A.L. board according to the controller schematics.

Calibrate the load weighing device hardware according to the manufacturer's instructions. Following proper installation of the load weighing device, proceed to **Section 6.36, Empty Car Setup.**

### 6.36 Empty Car Setup

Verify that the load weighing device is communicating to the main CPU by performing the following steps. From the 1021/1101/1005 LCD interface, navigate to the "Diagnostics" menu, "Car Comm Status", "Car to LW Board" and verify that "On- line = 1". If "On-line = 0" then verify wiring and installation of load weighing device.

From the 1021/1101/1005 LCD interface, navigate to the "Elevator Setup" menu, "Load Weigher Setup", "Setup Load Weigher" and follow the instructions on the display as you go through the procedure.

It is okay to exit the setup screen to place a call and then return to it while the setup is being performed.

Run the car to the bottom floor and press Enter on the 1021/1101/1005 LCD interface when prompted to do so to start the automatic setup sequence.

If the car is at the bottom floor and the doors are not closed (the doors will not close automatically from turning off the auto-door switch) then place a car call to run the car up one floor, then back again. The doors will close when the call is placed.

When the automatic sequence is activated, the car will run to each floor and measure the empty load value. The 1021/1101/1005 LCD interface will indicate when the sequence is finished.

### 6.37 Full Car Setup

The empty car setup must be successfully completed to run the full load setup.

Once the empty car setup is complete, run to the loading floor and set the "AUTO DOOR" switch to the "ON" position to allow weights to be loaded on the car. With the car fully loaded, set the "AUTO DOOR" switch to the "OFF" position and run the car to the bottom floor. Again if the doors are not closed, make a one floor run to force the doors to close.

With the car at the bottom floor, follow the LCD interface instructions to press enter to start the full load setup sequence. The car will automatically run to each floor and measure the full load value. When the full load measurement is complete, the car can be run to the loading floor and the weights removed.

After the weights are removed, cycle the doors to complete the procedure. From the 1021/1101/1005 LCD interface, navigate to the "Elevator Setup" menu, "Load Weigher Setup", "View/Modify LW Setup" and verify the load weigher status, "LW Device Stat: ON OK". If the status is "ON OK", then the load weigher should be accurately measuring the car load in real time. The percent load will be displayed, "Load: %".

The percent load values for different service options can now be set. From the 1021/1101/1005 LCD interface, navigate to the "Adjustable Variables" menu, "Service Options", and set the following variables:

- "Load Bypass"
- "Load Antinuisance"
- "Load Dispatch"
- "Load Overload"

**NOTE:** Setting the values of the variables above to 0% will disable that particular option.

### **6.38 Load Weighing Calibration Sequence**

The load weigher is automatically calibrated once each week. If an error is detected during this calibration sequence, the load weigher and the pre-torque feature (if used) is disabled.

A load weighing calibration sequence can be manually activated by performing the following procedure. From the 1021/1101/1005 LCD interface, navigate to the "Elevator Setup" menu, "Load Weigher Setup", "Load Weigher Calibration" and follow the instructions on the display.

### **6.39 Adjust the Motor Pre-torque**

**NOTE:** The motor pre-torque uses the load value obtained from the analog load weigher and will only work if the load weigher has been installed properly, and the "Load Weigher Setup" has been performed successfully.

On the Quattro drive under User Switches C1 parameter, set Pre-Torque source to serial. Run the empty car to a middle floor. From the 1021/1101/1005 LCD user interface, navigate to the "Adjustable Variables" menu, "Car Motion" and adjust the following parameters:

- "Balanced Load = 40" (typically car is 40% counterbalanced, but verify counterbalance

percentage for each specific job)

- "Torque Amount = 10"
- "Pattern Delay = 2.5"
- "Brake Pick Del = 0.1"

The long pattern delay will allow an exaggerated amount of roll back in order for the pre-torquing to be set accurately. Make a one floor run down and observe the roll back when the brake picks at the start of the run. Increase the "Torque Amount" variable and continue to monitor the roll back while performing one floor runs in the down direction. As the "Torque Amount" is increased, the roll back should be minimized until the car will hold zero speed for the entire "Pattern Delay" time. A typical value for the "Torque Amount" is 40%. If the value is too large, the car will roll forward during the "Pattern Delay" time.

**NOTE:** The pattern delay must be at least 0.15 seconds (150 milliseconds). Setting the torque amount to 0.00 will disable the pre-torque feature. Also if the load weighing calibration sequence detects a load weighing error, the pre-torque feature is also automatically disabled.

## 6.40 Verify the Doors Are Safe

The elevator should now be adjusted. Verify that all door locks, gate switches, and safety circuits are operational. Set the "INS" switch to the "NORM" position and set the "AUTO DOOR" switch to the "ON" position. The elevator should level into the floor and open the doors. If the doors do not open, check the door operator wiring and cam adjustment. If the doors do open, the elevator is now on independent service.

## 6.41 Fine Tune the Ride Quality

Ride the elevator and evaluate the ride quality. Fine tune the ride quality by navigating to the "Adjustable Variables" menu, "Car Motion" and adjusting the variables shown in Figure 6.2. Keep in mind that if acceleration or deceleration values are changed, the speed clamps for the safety processor board and the S-curve board may need to be re-adjusted.

To fine tune the floor level accuracy, determine if the controller is set to stop when "UL" and "DL" signals turn on, or if controller is set to stop off of the position count. From the 1021/1101/1005 LCD interface, navigate to the "Adjustable Variables" menu, "Car Motion" and view the "Stop On Pos Cnt" variable. If "Stop On Pos Cnt= 0" then the controller is set to stop when the "UL and "DL" signals turn on. If "Stop On Pos Cnt = 1" then the controller is set to stop on a combination of the floor level magnet and the position count.

With "Stop On Pos Cnt = 0", the floor levels should be set by adjusting the floor level magnet at each floor. For proper operation, the floor magnets should be set to exactly floor level. After the floor levels are set properly, perform another hoistway learn procedure.

With "Stop On Pos Cnt = 1", the floor levels are set by using both the floor magnet and the position count. For proper operation with this setting, the floor magnet should be set to exactly floor level. The final stop can then be fine-tuned by performing the following adjustments.

From the 1021/1101/1005 LCD interface, navigate to the "Hoistway Tables" menu, "DZ & LZ Offset, Sel Cnt" and adjust "Dn Lev Dist" and "Up Lev Dist". The units for these variables are in "pulse counts". With "Stop On Pos Cnt =1" the car will continue to move for the "Dn Lev Dist" or "Up Lev Dist" after "UL and DL" turn on. Use the "Dn Lev Dist" and the "Up Lev Dist" parameters to make level changes at all floors.

To make level changes at individual floors, perform the following adjustments. From the 1021/1101/1005 LCD interface, navigate to the "Hoistway Tables" menu, "FL and FL Offset Count", and the offset count can be adjusted. These variables introduce an offset (+/-) to the stored floor count that was determined in the hoistway learn procedure.

**NOTE:** The number of pulse counts per inch can be viewed from the 1021/1101/1005 LCD interface, "Hoistway Tables", "DZ & LZ Offset, Sel Cnt", "Pulses /Inch".

**NOTE:** Regardless if "Stop On Pos Cnt=0" or if "Stop On Pos Cnt =1", the floor magnet must be set properly at floor level. If too large of values are entered into "Dn Lev Dist", "Up Lev Dist", or "Offset", the car will drive past the floor level magnet and re-level.

Check all signal devices for proper operation and remove all temporary jumpers. The adjustment should now be complete.

# **Section 7 - Adjustment of the GALaxy Combivert F5 AC Drive**

## **7.1 General Setup**

In order to obtain a running platform in "car top inspection", see the "Quick Start-up Guide for GALaxy Controller KEB Combivert F5 AC Drive - PM Gearless" if using a pmac gearless machine. If using a geared machine with an induction motor, see the "Quick Start-up Guide for GALaxy Controller KEB Combivis F5 Drive AC Geared". This procedure should be used only for installation purposes. When installation of all equipment is complete, and unit is ready for adjustment, proceed to **Section 7.2, Check Main Line Voltage**, and follow instructions.

Before adjustment begins the following items must be completed.

1. All field wiring and safety circuits installed
2. Temporary jumpers from terminal "HC" to terminals "MES & ALT"
3. All hoistway limit switches installed
4. All car and hoistway doors and interlocks installed and pre-adjusted
5. Selector installed and magnets pre-adjusted
6. Familiarize yourself with all wiring schematics
7. Familiarize yourself with the KEB Combivert F5 Elevator Drive Technical Manual.
8. Verify that the motor is properly wired.
9. Verify that the encoder is connected properly.
10. Car should be properly counterbalanced.

## **7.2 Check Main Line Voltage**

With main-line disconnect in the off position, check the line-side voltage with a volt meter to insure the voltage matches the controller name tag "Input Power" voltage. Check to insure all three phases are present. If voltage is not correct or all three phases are not present, do not proceed until corrected.

## **7.3 Set Toggle Switches**

Set all toggle switches on the 1064 board as follows:

- DOOR LOCKS - "OFF"
- IND - "IND"

- AUTO DOOR - "OFF"
- STOP - "STOP"

## 7.4 Make Sure the Car Is Safe

Verify that all elevator doors are closed and that all safety circuits are functional.

## 7.5 Check Controller Voltage

Turn the main-line disconnect to the on position. Check the voltage at R, S, and T on the AC drive. Verify that all three phases are present. Check the voltage at fuses L1 and L2 on controller. If correct, check the voltage at terminal "LIN" with respect to "GND". The voltage should read 120VAC. If correct, check the voltage at terminals "S10, LC, & HC" with respect to "GND". All should read 120VAC. If not, check wiring diagram to determine problem before continuing.

## 7.6 Verify the Main CPU is Operating

Check to make sure that the "axy" of GALaxy on the 1021/1101/1005 LCD interface is blinking. If the "axy" is blinking, continue to the next step. If not, check voltage at terminals 5V to 0V on the 1064 board to insure 5VDC. If 5VDC is present and the "axy" on the 1021/1101/1005 LCD interface is not blinking, then contact factory.

## 7.7 Preset Adjustable Variables On Safety Processor Board And Main CPU

The safety processor (1066) board is normally preset prior to leaving the factory; however, it is prudent to check the setup values for the proper settings. Refer to **Section 13** of this manual for the operation of the safety processor board 1066 LCD interface. The following adjustment variables must be set properly.

**NOTE:** If the controller uses an NTS board please refer to **Section 14, GALX-0320AN NTSD Board.**

## 7.8 1066 LCD interface "Adj Var" Menu

- Top Spd (contract speed)
- Enc RPM (if Fdbk Typ=0, not applicable) (if Fdbk Typ=1, set to rpm of governor) (if Fdbk Typ=4, set to value of LF.11 in KEB drive)
- Enc PPR (if Fdbk Typ=0, not applicable) (if Fdbk Typ=1, set to 8192) (if Fdbk Typ=4, set to 2048)
- Fdbk Typ (0=tape, 1=enc, 4=IncEnc)
- Ctrl Typ (2=Tract DF)
- 2 Stop (0=Mult, 1=2 stop)

- RearDoor (0=Front only, 1=Rear)
- UTS Vel (Set to top speed)
- DTS Vel (Set to top speed)
- INS Vel (Set to 140)
- LEV Vel (Set to 140)
- UT Vel (Set to top speed)
- DT Vel (Set to top speed)
- UL Vel (Set to 160 if Non-DF)
- DL Vel (Set to 160 if Non-DF)
- SoftStop (Set to 3)

**NOTE:** The velocity values for the terminal limit switches above are only temporary settings until car is running high speed. In the final adjustment procedure, these variables must be set according to the procedures in **Section 7.31, Adjust Safety Processor Board Speed Clamps.**

## 7.9 1021/1101/1005 LCD interface "Adjustable Variables -> Car Motion" Submenu

- Top Speed (set to contract speed)
- Inspect Speed (set to 25 fpm)
- Encoder PPR (set to 2048 PPR)
- Encoder RPM (if tape selector, set to value of LF.11 in KEB drive), (if 485 tapeless selector, set to value of LF.11 in KEB drive), (if CAN open tapeless selector, set to governor rpm)

**NOTE:** See **Section 7.24, Correct Car Speed When Using 485 Tapeless System,** for determining governor rpm.

## 7.10 Place Stop Switch in Run Position

Set the "STOP" toggle switch on the 1064 board to the "RUN" position. Verify that input LED's for "LC, HC, DN, UN, SS, GTS, RDY and CS" are all on.

If not, then correct field wiring.

## 7.11 Hoist Motor Data

At this time the hoist motor data must be entered into the AC drive. The following functions must be entered or verified using the drive "Operator" display unit. Follow the instructions in the Combivert F5 drive manual to enter the following data:

### Motor Data

- US.10 - Motor type configuration (for pm sync gearless set to P9LSS), (for pm sync geared set to PCLSD), (for induction motor with geared machine set to ICLSD).
- US.83 - Encoder PPR output from drive (set to 1)
- US.4 – Load (Perform configuration load.)
- LF.10 - Motor HP - Read only. Cannot be entered. This is calculated from rated speed and torque for PM gearless configuration.
- LF.2 - (Set to "SErSP")
- LF.11 - Rated Motor Speed (from machine/motor nameplate)
- LF.12 - Rated Motor Current (from machine/motor nameplate)
- LF.13 - Rated Motor Frequency (from machine/motor nameplate)
- LF.14 - Rated Motor Voltage (from machine/motor nameplate)
- LF.17 - Rated Motor Torque (from machine/motor nameplate, or  $LF.17 = HP * 5258 / LF.11$ )

### Machine Data

- LF.20 - Contract Speed (from controller data)
- LF.21 - Sheave Diameter (in)
- LF.22 - Gear Reduction Ration (1 if gearless), (actual gear ratio if geared)
- LF.23 - Roping ratio (1:1 or 2:1)
- LF.27 - 2048 for EnDat encoder with pm ac gearless), (PPR of motor mounted incremental encoder with geared traction)
- LF.76 - 8 (absolute encoder)

The number of poles is provided below if you are using one of the following PM AC Gearless machines:

- MAG05 = 66 poles
- MAG10 = 66 poles
- MAG15 = 66 poles

- Leroy Somer Z2 = 16 poles
- Leroy Somer Z3 = 16 poles
- Leroy Somer Z4 = 16 poles
- Leroy Somer Z6 = 32 poles
- Leroy Somer Z10 = 32 poles
- Leroy Somer Z20 = 32 poles
  
- Imperial 474 = 20 poles
- Imperial 475 = 24 poles
- Imperial 522 = 20 poles
- Imperial 525 = 20 poles
- Imperial 805 = 44 poles
- Hollister Whitney = 28 poles

If you are not using one of the following PM AC Gearless machines listed above and need to calculate the motor poles or motor rated speed, use the following formula based from the motor name plate data:

$$\text{Poles} = 2 \times 60 \times \text{Motor Excitation Frequency (Hz)} / \text{Rated Motor Speed (RPM)}$$

The number of motor poles will always be a whole, even number.

Most of the drive parameters have been preset to values required for your specific job. Other parameters not listed here may need to be adjusted in the field. Please refer to the Combivert F5 manual for more parameter information and troubleshooting guidelines.

## 7.12 Pre-set the Digital Speed Clamps

Pre-set the software digital speed clamps from the 1021/1101/1005 LCD interface under the “Elevator Setup Menu”. The submenus for the clamp speeds are as follows:

- Set Ins /Leveling Clamp
- Set DT/UT Slowdown Clamp
- Set DT1/UT1 Slowdown Clamp
- Set DT2/UT2 Slowdown Clamp
- Set DT3/UT3 Slowdown Clamp

- Set DTS/UTS Slowdown Clamp

Set the speed for Ins/Leveling for 140 fpm and all the remaining slowdown limit speeds to the contract speed of the car. Please note that the displayed value of “Clamp Speed” is the value the clamp should be set to. The slowdown limit “Clamp Speed:” will show 0000 until the car is run into the limits and the speed is recorded. Please refer to **Section 10, 1021/1101/1005 LCD Interface**, for the Elevator Setup Menu.

**NOTE:** The values of the clamp speed velocities above are only temporary settings until the car is running high speed. In the final adjustment procedure, these values must be set according to the procedures in **Section 7.32, Adjust Digital Slowdown Speed Clamps**.

### 7.13 Adjust the Brake Voltage

If the controller utilizes an electronic brake board 1047 or 1051, then the brake voltage is adjusted through the 1021/1101/1005 LCD interface, "Car Brake" sub- menu. If the controller utilizes resistors and rectifiers for the brake coil circuit, then the brake voltage is adjusted by moving the adjustable tap on the brake resistor.

**NOTE:** Remove power before adjusting the resistor taps.

To adjust the brake voltage when using an electronic brake board, navigate to the "Adjustable Variables" menu, "Car Brake" and adjust "Brake Pick Volt", "Brake Hold Volt" and "Brk AC L-L Volt" to the proper values.

### 7.14 Motor Learn Procedure

Lower the inspection speed on the controller to zero. Remove one wire from the brake coil to prevent the main brake from picking. If the unit has an emergency brake, **the emergency brake and the emergency brake switch** must remain operational during the learn procedure. On the drive operator keypad set parameter LF.3 to “S.Lrn”. Press Enter and the drive keypad will display “Start”. Press and hold the up or down inspection switch and the enable switch. You will hear all the contactors (BRK, RUN and MC) pick and stay energized on the controller. The drive operator keypad will change as a number of motor measurements are made. This process takes 2 to 5 minutes. When the drive operator keypad displays “Done”, release the up or down inspection button. Return the wires back to the main brake to allow the brake to pick again.

## 7.15 Encoder Learn Procedure, v1.62 (Unroped machine)

**NOTE:** This procedure is not required for geared traction using an induction motor.

If you are using v1.62 on the Combivert F5 drive, the encoder position must be learned with the ropes removed from the machine. From the 1021/1101/1005 LCD interface, navigate to the "Adjustable Variables" menu, "Car Motion" and set the "Inspect Speed = 0". Verify the motor wiring from the drive to the motor, U to U, V to V and W to W. Verify that drive parameter 2.LF.26 = "Conn". This parameter indicates that serial communication is established between the encoder and the drive. If 2.LF.26 does not display "Conn", check the encoder wiring and drive settings LF.26, LF.27, LF.28, and LF.29. This problem must be rectified before proceeding. Once communication is established with the encoder, set LF.3 to "P Lrn" and press enter on the drive operator keypad. The drive operator keypad will display "Start". Press and hold the "UP" or "DN" inspection button. The motor sheave will begin to move back and forth and the drive display will display a numeric value. If the sheave begins to move, but an E.EnC1 error occurs on the drive, the drive will swap the encoder channels in LF.28 automatically and then display "retry". Press and hold the "UP" or "DN" inspection button again. If the sheave does not move and an E.EnC1 occurs, verify the brake is picking and the sheave is able to move freely. When sheave is able to move freely, perform "P Lrn" again. If this does not resolve the problem, try swapping output motor phases and try the "P Lrn" procedure again. When the process is complete the sheave will stop rotating and the drive will display "done" and the "UP" or "DN" inspection button can be released. Make a note of LF.77 value which is the learned encoder position value. Return the "Inspect Speed" on the 1021/1101/1005 LCD interface to the previous setting, and set the drive parameter LF.3 to "run".

**Important: If the encoder is removed, absolute position will need to be relearned!**

## 7.16 Encoder Learn Procedure, v1.72 (Unroped or Roped machine)

**NOTE:** This procedure is not required for geared traction using an induction motor.

If you are using v1.72 on the Combivert F5 drive you can learn the encoder position with or without the ropes removed from the machine. From the 1021/1101/1005 LCD interface, navigate to the "Adjustable Variables" menu, "Car Motion" and set the "Inspect Speed = 0". Verify the motor wiring from the drive to the motor, U to U, V to V and W to W. Verify that drive parameter 2.LF.26

= "Conn". This parameter indicates that serial communication is established between the encoder and the drive. If 2.LF.26 does not display "Conn", check the encoder wiring and drive settings LF.26, LF.27, LF.28, and LF.29. This problem must be rectified before proceeding. Once communication is established with the encoder, set LF.3 to "SPI" and press enter on the drive operator keypad. The drive operator keypad will display "Start". Press and hold the "UP" or "DN" inspection button. The drive will take ten encoder position samples. When the process is complete the drive keypad will display "done" and the "UP" or "DN" inspection button can be released. Make a note of LF.77 value which is the learned encoder position value. Return the "Inspect Speed" on the 1021/1101/1005 LCD interface to the previous setting, and set the drive parameter LF.3 to "run". After making a trial run, if the current in LF.93 is excessive, change the value in LF.28 from 0 to 1 or from 2 to 3 and repeat the process.

**Important: If the encoder is removed, absolute position will need to be relearned!**

## 7.17 Check Inspection Speed

If the ropes have been removed from the sheave, adjust the following drive parameters to the values listed below prior to running on inspection speed. If the ropes are on the sheave leave these drive parameters at the initial settings listed below.

- Change A.LF.31 from 3000 to 300
- Change d.LF.31 from 3000 to 300
- Change A.LF.32 from 350 to 50
- Change d.LF.32 from 250 to 50
- Change A.LF.33 from 3000 to 0
- Change d.LF.33 from 1000 to 0

Make sure that on the drive parameter LF.3 is set to "run". From the 1021/1101/1005 LCD interface, navigate to the "Adjustable Variables" menu, "Car Motion" and set the "Inspect Speed = 25". Run the elevator on inspection, and verify that there is zero current draw in LF.93. Press the "UP" inspection button and verify motor is rotating in the up direction, and then press the "DOWN" inspection button and verify that the motor is rotating in the down direction. If not, then change LF.28 from 0 to 2 or from 1 to 3 and re-verify direction. If LF.28 is changed, you must relearn the encoder if using a PM AC Gearless machine. With a hand held tachometer, check the speed of the elevator while running on inspection. The elevator should be running at 25 fpm.

From the 1021/1101/1005 LCD interface, select the "Elevator Status" menu; navigate until the display shows "Dmd" and "Vel". While running on inspection, monitor the controller demand speed "Dmd", and the speed feedback "Vel". These values should both display 25.

If the demand and feedback on the 1021/1101/1005 LCD interface is incorrect, check the Encoder RPM and PPR parameters from the "Adjustable Variables" menu. These variables should be set to values listed in **Section 7.9, 1021/1101/1005 LCD interface "Adjustable Variables -> Car Motion" Submenu.**

If the speed on the hand held tachometer and on "Dmd" and "Vel" all read 25 fpm (within +/- 2 fpm), continue to the next step. If not, contact the factory.

## 7.18 Verify Controller Encoder Direction

From the 1021/1101/1005 LCD interface "Elevator Status" menu, navigate to display "Dir" and "DP". While moving the car on inspection, monitor "Dir" (direction) and "DP" (pulse counts). "Dir" should display "Up" when the car is moving up, and "Dn" when the car is moving down. The value of "Dp" should increment when the car is moving up, and should decrement when the car is moving down.

If the direction is wrong or the pulse counts change in the wrong direction, then the encoder direction to the controller must be changed.

On the encoder isolation board (1022N), move J1 and J3 on the encoder board. Refer to the jumper diagram on the board.

J1 swaps **A & A NOT** – J3 swaps **B & B NOT**.

If the encoder is counting properly and the ropes were removed from the sheave, then set the following drive parameters back to their original settings.

- A.LF.31 to 3000
- d.LF.31 to 3000
- A.LF.32 to 350
- d.LF.32 to 250
- A.LF.33 to 3000
- d.LF.33 to 3000

Replace the ropes and proceed to **Section 7.19, Run The Car On Inspection With The Ropes On The Sheave Of The Motor.**

If the encoder is counting properly, and the ropes were not removed, proceed to **Section 7.19, Run The Car On Inspection With The Ropes On The Sheave Of The Motor.**

If the encoder is not counting properly, contact G.A.L. Technical Support.

## 7.19 Run The Car On Inspection With The Ropes On The Sheave Of The Motor

### 7.20 Ready to Run On Inspection

From the 1021/1101/1005 LCD interface, navigate to the "Adjustable Variables" menu, "Car Motion" and verify that "Inspect Speed = 25". Before moving the car on inspection, verify again that all door locks, gate switches, safety circuits, and limit switches are functioning properly.

The car should be ready to run on inspection if all is wired correctly. Select the “Elevator Status” on the 1021/1101/1005 LCD interface. The display should show “Out of Service” on the first line and “Inspection Mode” on the second. The 1066 LCD interface will display one of the following types of inspection:

- “MR INS” (Motor Room)
- “CT INS” (Car Top)
- “ACCESS” (Access)
- “IC INS” (In Car)”
- “AUTO” (Not on Inspection)

To run the car from the motor room, “MR INS” should be displayed.


The “inspection string” consists of contacts from the inspection switches and the gate and lock bypass switches in series. One and only one of the five inspection inputs should be on for the car to run. Starting from the car top inspection input, the five inspection inputs are, “INS” for car top, “ACC” for access, “ICI” for in- car, “MRI” for motor room, and “AUTO” for automatic (no inspection). The inspection string circuit is shown in Figure 7.1.

**NOTE:** Any one of the following conditions will cause an inspection error:

- More than one inspection input is on
- No inspection input is on
- Gate or Lock bypass switch is open and the car is not on car top inspection

If the controller is not on motor room inspection at this point, then verify all switch positions and wiring before proceeding.

**Figure 7.1: Inspection String Circuit**

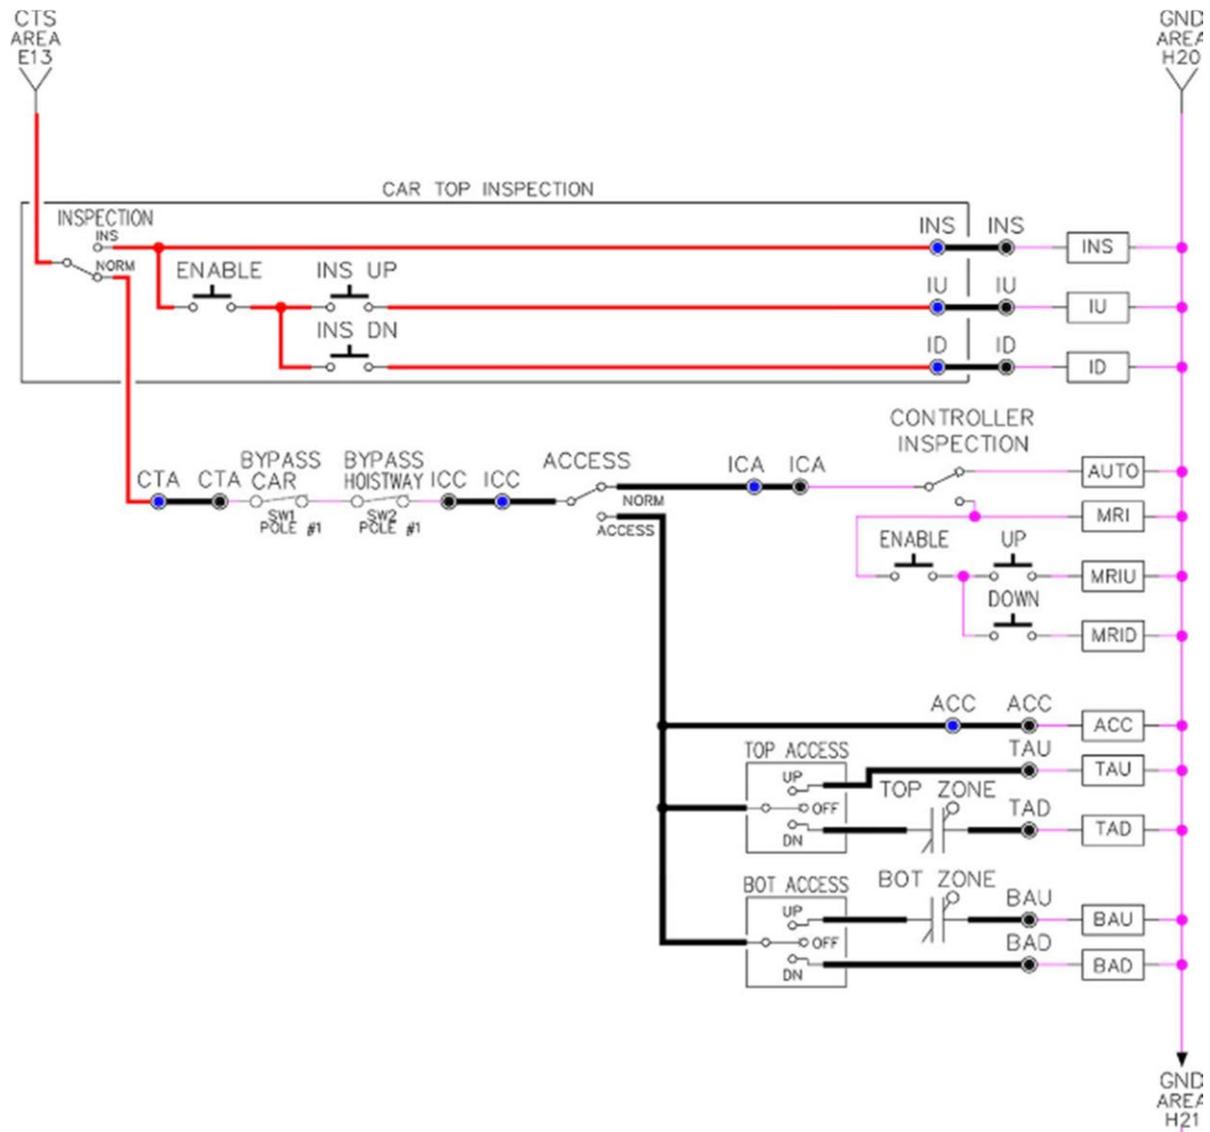

Combivert F5 AC Drive

### 7.21 Verify Selector and Slowdown Inputs

Run the elevator up on inspection until it stops on the up normal limit. The up and down normal limits should be set two inches above and below the terminal floors respectively. Verify the selector inputs are being set properly on the controller by running the elevator down until it stops on the down normal limit.

As the car approaches floor level going down, “DL” turns on first, then “DZ” and then finally “UL”. At floor level, “UL, DL, and DZ” inputs should all be on at the same time. Leaving the floor going down “DL” will turn off first, then “DZ” and last “UL”.

Also verify that the up and down terminal slowdown limits inputs “UT, UTS, DT & DTS” are breaking at the proper distances as shown in the slowdown table 2.0. “UT, UTS, DT & DTS” turn off when active.

## 7.22 Verify Car Speed on Safety Processor Board

Run the car in either direction and check the car speed on the 1066 LCD interface. The speed shown should match the car’s actual speed. If the speed does not match and the secondary feedback comes from pulses from the tape go to “Correct Car Speed When Using A Tape”. If using 485 tapeless, go to "Correct Car Speed When Using 485 tapeless". If using CAN Open tapeless, go to "Correct Car Speed When Using CAN Open tapeless". If the correct speed is shown proceed to **Section 7.26, Learn The Hoistway.**

## 7.23 Correct Car Speed When Using a Tape

The tape has holes every 3/8” that are 3/8” in diameter. On the selector unit adjust the PP sensor closer to the tape until the orange LED at the end of the sensor turns on. Then turn the sensor inwards another 1/8” and lock in the sensor. While running on top of car inspection verify that the orange LED at the end of the PP sensor turns on and off as it passes by the holes on the tape. The safety processor board on the controller measures the time between each pulse to calculate the velocity. If the velocity is not displayed correctly first make sure that the feedback type in the safety processor board adjustable variable is set to 0 for a tape application. Next, while the car is running, make sure that the PULSE LED on this board is pulsing. As the car increases in speed the LED will glow solid on. If the LED does not pulse, try swapping the wires at the PPS and PP terminals. If the LED still does not work, contact the factory. If the correct speed is shown proceed to **Section 7.26, Learn The Hoistway.**

## 7.24 Correct Car Speed When Using 485 Tapeless System

When using the 485 tapeless system, the secondary speed feedback comes from the encoder mounted on the governor. The 1066 board uses a serial interface to a Turck absolute encoder, part # T8.5882.3FOB.3001.

In the 1066 LCD interface "Adj Var" menu, set the "Fdbk Typ = 1", and set the "Enc PPR = 8192". The "Enc RPM" value must be calculated as described below. To calculate the RPM, divide the contract speed of the car by the distance travel in one revolution with the governor as shown below:

$$\text{RPM} = \text{Speed fpm} / (\text{diameter GOV} * \pi)$$

$$\text{For a 1 ft. diameter governor: } \text{RPM} = 350 / (1 * \pi) = 350 / 3.1415 = 111.4$$

For a 16 in diameter governor (16/12 = 1.33ft):  $RPM = 350 / (1.33 * 3.1415) = 350 / 4.188 = 83.5$

## 7.25 Correct Car Speed When Using CAN Open Tapeless System

When using the CAN Open tapeless system, the secondary speed feedback comes from KEB drive parameter US.83 and is normally set to "1" which is 2048 ppr (US.83 set to "0" is 1024 ppr).

In the 1066 LCD interface "Adj Var" menu, set the "Fdbk Typ = 4", and set the "Enc PPR" equal to the ppr from the KEB drive parameter US.83, and set the "Enc RPM" to the nameplate rpm of the machine/motor which should be the same value of parameter LF.11 in the KEB drive.

On the 1066 LCD interface, navigate to the "Pls Cnt" menu. While running the elevator on inspection, verify that the pulse count value increments when running up and decrements when running down. The "Pls Cnt" value can be considerably out of range but will automatically correct during the "Learn Hoistway" procedure. To reverse the direction of pulse counting, navigate on the 1066 LCD interface to the "Adj Var" menu, "Enc Dir" and set to "0" for clockwise or "1" for counter-clockwise.

Navigate on the 1066 LCD interface to the "Car Spd" menu. Monitor the "Car Spd" while running the car at a known inspection speed. The value displayed should match the actual car speed measured with a hand held tachometer. If the speed is correct, proceed to **Section 7.26, Learn The Hoistway**.

## 7.26 Learn the Hoistway

Run the elevator down on inspection until it stops on the down normal limit switch. Verify that the "DN and DL" input LED's are both off and that the "UL" and "DZ" LED's are on. From the 1021/1101/1005 LCD interface navigate to the "Elevator Setup" menu, "Learn Hoistway". The learn procedure can be performed automatically by choosing "Auto" from the menu items, or performed manually by choosing "Insp" from the menu items. After choosing the learn method, follow the instructions displayed on 1021/1101/1005 LCD interface.

In general, the car will run up from the "down normal limit" to the "up normal limit" at 30 fpm. During this learn run, the DP count for each floor level and each limit switch will be stored in memory.

**NOTE:** The car must run the entire hoistway without stopping.

As the elevator moves up the hoistway, navigate to the "Hoistway Tables" menu, "Disp/Mod Hoistway Table", and verify that the "DP" count is incrementing as the elevator moves up. Also as the elevator passes each floor, the pulse count and distance for that floor should change and be stored. Verify that

the floor distances are valid. The pulse count for the terminal slowdowns will also be stored. The elevator will stop when it reaches the up normal limit. Follow the instructions on the 1021/1101/1005 LCD interface by putting the car on inspection, and then the message "Hoistway Learn Complete" should be displayed.

Move the elevator on inspection until the "DZ and DL" LED's are on. Set the "INS" toggle switch on the 1064 board to the "NORMAL" position, and the elevator should level down to floor level at the top floor. If so, proceed to final adjustment.

If the car levels down but does not run, then check "Elevator Status" and "View Fault Log" on the 1021/1101/1005 LCD interface for any fault information. Correct items causing faults and perform hoistway learn again. After problem is corrected, and a successful hoistway learn is performed, proceed to final adjustment.

## **7.27 Automatic Run**

The elevator should now be sitting idle at the top floor. The "AUTO DOOR" switch should be set to the "OFF" position and the "IND" switch should be set to the "IND" position. If the learn procedure was successful, the elevator should be ready to make an automatic run.

The default parameter settings for the ride quality should be adequate for an initial run. From the 1021/1101/1005 LCD interface navigate to the "Set Calls and Lockouts" menu, "Setup Car Calls" and enter a car call. The elevator should run to answer the call. When the elevator levels in and stops at the floor, the doors will remain closed.

At this point the acceleration and deceleration of the car should be smooth and stepless regardless of the distance of run.

The high speed of the car should be verified. To fine tune high speed, make high speed runs while monitoring parameter LF.90 on the drive. The display should read contract speed.

If the speed is slightly under or over contract speed, then verify that parameter LF.11 is set properly. The speed displayed on the drive should match the speed displayed on the 1021/1101/1005 LCD interface, "Elevator Status" menu, "Dmd" and "Vel". This speed should also match the speed displayed on the 1066 LCD interface, "Car Spd" menu. If LF.11 is changed, then go to the 1021/1101/1005 LCD interface, "Adjustable Variables" menu, "Car Motion" and change the value of "Encoder RPM" to match the drive. When all of these speeds are the same (+/- 2 fpm), then proceed to the next step.

## 7.28 Fine Tune the Ride Quality

**NOTE:** A.LF.xx' parameters refer to gains during acceleration and also high speed.

In order to fine tune the ride quality, refer to Figure 7.2 which describes what part of the S-curve that the different parameters effect. In general, higher numbers in the given parameters, cause quicker and more abrupt changes from one mode to the next during a run. All of the S-curve parameters have a minimum and maximum value. The controller will not allow you to enter values that are not valid.

In some instances, the response of the drive may need to be adjusted so that the drive will properly follow the S-curve (demanded speed) from the controller. The response of the drive can be increased by adjusting the gain parameters in the drive. Preliminary adjustments can be made to the following parameters to increase the response.

Proportional gains - A.LF.31 and d.LF.31  
Integral gains - A.LF.32 and d.LF.32  
Integral offset gains - A.LF.33 and d.LF.33 (offsets added to the integral gains for more control at low speeds). The complete description of these parameters and their effect on the control and ride quality can be found in the KEB drive manual. In general, the "A" parameters affect the acceleration gains and the "d" parameters affect deceleration gains. Lower values make the drive less responsive, and higher values make the drive more responsive. As the gains are increased, the drive will cause the motor to follow the S-curve more closely. If these values are increased too much, vibrations and audible noise may occur in the motor.

After the car is running high speed with an acceptable ride quality, it is recommended to perform a "System Inertia Learn" on the KEB drive in order to provide optimum drive performance. This procedure is outlined in the KEB manual. After this procedure is completed, the "Feed Forward Torque Control" FFTC will be enabled in the drive. With the FFTC active, the drive gains listed above can be reduced, and the drive will still follow the S-curve from the controller. This is helpful if the higher values of the gain parameters are causing vibration and audible noise in the motor.

After performing the adjustments above the ride quality during acceleration, high speed, and deceleration should be good. If so, proceed to **Section 7.29, Adjust The Stop.**

## 7.29 Adjust the Stop

When at floor level the "UL, DL, & DZ" input LEDs should be on. If the elevator continually tries to seek floor level by leveling up and down, try the following steps to correct the problem:

Reduce the leveling and re-leveling velocity parameters from the 1021/1101/1005 LCD interface "Adjustable Variables" menu, "Car Motion", "Leveling Speed" and "Relevel Speed".

If the car still oscillates, adjust the "floor level zone" on the selector. The "floor level zone" is increased by moving the "UL" and "DL" sensors closer together.

If the car stops hard on the brake, then make the following adjustments. From the 1021/1101/1005 LCD interface navigate to the "Adjustable Variables" menu, "Car Motion", and adjust both "Brake Drop Del" (brake drop delay) and "Soft Stop Time". These variables should be adjusted so that zero speed is observed at the end of the run prior to the brake setting. The controller should hold the car at zero speed for the duration of the "Soft Stop Time" which should continue while the brake is setting and for a short time after the brake sets.

The soft stop time MUST be set to at least 0.5 seconds LONGER than the brake drop delay.

The "Soft Stop Time" setting in the 1021/1101/1005 LCD interface should be compared with the setting in the 1066 LCD interface "Adj Var" menu, "SoftStop". The setting of "SoftStop" in the 1066 LCD interface should be greater than the "Soft Stop Time" setting in the 1021/1101/1005 LCD interface.

If the car spots when approaching the floor, the cause is usually due to the car not tracking (the drive response is set too low) or the speed profile into the floor is too aggressive. First try to increase the response of the drive, see **Section 7.28, Fine Tune The Ride Quality**.

If the car still spots, increase the floor targeting distance and retest the ride. The default value for the floor targeting distance is 12 inches. Increase it by steps of 2 or 3 and continue retesting until the parameter is adjusted to 18. If no change is noticed, start again from 12 and decrease the value.

The deceleration rate can also be reduced to help remove the spotting. Proceed with adjusting the start once the proper stop is achieved.

### **7.30 Adjust the Start**

To provide a proper start, from the 1021/1101/1005 LCD interface, navigate to the "Adjustable Variables" menu, "Car Motion" and adjust "Brake Pick Del" (brake pick delay), "Pattern Delay", and "Soft Start Jerk". Initially, set the brake pick delay to 0 and increase the pattern delay by 0.1 seconds until the controller picks the brake completely before the motor starts to move. If roll back occurs, then reduce the pattern delay until there is no roll back. Sometimes, the timing works out better if the brake pick delay is set to 0.1 second.

In order to provide a smooth start with no roll back and without feeling the car move under the brake, it may be necessary to utilize the motor pre-torque feature. There are two pre-torque options.

The first option is using a load-weighing device described in **Section 7.34, Analog Load Weigher Setup**. The second option is using the KEB drive's "Synthetic Pre-Torque" feature. To enable the "Synthetic Pre-Torque" option, set LF.30 = 5 in the KEB drive.

During the "Synthetic Pre-Torque" sequence, the KEB drive introduces a high gain for a very short time period immediately after the brake picks and clears the machine drum or rotor. In order for the feature to work properly, with no noise or vibration, the timing and the gain values have to be coordinated with a high degree of precision.

In the first phase of the sequence, the drive uses a "hold off" timer, US.17, to allow the machine brake to release prior to the high gain being introduced. US.17 should be set to expire at exactly the time the brake clears the drum or rotor. A typical initial value of US.17 = 0.2 sec. If this timer expires before the brake releases, audible noise and vibration from the motor will occur. If this timer expires after the brake releases, the car will roll back before the high gain is introduced by the drive. The brake pick delay timer may also need to be adjusted from the 1021/1101/1005 LCD interface, by navigating to the "Adjustable Variables" menu, "Car Motion" and adjusting "Brake Pick Del". In general, the value of US.17 will be greater than the value of "Brake Pick Del".


In the second phase of the sequence, the drive introduces the gain parameter, P.LF.32, after the US.17 timer expires. The value of P.LF.32 should be increased until the car is held at zero speed when the brake is released. Values as high as 20,000 are normal for parameter P.LF.32. If this value is set too low, the drive will not hold the motor at zero speed when the brake releases. If this value is set too high, then audible noise and vibration from the motor will occur. If audible noise and vibration occur, it is important to determine if it is caused by P.LF.32 being set too high, or if it is caused by US.17 expiring before the brake releases. Small increments (0.05 sec) to US.17 can be made until roll back is observed, and then decreased again until there is no roll back. By performing these small adjustments in an iterative fashion, the correct setting combination can be achieved.

Also during this second phase of the sequence, second timer, US.18, begins timing at the same point that US.17 expires. The US.18 timer sets the duration that the P.LF.32 gain parameter is asserted. A typical initial value for US.18 = 0.15 sec., but this value must be fine-tuned as well. As a general rule, the value US.18 will be less than the value US.17 after the adjustment is complete. It is critical that the pattern delay timer from the controller expires at exactly the same time that US.18 expires. To adjust the pattern delay from the 1021/1101/1005 LCD interface, navigate to the "Adjustable Variables" menu, "Car Motion" and adjust "Pattern Delay". If the "Pattern Delay" value is too short, then acceleration will be demanded from the controller while the high gain is being asserted and vibration and noise from the motor will occur. If the "Pattern Delay" is set too long, then roll back will occur after US.18 expires. In general, the value of "Pattern Delay" will be greater than the sum of the values of US.17 and US.18. Again, by performing small adjustments in the iterative fashion described above, the correct setting combination can be achieved.

After the "Synthetic Pre-Torque" is set properly, the car will start smoothly with no roll back and without feeling the brake. The soft start jerk rate can now be increased to provide a quicker transition from start to constant acceleration.

From the 1021/1101/1005 LCD interface, navigate to the "Adjustable Variables" menu, "Car Motion" and adjust the "Soft Start Jerk Rate". The ride quality should now be acceptable.

**Figure 7.2: Speed clamps**

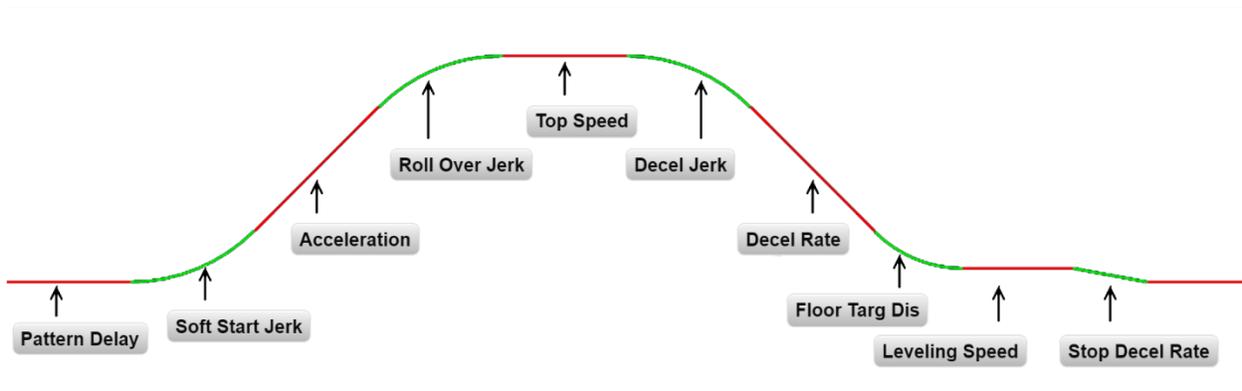

### 7.31 Adjust Safety Processor Board Speed Clamps

The 1066 Safety Processor Board monitors the speed of the elevator at the terminal landings independently from the main CPU.

When the "UT, DT, UTS, and DTS" limit switches are activated, the 1066 board calculates the velocity of the elevator and compares that velocity with a stored value of speed clamp. If the velocity when the switch activates is greater than the speed clamp value, then the 1066 board will generate a fault that stops the elevator.

To set the speed clamps, make a one floor run to the top floor.

After the car stops, record the velocity the car hits the "UT, DT, UTS & DTS" slowdown limits. "UTS & DTS" are used on cars with reduced stroke buffers or with a top speed greater than 200 fpm. The velocity value is shown from the "LIM VEL" menu on the 1066 LCD interface.

The velocity value shown on the display for the “UT or DT” limit is the value after the car activates the limit then counts an adjustable number of counts set from the 1066 LCD interface, "Adj Var" menu, "UT Count" or "DT Count". These count values can be adjusted to provide adequate distance, following the limit switch activation, to allow the elevator to begin its normal decel pattern. The default “UT Count" and "DT Count" values are normally adequate. However, these values may need to be field adjusted to allow enough distance for the car to begin its normal decel pattern. If the "UT Count" and "DT Count" values are modified, the limit velocities must be re-checked.

Run the car again to the top repeatedly from 2 floors, then 3 floors, etc., until top speed is reached. From the 1066 LCD interface "Lim Vel" menu, record the limit velocities displayed each time the car stops at the top floor. Make the same runs to the bottom floor starting from 1 floor, then 2 floors, then 3 floors, etc., until top speed is reached. From the 1066 LCD interface "Lim Vel" menu, record the limit velocities displayed each time the car stops at the bottom floor. Take the highest speed value recorded in the runs above and add 20 fpm to that value to use as the clamp speed values for the respective limit switches. Enter these clamp speed values into the 1066 LCD interface "Adj Var" menu, "UT Vel", "DT Vel", "UTS Vel", "DTS Vel" respectively.

**7.32 Adjust Digital Slowdown Speed Clamps**

Having just made several runs into the top and bottom landings, the main CPU has also recorded the car’s velocity when the slowdown limits were activated. If the car has been powered down prior to this step, several runs must be made to the limits to allow the main CPU to record the limit velocity values.

From the main CPU LCD interface, choose “Elevator Setup” and hit enter. Next choose “DT/UT Slowdown Clamp” and again hit enter.

From the 1021/1101/1005 LCD interface, navigate to the "Elevator Setup" menu, "Set DT/UT Slowdown Clamp" and view the speed displayed for "Clamp Speed". Add 20 fpm to this "Clamp Speed" value and enter it into the "DT/UT Limit" value.

The number of slowdown limits depends on the speed of the car as show in the table below:

Car Speed	Number of Slowdown Limits	Clamp Number	Limit Used
<= 250 fpm	1	2	UT, DT
300-500 fpm	2	3	UT1, DT1
600-700 fmp	3	4	UT2, DT2
800 + fpm	4	5	UT3, DT3

**Table 7.1: Slowdown Clamps**

Adjust speed clamps for each slowdown limits used as determined by the elevator's contract speed.

### **7.33 Verify Inspection Velocity Clamp on Safety Processor Board**

Place the car on inspection operation. From the 1066 LCD interface, navigate to the "Adj Var" menu, "Ins Vel" and set the speed clamp velocity to 25 fpm. From the 1021/1101/1005 LCD interface, navigate to the "Adjustable Variables" menu, "Car Motion" and set the "Inspect Speed" to 50 fpm. Run the car in either direction and verify that the car shuts down when the speed rises above 25 fpm.

From the 1066 LCD interface, navigate to the "Adj Var" menu, "Ins Vel" and set the speed clamp to 140 fpm. From the 1021/1101/1005 LCD interface, navigate to the "Adjustable Variables" menu, "Car Motion" and set the "Inspect Speed" to the desired value.

### **7.34 Analog Load Weigher Setup**

If the job uses an analog load weigher purchased from G.A.L., complete the following procedure.

**NOTE:** It is recommended using two people, one moving the weights and one in the machine room to set up the load weigher.

Mount the load weigher as described by the manufacturer. The load weigher control box will also contain a board supplied by G.A.L. that connects to the controller serial CAN bus and reads in the analog output from the load weighing device. Wire the load weigher and G.A.L. board according to the controller schematics.

Calibrate the load weighing device hardware according to the manufacturer's instructions. Following proper installation of the load weighing device, proceed to **Section 7.35, Empty Car Setup**.

### **7.35 Empty Car Setup**

Verify that the load weighing device is communicating to the main CPU by performing the following steps. From the 1021/1101/1005 LCD interface, navigate to the "Diagnostics" menu, "Car Comm Status", "Car to LW Board" and verify that "On-line = 1". If "On-line = 0" then verify wiring and installation of load weighing device.

From the 1021/1101/1005 LCD interface, navigate to the "Elevator Setup" menu, "Load Weigher Setup", "Setup Load Weigher" and follow the instructions on the display as you go through the procedure.

It is okay to exit the setup screen to place a call and then return to it while the setup is being performed.

Run the car to the bottom floor and press Enter on the 1021/1101/1005 LCD interface when prompted to do so to start the automatic setup sequence.

If the car is at the bottom floor and the doors are not closed (the doors will not close automatically from turning off the auto-door switch) then place a car call to run the car up one floor, then back again. The doors will close when the call is placed.

When the automatic sequence is activated, the car will run to each floor and measure the empty load value. The 1021/1101/1005 LCD interface will indicate when the sequence is finished.

### 7.36 Full Car Setup

**The empty car setup must be successfully completed to run the full load setup.**

Once the empty car setup is complete, run to the loading floor and set the "AUTO DOOR" switch to the "ON" position to allow weights to be loaded on the car. With the car fully loaded, set the "AUTO DOOR" switch to the "OFF" position and run the car to the bottom floor. Again if the doors are not closed, make a one floor run to force the doors to close.

With the car at the bottom floor, follow the instructions on the 1021/1101/1005 LCD interface to start the full load setup sequence. The car will automatically run to each floor and measure the full load value. When the full load measurement is complete, the car can be run to the loading floor and the weights removed.

After the weights are removed, cycle the doors to complete the procedure. From the 1021/1101/1005 LCD interface, navigate to the "Elevator Setup" menu, "Load Weigher Setup", "View/Modify LW Setup" and verify the load weigher status, "LW Device Stat: ON OK". If the status is "ON OK", then the load weigher should be accurately measuring the car load in real time. The percent load will be displayed, "Load: \_%".

The percent load values for different service options can now be set. From the 1021/1101/1005 LCD interface, navigate to the "Adjustable Variables" menu, "Service Options", and set the following variables:

- "Load Bypass"
- "Load Antinuisance"
- "Load Dispatch"

- "Load Overload"

**NOTE:** Setting the values of the variables above to 0% will disable that particular option.

### 7.37 Load Weighing Calibration Sequence

The load weigher is automatically calibrated once each week. If an error is detected during this calibration sequence, the load weigher and the pre-torque feature (if used) is disabled.

A load weighing calibration sequence can be manually activated by performing the following procedure. From the 1021/1101/1005 LCD interface, navigate to the "Elevator Setup" menu, "Load Weigher Setup", "Load Weigher Calibration" and follow the instructions on the display.

### 7.38 Adjust the Motor Pre-torque

**NOTE:** This section describes the adjustment procedure if using the load value obtained from the analog load weigher to generate the proper pre-torque signal to the drive. This option will only work if the load weigher has been installed properly, and the "Load Weigher Setup" has been performed successfully.

If the option of "Synthetic Pre-Torque" is used, see **Section 7.30, Adjust The Start.**

On the KEB drive, set parameter LF.30 = 3 to enable the pre-torque function from a load weighing device. Run the empty car to a middle floor. From the 1021/1101/1005 LCD user interface, navigate to the "Adjustable Variables" menu, "Car Motion" and adjust the following parameters:

- "Balanced Load = 40" (typically car is 40% counterbalanced, but verify counterbalance percentage for each specific job)
- "Torque Amount = 10"
- "Pattern Delay = 2.5"
- "Brake Pick Del = 0.1"

The long pattern delay will allow an exaggerated amount of roll back in order for the pre-torquing to be set accurately. Make a one floor run down and observe the roll back when the brake picks at the start of the run. Increase the "Torque Amount" variable and continue to monitor the roll back while performing one floor runs in the down direction. As the "Torque Amount" is increased, the roll back should be minimized until the car will hold zero speed for the entire "Pattern Delay" time. A typical value for the "Torque Amount" is 40%. If the value is too large, the car will roll forward during the "Pattern Delay" time.

**NOTE:** The pattern delay must be at least 0.15 seconds (150 milliseconds). Setting the torque amount to 0.00 will disable the pre-torque feature. Also if the load weighing calibration sequence detects a load weighing error, the pre-torque feature is also automatically disabled.

### 7.39 Verify the Doors Are Safe

The elevator should now be adjusted. Verify that all door locks, gate switches, and safety circuits are operational. Set the "INS" switch to the "NORM" position and set the "AUTO DOOR" switch to the "ON" position. The elevator should level into the floor and open the doors. If the doors do not open, check the door operator wiring and cam adjustment. If the doors do open, the elevator is now on independent service.

### 7.40 Fine Tune the Ride Quality

Ride the elevator and evaluate the ride quality. Fine tune the ride quality by navigating to the "Adjustable Variables" menu, "Car Motion" and adjusting the variables shown in Figure 7.2.

Keep in mind that if acceleration or deceleration values are changed, the speed clamps for the safety processor board and the S-curve board may need to be re-adjusted.

To fine tune the floor level accuracy, determine if the controller is set to stop when "UL" and "DL" signals turn on, or if controller is set to stop off of the position count. From the 1021/1101/1005 LCD interface, navigate to the "Adjustable Variables" menu, "Car Motion" and view the "Stop On Pos Cnt" variable. If "Stop On Pos Cnt= 0" then controller is set to stop when the "UL and "DL" signals turn on. If "Stop On Pos Cnt = 1" then controller is set to stop on a combination of the floor level magnet and the position count.

With "Stop On Pos Cnt = 0", the floor levels should be set by adjusting the floor level magnet at each floor. For proper operation, the floor magnets should be set to exactly floor level. After the floor levels are set properly, perform another hoistway learn procedure.

With "Stop On Pos Cnt = 1", the floor levels are set by using both the floor magnet and the position count. For proper operation with this setting, the floor magnet should be set to exactly floor level. The final stop can then be fine-tuned by performing the following adjustments.

From the 1021/1101/1005 LCD interface, navigate to the "Hoistway Tables" menu, "DZ & LZ Offset, Sel Cnt" and adjust "Dn Lev Dist" and "Up Lev Dist". The units for these variables are in "pulse counts". With "Stop On Pos Cnt =1" the car will continue to move for the "Dn Lev Dist" or "Up Lev Dist" after "UL and DL" turn on. Use the "Dn Lev Dist" and the "Up Lev Dist" parameters to make level changes at all floors.

To make level changes at individual floors, perform the following adjustments. From the 1021/1101/1005 LCD interface, navigate to the "Hoistway Tables" menu, "FL and FL Offset Count", and the offset count can be adjusted. These variables introduce an offset (+/-) to the stored floor count that was determined in the hoistway learn procedure.

**NOTE:** The number of pulse counts per inch can be viewed from the 1021/1101/1005 LCD interface, "Hoistway Tables", "DZ & LZ Offset, Sel Cnt", "Pulses /Inch".

**NOTE:** Regardless if "Stop On Pos Cnt=0" or if "Stop On Pos Cnt =1", the floor magnet must be set properly at floor level. If too large of values are entered into "Dn Lev Dist", "Up Lev Dist", or "Offset", the car will drive past the floor level magnet and re-level.

Check all signal devices for proper operation and remove all temporary jumpers. The adjustment should now be complete.

## ***Section 8 - Adjustment of the GALaxy - HPV- 900 Permanent Magnet AC Gearless Motor***

### **8.1 General Setup**

Before adjustment begins the following items must be completed.

1. All field wiring and safety circuits installed.
2. Temporary jumpers from terminal "HC" to terminals "MES & ALT".
3. All hoistway limit switches installed.
4. All car and hoistway doors and interlocks installed and pre-adjusted.
5. Selector installed and magnets pre-adjusted.
6. Familiarize yourself with all wiring schematics.
7. Familiarize yourself with the Magnetek HPV 900 PM Elevator Drive Technical Manual.
8. Verify that the PM AC motor is properly wired.
9. Verify that the encoder is connected properly.
10. Car should be properly counterbalanced.

### **8.2 Check Main Line Voltage**

With main-line disconnect in the "OFF" position, check the line-side voltage with a volt meter to insure the voltage matches the controller name tag "Input Power" voltage. Check to insure all three phases are present. If voltage is not correct or all three phases are not present, do not proceed until corrected.

### **8.3 Set Toggle Switches**

Set all toggle switches on the 1064 board as follows:

- DOOR LOCKS - "OFF"
- IND - "IND"
- AUTO DOOR - "OFF"
- STOP - "STOP"

### **8.4 Make Sure the Car Is Safe**

Verify that all elevator doors are closed and that all safety circuits are functional.

## 8.5 Check Controller Voltage

Turn the main-line disconnect to the on position. Check the voltage at R, S, and T on the AC drive. Verify that all three phases are present. Check the voltage at fuses L1 and L2 on controller. If correct, check the voltage at terminal "LIN" with respect to "GND". The voltage should read 120VAC. If correct, check the voltage at terminals "S10, LC, & HC" with respect to "GND". All should read 120VAC. If not, check wiring diagram to determine problem before continuing.

## 8.6 Verify the Main CPU is Operating

Check to make sure that the "axy" of GALaxy on the 1021/1101/1005 LCD interface is blinking. If the "axy" is blinking, continue to the next step. If not, check voltage at terminals 5V to 0V on the 1064 board to insure 5VDC. If 5VDC is present and the "axy" on the 1021/1101/1005 LCD interface is not blinking, then contact factory.

## 8.7 Preset Adjustable Variables on Safety Processor Board And Main CPU

The safety processor (1028N/1066) board is normally preset prior to leaving the factory; however, it is prudent to check the setup values for the proper settings. Refer to **Section 13** of this manual for the operation of the safety processor board 1066 LCD interface. The following adjustment variables must be set properly:

**NOTE:** If the controller uses an NTS board please refer to **Section 14, GALX-0320AN NTSD Board.**

## 8.8 1066 LCD interface "Adj Var" Menu

Top Spd (contract speed)

- Enc RPM (if Fdbk Typ=0, not applicable) (if Fdbk Typ=1, set to rpm of governor) (if Fdbk Typ=4, set to value of "CONTRACT MTR SPD" parameter in HPV 900/600 drive)
- Enc PPR (if Fdbk Typ=0, not applicable) (if Fdbk Typ=1, set to 8192) (if Fdbk Typ=4, set to 8 times the ppr of motor encoder)
- Fdbk Typ (0=tape, 1=enc, 4=InEnc)
- Ctrl Typ (2=Tract DF)
- 2 Stop (0=Mult, 1=2 stop)
- RearDoor (0=Front only, 1=Rear)
- UTS Vel (Set to top speed)
- DTS Vel (Set to top speed)
- INS Vel (Set to 140)

- LEV Vel (Set to 140)
- UT Vel (Set to top speed)
- DT Vel (Set to top speed)
- UL Vel (Set to 160 if Non-DF)
- DL Vel (Set to 160 if Non-DF)
- SoftStop (Set to 3)

**NOTE:** The velocity values for the terminal limit switches above are only temporary settings until car is running high speed. In the final adjustment procedure, these variables must be set according to the procedures in **Section 8.30, Adjust Safety Processor Board Speed Clamps.**

## 8.9 1021/1101/1005 LCD interface "Adjustable Variables -> Motion" Submenu

- Top Speed (set to contract speed)
- Inspect Speed (set to 25 fpm)
- Encoder PPR ((if tape selector or if 485 tapeless selector, set to 8 times ppr of motor encoder) (if CAN open tapeless selector, set to motor encoder ppr)
- Encoder RPM (if tape selector, set to value of "CONTRACT MTR SPD" in HPV 900/600 drive), (if 485 tapeless selector, set to value of "CONTRACT MTR SPD" in HPV 900/600 drive), (if CAN open tapeless selector, set to governor rpm)

**NOTE:** See **Section 8.22, Correct Car Speed When Using 485 Tapeless System**, for determining governor rpm.

## 8.10 Place Stop Switch in Run Position

Set the "STOP" toggle switch on the 1064 board to the "RUN" position. Verify that input LED's for "LC, HC, DN, UN, SS, GTS, RDY and CS" are all on.

If not, then correct field wiring.

## 8.11 Hoist Motor Data

At this time the hoist motor data must be entered into the AC drive. The following functions must be entered or verified using the drive digital operator. Follow the instructions in the HPV 900 PM drive manual to enter the following data:

Basics U9 Sub Menu

- DRIVE MODE (set to PM)

#### DRIVE A1 Sub Menu

- CONTRACT CAR SPD (from controller data)
- CONTRACT MTR SPD (from motor nameplate RPM)
- ENCODER PULSES (PPR from encoder on motor)

#### POWER Convert A4 Sub Menu

- INPUT L-L VOTS (Nominal line-line AC input Voltage, RMS)

#### MOTOR A5 Sub Menu

- MOTOR ID (pm default)
- RATED MTR PWR (from motor nameplate)
- RATED MTR VOLTS (from motor nameplate)
- RATED EXCIT FREQ (rated excitation frequency in Hz)
- RATED MTR SPEED (rated motor speed at full load)
- RATED MOTOR CURR (from motor nameplate)
- MOTOR POLES (number of motor poles)

The number of poles is provided below is you are using one of the following motors:

- MAG05 = 66 poles
- MAG10 = 66 poles
- MAG15 = 66 poles
  
- Leroy Somer Z2 = 16 poles
- Leroy Somer Z3 = 16 poles
- Leroy Somer Z4 = 16 poles
- Leroy Somer Z6 = 32 poles
- Leroy Somer Z10 = 32 poles
- Leroy Somer Z20 = 32 poles
  
- Imperial 474 = 20 poles

- Imperial 475 = 24 poles
- Imperial 522 = 20 poles
- Imperial 525 = 20 poles
- Imperial 805 = 44 poles
  
- Hollister Whitney = 28 poles

If you are not using one of the following motors listed and need to calculate the motor poles, use the following formula based from the motor name plate data:

$\text{Poles} = 2 \times 60 \times \text{Motor Excitation frequency (Hz)} / \text{Rated Motor Speed (RPM)}$

The number of motor poles will always be a whole, even number.

RATED MTR SPEED (motor RPM on nameplate)

Most of the drive parameters have been preset to values required for your specific job. Other parameters not listed here may need to be adjusted in the field. Please refer to the Magnetek HPV Technical manual for more parameter information and troubleshooting guidelines.

From the digital operator for the drive, reset any active faults and clear the fault history log.

## 8.12 Pre-set the Digital Speed Clamps

Pre-set the software digital speed clamps from the 1021/1101/1005 LCD interface under the “Elevator Setup Menu”. The submenus for the clamp speeds are as follows:

- Set Ins/Leveling Clamp
- Set DT/UT Slowdown Clamp
- Set DT1/UT1 Slowdown Clamp
- Set DT2/UT2 Slowdown Clamp
- Set DT3/UT3 Slowdown Clamp
- Set DTS/UTS Slowdown Clamp

Set the speed for Ins/Leveling for 140 fpm and all the remaining slowdown limit speeds to the contract speed of the car. Please note that the displayed value of “Clamp Speed” is the value the clamp should be set to. The slowdown limit “Clamp Speed:” will show 0000 until the car is run into the limits and the

speed is recorded. Please refer to **Section 10, 1021/1101/1005 LCD Interface**, for the Elevator Setup Menu.

**NOTE:** The values of the clamp speed velocities above are only temporary settings until the car is running high speed. In the final adjustment procedure, these values must be set according to the procedures in **Section 8.31, Adjust Digital Slowdown Speed Clamps**.

## 8.13 PM Start-Up Procedure

### 8.14 Adjust the Brake Voltage

If the controller utilizes an electronic brake board 1047 or 1051, then the brake voltage is adjusted through the 1021/1101/1005 LCD interface, "Car Brake" sub-menu. If the controller utilizes resistors and rectifiers for the brake coil circuit, then the brake voltage is adjusted by moving the adjustable tap on the brake resistor.

**NOTE:** Remove power before adjusting the resistor taps.

To adjust the brake voltage when using an electronic brake board, navigate to the "Adjustable Variables" menu, "Car Brake" and adjust "Brake Pick Volt", "Brake Hold Volt" and "Brk AC L-L Volt" to the proper values.

### 8.15 Encoder Learn Procedure and Motor Auto Tune Procedure

**NOTE:** *The Magnetek manual states that for Cables longer than 15 meters (50') the sense wires should be connected and JP1 and/or JP2 on the EnDAT board should be set to the 2-3 position.*

This only applies to EnDat encoders with the EnDat option card installed in the Magnetek drive.

**Both** JP1 & JP2 should be set to the 2-3 position on the Magnetek EnDat option board **and** the EnDat cable Sense +/- wired to:

**WHITE (S-)** to TB2-75

**BLUE (S+)** to TB2-76

**NOTE 2:** It may be necessary to perform the encoder alignment using "HF Inject" instead of "Auto" as an alignment method.

From the 1021/1101/1005 LCD interface, navigate to the "Adjustable Variables" menu, "Car Motion" and set the "Inspect Speed = 0". Remove one wire from the brake coil, to prevent the main brake from picking. If the unit has an emergency brake, the emergency brake and the emergency brake switch must remain operational during the learn procedure.

On the HPV-900 digital operator go to the Utilities U0 option and press enter. Scroll through the Utilities options to Rotor Align U10 and press enter. Verify ALIGNMENT METHOD is set to AUTO ALIGN. Scroll to ALIGNMENT and press enter to change parameter ALIGNMENT from DISABLE to ENABLE and press enter.

Change the parameter BEGIN ALIGNMENT to ON RUN. Wire the controller to run from car top inspection. See prints or quick start-up guide for wiring. Give the controller a command to run on inspection up or down. The procedure should only take a few seconds. If the procedure is successful, the drive will store a value in the A5 - ENCODER ANG OFFST parameter. Run the procedure multiple times to determine that a consistent value is established in the A5 - ENCODER ANG OFFST parameter. If a fault occurs on the drive please consult the section on PM Start-Up Procedure in the HPV-900 PM Technical manual to resolve any faults. If faults persist, contact G.A.L. Technical Support.

After the encoder angular offset is established, then navigate to the U12 menu - AUTOTUNE SEL and change the parameter AUTOTUNE SELECT to ON RUN. Give the controller a command to run on inspection up or down. The procedure should only take a few seconds. If the procedure is successful, values for A5 parameters D AXIS INDUCTANCE, Q AXIS INDUCTANCE & STATOR RESISTANCE are learned and saved automatically.

After the encoder learn and the motor learn procedures are complete, reconnect the brake coil wire and return the inspection speed parameter to 25 fpm.

## 8.16 Check Inspection Speed

With a hand held tachometer, check the speed of the elevator while running on inspection. The elevator should be running at 25 fpm. Also monitor the speed on the drive digital operator D1 submenu, SPEED FEEDBACK, and verify that it displays 25 fpm while running on inspection.

From the 1021/1101/1005 LCD interface, select the "Elevator Status" menu; navigate until the display shows "Dmd" and "Vel". While running on inspection, monitor the controller demand speed "Dmd", and the speed feedback "Vel". These values should both display 25. If the demand and feedback on the 1021/1101/1005 LCD interface is incorrect, check the Encoder RPM and PPR parameters from the "Adjustable Variables" menu.

If the speed on the hand held tachometer and on "Dmd" and "Vel" all read 25 fpm (within +/- 2 fpm), continue to the next step. If not, contact the factory.

## 8.17 Verify Controller Encoder Direction

From the 1021/1101/1005 LCD interface "Elevator Status" menu, navigate to display "Dir" and "DP". While moving the car on inspection, monitor "Dir" (direction) and "DP" (pulse counts). "Dir" should display "Up" when the car is moving up, and "Dn" when the car is moving down. The value of "Dp" should increment when the car is moving up, and should decrement when the car is moving down.

If the direction is wrong or the pulse counts change in the wrong direction, then the encoder direction to the controller must be changed.

On the encoder isolation board (1022N), move J1 and J3 on the encoder board. Refer to the jumper diagram on the board.

J1 swaps **A & A NOT** – J3 swaps **B & B NOT**.

If the encoder is counting properly then place the ropes on the sheave of the motor and continue to the next step. If not, contact G.A.L. Technical Support.

## 8.18 Ready to Run On Inspection

From the 1021/1101/1005 LCD interface, navigate to the "Adjustable Variables" menu, "Car Motion" and verify that "Inspect Speed = 25". Before moving the car on inspection, verify again that all door locks, gate switches, safety circuits, and limit switches are functioning properly.

The car should be ready to run on inspection if all is wired correctly. Select the "Elevator Status" on the 1021/1101/1005 LCD interface. The display should show "Out of Service" on the first line and "Inspection Mode" on the second. The 1066 LCD interface will display one of the following types of inspection:

- "MR INS" (Motor Room) "CT INS"
- (Car Top) "ACCESS" (Access)
- "IC INS" (In Car)"
- "AUTO" (Not on Inspection)

To run the car from the motor room, "MR INS" should be displayed.


The "inspection string" consists of contacts from the inspection switches and the gate and lock bypass switches in series. One and only one of the five inspection inputs should be on for the car to run. Starting from the car top inspection input, the five inspection inputs are, "INS" for car top, "ACC" for access, "ICI" for in- car, "MRI" for motor room, and "AUTO" for automatic (no inspection). The inspection string circuit is shown in Figure 8.1

Note that any one of the following conditions will cause an inspection error:

- More than one inspection input is on
- No inspection input is on
- Gate or Lock bypass switch is open and the car is not on car top inspection

If the controller is not on motor room inspection at this point, then verify all switch positions and wiring before proceeding.

**Figure 8.1: Inspection String Circuit**

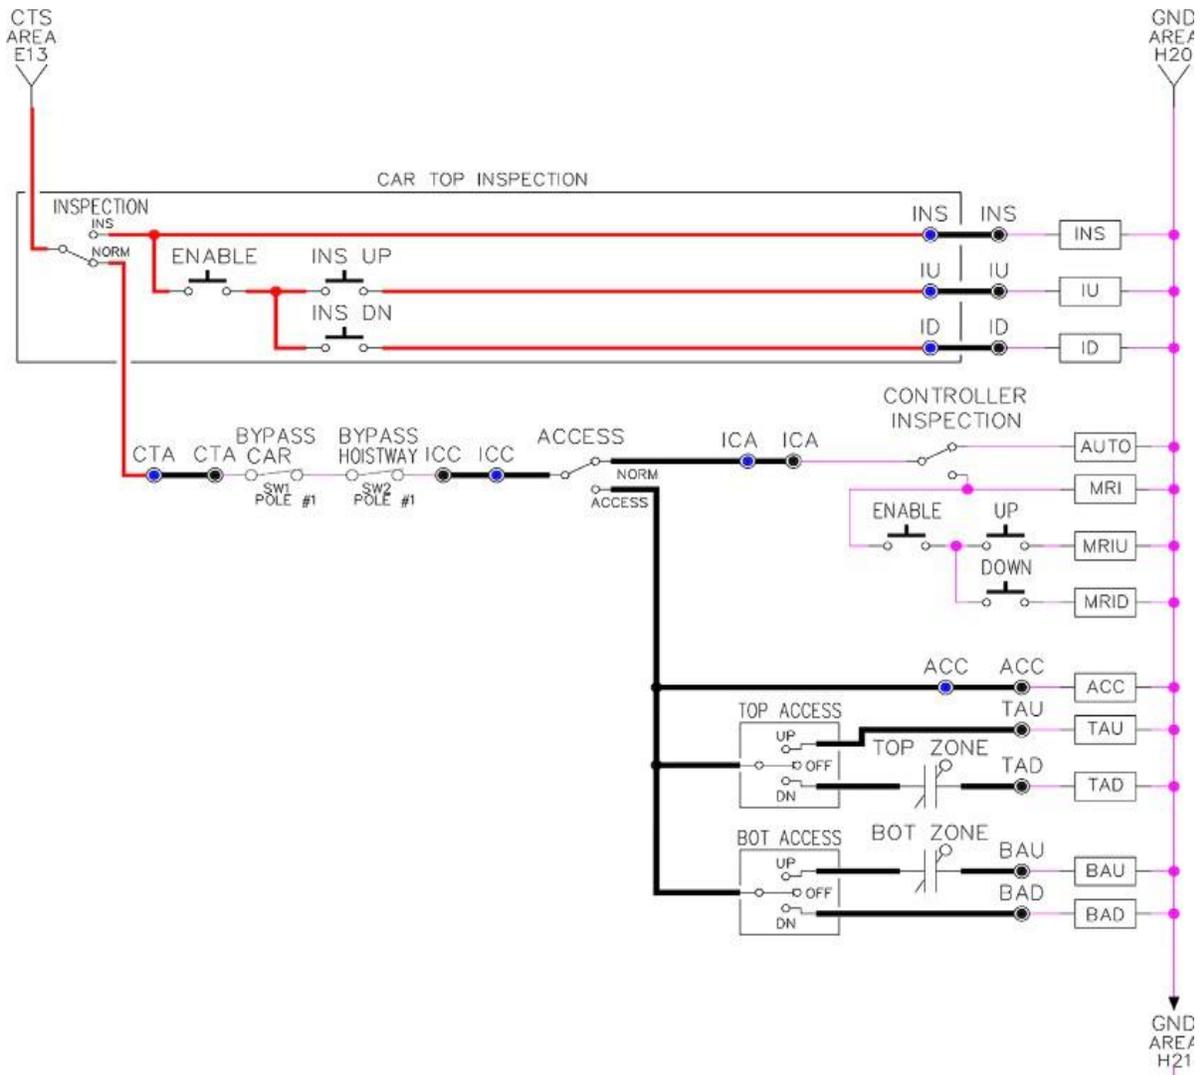

**8.19 Verify Selector and Slowdown Inputs**

Run the elevator up on inspection until it stops on the up normal limit. The up and down normal limits should be set two inches above and below the terminal floors respectively. Verify the selector inputs are being set properly on the controller by running the elevator down until it stops on the down normal limit.

As the car approaches floor level going down, "DL" turns on first, then "DZ" and then finally

"UL". At floor level, "UL, DL, and DZ" inputs should all be on at the same time. Leaving the floor going down "DL" will turn off first, then "DZ" and last "UL".

Also verify that the up and down terminal slowdown limits inputs "UT, UTS, DT & DTS" are breaking at the proper distances as shown in the slowdown table 2.0. "UT, UTS, DT & DTS" turn off when active.

## **8.20 Verify Car Speed on Safety Processor Board**

Run the car in either direction or check the car speed on the 1066 LCD interface. The speed shown should match the car's actual speed. If the speed does not match and the secondary feedback comes from pulses from the tape go to "Correct Car Speed When Using A Tape". If using 485 tapeless, go to "Correct Car Speed When Using 485 tapeless". If using CAN Open tapeless, go to "Correct Car Speed When Using CAN Open tapeless". If the correct speed is shown proceed to **Section 8.24, Learn The Hoistway**.

## **8.21 Correct Car Speed When Using a Tape**

The tape has holes every 3/8" that are 3/8" in diameter. On the selector unit adjust the PP sensor closer to the tape until the orange LED at the end of the sensor turns on. Then turn the sensor inwards another 1/8" and lock in the sensor. While running on top of car inspection verify that the orange LED at the end of the PP sensor turns on and off as it passes by the holes on the tape. The safety processor board on the controller measures the time between each pulse to calculate the velocity. If the velocity is not displayed correctly first make sure that the feedback type in the safety processor board adjustable variable is set to 0 for a tape application. Next, while the car is running, make sure that the PULSE LED on this board is pulsing. As the car increases in speed the LED will glow solid on. If the LED does not pulse, try swapping the wires at the PPS and PP terminals. If the LED still does not work, contact the factory. If the correct speed is shown proceed to "Learn the Hoistway".

## **8.22 Correct Car Speed When Using 485 Tapeless System**

When using the 485 tapeless system, the secondary speed feedback comes from the encoder mounted on the governor. The 1066 board uses a serial interface to a Turck absolute encoder, part # T8.5882.3FOB.3001.

In the 1066 LCD interface "Adj Var" menu, set the "Fdbk Typ = 1", and set the "Enc PPR = 8192". The "Enc RPM" value must be calculated as described below. To calculate the RPM, divide the contract speed of the car by the distance travel in one revolution with the governor as shown below:

$RPM = \text{Speed fpm} / (\text{diameter GOV} * \pi)$

For a 1 ft. diameter governor:  $RPM = 350 / (1 * \pi) = 350 / 3.1415 = 111.4$

For a 16 in diameter governor ( $16/12 = 1.33\text{ft}$ ):  $RPM = 350 / (1.33 * 3.1415) = 350 / 4.188 = 83.5$

## 8.23 Correct Car Speed When Using CAN Open Tapeless System

When using the CAN Open tapeless system, the secondary speed feedback comes from the HPV 900/600 drive and should be set to 8 times the ppr of the motor encoder.

In the 1066 LCD interface "Adj Var" menu, set the "Fdbk Typ = 4", and set the "Enc PPR" equal to 8 times the ppr from the motor encoder.

On the 1066 LCD interface, navigate to the "Pls Cnt" menu. While running the elevator on inspection, verify that the pulse count value increments when running up and decrements when running down. The "Pls Cnt" value can be considerably out of range but will automatically correct during the "Learn Hoistway" procedure. To reverse the direction of pulse counting, navigate on the 1066 LCD interface to the "Adj Var" menu, "Enc Dir" and set to "0" for clockwise or "1" for counter-clockwise.

Navigate on the 1066 LCD interface to the "Car Spd" menu. Monitor the "Car Spd" while running the car at a known inspection speed. The value displayed should match the actual car speed measured with a hand held tachometer. If the speed is correct, proceed to **Section 8.24, Learn The Hoistway**.

## 8.24 Learn the Hoistway

Run the elevator down on inspection until it stops on the down normal limit switch. Verify that the "DN and DL" input LED's are both off and that the "UL" and "DZ" LED's are on. From the 1021/1101/1005 LCD interface navigate to the "Elevator Setup" menu, "Learn Hoistway". The learn procedure can be performed automatically by choosing "Auto" from the menu items, or performed manually by choosing "Insp" from the menu items. After choosing the learn method, follow the instructions displayed on 1021/1101/1005 LCD interface.

In general, the car will run up from the "down normal limit" to the "up normal limit" at 30 fpm. During this learn run, the DP count for each floor level and each limit switch will be stored in memory.

**NOTE:** The car must run the entire hoistway without stopping.

As the elevator moves up the hoistway, navigate to the "Hoistway Tables" menu, "Disp/Mod Hoistway Table", and verify that the "DP" count is incrementing as the elevator moves up. Also as the elevator

passes each floor, the pulse count and distance for that floor should change and be stored. Verify that the floor distances are valid. The pulse count for the terminal slowdowns will also be stored. The elevator will stop when it reaches the up normal limit. Follow the instructions on the 1021/1101/1005 LCD interface by putting the car on inspection, and then the message "Hoistway Learn Complete" should be displayed.

Move the elevator on inspection until the "DZ and DL" LED's are on. Set the "INS" toggle switch on the 1064 board to the "NORMAL" position, and the elevator should level down to floor level at the top floor. If so, proceed to final adjustment.

If the car levels down but does not run, then check "Elevator Status" and "View Fault Log" on the 1021/1101/1005 LCD interface for any fault information. Correct items causing faults and perform hoistway learn again. After problem is corrected, proceed to final adjustment.

## **8.25 Automatic Run**

The elevator should now be sitting idle at the top floor. The "AUTO DOOR" switch should be set to the "OFF" position and the "IND" switch should be set to the "IND" position. If the learn procedure was successful, the elevator should be ready to make an automatic run.


The default parameter settings for the ride quality should be adequate for an initial run. From the 1021/1101/1005 LCD interface navigate to the "Set Calls and Lockouts" menu, "Setup Car Calls" and enter a car call. The elevator should run to answer the call. When the elevator levels in and stops at the floor, the doors will remain closed.

The acceleration and deceleration of the car should be smooth and stepless regardless of the distance of the run. If the elevator does not function as described above, then problem should be analyzed before proceeding.

## **8.26 Fine Tune the Ride Quality**

In order to fine tune the ride quality, refer to Figure 8.2 which describes what part of the S-curve that the different parameters effect. In general, higher numbers in the given parameters, cause quicker and more abrupt changes from one mode to the next during a run. All of the S-curve parameters have a minimum and maximum value. The control will not allow you to enter values that are not valid.

After adjusting the S-curve parameters for the desired ride, proceed to the next step.

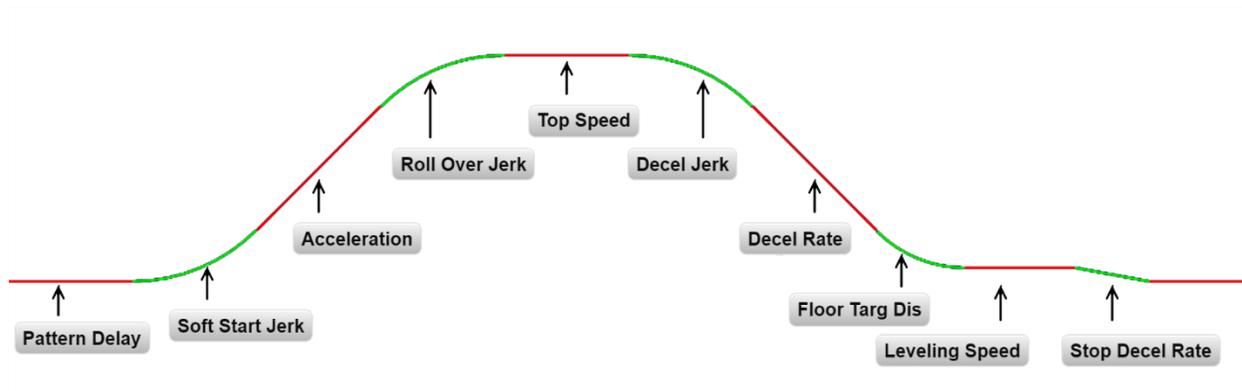**Figure 8.2: S-Curve Parameters**

## 8.27 Adjust the Stop

When at floor level the "UL, DL, & DZ" input LED's should be on. If the elevator continually tries to seek floor level by leveling up and down, try the following steps to correct the problem:

Increase the response of the drive by increasing the value of A1 RESPONSE in the HPV 900/600 drive, and retesting the car.

Reduce the leveling and re-leveling velocity parameters from the 1021/1101/1005 LCD interface "Adjustable Variables" menu, "Car Motion", "Leveling Speed" and "Relevel Speed". If the car still oscillates, adjust the "floor level zone" on the selector. The "floor level zone" is increased by moving the "UL" and "DL" sensors closer together.

If the car stops hard on the brake, then make the following adjustments. From the 1021/1101/1005 LCD interface navigate to the "Adjustable Variables" menu, "Car Motion", and adjust both "Brake Drop Del" (brake drop delay) and "Soft Stop Time". These variables should be adjusted so that zero speed is observed at the end of the run prior to the brake setting. The controller should hold the car at zero speed for the duration of the "Soft Stop Time" which should continue while the brake is setting and for a short time after the brake sets. The soft stop time MUST be set to at least 0.5 seconds LONGER than the "Brake Drop Del".

The "Soft Stop Time" setting in the 1021/1101/1005 LCD interface should be compared with the setting in the 1066 LCD interface "Adj Var" menu, "SoftStop". The setting of "SoftStop" in the 1066 LCD interface should be greater than the "Soft Stop Time" setting in the 1021/1101/1005 LCD interface.

If the car spots when approaching the floor, the cause is usually due to the car not tracking (the drive response is set too low) or the speed profile into the floor is too aggressive. First try to increase the response of the drive by increasing the value of parameter A1 RESPONSE in the drive.

If the car still spots, from the 1021/1101/1005 LCD interface, navigate to the "Adjustable Variables" menu, "Car Motion" and increase the value of "Floor Targ Dis" (floor targeting distance). The default value for the floor targeting distance is 12 inches.

Increase it by steps of 2 or 3 and continue retesting until the parameter is adjusted to 18. If no change is noticed, start again from 12 and decrease the value. The deceleration rate can also be reduced to help remove the spotting. Proceed with adjusting the start once the proper stop is achieved.

## 8.28 Adjust the Start

To provide a proper start, from the 1021/1101/1005 LCD interface, navigate to the "Adjustable Variables" menu, "Car Motion" and adjust "Brake Pick Del" (brake pick delay), "Pattern Delay", and "Soft Start Jerk". Initially, set the brake pick delay to 0 and increase the pattern delay by 0.1 seconds until the controller picks the brake completely before the motor starts to move. If roll back occurs, then reduce the pattern delay until there is no roll back. Sometimes, the timing works out better if the brake pick delay is set to 0.1 second. If load weighing is used, pre-torquing can be used to provide a smoother start. See **Section 8.37, Adjust the Motor Pre-torque.**

Increase the soft start jerk rate in order to provide a quicker transition from the start to constant acceleration. Keep in mind that the larger the soft start number, the quicker the start. The ride should now be acceptable.

## 8.29 Verify Top Speed

To fine tune high speed, make high speed runs while monitoring the SPEED FEEDBACK on the HPV drive display. The display should read contract speed, and it should match the speed displayed on the 1021/1101/1005 LCD interface, "Elevator Status" menu, "Dmd" and "Vel". This speed should also match the speed displayed on the 1066 LCD interface, "Car Spd" menu. If all of these values are the same (+/- 2 fpm), then proceed to the next step. If the speed is not correct increase or decrease drive parameter A1 CONTRACT MTR SPD until the AC drive display reads contract speed, If A1 CONTRACT MTR SPD is changed, then go to the 1021/1101/1005 LCD interface, "Adjustable Variables" menu, "Car Motion" and change the value of "Encoder RPM" to match the drive. When the speed displayed is correct, proceed to the next step.

### 8.30 Adjust Safety Processor Board Speed Clamps

The 1066 Safety Processor Board monitors the speed of the elevator at the terminal landings independently from the main CPU. When the "UT, DT, UTS, and DTS" limit switches are activated, the 1066 board calculates the velocity of the elevator and compares that velocity with a stored value of speed clamp. If the velocity when the switch activates is greater than the speed clamp value, then the 1066 board will generate a fault that stops the elevator.

To set the speed clamps, make a one floor run to the top floor.

From the 1066 LCD interface, navigate to the "Lim Vel" menu, and view the recorded velocities displayed for the "UT, DT, UTS & DTS" slowdown limits. "UTS & DTS" are used on car with reduced stroke buffers or with a top speed greater than 200 fpm. The velocity value is shown from the "Lim Vel" menu on the 1066 LCD interface.

The velocity value shown on the display for the "UT or DT" limit is the value after the car activates the limit then counts an adjustable number of counts set from the 1066 LCD interface, "Adj Var" menu, "UT Count" or "DT Count". These count values can be adjusted to provide adequate distance, following the limit switch activation, to allow the elevator to begin its normal decel pattern. The default "UT Count" and "DT Count" values are normally adequate. However, these values may need to be field adjusted to allow enough distance for the car to begin its normal decel pattern. If the "UT Count" and "DT Count" values are modified, the limit velocities must be re-checked.

Run the car again to the top repeatedly from 2 floors, then 3 floors, etc., until top speed is reached. From the 1066 LCD interface "Lim Vel" menu, record the limit velocities displayed each time the car stops at the top floor.

Make the same runs to the bottom floor starting from 1 floor, then 2 floors, then 3 floors, etc., until top speed is reached. From the 1066 LCD interface "Lim Vel" menu, record the limit velocities displayed each time the car stops at the bottom floor.

Take the highest speed value recorded in the runs above and add 20 fpm to that value to use as the clamp speed values for the respective limit switches. Enter these clamp speed values into the 1066 LCD interface "Adj Var" menu, "UT Vel", "DT Vel", "UTS Vel", "DTS Vel" respectively.

### 8.31 Adjust Digital Slowdown Speed Clamps

Having just made several runs into the top and bottom landings, the main CPU has also recorded the car's velocity when the slowdown limits were activated. If the car has been powered down prior to this step, several runs must be made to the terminal landings to allow the main CPU to record the limit velocity values.

From the 1021/1101/1005 LCD interface, navigate to the "Elevator Setup" menu, "Set DT/UT Slowdown Clamp" and view the speed displayed for "Clamp Speed". Add 20 fpm to this "Clamp Speed" value and enter it into the "DT/UT Limit"

The number of slowdown limits depends on the speed of the car as show in the table below: Adjust speed clamps for each slowdown limits used as determined by the elevator’s contract speed.

**Table 8.1: Slowdown Clamps**

Car Speed	Number of Slowdown Limits	Clamp Number	Limit Used
<= 250 fpm	1	2	UT, DT
300-500 fpm	2	3	UT1, DT1
600-700 fpm	3	4	UT2, DT2
800 + fpm	4	5	UT3, DT3

### 8.32 Verify Inspection Velocity Clamp On Safety Processor Board

Place the car on inspection operation. From the 1066 LCD interface, navigate to the "Adj Var" menu, "Ins Vel" and set the speed clamp velocity to 25 fpm. From the 1021/1101/1005 LCD interface, navigate to the "Adjustable Variables" menu, "Car Motion" and set the "Inspect Speed" to 50 fpm. Run the car in either direction and verify that the car shuts down when the speed rises above 25 fpm.

From the 1066 LCD interface, navigate to the "Adj Var" menu, "Ins Vel" and set the speed clamp to 140 fpm. From the 1021/1101/1005 LCD interface, navigate to the "Adjustable Variables" menu, "Car Motion" and set the "Inspect Speed" to the desired value.

### 8.33 Analog Load Weigher Setup

If the job uses an analog load weigher purchased from G.A.L., complete the following procedure.

**NOTE:** It is recommended using two people, one moving the weights and one in the machine room to set up the load weigher.

Mount the load weigher as described by the manufacturer. The load weigher control box will also contain a board supplied by G.A.L. that connects to the controller serial CAN bus and reads in the analog output from the load weighing device. Wire the load weigher and G.A.L. board according to the controller schematics.

Calibrate the load weighing device hardware according to the manufacturer’s instructions. Following proper installation of the load weighing device, and proceed to **Section 8.34, Empty Car Setup.**

### 8.34 Empty Car Setup

Verify that the load weighing device is communicating to the main CPU by performing the following steps. From the 1021/1101/1005 LCD interface, navigate to the "Diagnostics" menu, "Car Comm Status", "Car to LW Board" and verify that "On-line = 1". If "On-line = 0" then verify wiring and installation of load weighing device.

From the 1021/1101/1005 LCD interface, navigate to the "Elevator Setup" menu, "Load Weigher Setup", "Setup Load Weigher" and follow the instructions on the display as you go through the procedure.

It is okay to exit the setup screen to place a call and then return to it while the setup is being performed.

Run the car to the bottom floor and press Enter on the 1021/1101/1005 LCD interface when prompted to do so to start the automatic setup sequence.

If the car is at the bottom floor and the doors are not closed (the doors will not close automatically from turning off the auto-door switch) then place a car call to run the car up one floor then back again. The doors will close when the call is placed.

When the automatic sequence is activated, the car will run to each floor and measure the empty load value. The 1021/1101/1005 LCD interface will indicate when the sequence is finished.

### 8.35 Full Car Setup

**NOTE:** The empty car setup must be successfully completed to run the full load setup.

Once the empty car setup is complete, run to the loading floor and set the "AUTO DOOR" switch to the "ON" position to allow weights to be loaded on the car. With the car fully loaded, test the "AUTO DOOR" switch to the "OFF" position and run the car to the bottom floor. Again if the doors are not closed, make a one floor run to force the doors to close.

With the car at the bottom floor, follow the instructions on the 1021/1101/1005 LCD interface to start the full load setup sequence. The car will automatically run to each floor and measure the full load value. When the full load measurement is complete, the car can be run to the loading floor and the weights removed.

After the weights are removed, cycle the doors to complete the procedure. From the 1021/1101/1005 LCD interface, navigate to the "Elevator Setup" menu, "Load Weigher Setup", "View/Modify LW Setup" and verify the load weigher status, "LW Device Stat: ON OK". If the status is "ON OK", then the load weigher should be accurately measuring the car load in real time. The percent load will be displayed, "Load: \_%".

The percent load values for different service options can now be set. From the 1021/1101/1005 LCD interface, navigate to the "Adjustable Variables" menu, "Service Options", and set the following variables:

- "Load Bypass"
- "Load Antinuisance"
- "Load Dispatch"
- "Load Overload"

**NOTE:** Setting the values of the variables above to 0% will disable that particular option.

### **8.36 Load Weighing Calibration Sequence**

The load weigher is automatically calibrated once each week. If an error is detected during this calibration sequence, the load weigher and the pre-torque feature (if used) is disabled.

A load weighing calibration sequence can be manually activated by performing the following procedure. From the 1021/1101/1005 LCD interface, navigate to the "Elevator Setup" menu, "Load Weigher Setup", "Load Weigher Calibration" and follow the instructions on the display.

### **8.37 Adjust the Motor Pre-torque**

**NOTE:** The motor pre-torque uses the load value obtained from the analog load weigher and will work only if the load weigher is installed and successfully setup.

On the HPV-900 PM drive under User Switches C1 parameter, set Pre-Torque source to serial. Run the empty car to a middle floor. From the 1021/1101/1005 LCD user interface, navigate to the "Adjustable Variables" menu, "Car Motion" and adjust the following parameters:

- "Balanced Load = 40" (typically car is 40% counterbalanced, but verify counterbalance percentage for each specific job)
- "Torque Amount = 10"
- "Pattern Delay = 2.5"
- "Brake Pick Del = 0.1"

The long pattern delay will allow an exaggerated amount of roll back in order for the pre-torquing to be set accurately. Make a one floor run down and observe the roll back when the brake picks at the start of the run. Increase the "Torque Amount" variable and continue to monitor the roll back while performing

one floor runs in the down direction. As the "Torque Amount" is increased, the roll back should be minimized until the car will hold zero speed for the entire "Pattern Delay" time. A typical value for the "Torque Amount" is 40%. If the value is too large, the car will roll forward during the "Pattern Delay" time.

**Note:** The pattern delay must be at least 0.15 seconds (150 milliseconds). Setting the torque amount to 0.00 will disable the pre-torque feature. Also if the load weighing calibration sequence detects a load weighing error, the pre-torque feature is also automatically disabled.

### 8.38 Verify the Doors Are Safe

The elevator should now be adjusted. Verify that all door locks, gate switches, and safety circuits are operational. Set the "INS" switch to the "NORM" position and set the "AUTO DOOR" switch to the "ON" position. The elevator should level into the floor and open the doors. If the doors do not open, check the door operator wiring and cam adjustment. If the doors do open, the elevator is now on independent service.

### 8.39 Fine Tune the Ride Quality

Ride the elevator and evaluate the ride quality. Fine tune ride quality by navigating to the "Adjustable Variables" menu, "Car Motion" and adjusting the variables shown in Figure 4.2. Keep in mind that if acceleration or deceleration values are changed, the speed clamps for the safety processor board and the S-curve board may need to be re-adjusted.

To fine tune the floor level accuracy, determine if the controller is set to stop when "UL" and "DL" signals turn on, or if controller is set to stop off of the position count. From the 1021/1101/1005 LCD interface, navigate to the "Adjustable Variables" menu, "Car Motion" and view the "Stop On Pos Cnt" variable. If "Stop On Pos Cnt= 0" then controller is set to stop when the "UL and "DL" signals turn on. If "Stop On Pos Cnt = 1" then controller is set to stop on a combination of the floor level magnet and the position count.

With "Stop On Pos Cnt = 0", the floor levels should be set by adjusting the floor level magnet at each floor. For proper operation, the floor magnets should be set to exactly floor level. After the floor levels are set properly, perform another hoistway learn procedure.

With "Stop On Pos Cnt = 1", the floor levels are set by using both the floor magnet and the position count. For proper operation with this setting, the floor magnet should be set to exactly floor level. The final stop can then be fine-tuned by performing the following adjustments.

From the 1021/1101/1005 LCD interface, navigate to the "Hoistway Tables" menu, "DZ & LZ Offset, Sel Cnt" and adjust "Dn Lev Dist" and "Up Lev Dist". The units for these variables are in "pulse counts". With "Stop On Pos Cnt =1" the car will continue to move for the "Dn Lev Dist" or "Up Lev Dist" after "UL and DL" turn on. Use the "Dn Lev Dist" and the "Up Lev Dist" parameters to make level changes at all floors.

To make level changes at individual floors, perform the following adjustments. From the 1021/1101/1005 LCD interface, navigate to the "Hoistway Tables" menu, "FL and FL Offset Count", and

the offset count can be adjusted. These variables introduce an offset (+/-) to the stored floor count that was determined in the hoistway learn procedure.

**NOTE:** The number of pulse counts per inch can be viewed from the 1021/1101/1005 LCD interface, "Hoistway Tables", "DZ & LZ Offset, Sel Cnt", "Pulses /Inch".

**NOTE:** Regardless if "Stop On Pos Cnt=0" or if "Stop On Pos Cnt =1", the floor magnet must be set properly at floor level. If too large of values are entered into "Dn Lev Dist", "Up Lev Dist", or "Offset", the car will drive past the floor level magnet and re-level.

Check all signal devices for proper operation and remove all temporary jumpers. The adjustment should now be complete.

# Section 9 - Troubleshooting

## 9.1 General Information

The GALaxy controller is equipped with a number of features that aid in troubleshooting any problems that may occur. The physical layout of the controller provides ready access to all I/O in order to make voltage measurements. All inputs have LED's that monitor the state of the input. The controller is equipped with the 1021/1101/1005 LCD interface for the Main CPU and the 1066 LCD interface for the Safety Processor Board. **Section 10** describes the use of the 1021/1101/1005 LCD interface, and **Section 13** describes the use of the 1066 LCD interface. In this section the basic points of troubleshooting will be detailed.

## 9.2 Microprocessor CPU


The CPU is very reliable and normally trouble free. With power turned on, the "axy" in GALaxy on the 1021/1101/1005 LCD interface should be blinking at one second intervals to indicate that the CPU is running. If it is not blinking, then check voltage at the 5V terminal with respect to the 0V terminal on the 1064 board. This voltage should read 5VDC. If not, then check the input and output voltage of the DC power supply. If the "axy" is not blinking and 5VDC is present at the 5V terminal with respect to the 0V terminal, then contact the factory.

All job parameters that are field adjustable are stored in a non-volatile SRAM chip on the GALX-1036 memory (older) board, or GALX-1100AN (newer) CPU board. If the field adjustable parameters return to the default settings when the main power is turned off, check that the J1 (Pin Devices) jumper on the 1036 board is set to 28 pin and the J2 (VDROP) jumper on the 1036 board is on. Both jumpers are located on the lower right hand corner of the 1036 board, the GALX-1100 CPU board does not have this option.

## 9.3 Input/Output Boards

The two main sections of all the I/O boards are the low voltage and the high voltage sections. The low voltage section consists of all the digital interfacing necessary for the CPU to communicate with the field components. The high voltage section consists of the field components (buttons, switches, lights, relays and sensors) and their associated input and output signals. The standard voltage for all I/O is 120VAC. However, if necessary, the I/O boards can accept a voltage range from 24V to 120V AC and 24V DC. The GALX-1064AN **main board** only accepts 120V AC. **See Figure 9.0.**

**Figure 9.0 - High Voltage & Low Voltage**

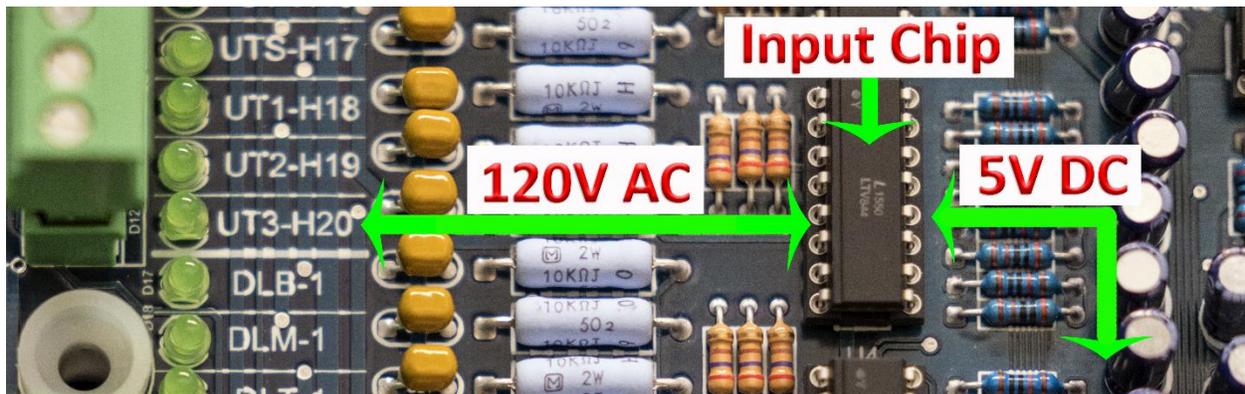

It is very important that the wiring schematics are reviewed in order to determine the voltages for which the controller was designed before applying power. The majority of problems that may arise with the control system are due to faulty inputs or outputs on the high voltage side of the system. For example, having a limit switch not feeding or an acknowledgment light out. The GALaxy control system is designed to enable the technician to check both the high voltage section and the low voltage section to correct the problem. The high voltage section is checked with a digital voltmeter or with the individual LEDs that are associated with each input. Depending on the particular input or output, the voltage measured at the terminal will either be “high” or “low” with respect to its reference point. For example, to determine whether or not the up terminal slowdown limit switch was feeding, the voltage should be measured at terminal “UT” with respect to “GND”. Another means by which to determine whether the switch is feeding is to view the “UT” input LED. If the LED is on, the switch is feeding. If the LED is off, the switch is open.

The previous example determines whether or not the field component is functioning properly. However, to determine if the signal is actually being communicated to the CPU the signal must be checked on the low voltage section of the board. The low voltage section is checked from the 1021/1101/1005 LCD interface. Using the previous example, from the 1021/1101/1005 LCD interface, navigate to the "Inputs and Outputs" menu, "Car Inputs and Outputs" and scroll through the I/O list until the "UT" input is located. The LCD will display "UT=1" if the "UT" switch is feeding and "UT=0" if the switch is open.

A second example will show how to determine if an output is working properly. With the car at the first floor and the controller designed for 120VAC discrete position indicators, the “P1” output should be on. The voltage measured at terminal “P1” with respect to “GND”, should read 120VAC. If the voltage reads less than 50VAC, the voltage supplied to the output device must be checked. The schematic, in this case, would show the “P1” voltage is supplied at the “PIC” terminal. A voltmeter would be used to measure the voltage between “PIC” and “GND”. If that voltage is at the terminal but the indicator is not on. The 1021/1101/1005 LCD interface could be used to view if the CPU is turning the “P1” output on. From the 1021/1101/1005 LCD interface, navigate to the "Inputs and Outputs" menu, "Car Inputs and Outputs" and scroll through the I/O list until the “P1” is located. The display will show “P1=1” which indicates that the CPU is sending a signal to turn on the “P1” output. For this example, since the CPU

is turning on the output, and the correct voltage is at the output common but not at the output terminal, it would indicate that the output solid-state relay for "P1" is defective and should be replaced.

All of the I/O's are optically isolated between the high voltage section and the low voltage section. The input optoisolators and the output solid-state relays are socketed IC's that are labeled on the silk screen of the various I/O boards with a "U" number (for example U45). If it is determined through the previous troubleshooting procedures that the input signal is present at the terminal, but is not being communicated to the CPU, the input optoisolator may be defective and can be replaced in the field. If it is determined that the CPU is communicating the output signal to the solid-state relay, but the voltage does not go high at the terminal, the solid-state relay may be defective and can be replaced in the field. Any time IC's are replaced, the power should be turned off and care should be taken in removal of the old chip and replacement of the new one.

All of the I/O and their associated IC's are listed in the wiring schematics.

The following diagram in **Figure 9.1** shows the run sequence of the controller. The timing of BRK changes with the adjustment variable DON Start Control. When set to 0 the BRK output turns on before DON and when set to 1 BRK turns on after DON. The BRK timing typical works best with the adjustable variable set to 0 for VVVF and 1 for DC SCR.

**Figure 9.1 Run Sequence**


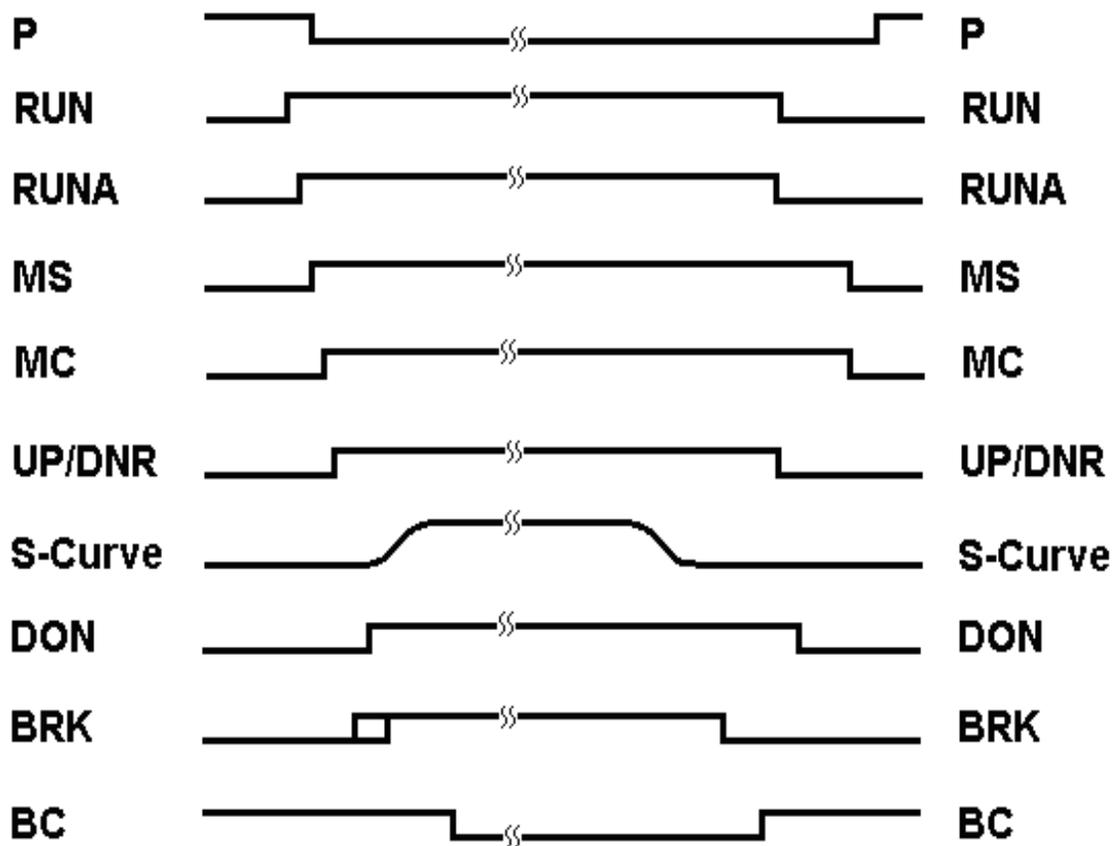


Figure 9.2 – Safety Processor Board

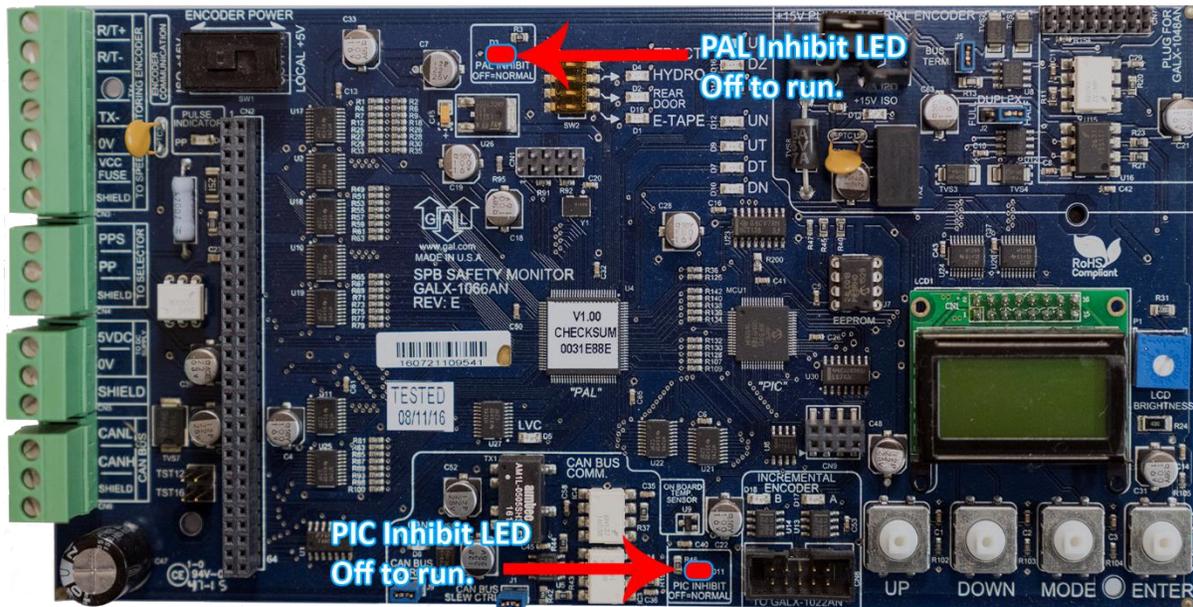

The Safety Processor Board has two fault LED's, one on the top center and one on the bottom center of the board. The top center LED is for PAL inhibit and the bottom center one is for PIC inhibit (See Figure 9.2).

**Important: When either LED is on, this board will prevent the car from running.**

The Safety Processor Board performs the following functions (See “Safety Processor Functions” in Section 13):

- Verifies the speed of the car when terminal limits are activated
- Verifies that the doors are closed and safe to run
- Verifies all inspection operations
- Verifies that the car velocity is not greater than 150 fpm in the door zone and with the doors open.

While the Safety Processor Board cannot turn on any run control signals, it can turn off the follow signals from the main CPU: RUNA, BRK, UP, DNR, UPF and DF. The SFC relay in the safety string is also controlled by the Safety Processor Board.

The Safety Processor board detects two types of faults, active faults and velocity faults. Active faults are input conditions that are considered as unsafe or an error such as the lock bypass switch place on while the car is on automatic.

Velocity faults are generated when the Safety Processor Board detects that the car speed is too high during certain conditions, such as hitting the DTS terminal limit at a speed greater than the speed setting for that limit. Both types of faults are reset after a 2 second delay, the condition is corrected and the main CPU is not commanding an up or down run.

When troubleshooting errors detected by the Safety Processor board, take the following steps:

- Check LED status. Either PAL inhibit or PIC inhibit LED on indicates an error.
- View the elevator service "Elev Serv". Anything other than Automatic or a valid inspection service is an error.
- From the 1066 LCD interface, navigate to the "Inp/Out" menu, and view all of the I/O status. See **Section 13** for a complete description of the input and output signals.
- From the 1066 LCD interface, navigate to the "Faults" menu, and view the recorded faults. The Safety Processor Board faults are recorded in ram and will be lost when power is turned off.

As mentioned earlier, RUNA is one of the signals that can be turned off by the Safety Processor Board. If a "RUNA Off" error is generated on the 1021/1101/1005 LCD interface (main CPU), it is typically caused by the Safety Processor detecting an error at the instant the run is starting. When a RUNA Off error is recorded, check the status of the Safety Processor board first.

During a fault condition when the Safety Processor drops the SFC relay, every input after the SFC terminal will lose voltage including the inputs for the normal and terminal limits. This could cause an Up or Down directional limit error on the main CPU.

Additional fault information is shown in the next section, System Faults.

## 9.4 System Faults

Faults that are detected by the main CPU can be viewed on the 1021/1101/1005 LCD interface by navigating to the "Fault Log" menu, "View Fault Log". The possible faults detected by the main CPU are listed in **Section 11, Main CPU Faults**. By pressing the "ENTER" button on the 1021/1101/1005 LCD interface when the particular fault is being displayed, the interface will display detailed information for that fault. The Detailed Faults Section (**Section 11**) describes this information. In general, when a fault occurs, the system records the state of all the items listed in the Detailed Fault and makes that information available for troubleshooting purposes.

Faults that are detected by the Safety Processor board can be viewed on the 1066 LCD interface by navigating to the "Faults" menu. The possible faults detected by the Safety Processor are listed in **Section 13, Safety Processor 1066 LCD Interface**.

## Section 10 – 1021/1101/1005 LCD Interface

### 10.1 Operating the 1021/1101/1005 LCD Interface



**UP** button is used to scroll up to the next menu item or to increment a data value.



**DOWN** button is used to scroll down to the next menu item or to decrement a data value.



**MODE** button is used to go back to the previous menu or to select a digit of a data value.



**ENTER** button is used to select the menu item or to complete the operation of changing a data value.



**Potentiometer** is used to adjust the viewing angle. It will make the display lighter or darker.

The LCD display interface board uses a 2 line by 24-character display and four buttons. This interface allows the user to adjust parameters, view critical controller information, to implement the controller setup and to view the elevator status. Upon power-up the display shows a blinking GALaxy name to indicate the controller is running as show above.

The four inputs buttons used with the LCD display are, UP, DOWN, MODE and ENTER. The UP and DOWN buttons are used to scroll up and down to each menu item. When an appropriate menu item is reached, the ENTER button is used to select the item. Some menu items, once selected, show a second menu. Again, use the UP and DOWN buttons to scroll through the menu items and the ENTER button to select a particular item. The MODE button is used to go back to the previous menu. When a menu item is an adjustable variable, select the item with the ENTER button and change the variable with the UP or DOWN button. The MODE button is used to move the cursor to the next digit. When the appropriate value is reached, used the ENTER button to complete the variable change operation and return to the current menu.

The following are descriptions of the flowcharts at the end of the chapter. The descriptions and flowcharts are separated to allow more page territory to the graphics and make them more readable.

The descriptions are in the same order as the flowcharts.

## **10.2 1021/1101/1005 LCD Interface Main Menu**

This flowchart shows all the top level menus in the system.

## **10.3 Elevator Status**

The elevator status display continuously updates to show the current status and fault information. The Up and Down keys allows access to both the status display and the velocity display. When a system fault occurs, it will be displayed on the top line of the status display while the fault exists and will remain for 60 seconds after the fault is cleared. The following status information can be displayed:

## **10.4 Elevator Service**

- Out of Service
- Automatic Service
- Independent Service
- Load Weighing By Pass
- Attendant Service
- Code Blue Service
- Fire Service Phase 2
- Emergency Power Service
- Earth Quake Service
- Fire Phase 1 Main Return
- Fire Phase 1 Alt Return
- Homing
- Reset Going Up
- Reset Going Down
- Stalled Out of Service

## **10.5 Fault Status**

- Reset Fault
- Out Of Step Fault
- Binary Input Fault
- Safety String Fault
- Door Zone Fault
- Stalled Fault
- Door Open Fault
- Door Close Fault
- Up Directional Fault
- Dn Directional Fault
- No Potential Fault
- Stop Switch Fault
- Gate or Interlock
- LC Fuse Blown Fault

- HC Fuse Blown Fault
- Drive Ready Fault
- 'P' Input Off Fault
- Car Safe Fault
- UL or DL off Fault
- Delta off Fault
- UT count Fault
- UT1 count Fault
- UT2 count Fault
- UT3 count Fault
- DT count Fault
- DT1 count Fault
- DT2 count Fault
- DT3 count Fault
- Rear Door Open Flt
- Rear Door Close Flt
- Group Comm Loss
- Car 1 Comm Loss
- Car 2 Comm Loss
- Car 3 Comm Loss
- Car 4 Comm Loss
- Car 5 Comm Loss
- Car 6 Comm Loss
- RUN I/O Failed ON
- RUN I/O Failed OFF
- RUNA I/O Failed ON
- RUNA I/O Failed OFF
- UP I/O Failed ON
- UP I/O Failed OFF
- DNR I/O Failed ON
- DNR I/O Failed OFF
- UPF I/O Failed ON

- UPF I/O Failed OFF
- DF I/O Failed ON
- DF I/O Failed OFF
- MCC I/O Failed ON
- MCC I/O Failed OFF
- MCA I/O Failed ON
- MCA I/O Failed OFF
- BRK I/O Failed ON
- BRK I/O Failed OFF
- DON I/O Failed ON
- DON I/O Failed OFF
- RUN I/O or UP Fail
- RUN I/O or DNR Fail
- Top Door Lock Fault
- Mid Door Lock Fault
- Bot Door Lock Fault
- Gate Switch Fault
- Rear Top Lock Fault
- Rear Mid Lock Fault
- Rear Bot Lock Fault
- Rear Gate Sw Fault
- 'P' Input On Fault
- Estop Fault
- Inspection Input Flt
- Gate/Lock Byp Sw Flt
- GRT1 input ON Fault
- GRT1 input OFF Fault
- GRT2 input ON Fault
- GRT2 input OFF Fault
- Gripper did not Pick
- Gripper Trip Fault

## 10.6 Elevator Status

- Reset Mode PI= 1
- Inspection Mode PI= 1
- Up Fast PI= 1
- Up Transition PI= 1
- Leveling Up PI= 1
- Down Fast PI= 1
- Down Transition PI= 1
- Leveling Down PI= 1
- Soft Start Mode PI= 1
- Constant Accel PI= 1
- Roll Over Max Vel PI= 1
- Constant Velocity PI= 1
- Roll Over Deccel PI= 1
- Constant Deccel PI= 1
- Targeting Floor PI= 1
- Emergency Slowdown PI= 1
- Safety String Open PI= 1
- Elevator Off Line PI= 1
- Elevator Parked PI= 1
- Waiting Assignment PI= 1
- Door Procedure PI= 1
- Elevator Stalled PI= 1

## 10.7 Door Status

- Elev Door Closed PI= 1
- Elev Door Opening PI= 1
- Elev Door Dwelling PI= 1
- Elev Door Open PI= 1
- Elev Door Closing PI= 1
- Elev Door Nudging PI= 1
- F1RET Door Open PI= 1

- F2CPO Door Open PI= 1
- F2CPO Door Opening PI= 1
- F2CPO Door Closed PI= 1
- F2CPO Door Closing PI= 1
- F2CPC Door Open PI= 1
- F2CPC Door Opening PI= 1
- F2CPC Door Closed PI= 1
- F2CPC Door Closing PI= 1
- F2HLD Door Open PI= 1
- F2HLD Door Opening PI= 1
- F2HLD Door Closed PI= 1
- F2HLD Door Closing PI= 1
- F2MBC Door Open PI= 1
- F2MBC Door Opening PI= 1
- F2MBC Door Closed PI= 1
- F2MBC Door Closing PI= 1

## **10.8 Rear Door Status**

- Rear Door Closed PI= 1
- Rear Door Opening PI= 1
- Rear Door Dwelling PI= 1
- Rear Door Open PI= 1
- Rear Door Closing PI= 1
- Rear Door Nudging PI= 1
- F1RET RDor Open PI= 1
- F2CPO RDor Open PI= 1
- F2CPO RDor Opening PI= 1
- F2CPO RDor Closed PI= 1
- F2CPO RDor Closing PI= 1
- F2CPC RDor Open PI= 1
- F2CPC RDor Opening PI= 1
- F2CPC RDor Closed PI= 1

- F2CPC RDor Closing PI= 1
- F2HLD RDor Open PI= 1
- F2HLD RDor Opening PI= 1
- F2HLD RDor Closed PI= 1
- F2HLD RDor Closing PI= 1
- F2MBC RDor Open PI= 1
- F2MBC RDor Opening PI= 1
- F2MBC RDor Closed PI= 1
- F2MBC RDor Closing PI= 1

## 10.9 Set Calls and Lockouts

When a car is in the group the menu system allows access to setting both hall calls and car calls. When not the group, only car calls can be set. Rear lockouts are only displayed only when the car has a rear door.

## 10.10 Car Call Test

This menu allows the mechanic to initiate a continuous test of the elevator. The test can be conducted with the "AUTO DOORS" switch set to "ON" or "OFF". By following the instructions from the menu, the "Car Call Test" can be initiated or discontinued. When performing the "Car Call Test", the car will answer all of the registered calls in one direction. When the last call has been answered, the calls will be re-initiated automatically, and the car will answer the calls in the opposite direction. This operation will continue until one of the following occurs.

1. The test is discontinued from the 1021/1101/1005 LCD interface
2. The car is taken out of automatic operation
3. A fault occurs

**NOTE:** The car will not perform the "Car Call Test" if it is on "Independent Service".

**NOTE:** When performing the "Car Call Test" with the "AUTO DOORS" switch set to "OFF", it is recommended to set the "Non-interference Time" to at least 5 seconds. From the 1021/1101/1005 LCD interface, navigate to the "Adjustable Variables" menu, "Car Timers" and set "Non Interfer T = 5".

### **10.10a CAN Encoder Comm Status Submenu**

This menu indicates if the CAN Open Encoder is on-line and communicating.

### **10.10b UPS Comm Status Submenu**

This menu indicates if the UPS System is on-line and also gives battery status.

### **10.11 Lockouts Front Car Calls**

Procedure to lock out front car calls.

### **10.12 Car/Group Inputs & Outputs**

Inputs and outputs show a "1" for ON and a "0" for OFF. A list every input and output used on the controller and the board it is located on is shown in Appendix A. The controller determines which boards are used depending on the options selected and the number of front and rear floors. All the I/Os for a given board are displayed even if a particular I/O is not used.

### **10.13 Job Statistics – Clear Job Statistics**

The Job Statistics menu shows the number car calls and the number and percent of hall calls serviced since the job was started or since the job statistics were cleared. Below is a list of all the categories maintained:

- Number of Car Calls
- Number of Up Hall Calls
- Number of Down Hall Calls
- Number of Up Hall Calls with < 15 second wait time
- Number of Up Hall Calls with < 30 second wait time
- Number of Up Hall Calls with < 45 second wait time
- Number of Up Hall Calls with < 60 second wait time
- Number of Up Hall Calls with > 60 second wait time
- Number of Down Hall Calls with < 15 second wait time
- Number of Down Hall Calls with < 30 second wait time
- Number of Down Hall Calls with < 45 second wait time
- Number of Down Hall Calls with < 60 second wait time

- Number of Down Hall Calls with > 60 second wait time
- Percent of Hall Calls with < 15 second wait time
- Percent of Hall Calls with < 30 second wait time
- Percent of Hall Calls with < 45 second wait time
- Percent of Hall Calls with < 60 second wait time
- Percent of Hall Calls with > 60 second wait time

### **10.14 Adjustable Variables**

This is the Adjustable Variables sub- menu.

### **10.15 Car Timers**

This is an example of a sub-menu in Adjustable Variables.

### **10.16 Date and Time**

It is important to set the date and time on the controller clock so that the fault log shows the correct time sequence that faults occur.

### **10.17 Diagnostics**

In this menu the car comm, group comm, and drive communications can be verified.

### **10.18 View System Status**

This is a running log of all the steps taken during operation of the elevator.

### **10.19 Group Comm Status**

The group communications status shows the number of data packets successfully transmitted and received from the group to the cars, for the “group” car, and from the car to the group for the remaining cars. The communication sequence is always initiated by the group. The group sends a data packet to the car and after the car validates the checksum of the packet, it responds with a data packet to the group. The transmit and receive counters should always be incrementing in both the car and the “group” car. If either counter does not increment, it would indicate a poor cable connection or that there is electrical noise on the communications cable. Electrical noise is usually caused by installing the communications cable in the same conduit with high voltage wires.

## **10.20 Car Comm Status**

The car communications status shows the number of data packets successfully transmitted and received from the car to devices on the car's CAN bus. These devices can be mounted in the motor room, in the car operating panel or on the car top. The second line of the car status shows the device software version number and if the device is currently on line communicating. The transmit and receive counters should always be incrementing for all devices. If the receive counter does not increment, it would indicate a poor cable connection or that there is electrical noise on the communications cable. Electrical noise is usually caused by installing the communications cable in the same conduit with high voltage wires.

## **10.21 Drive Comm Status**

The drive communications status shows the number of data packets successfully transmitted and received from the car to the drive. The second line of the drive status shows the drive's software version number and if the drive is currently on line communicating. The transmit and receive counters should always be incrementing for all devices. If the receive counter does not increment, it would indicate a poor cable connection or that there is electrical noise on the communications cable.

## **10.22 Software Utilities**

The software utilities menu allows the user to view the controller's software version or to place the controller in file transfer mode to upload or download the controller software to another version. To place the car in file transfer mode, the car must be on inspection. As shown in the above diagram, the controller is programmed to be Car # 1, having software version 6.00.31.

## **10.23 LCD Interface - SD Card Read - Write Data Submenu**

In this menu various data can be written/backed up to the SD Card and also read from the SD Card.

## **10.24 LCD Interface - Power-Up Mode**

Power-Up mode is reached by powering up the controller without an SD Card, or it can be activated from Software Utilities. In this mode you can reset the watchdog timer, update/verify software and run the controller program.

## **10.25 LCD Interface - Update - Verify Program Submenu**

This menu is used to update the GALaxy controller software.

## **10.26 Select Video Display**

This flowchart is valid when the monitor is installed on the dispatcher car. If the monitor is installed on a non-dispatcher car, then only information for that car is displayed on the monitor.

### 10.27 Display Hoistway Table

This menu is useful for checking the direction of the encoder by watching if pulse counts are counting up or down. Once the hoistway is learned, the pulse count values for each floor can be displayed. If the pulse count for each floor is zero, the hoistway has not been learned or retained in memory. The velocity displayed here is the speed of the car read from the motor encoder.

### 10.28 Auto/Inspection Learn Hoistway

This operation is used to automatically learn the hoistway on initial setup. From the LCD Interface, select the “Elevator Setup” menu, use the up or down button to select the “Learn Hoistway” item and then hit enter. Follow the directions displayed for each step. Learn Hoistway can be initiated with the car located anywhere in the hoistway but is usually quicker to run the car to the bottom first.

This operation is used to manually learn the hoistway on initial setup. From the LCD Interface, select the “Elevator Setup” menu, use the up or down button to select the “Learn Hoistway” item and then hit enter. Follow the directions displayed for each step. Learn Hoistway can be initiated with the car located anywhere in the hoistway but is usually quicker to run the car to the bottom first.

### 10.29 DZ & DZ Offset, Sel Cnt

This menu provides status information when using a CAN open encoder. It also allows the mechanic to adjust the “Dn Lev Dist” and “Up Lev Dist” parameters in order to “fine tune” the floor levels after the car is running high speed. These parameters are valid when the “Stop on Pos” adjustable variable is enabled. Refer to Sections “Fine Tune The Ride Quality” in Sections 3,4,6,7, & 8 for proper adjustment.

### 10.30 FL & FL Offset Count

This menu allows the mechanic to adjust the stored floor count for each floor level. It also allows offsets to be used to “fine tune” the floor levels after the car is running high speed. The “Floor Level Offset” is valid when the “Stop on Pos” adjustable variable is enabled. Refer to Sections “Fine Tune The Ride Quality” in Sections 3,4,6,7, & 8 for proper adjustment.

### 10.31 Reset Update Count Trig, Pulse Count Update Data

This menu is valid when the “Pos Count Upd” variable is enabled. When this variable is enabled, the DP count will be updated while the car is in motion. The “Pulse Count Update Data” menu provides detailed information in order to properly set this variable. The “Reset Update Count Trig” menu allows the mechanic to manually reset the “Update Trigger”.

## **10.32 Elevator Setup/Speed Clamps**

From this menu, the user can select to set all of the speed clamps, learn the hoistway, run an overspeed test, run a car buffer test or run a counterweight buffer test, open and close the doors on inspection and setup the load weigher.

Once the car is running on automatic, the acceleration and deceleration rates are adjusted, and several runs have been made to the top and bottom terminals at contract speed, the speed clamps can then be adjusted. Using the set speed clamp menus on the LCD interface, select the clamp to adjust and hit enter to access that particular speed clamp setting. In the above illustration, the suggested setting is shown as the “Clamp Speed” and the actual clamp setting is shown as “Ins/ Level Spd”. The enter button is used to enter and exit the edit mode. Once in the edit mode, the mode button selects the next digit to edit. The up and down buttons increment or decrement the clamp speed setting. All speed clamps are adjusted in the same manor. The speed clamps that can be adjusted are the inspection/leveling speed clamp, the Down and Up Terminal Slowdown speed clamps (DT/UT, DT1/UT1, DT2/UT2 and DT3/UT3) and the Down and Up Emergency Terminal Speed clamp (DTS/UTS).

## **10.33 Inspection Open – Close Doors**

The menu allows the user to open or close the elevator doors from the up or down LCD interface buttons while the car is on inspection.

## **10.34 Lift Brake on Inspection**

**WARNING:** Brake will lift during this test. Make sure all safety procedures are observed.

The flowchart describes the steps needed to lift the brake on inspection.

## **10.35 Load Weigher Setup**

The load weigher hardware is setup according to the manufacturer’s instructions. The controller is then setup to read the empty and full load values at every floor

## **10.36 View - Modify Load Weigher Limits**

In this menu the load limits can be modified.

## **10.37 Calibrate Load Weigher**

This is the procedure for calibrating the Loadweigher.

### **10.38 Counterweight & Buffer Test**

The car and counterweight buffer test follow the same menu operation. For specific instruction on executing a buffer test, refer to Appendix B.

### **10.39 Overspeed Test**

The overspeed test disables the velocity check for the car traveling faster than 15% over contract speed. The mechanism is disabled for one run. See Appendix B for instruction on running an overspeed test.

### **10.40 Reset Gripper Menu**

This shows the procedure for resetting a Gripper Fault


### **10.41 Fault Log**

This menu allows the user to view or clear the fault log.


The fault display shows the fault, the car position, time and date the fault occurred and the number of occurrences. Faults are displayed in the order of occurrence with the order number displayed on the top left. The largest order number signifies the last fault that has occurred. Faults are stored in a circular buffer that fits up to 50 faults. Once the buffer is full the next fault over writes the oldest fault. Refer to the system faults in the troubleshooting section of this manual for possible causes of the fault and a description of the detailed fault data.

# LCD Interface Flowcharts


## LCD Interface Main Menu

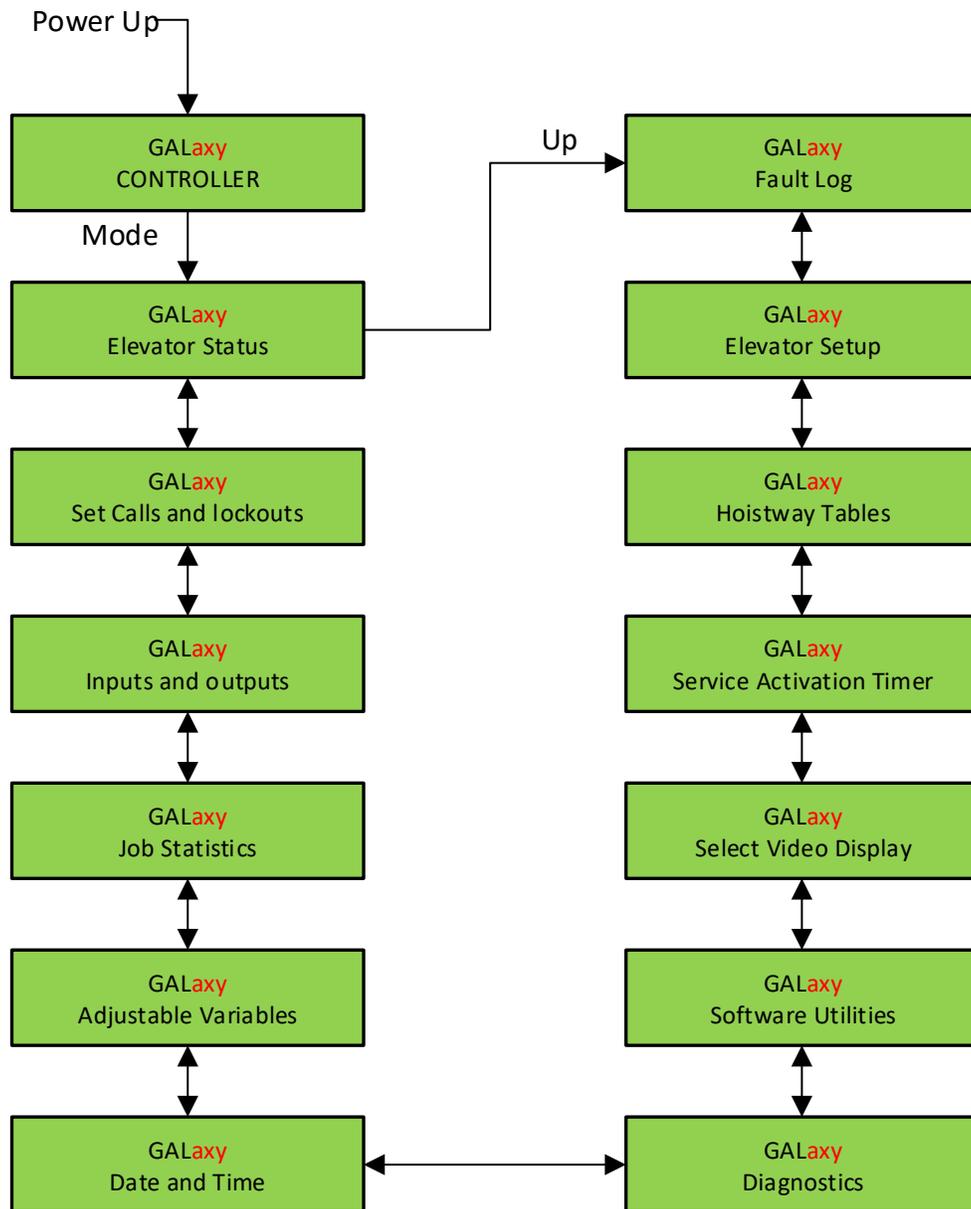

## LCD Interface Main Menu - Elevator Status

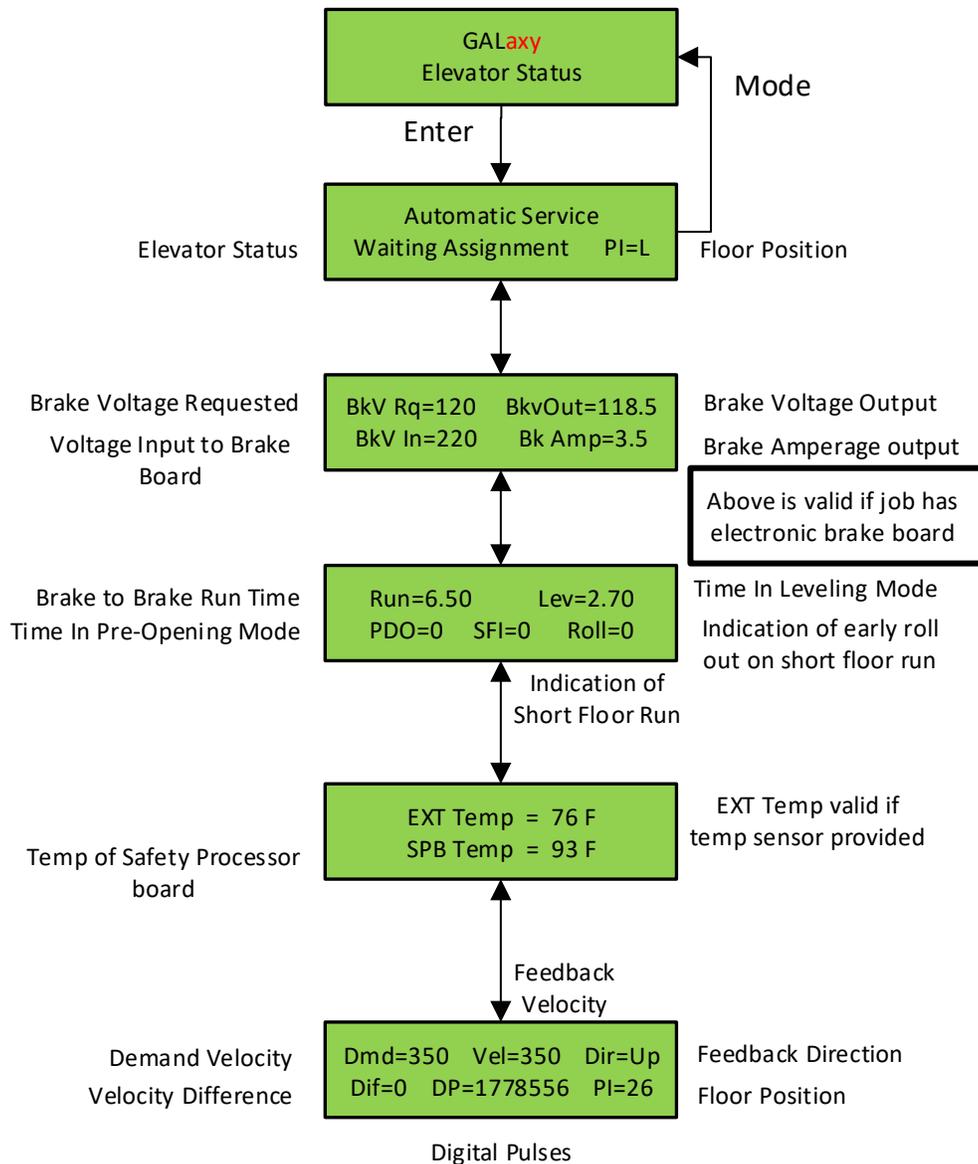


## **LCD Interface - Set Calls and Lockouts**

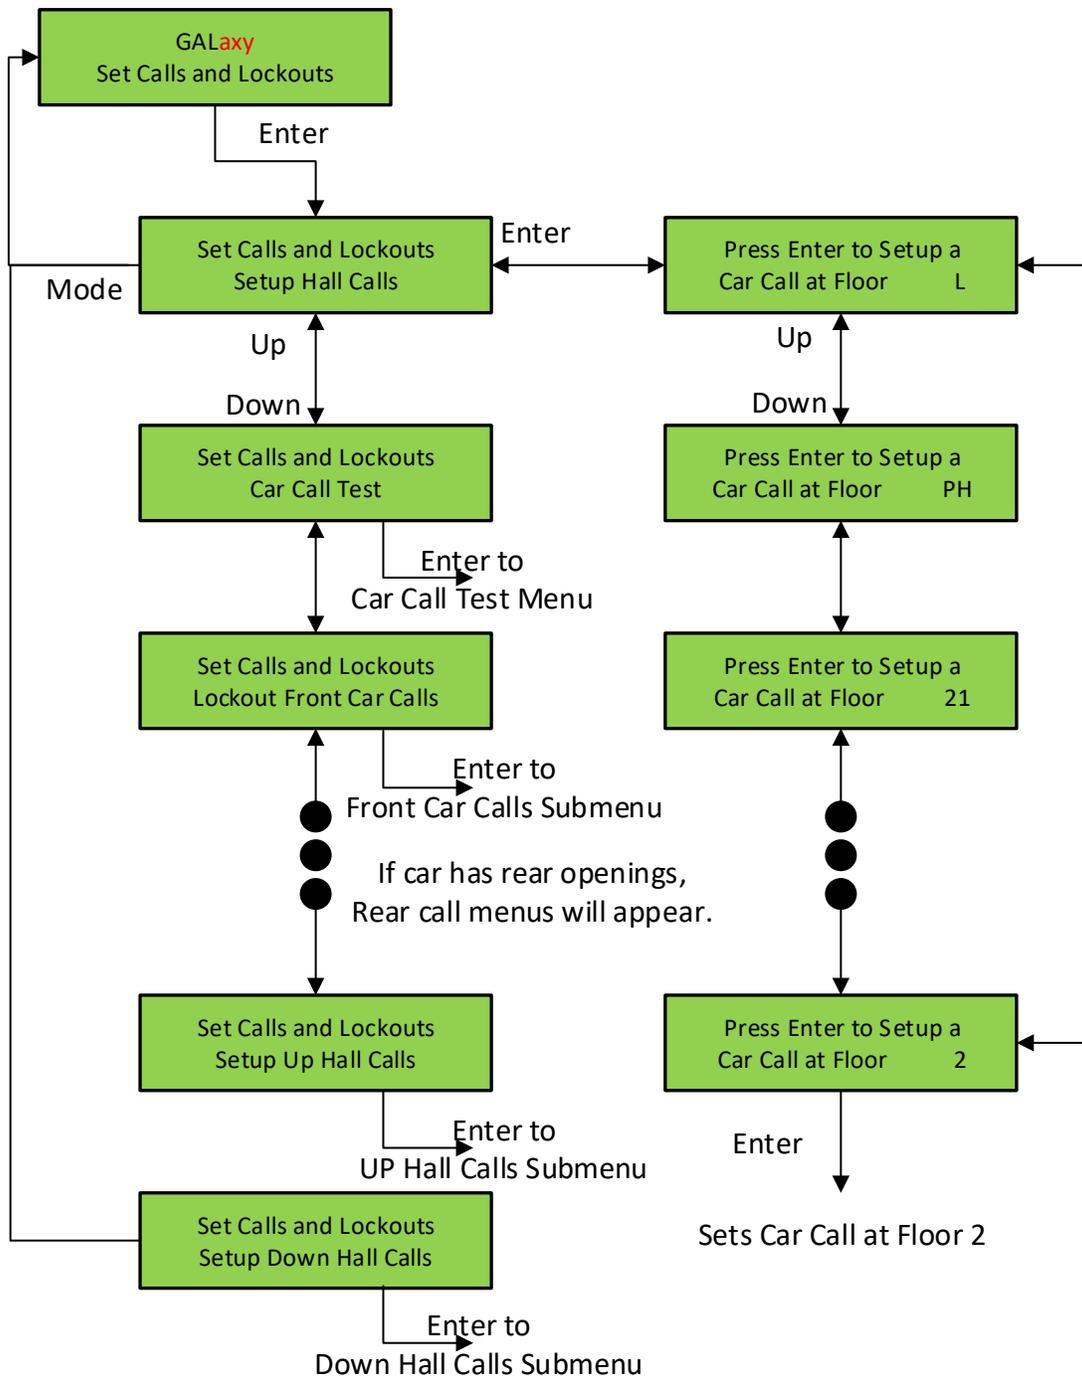


### LCD Interface - Car Call Test Submenu




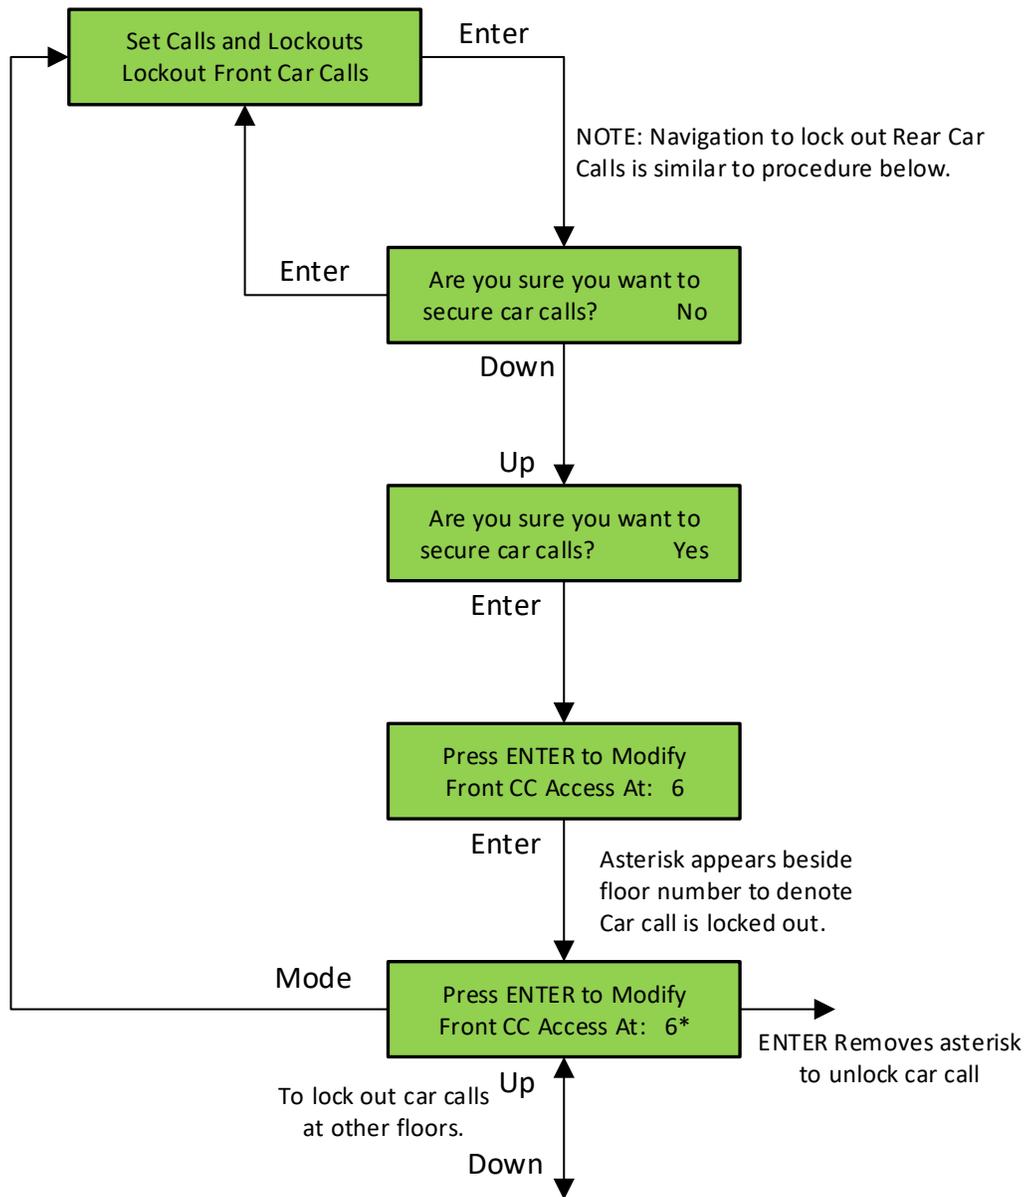


### LCD Interface Main Menu - Inputs and Outputs

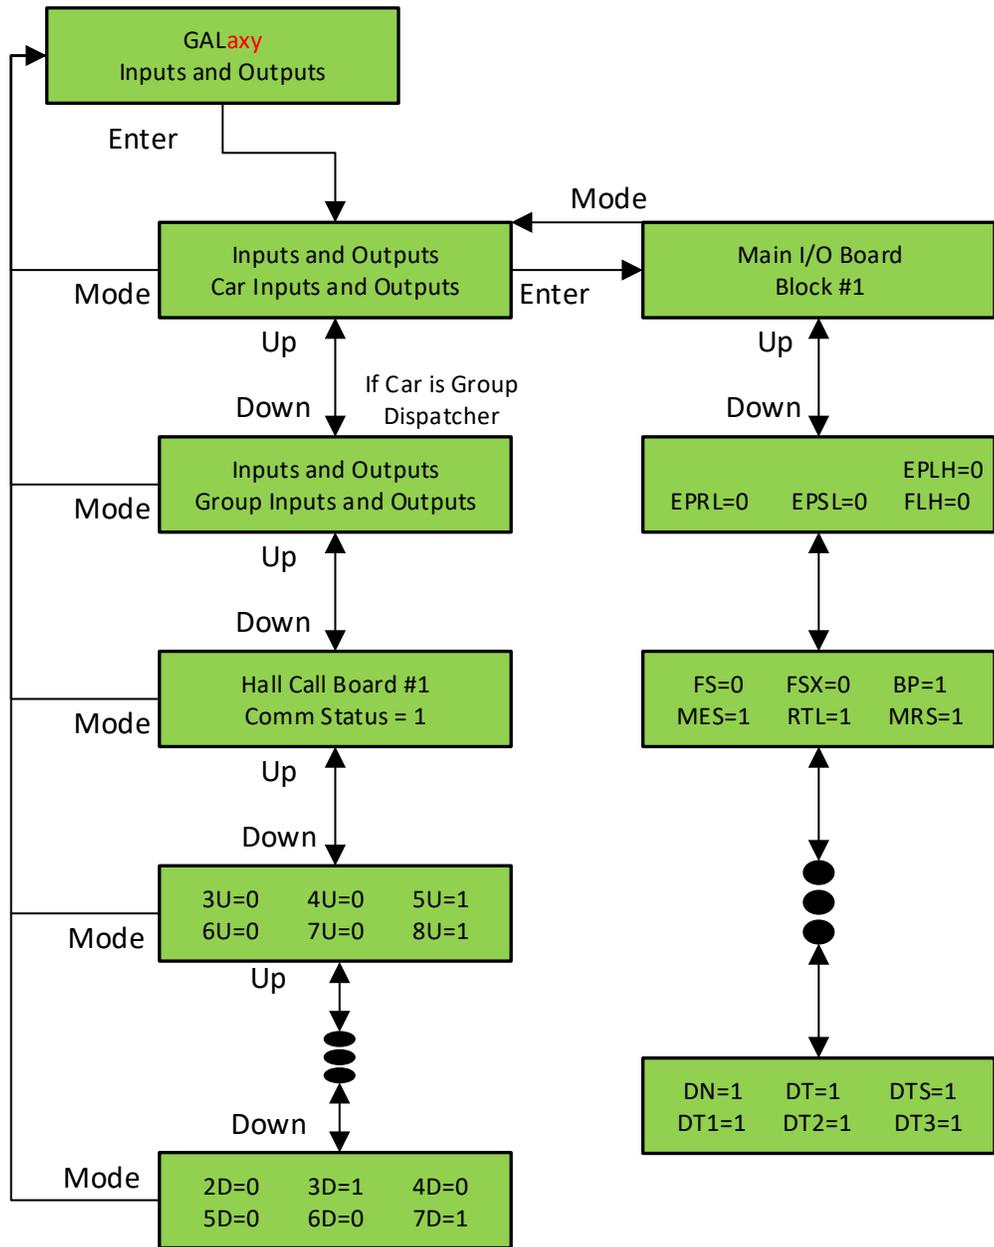


**LCD Interface Main Menu - Job Statistics**

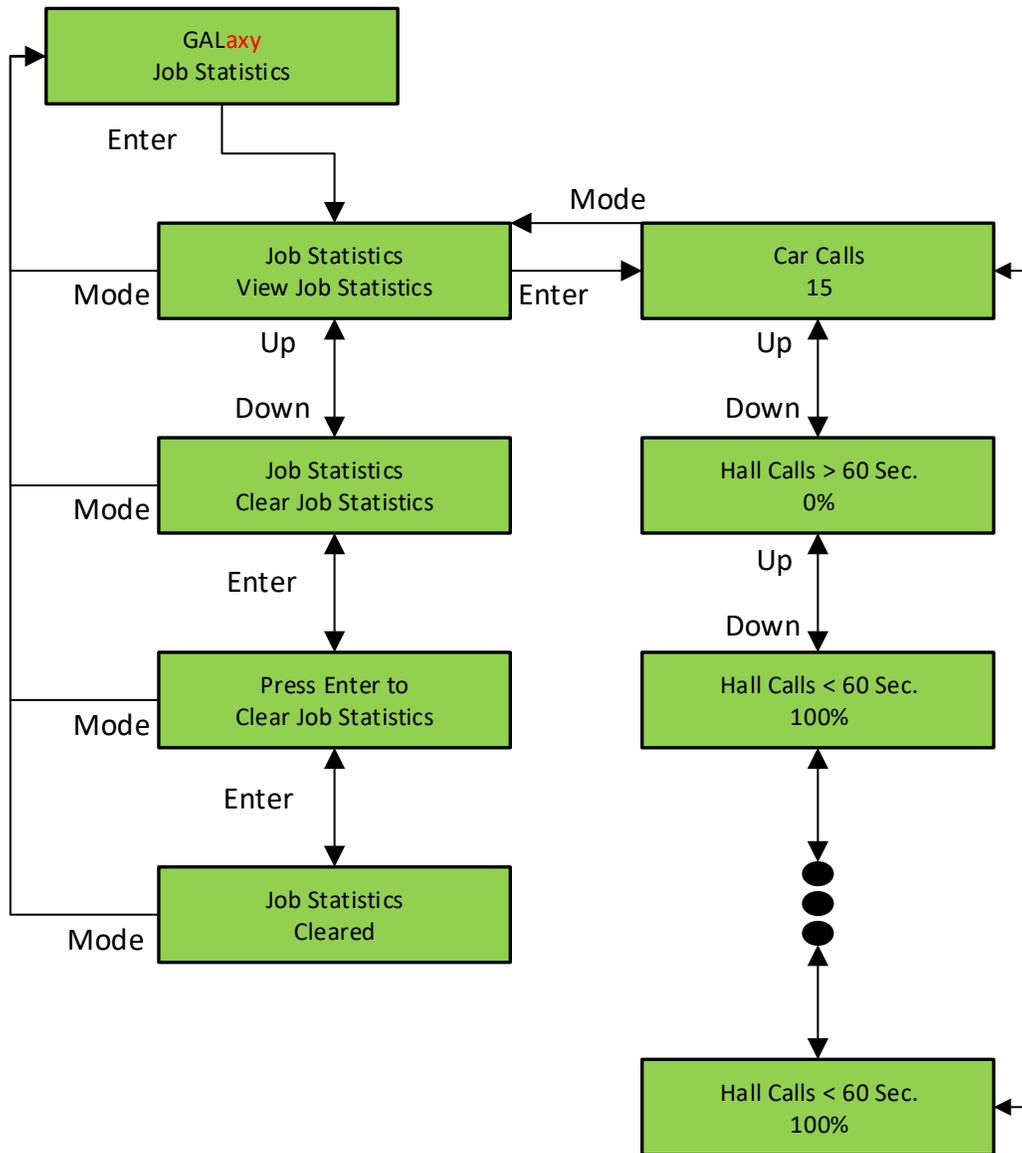


**LCD Interface Main Menu - Adjustable Variables**

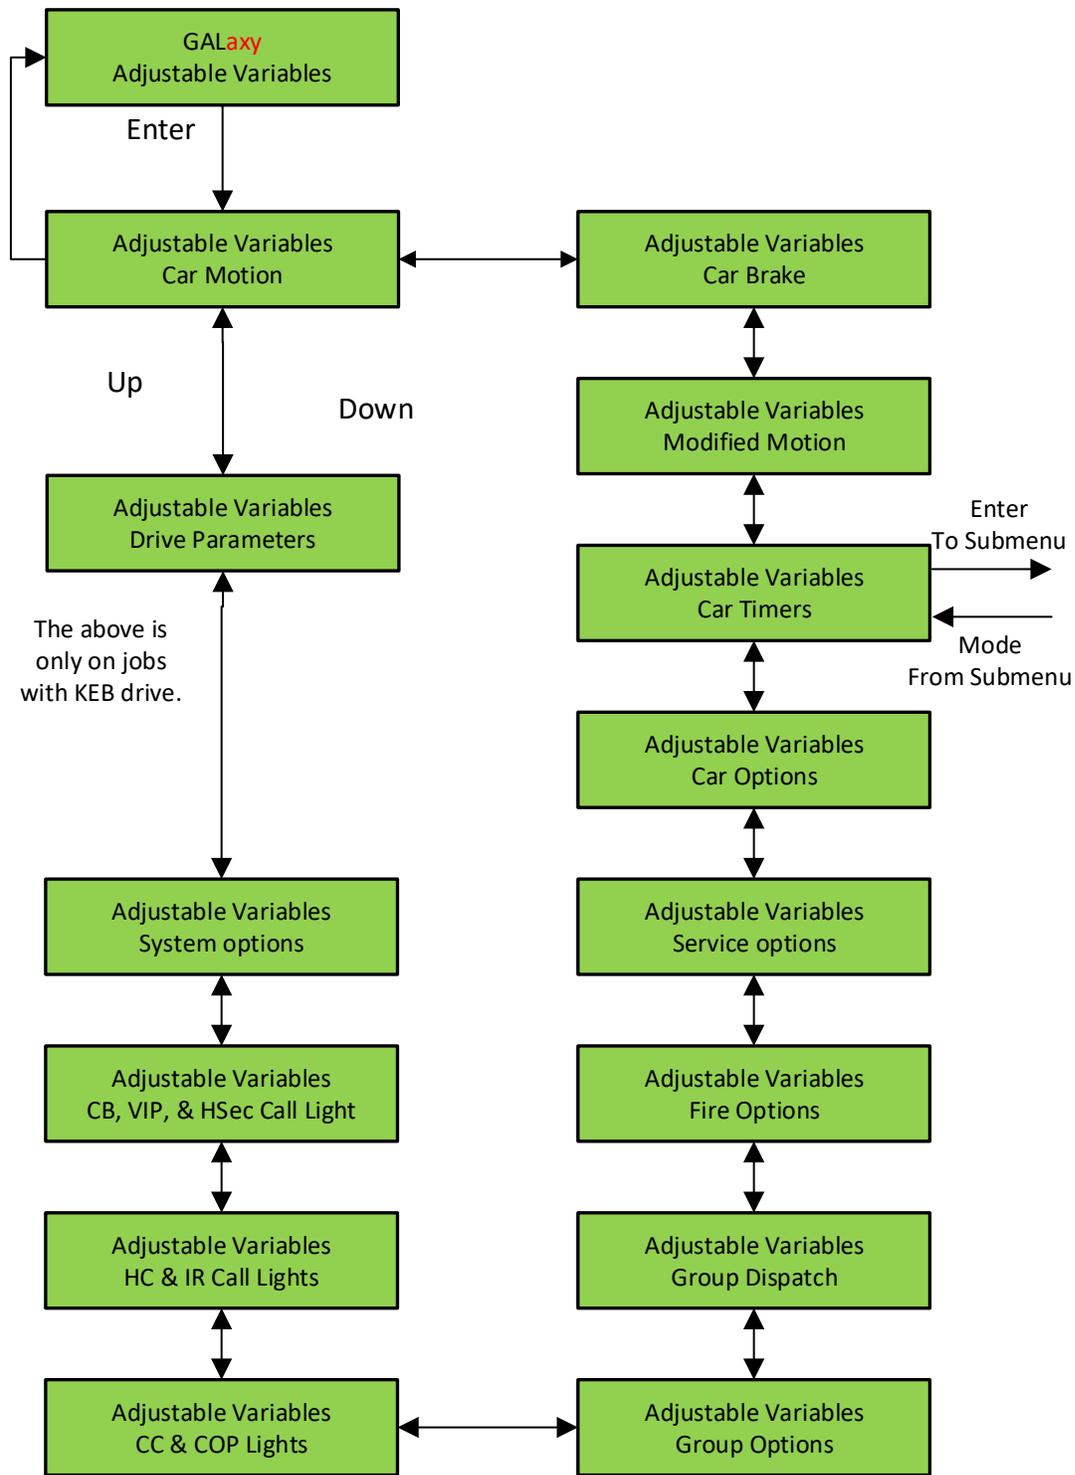


**LCD Interface Main Menu - Car Timers Submenu**

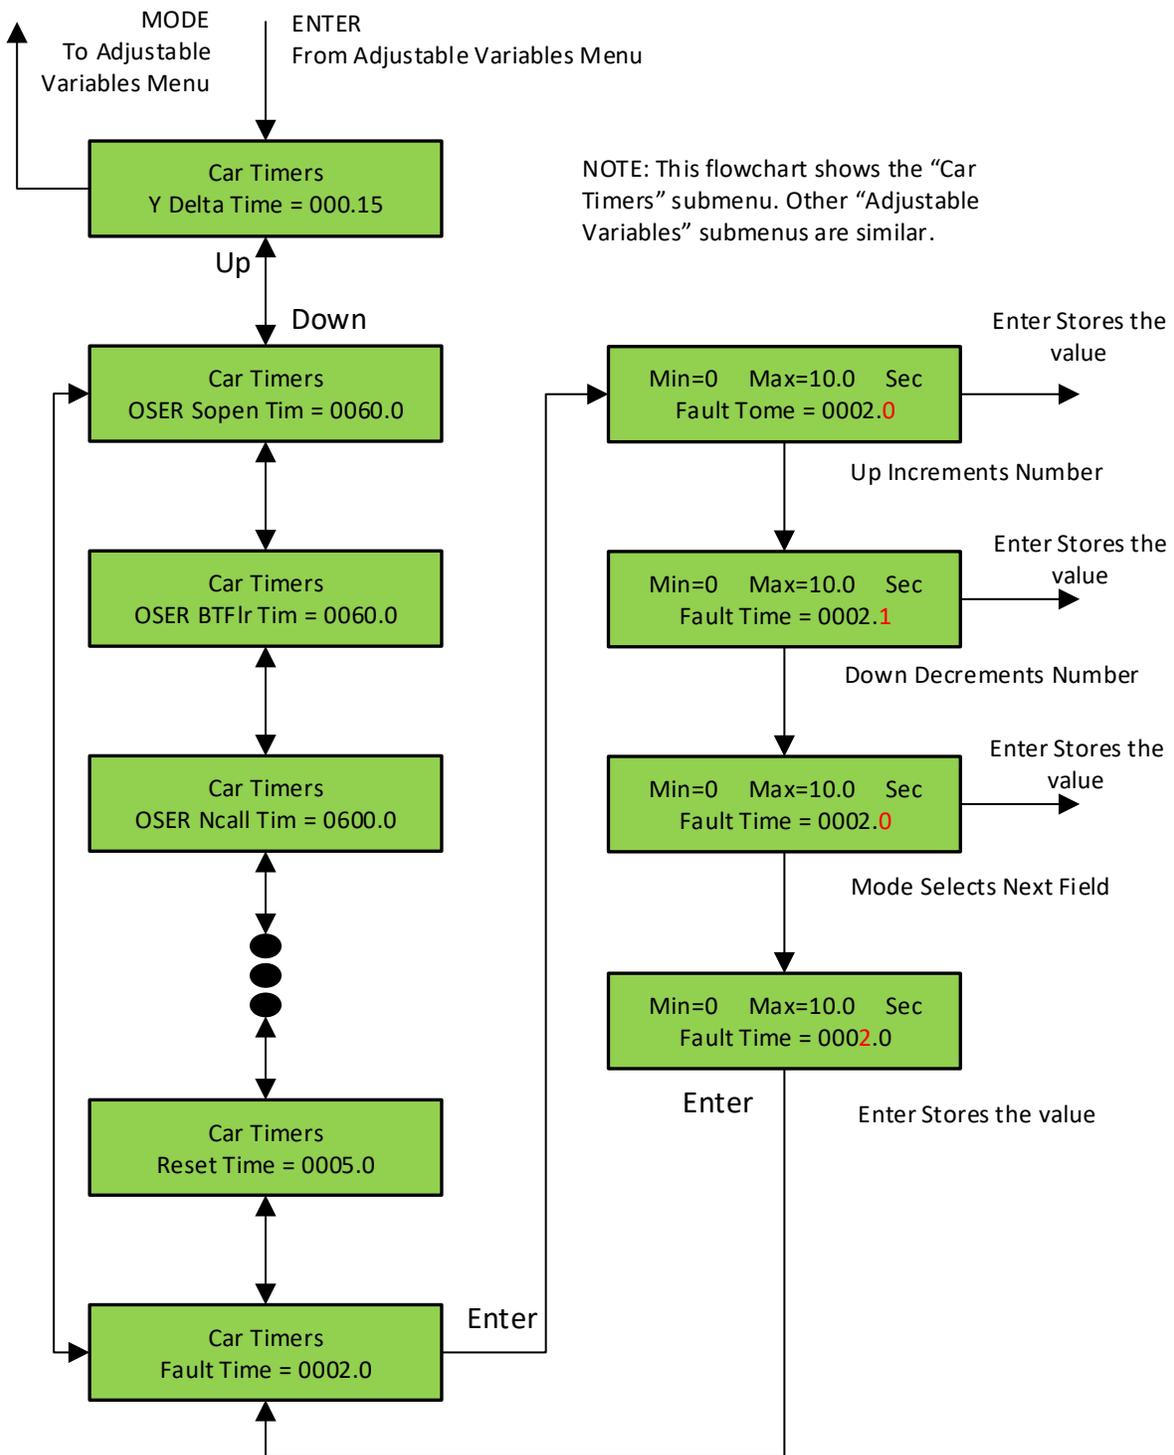

LCD Interface Main Menu - Date and Time

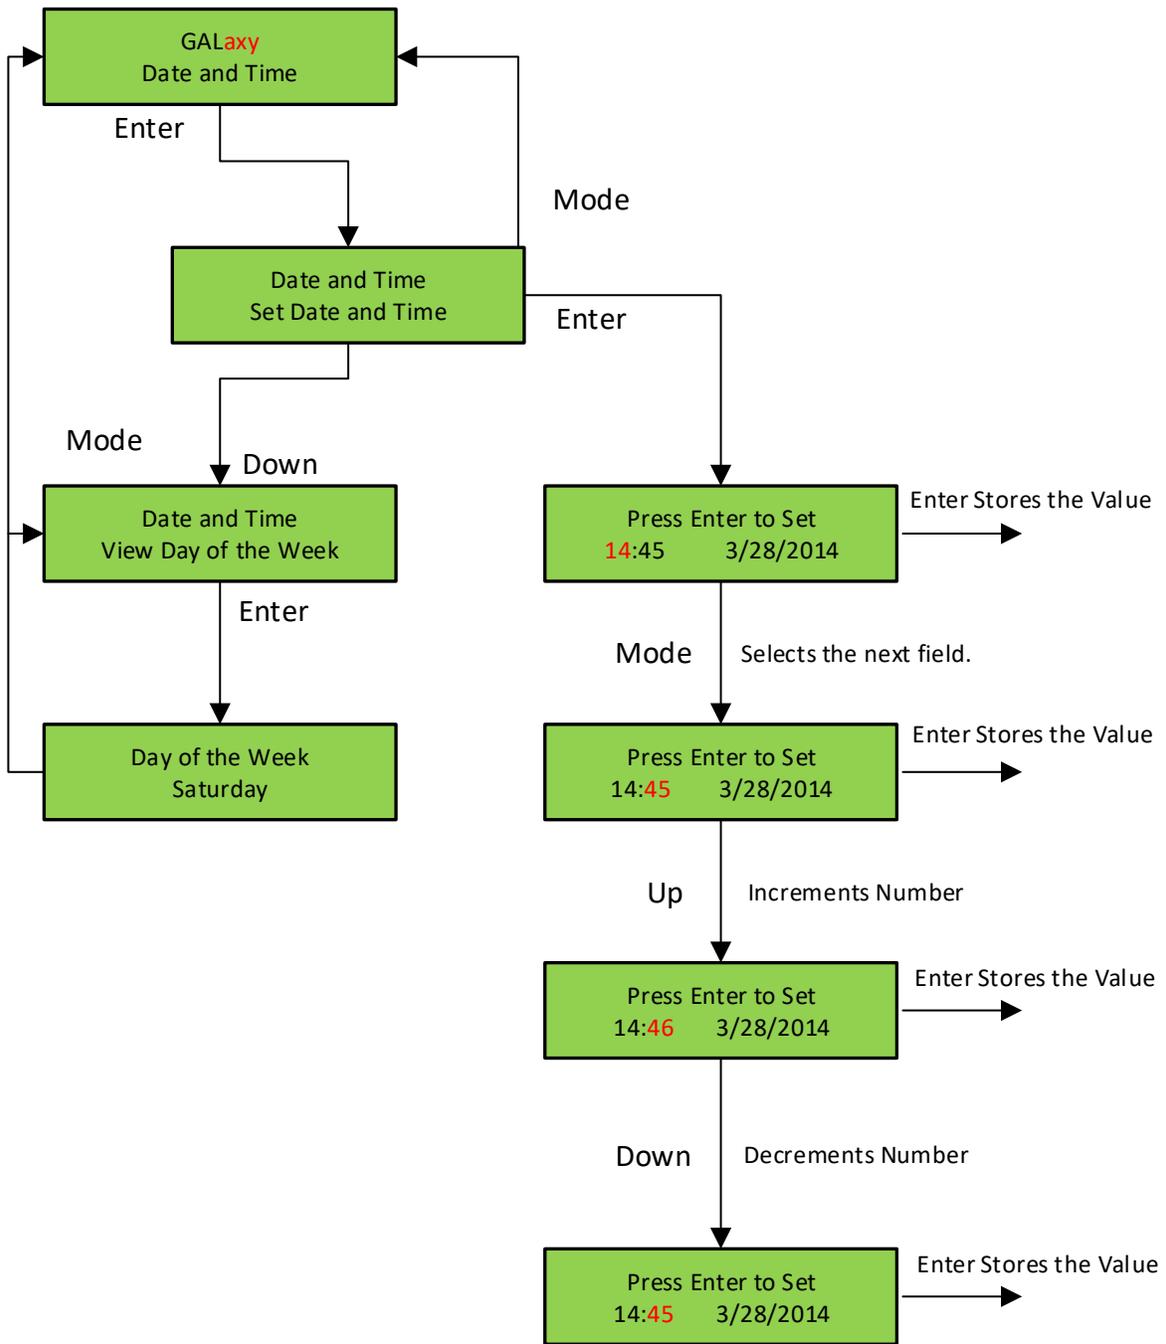


**LCD Interface Main Menu - Diagnostics**

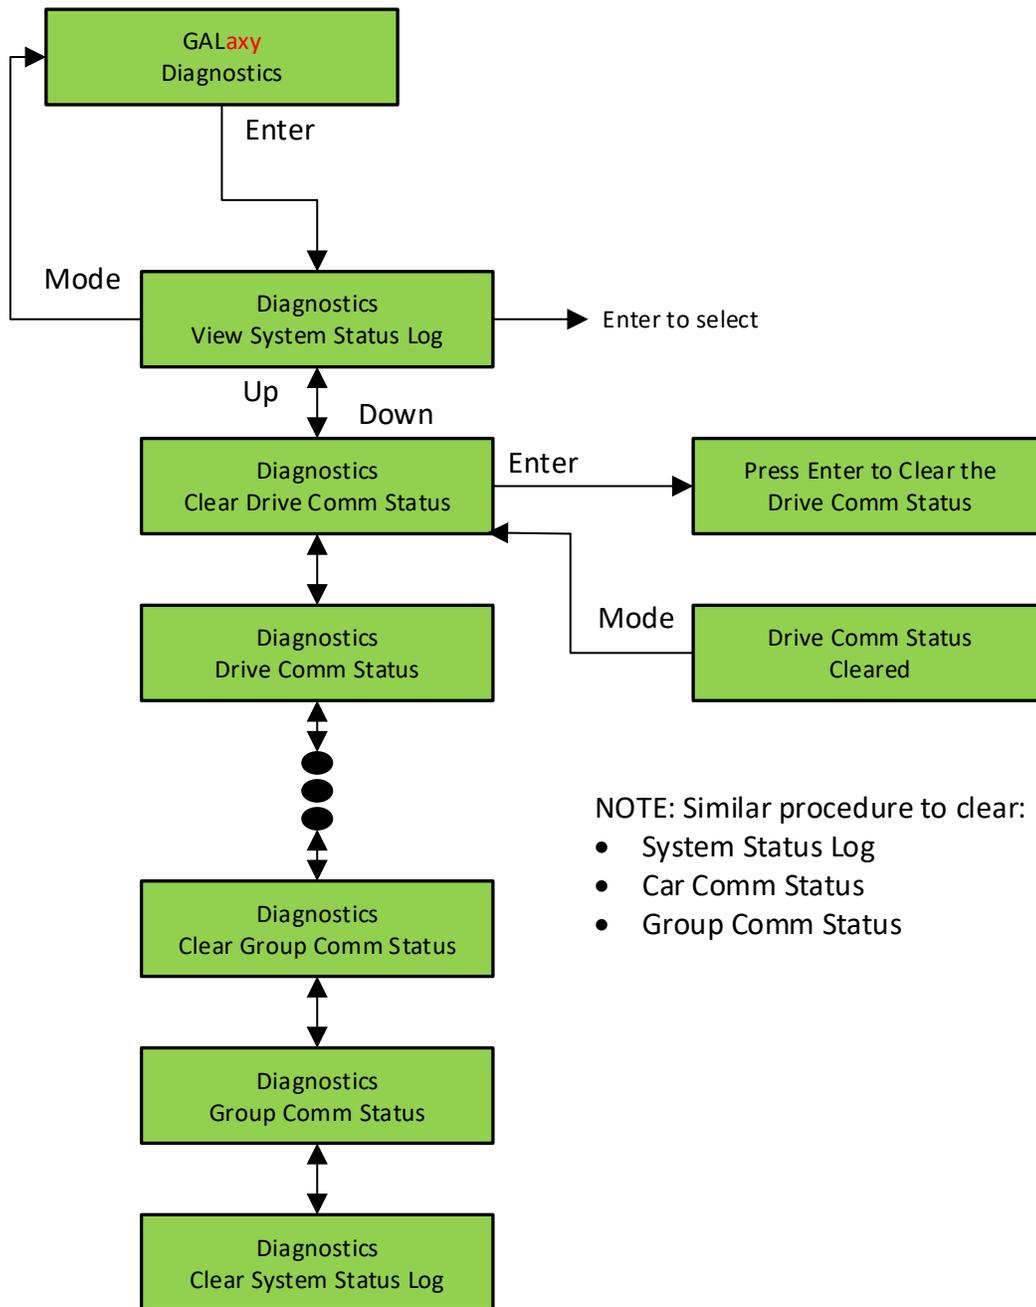


NOTE: Similar procedure to clear:

- System Status Log
- Car Comm Status
- Group Comm Status


### LCD Interface - View System Status Log Submenu

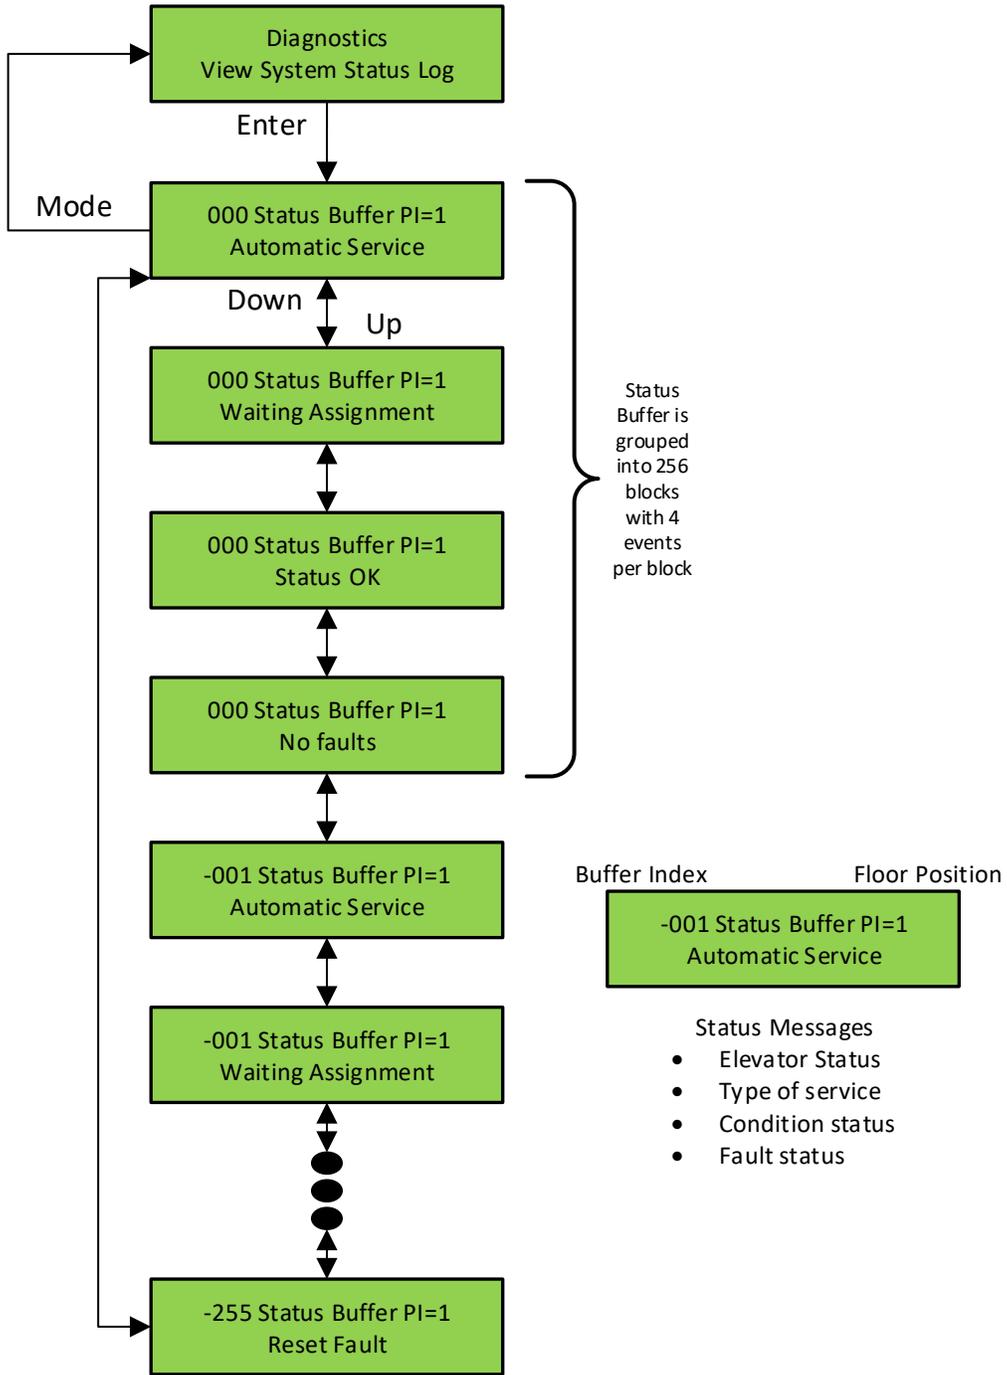

**LCD Interface - Group Comm Status Submenu**

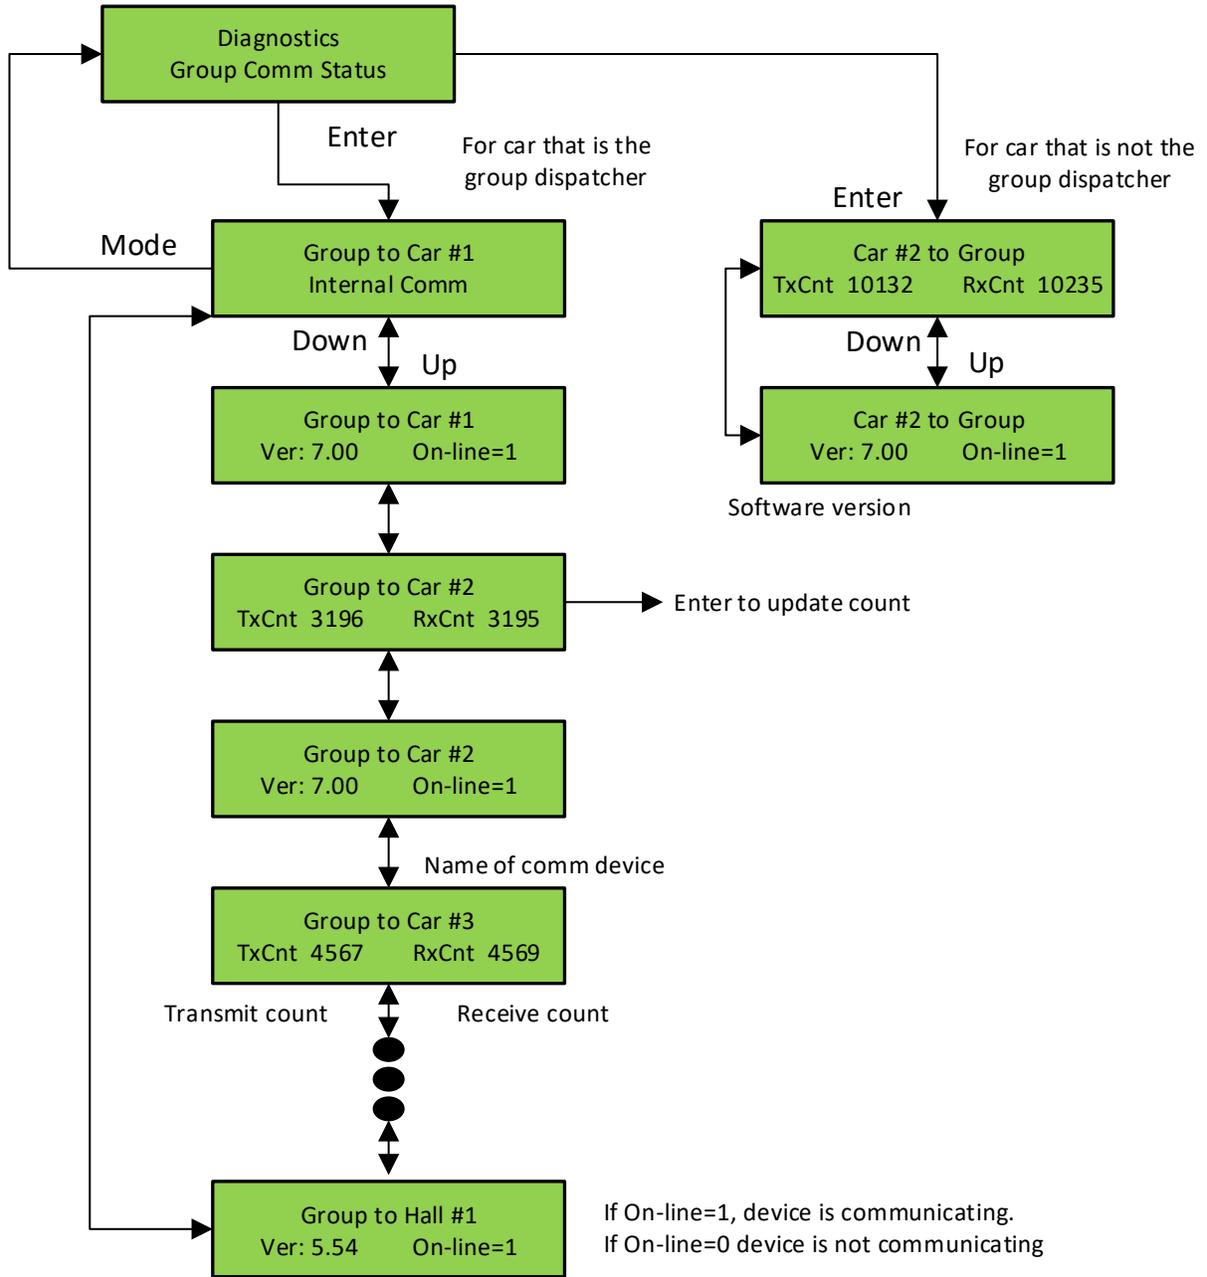


### LCD Interface – Car Comm Status Submenu

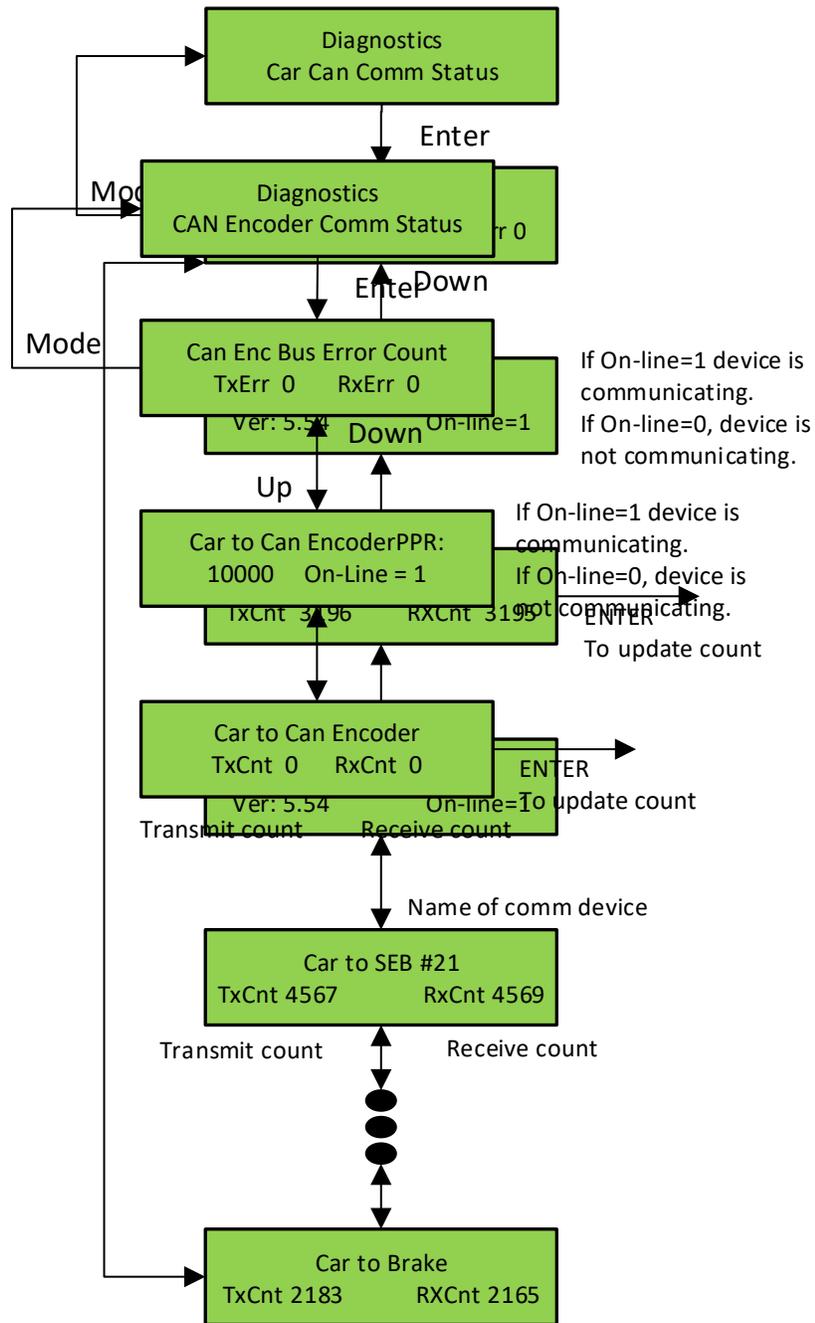


**LCD Interface CAN Encoder Comm Status**


## LCD Interface – UPS Comm Status Submenu

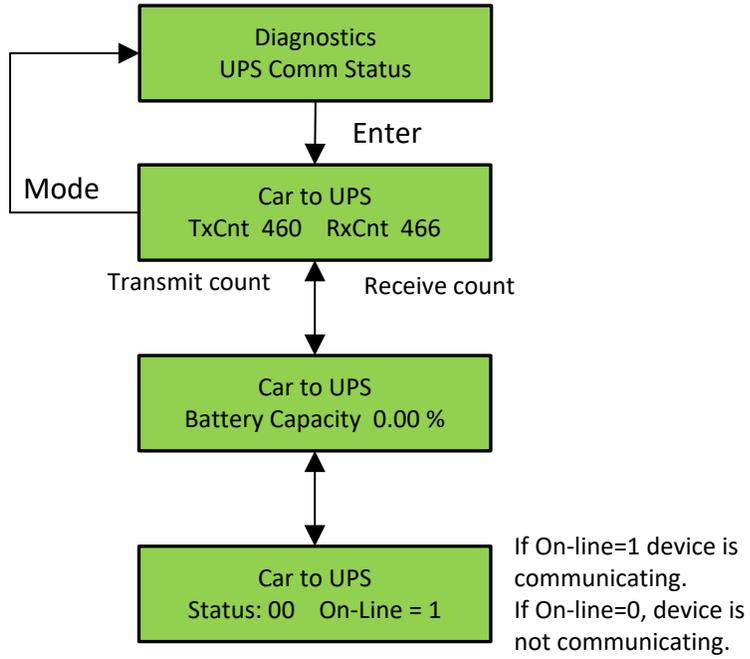

# LCD Interface - Drive Comm Status Submenu

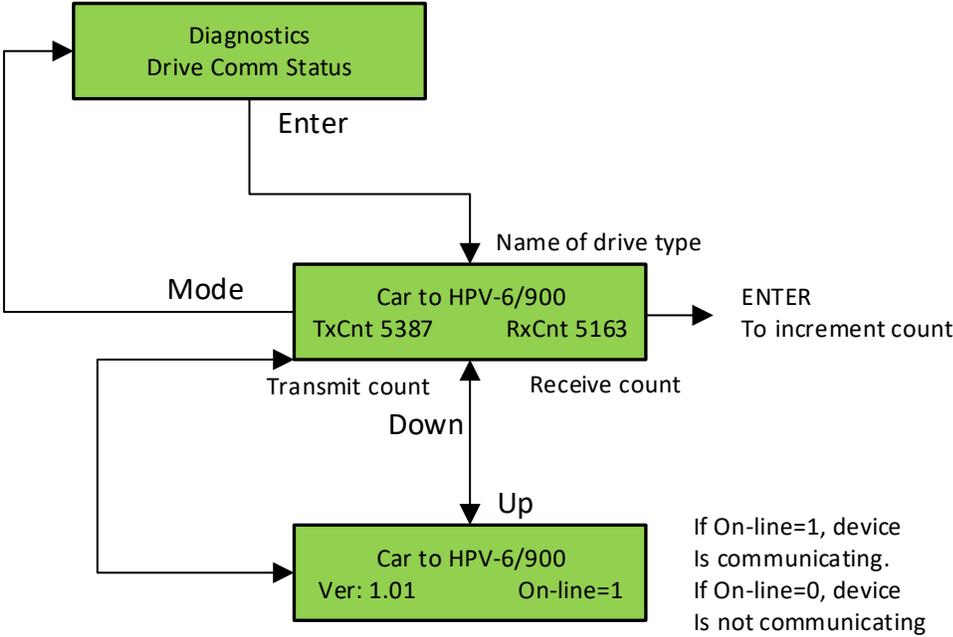


# LCD Interface Main Menu - Software Utilities

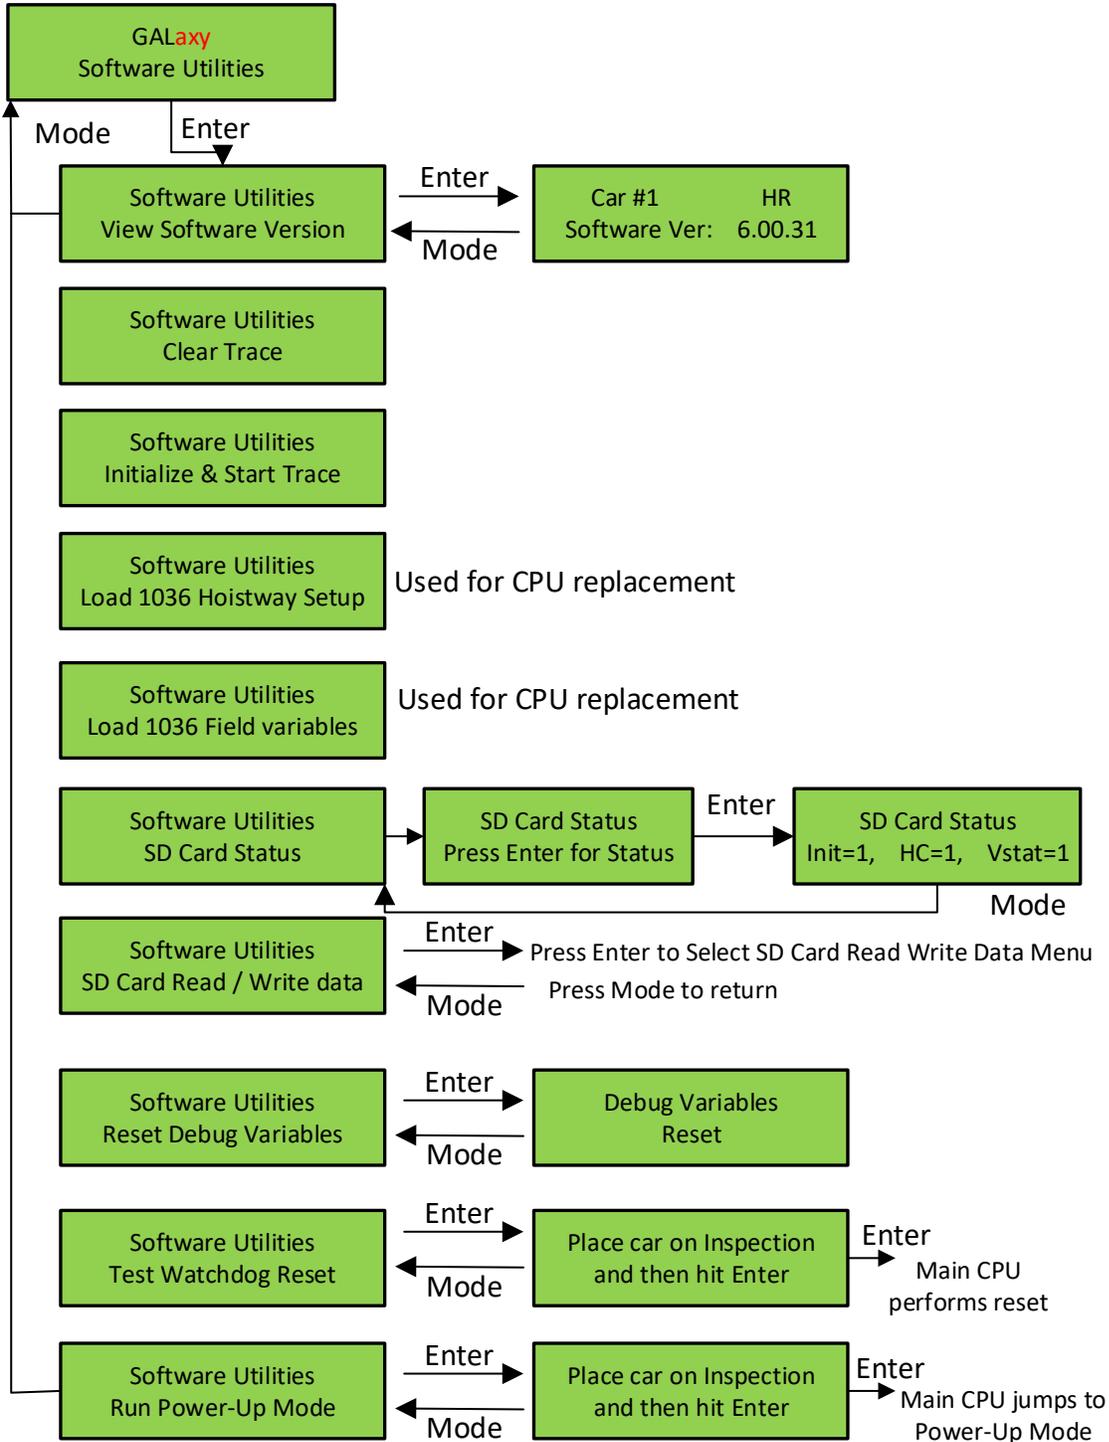


Section 10 – 1021/1101/1005 LCD

# LCD Interface - SD Card Read - Write Data Submenu

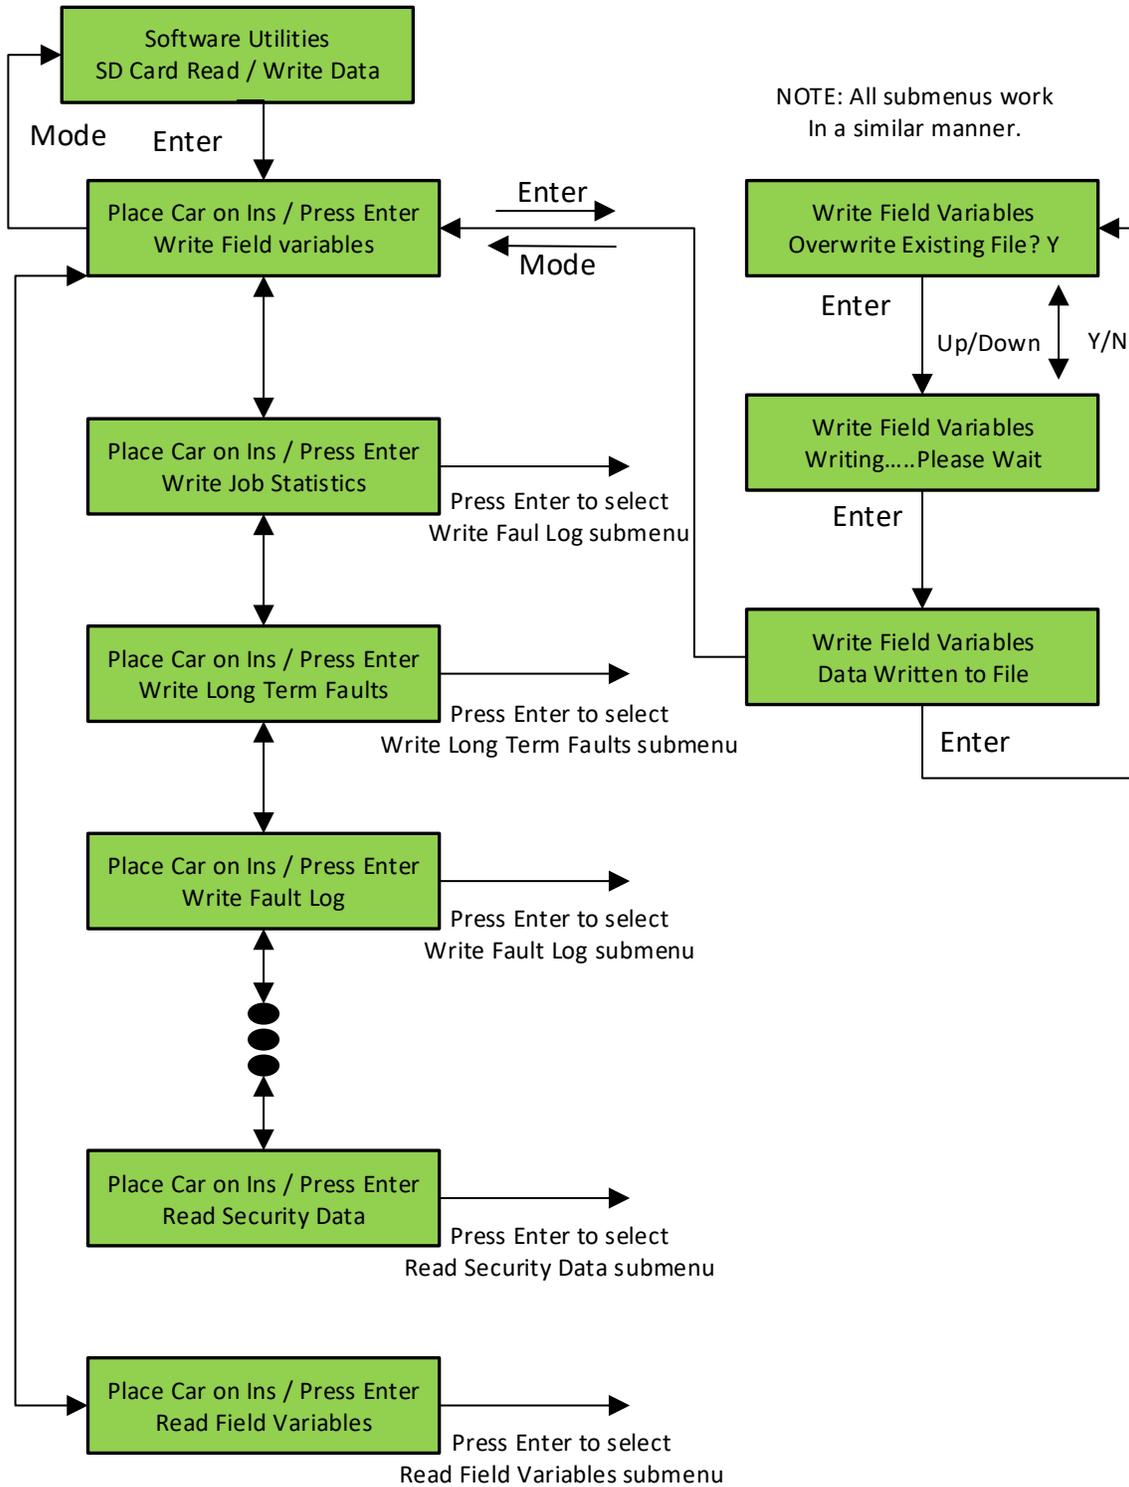


## LCD Interface - Power-Up Mode


Power-Up mode is reached by powering up the controller without an SD Card, or it can be activated from Software Utilities.

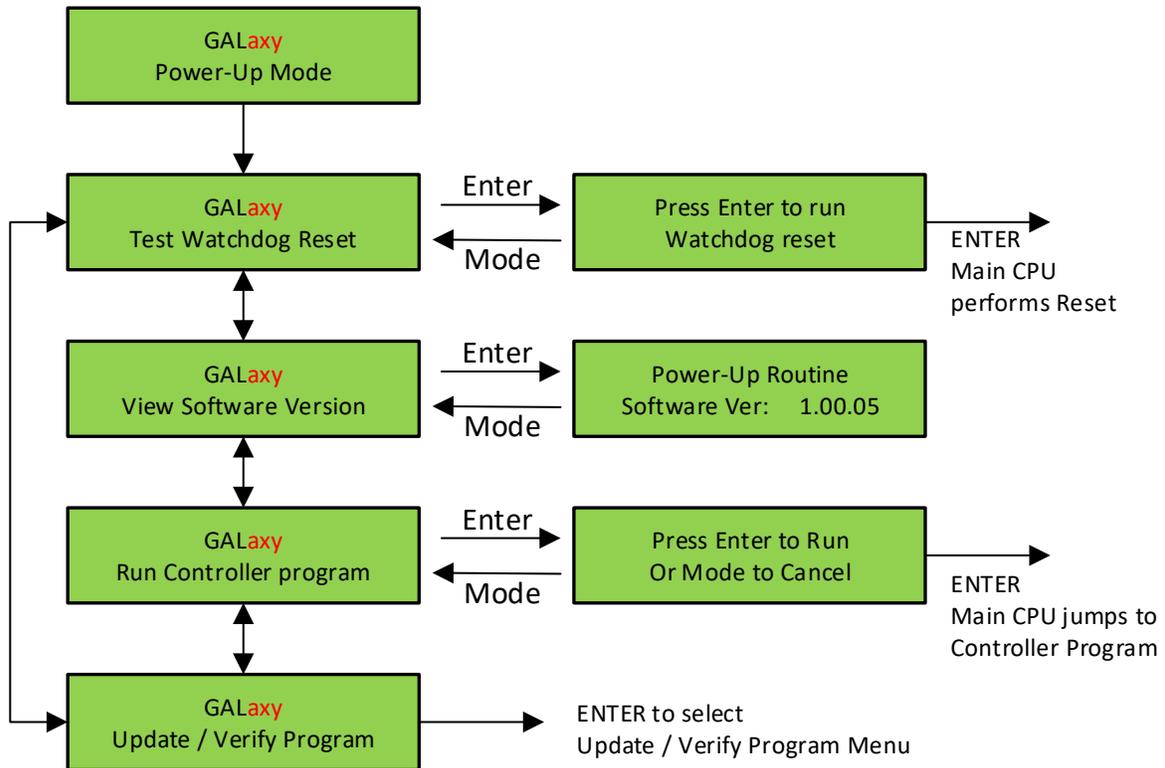


# LCD Interface - Update - Verify Program Submenu

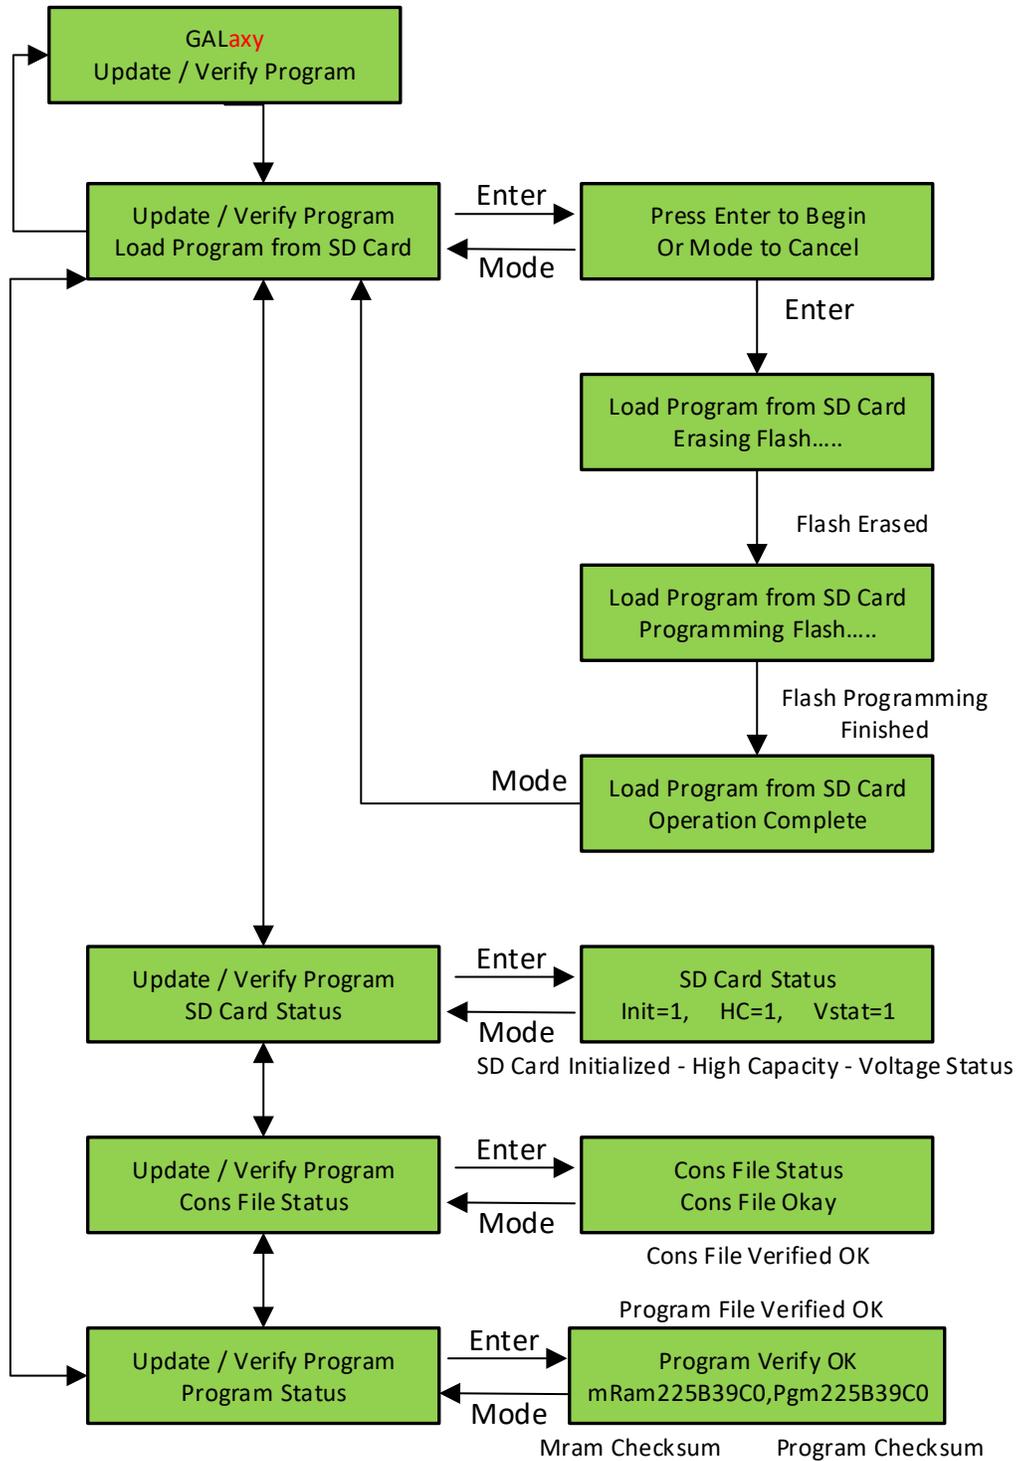

## LCD Interface Main Menu - Select Video Display

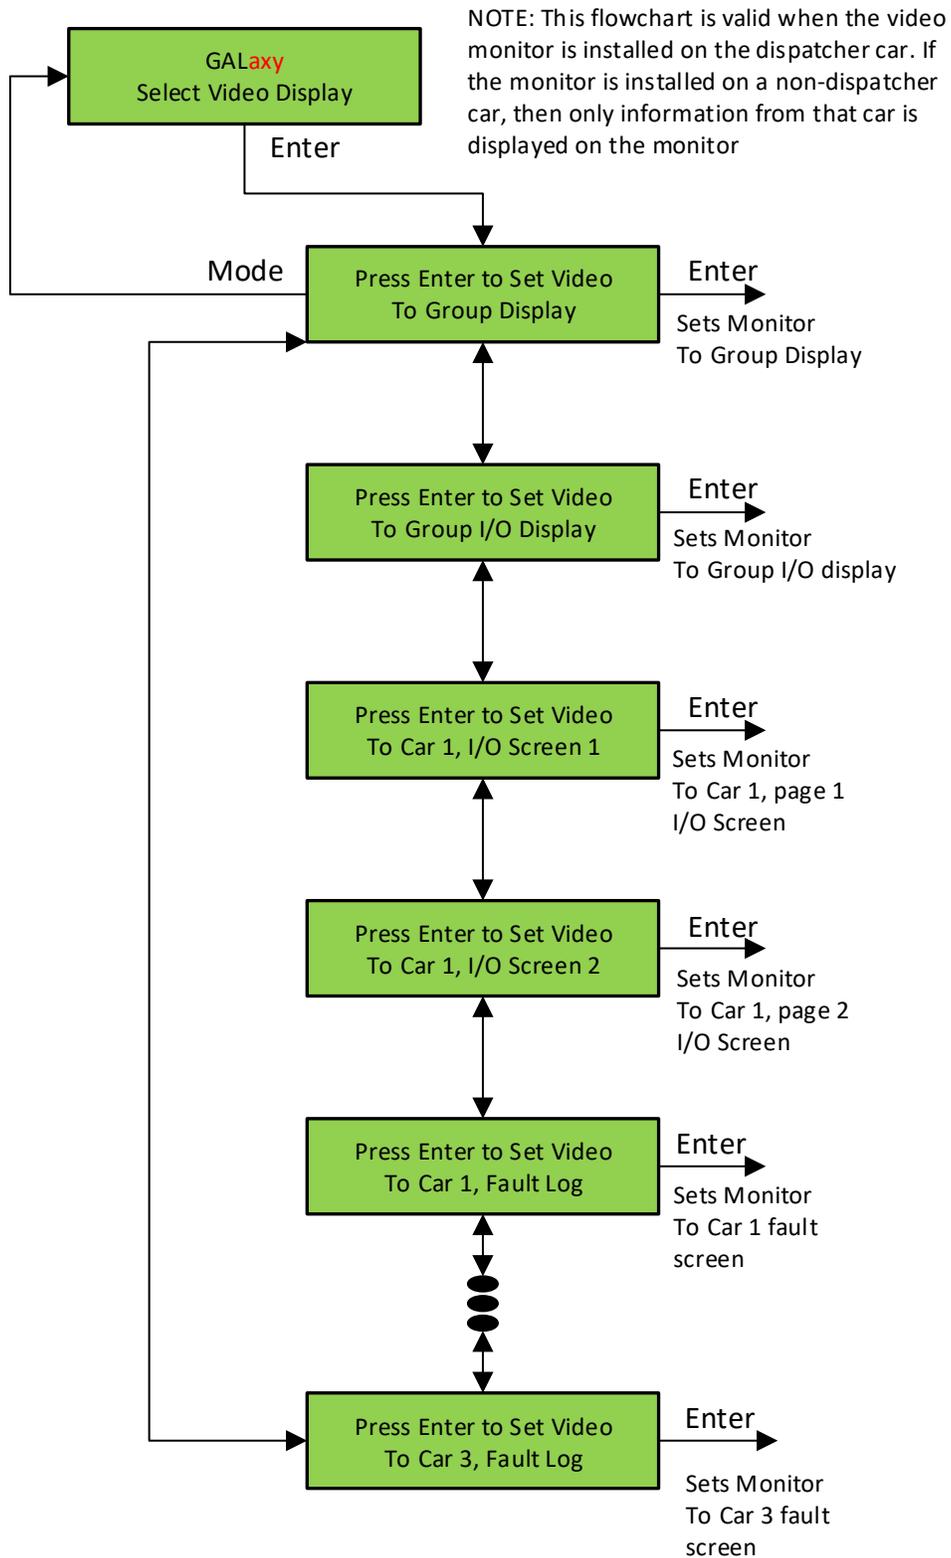


# LCD Interface Main Menu - Hoistway Tables – Display - Mod Hoistway Tables Submenu

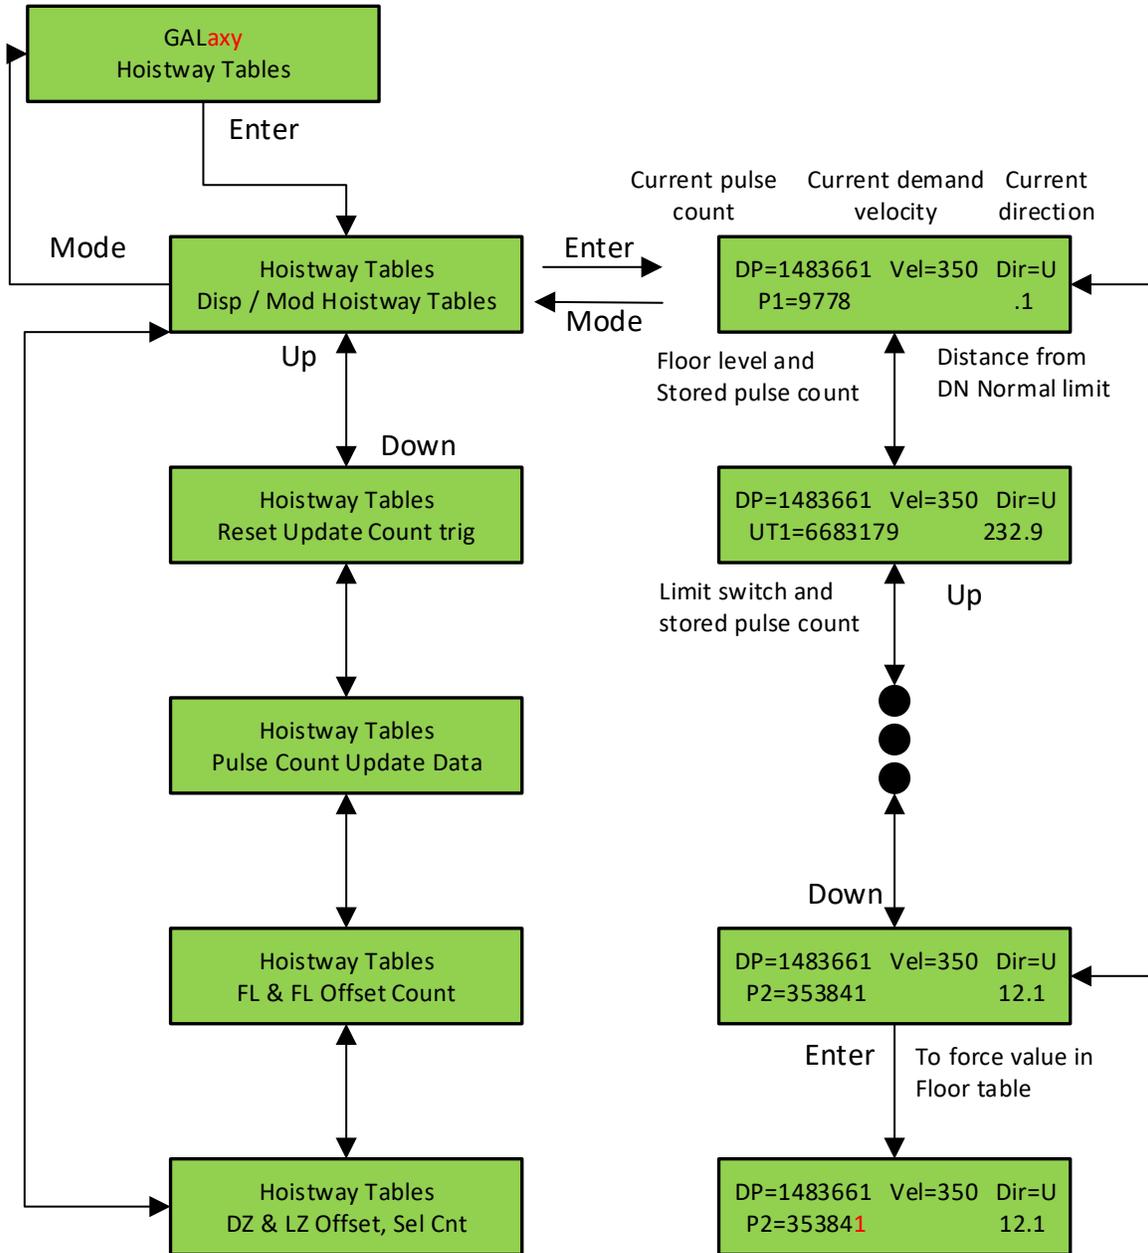


ENTER selects count value  
 MODE selects digit  
 UP increments digit  
 DN decrements digit  
 ENTER stores value

## LCD Interface - Hoistway Tables - Learn Hoistway Submenu

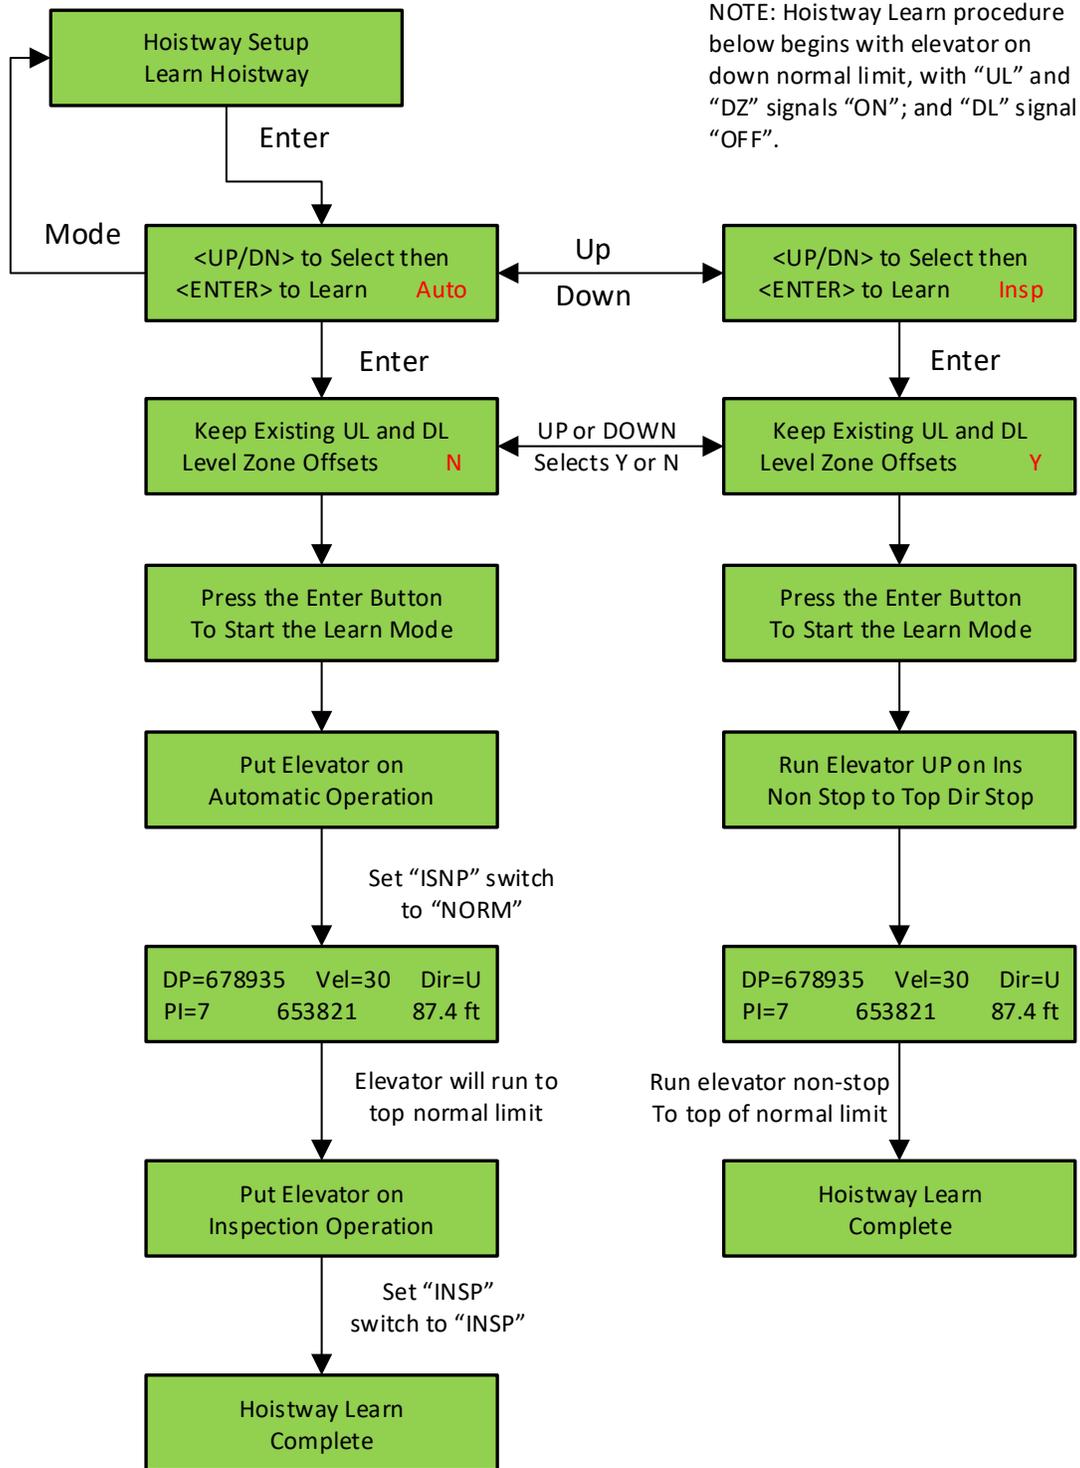


# LCD Interface Main Menu - DZ & DZ Offset, Sel Cnt Submenu

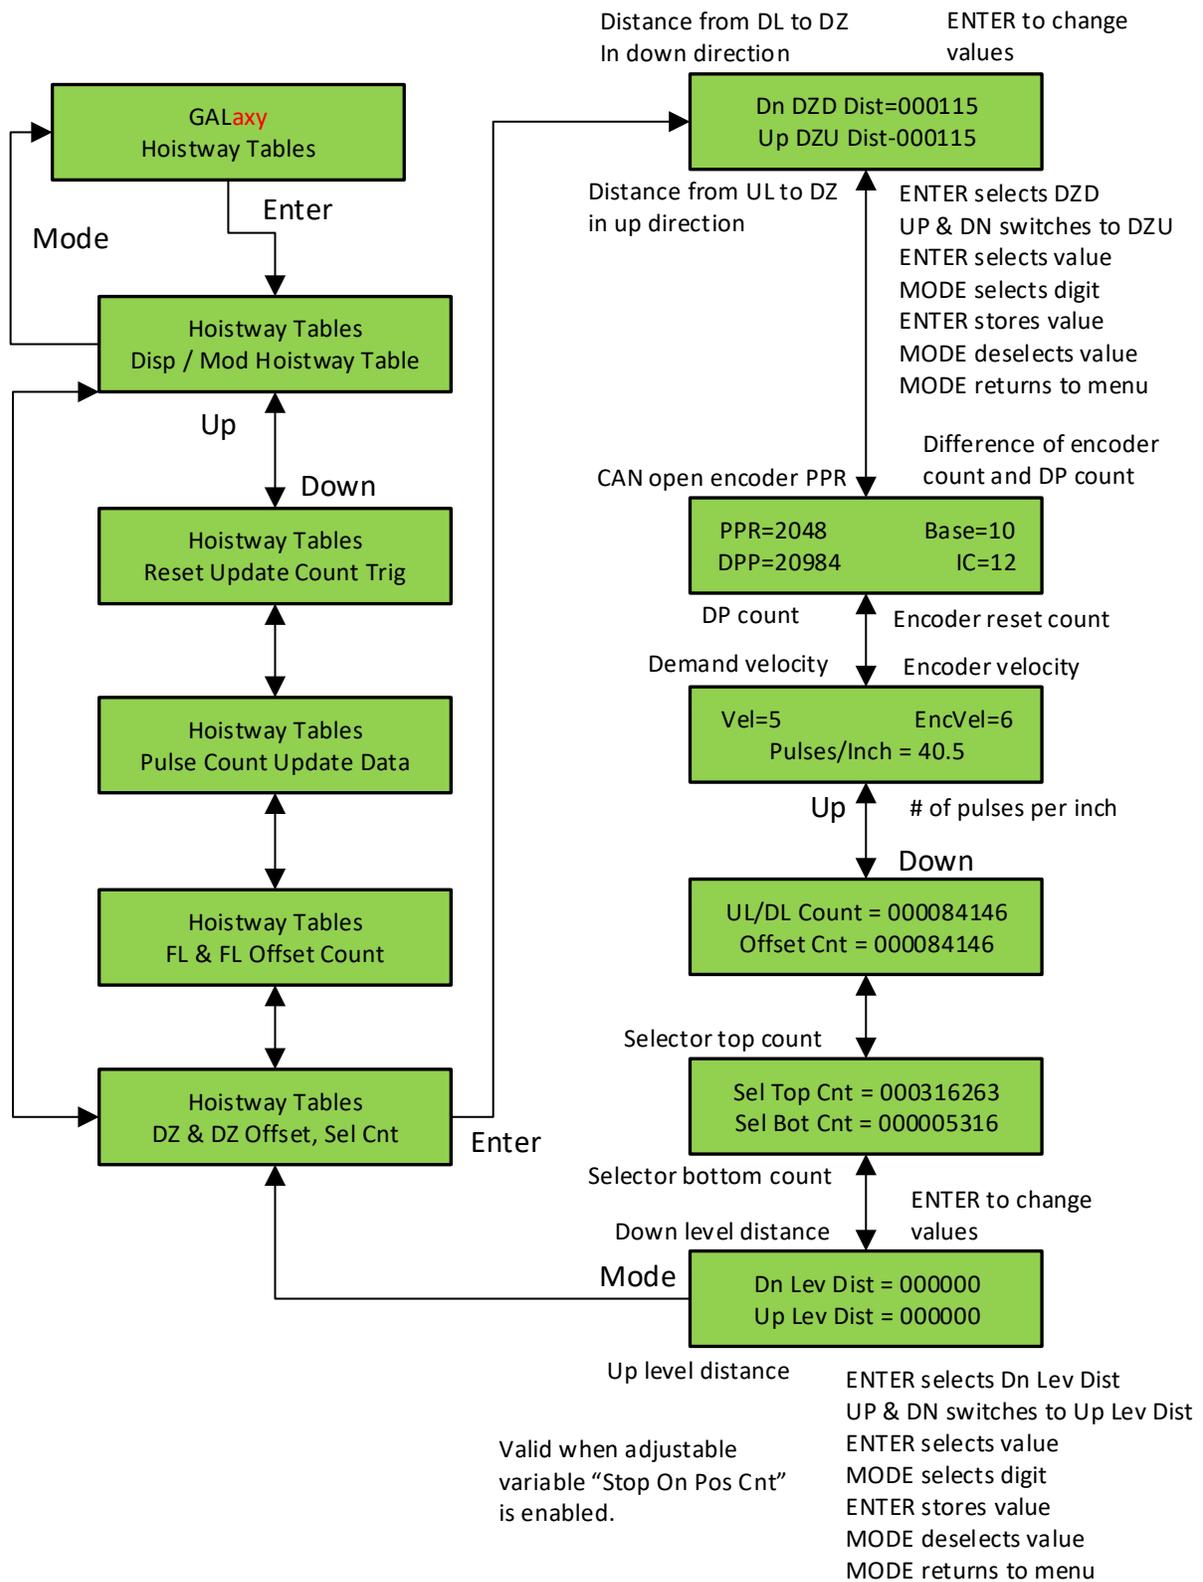

# LCD Interface Main Menu - FL & FL Offset, Sel Cnt Submenu


NOTE: The "Offset value below is valid when the "Stop On Pos Count" adjustable variable is enabled.

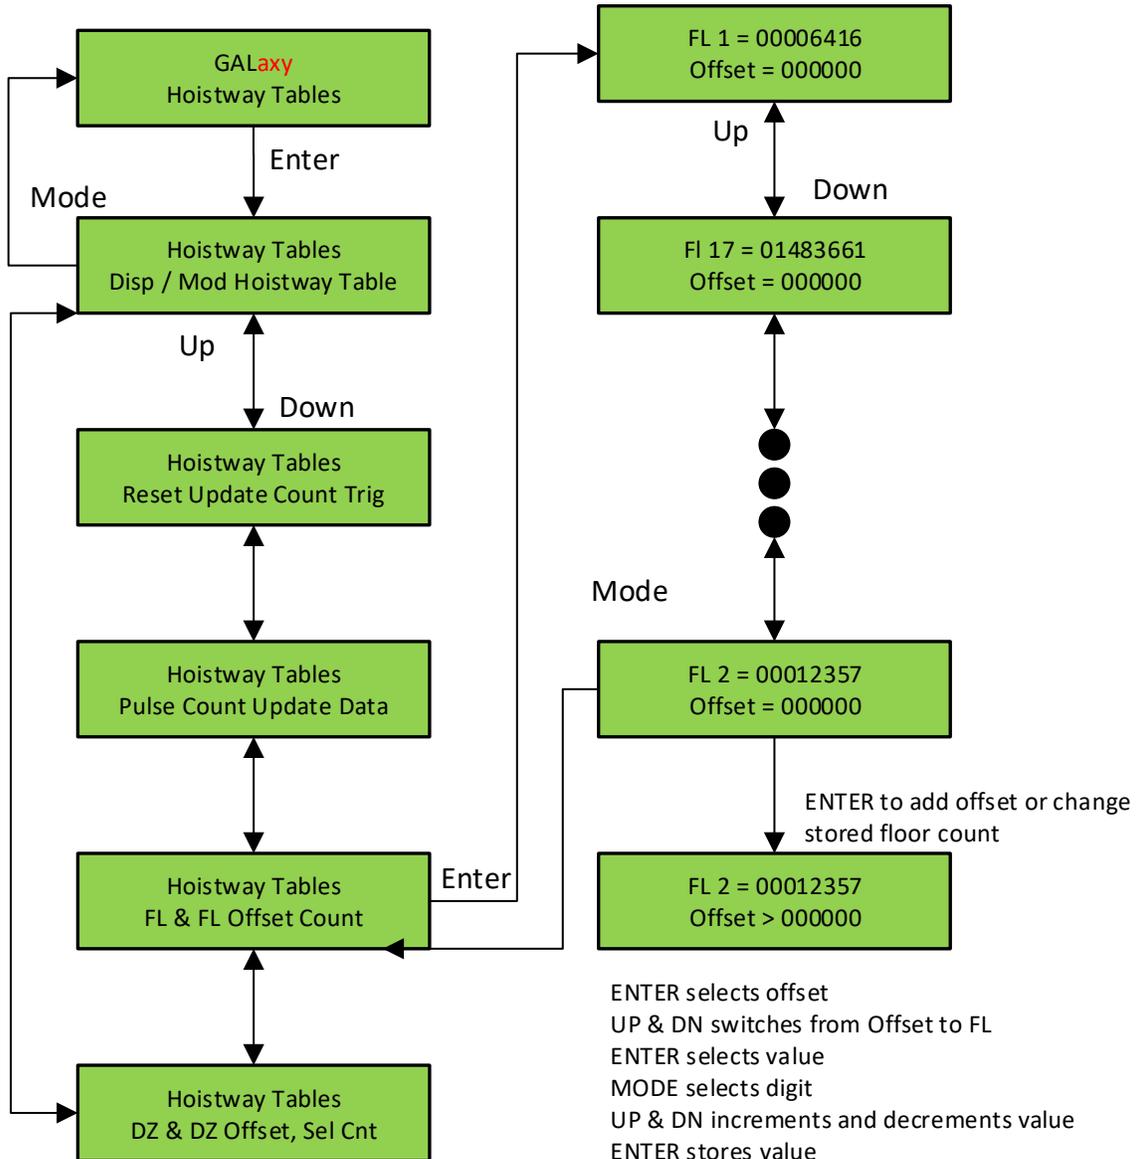


ENTER selects offset  
 UP & DN switches from Offset to FL  
 ENTER selects value  
 MODE selects digit  
 UP & DN increments and decrements value  
 ENTER stores value  
 MODE deselects Offset or FL  
 MODE returns to menu

# LCD Interface Main Menu - Reset Update Count Trig, Pulse Count Update Data Submenu

NOTE: The "Reset Update Count Trig" and the "Pulse Count Update Data" are valid when the "Pos Count Upd" adjustable variable is enabled. They are used to provide information to properly set this variable.

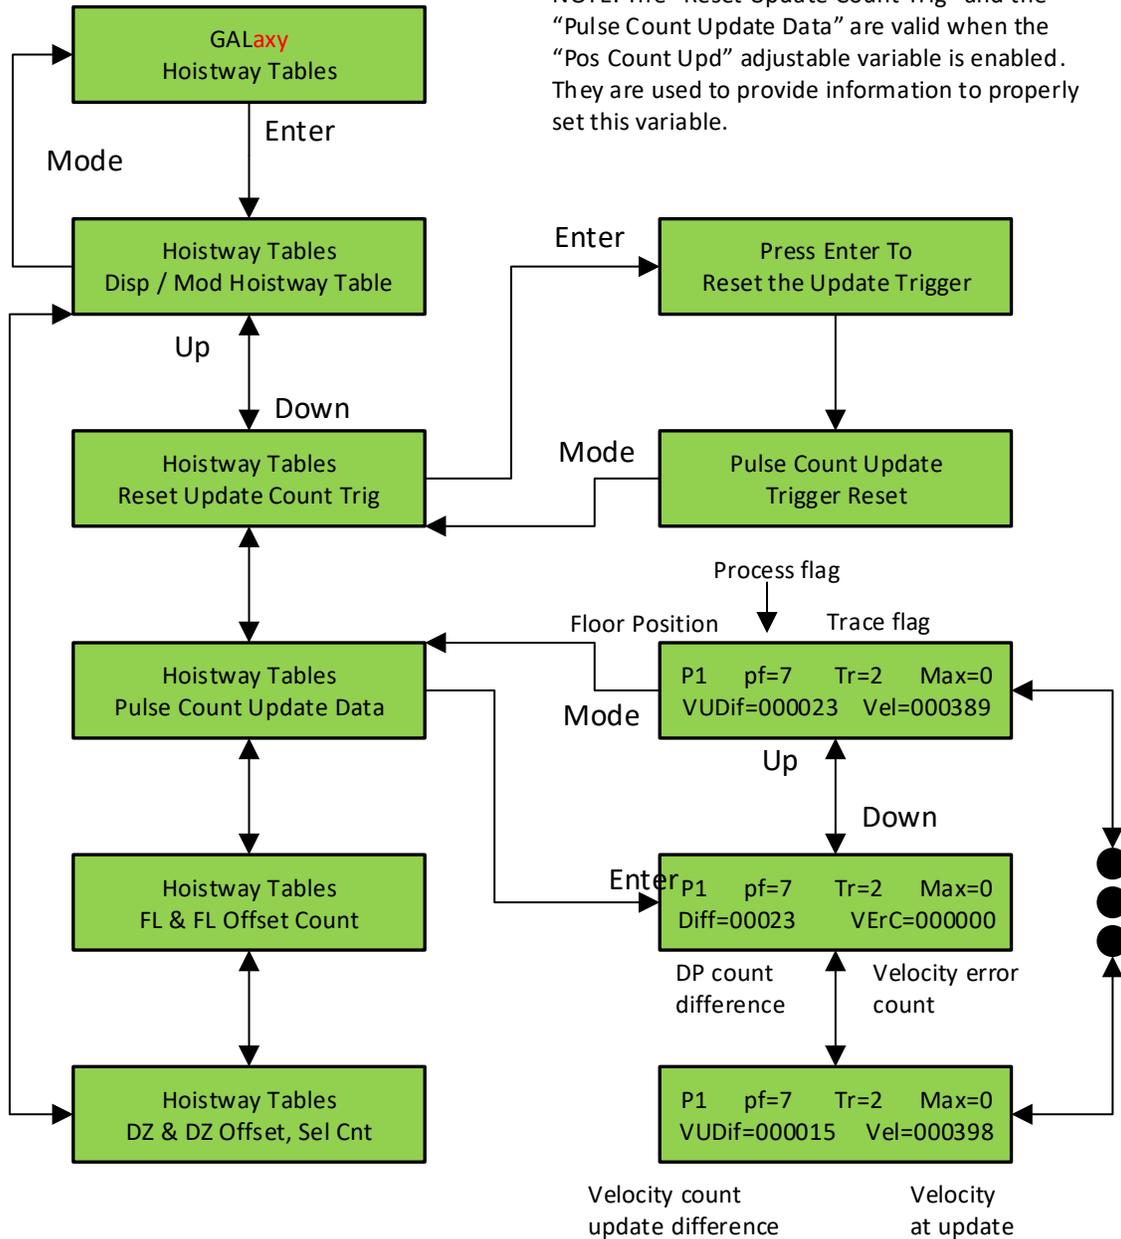


# LCD Interface Main Menu - Elevator Setup

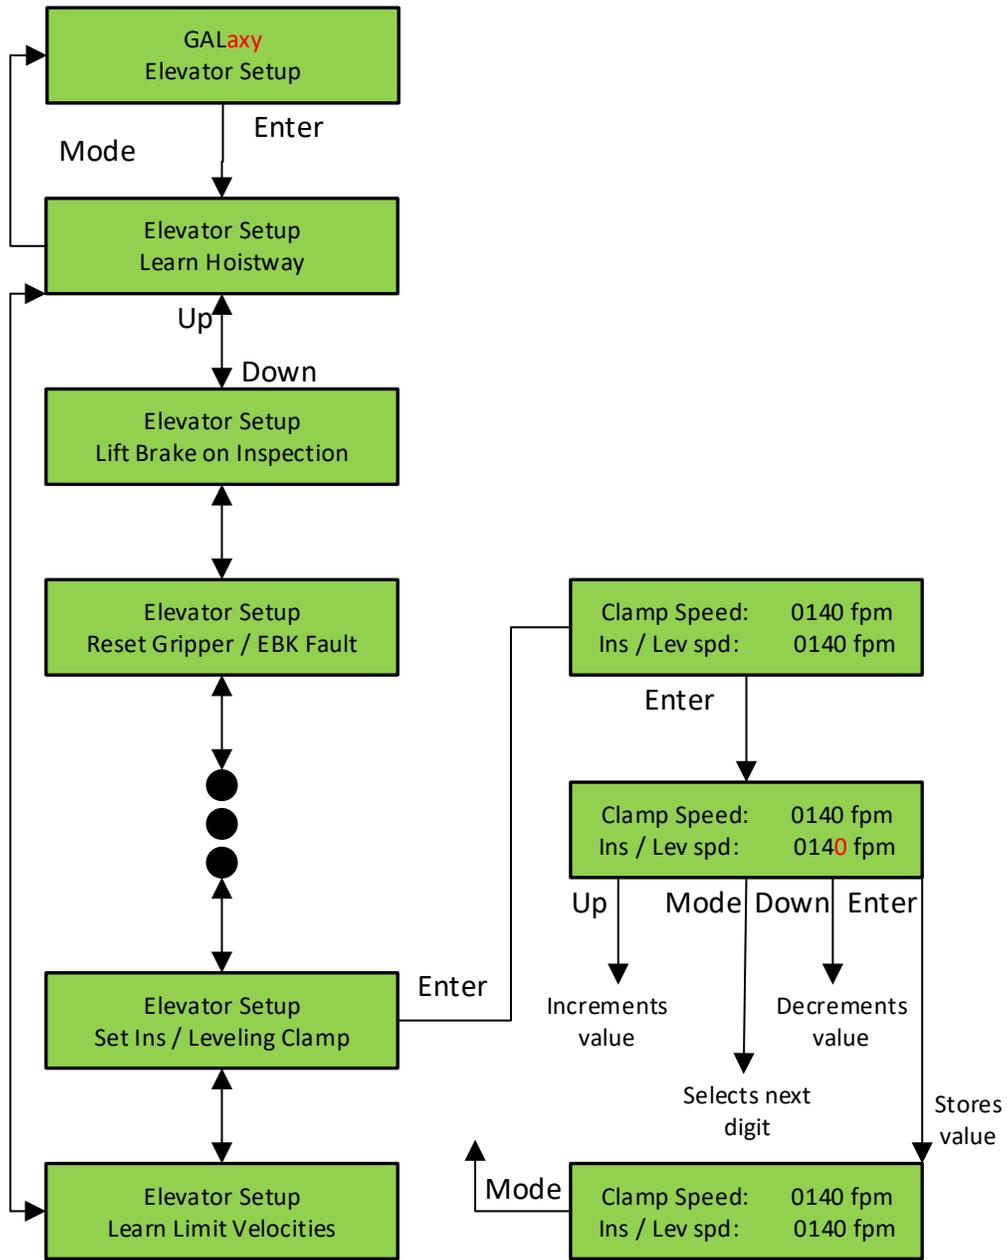


Section 10 – 1021/1101/1005 LCD

# LCD Interface - Open - Close doors

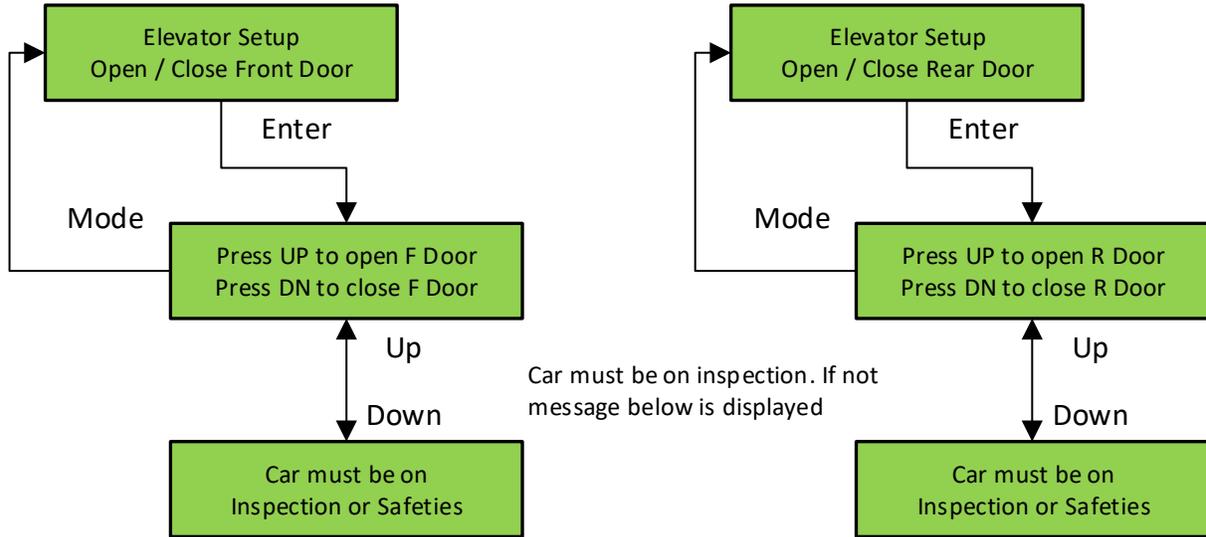

# LCD Interface - Lift Brake On Inspection Submenu

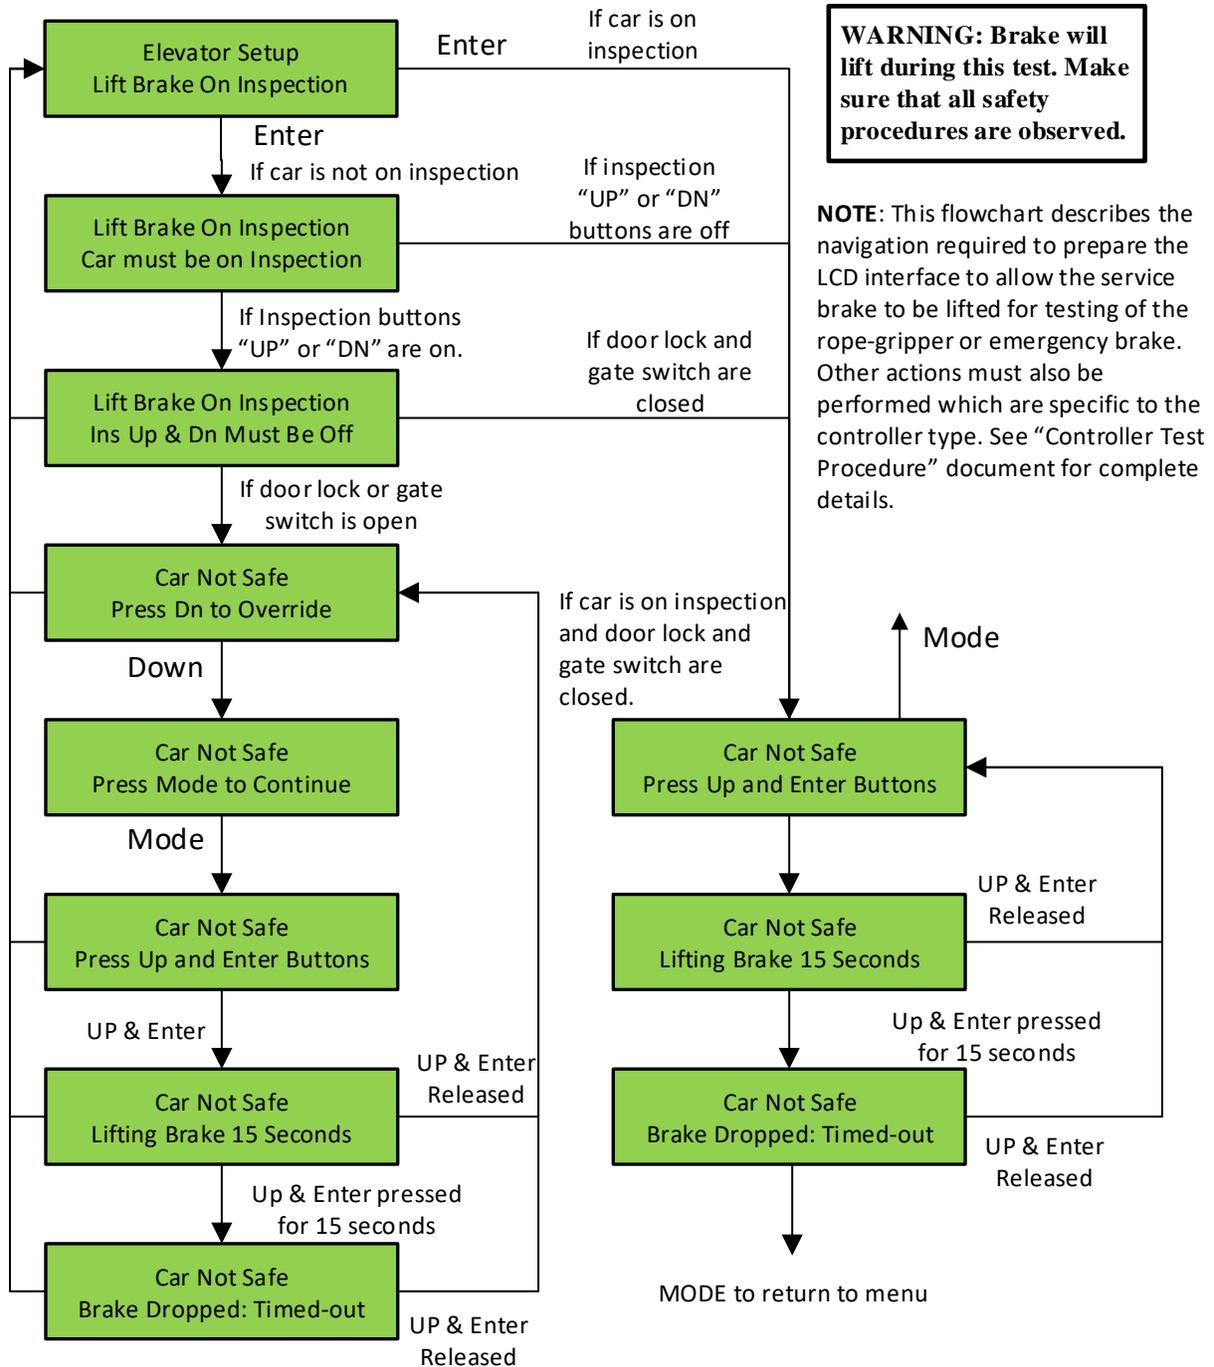


**WARNING: Brake will lift during this test. Make sure that all safety procedures are observed.**


**NOTE:** This flowchart describes the navigation required to prepare the LCD interface to allow the service brake to be lifted for testing of the rope-gripper or emergency brake. Other actions must also be performed which are specific to the controller type. See "Controller Test Procedure" document for complete details.

Section 10 – 1021/1101/1005 LCD

# LCD Interface - Load Weigher Setup Submenu

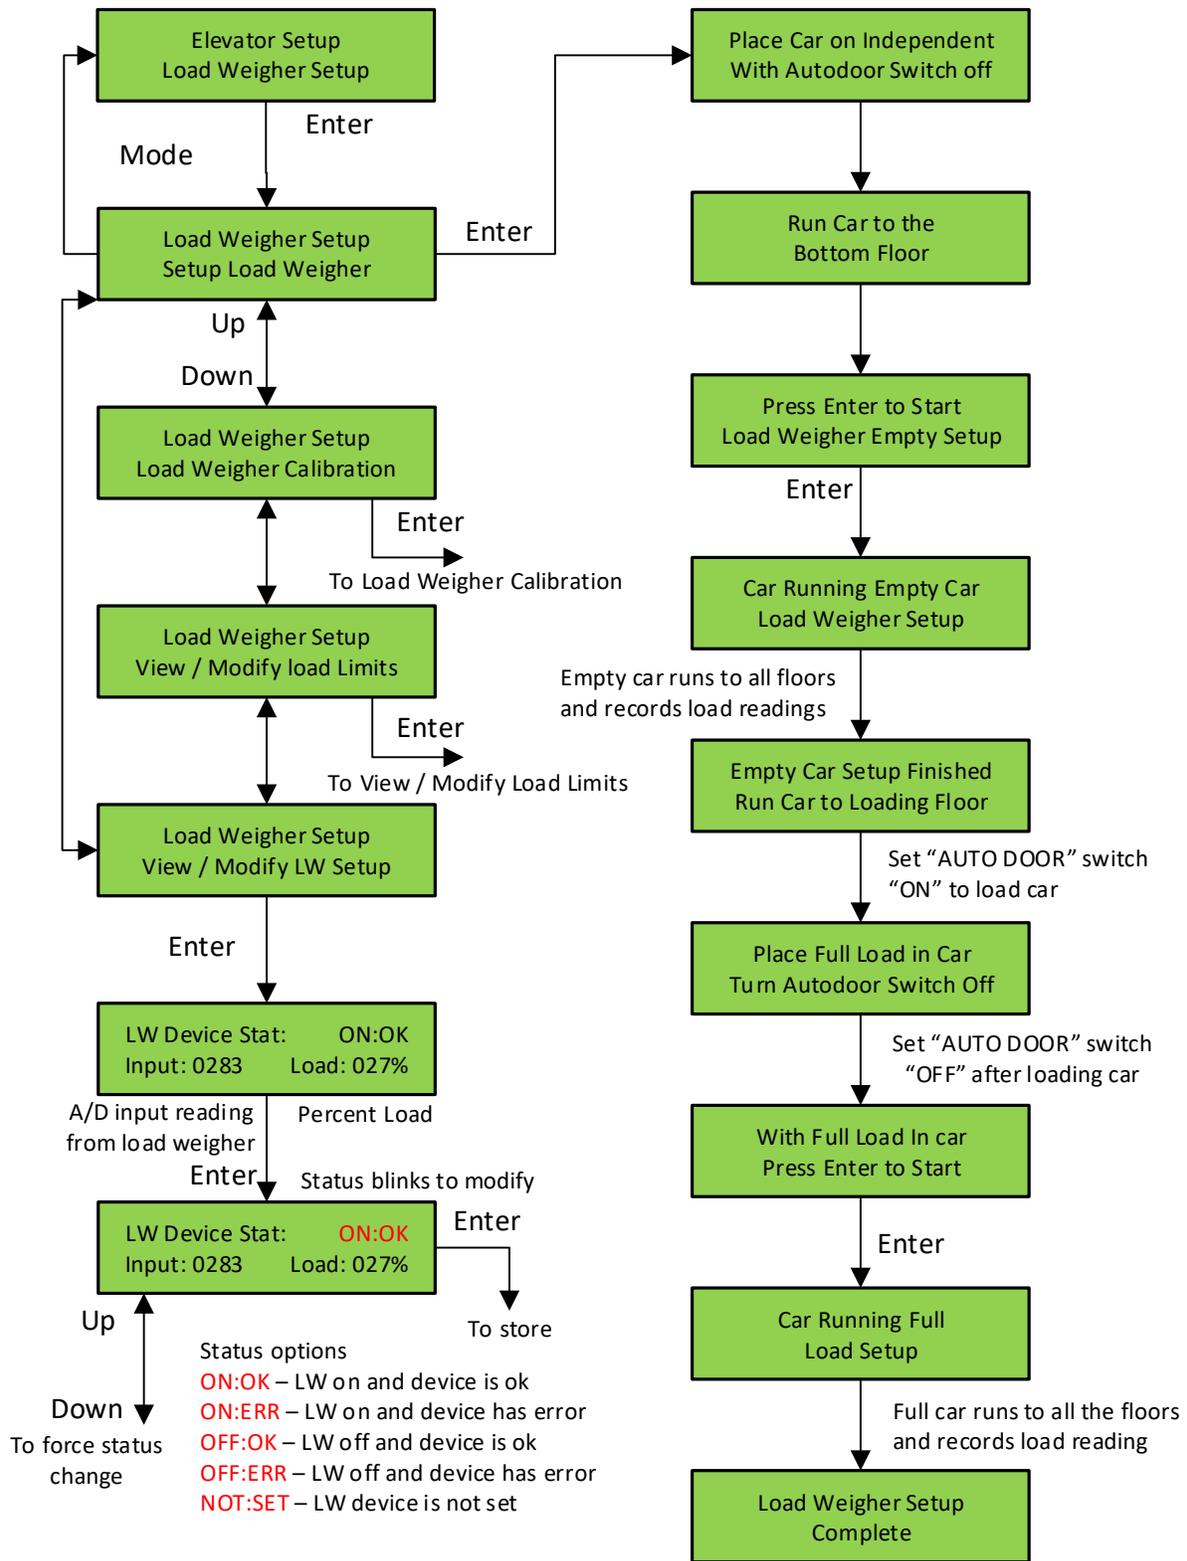


# LCD Interface - View - Modify Load Weigher Limits

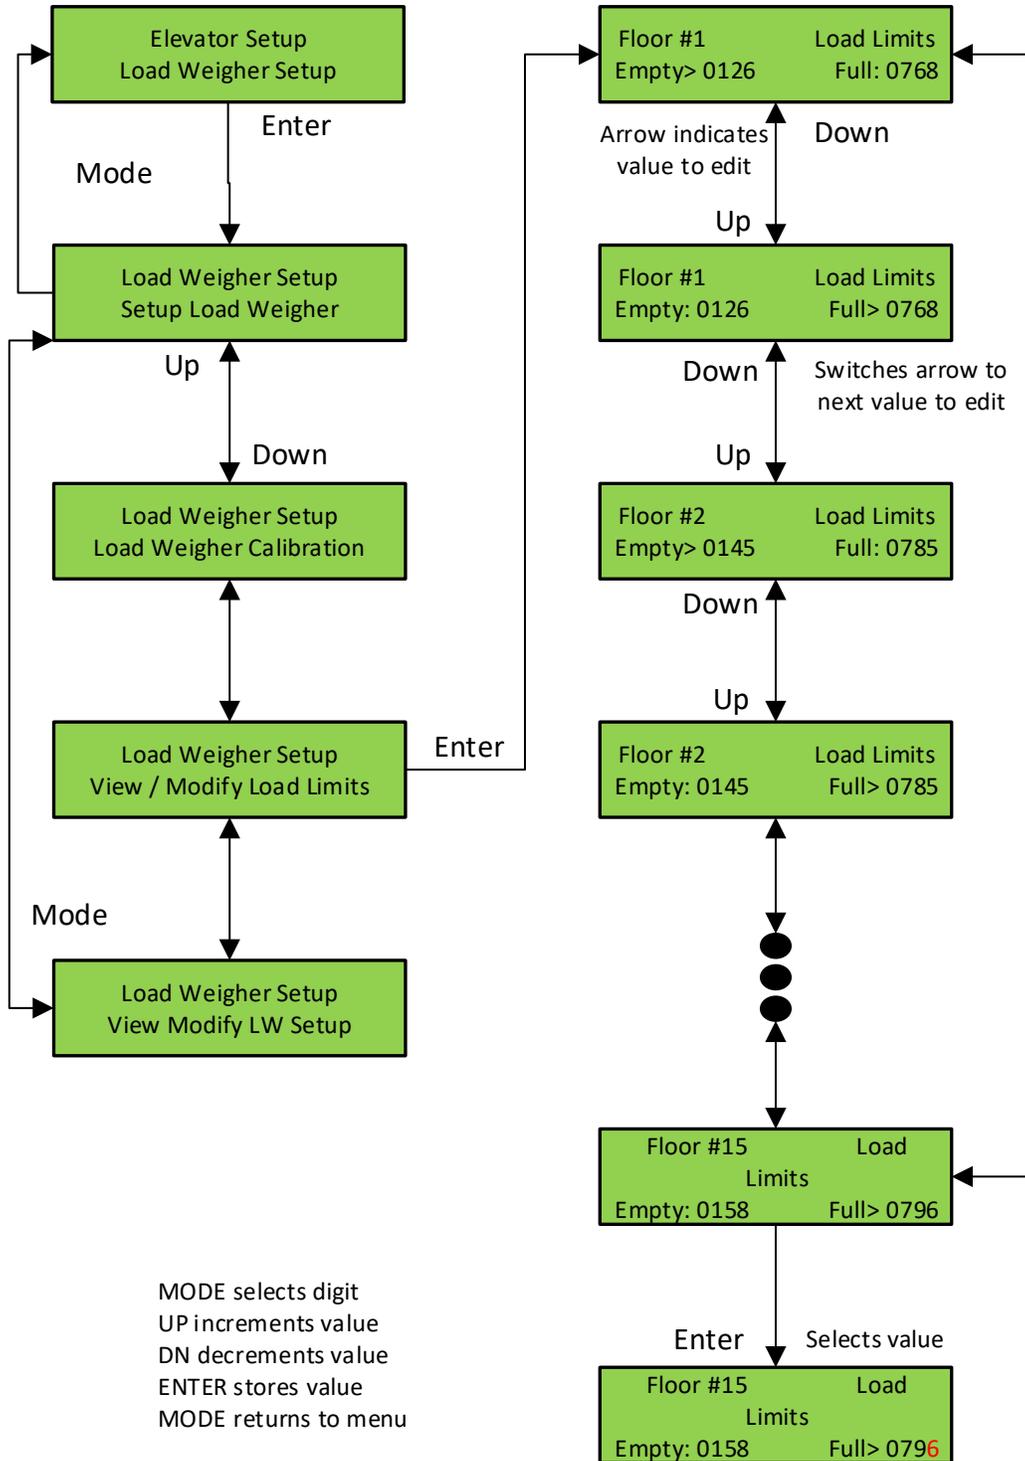


Section 10 – 1021/1101/1005 LCD


# LCD Interface - Calibrate Load Weigher

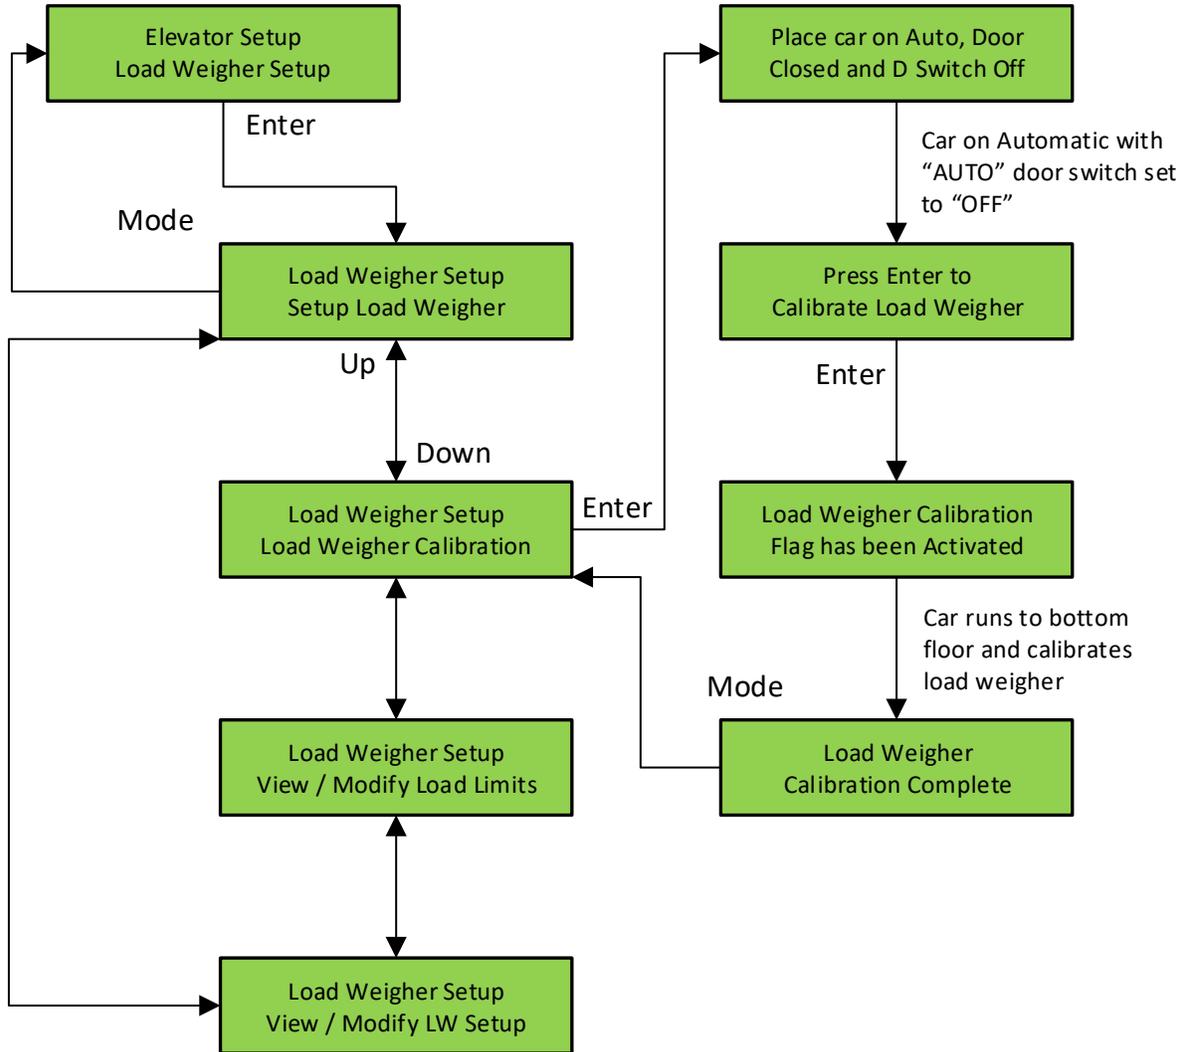

## LCD Interface - Car Buffer Test Submenu

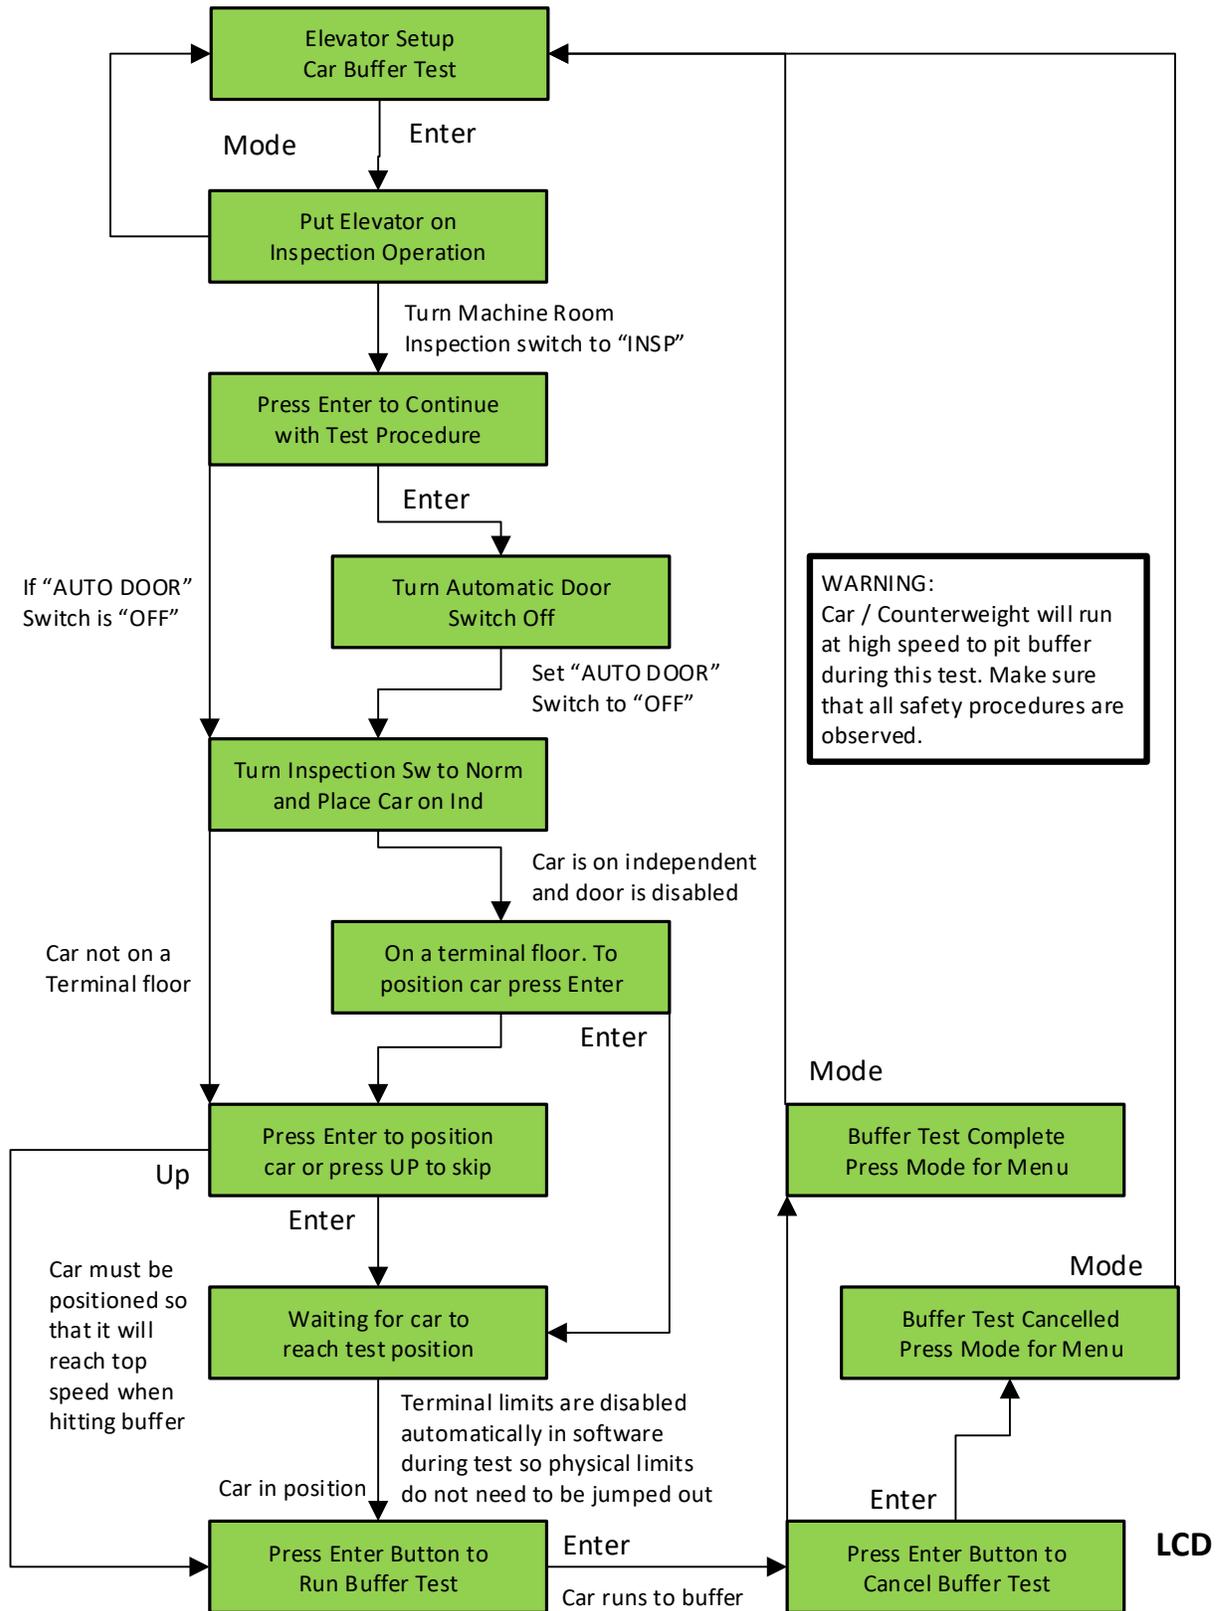

## Interface – Overspeed Test Submenu

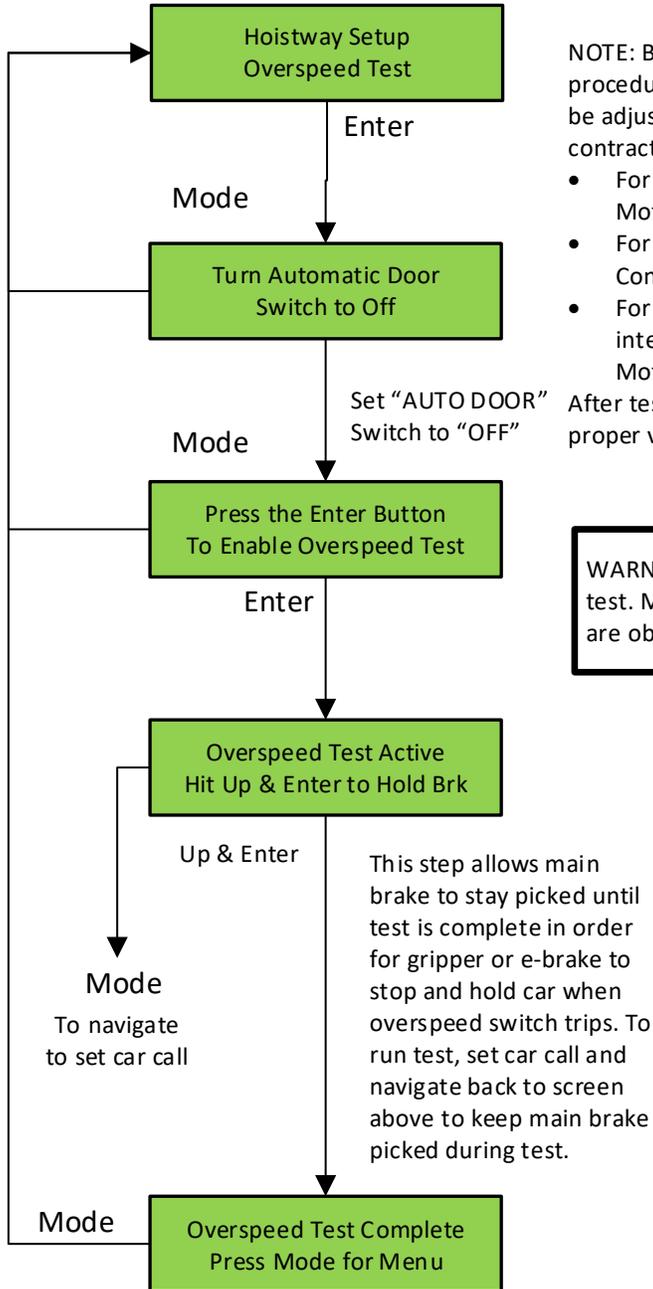

NOTE: Before performing Overspeed test procedure, the following parameters should be adjusted to force the car to run faster than contract speed.


- For DSD 412 drive - drive function #11 Motor RPM
- For HPV600/900 – drive parameter A1 Contract MTR Speed
- For KEB F5 – from the Controller's LCD interface, "Adjustable Variables", "Car Motion" adjust "DRV Speed Mult".

After test s complete, return parameters to proper values for contract speed.


**WARNING:** Car will overspeed during this test. Make sure that all safety procedures are observed.

This step allows main brake to stay picked until test is complete in order for gripper or e-brake to stop and hold car when overspeed switch trips. To run test, set car call and navigate back to screen above to keep main brake picked during test.

## LCD Interface - Reset Gripper Fault

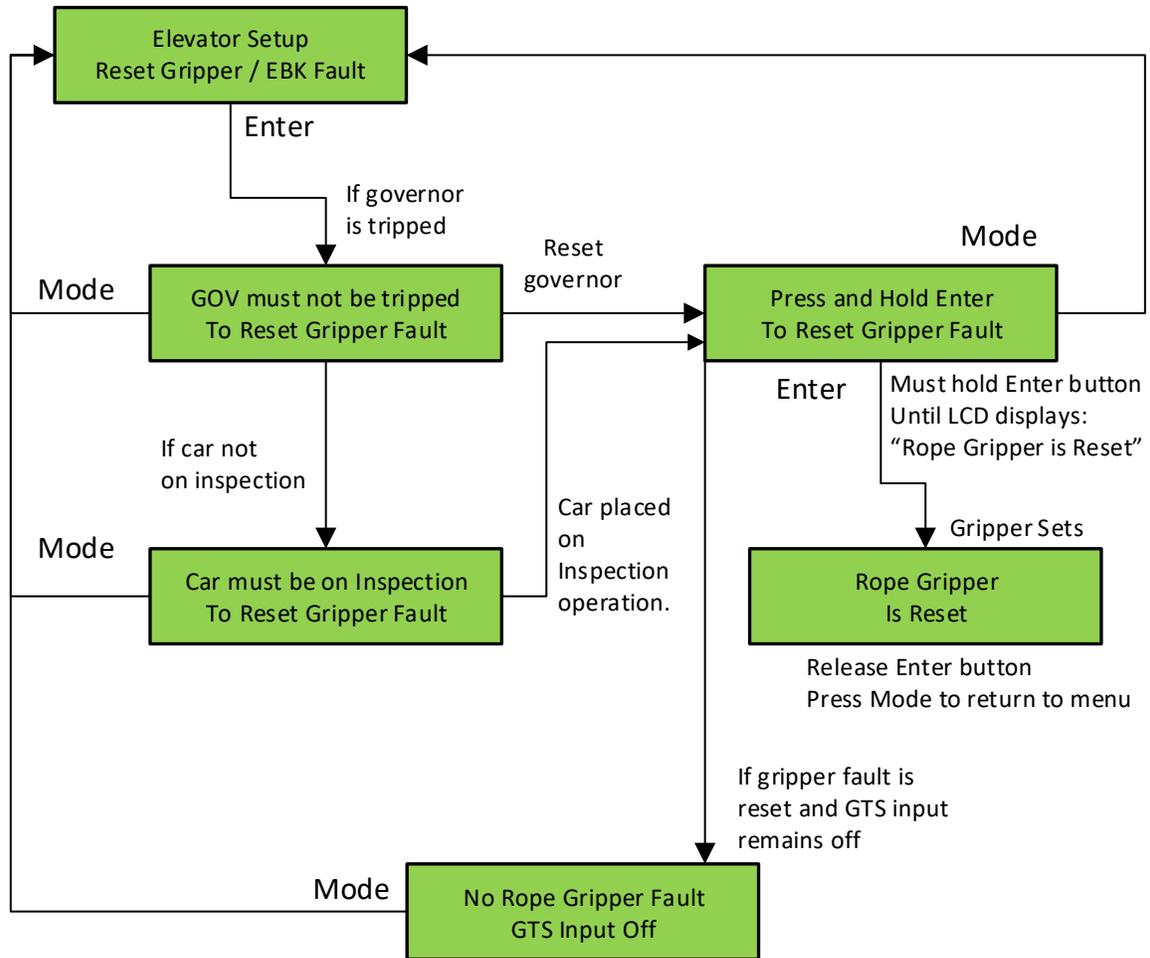

# LCD Interface - Fault Log

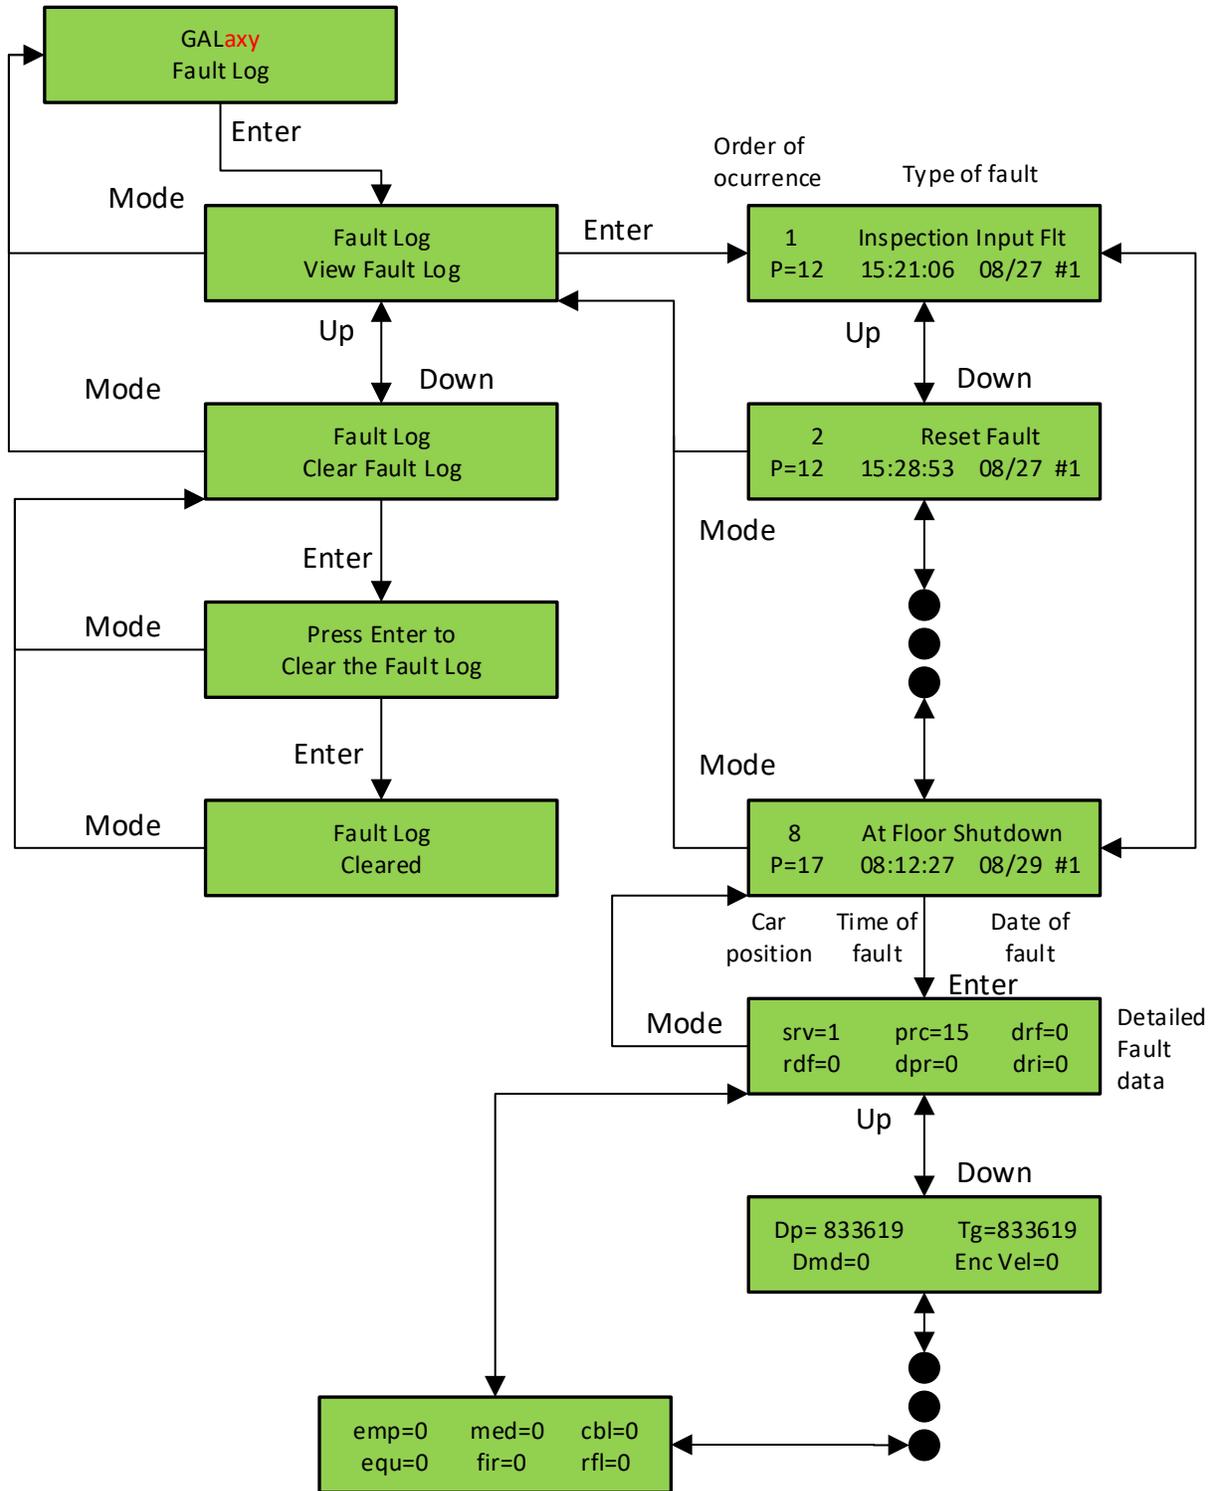

## ***Section 10a - Service Activation Timers***

All services have either an input trigger or a timer condition that makes the service become active.

The "Service Activation Timers" can be used to allow a feature to be turned on during specific times of the day without the need of a specific condition or switch to be turned on and off. All GALaxy traction and complex hydro controllers have the "Service Activation Timers" feature that allows up to ten different timers to be separately programmed.

These timers will turn on services that will operate only during these predefined times. The different services that can be programmed are listed below.

- Parking
- Alternate Parking
- Next Up
- Up Peak
- Down Peak
- Alternate Lobby
- Alternate Floor Security
- Car Call Lockouts
- Group Car Call Lockouts
- Car Call Override
- Group Car Call Override
- Sabbath
- CC Push Button Security
- Floor Security Table 2- 4


There are two different settings to choose from to determine when the timers will operate:

- Day of the Week: this will allow the timer to turn on and off services for each individual day of the week. There are a total of seven on and off time settings.
- Month and Day: this will allow the timer to turn on and off only for the date that is programmed. There are three on and off settings for this type.


The most common setting will be “day of the week” but “month and day” timers will be useful for programming special events or holidays. You could set day of the week timers. When the “day of week” timers are set, the chosen service will operate repeatedly for each day of the week that is programmed. Month and Day timers will operate only once a year.

Programming the timers can be accomplished through the LCD interface or the Galileo Interface. Once the timers are programmed they can be “disabled” or “enabled” without modifying other settings. In other words, a timer could be programmed completely and remain disabled until the building is ready for implementation. At that point the timer can be “enabled” and it will function as programmed.

## LCD Interface Main Menu - Service Activation Timer

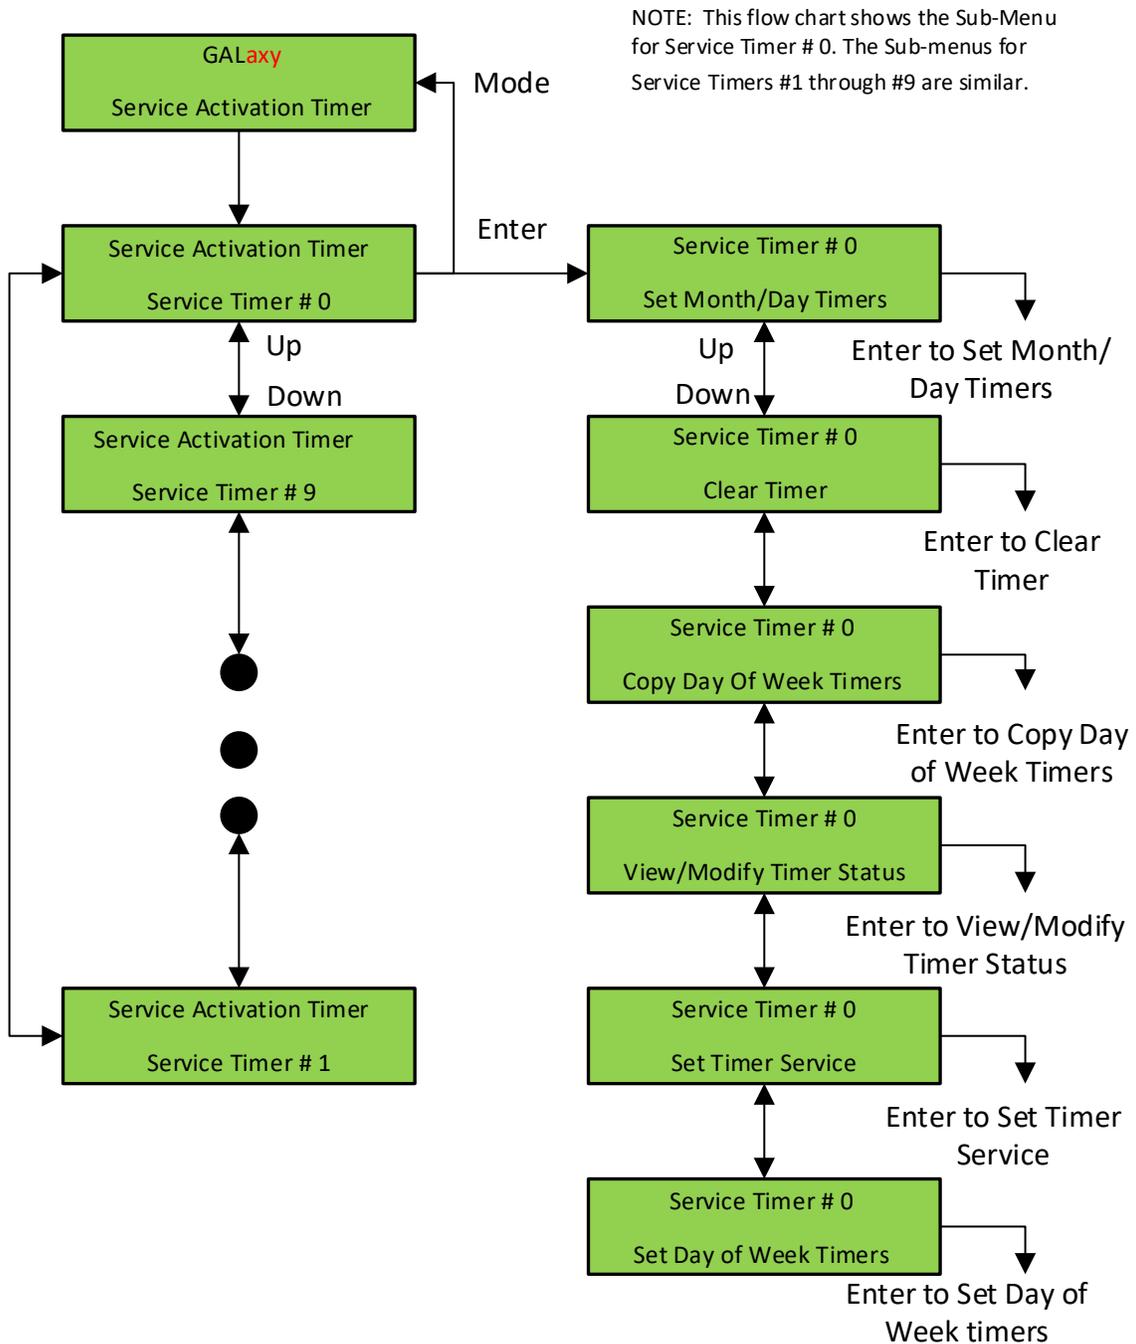


# LCD Interface - Set Month/Day Timers Submenu

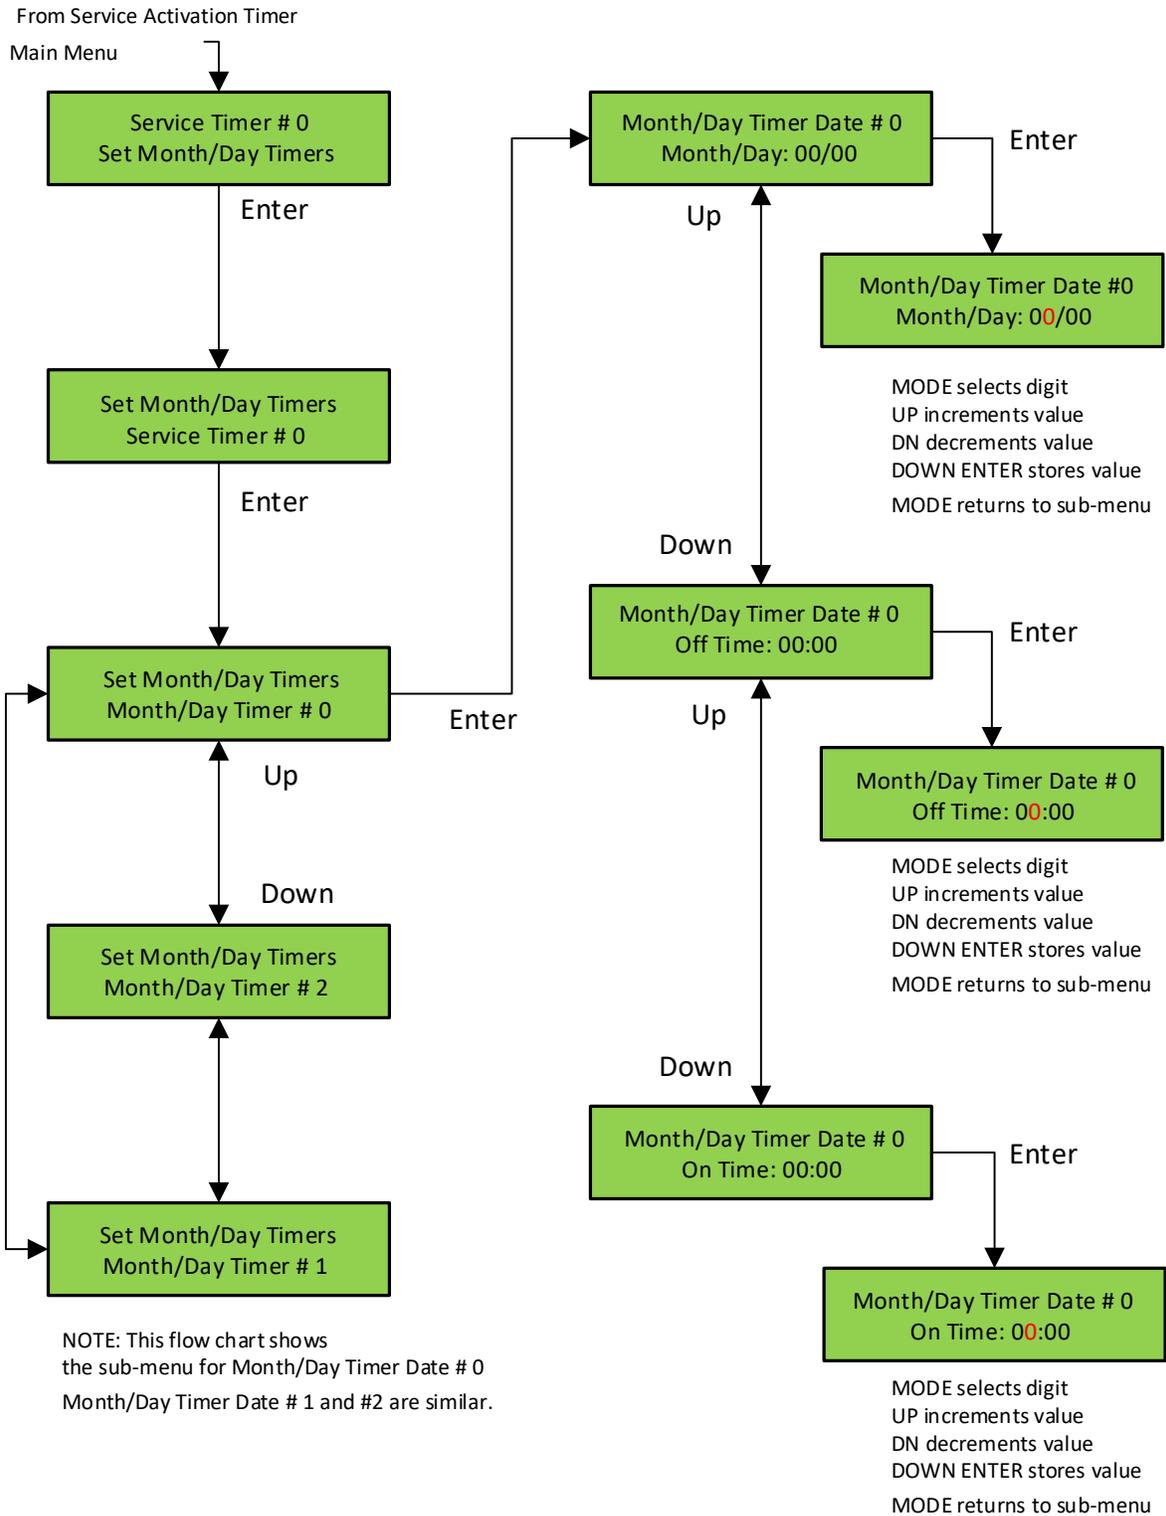


## LCD Interface - Clear Timer Submenu

From Service Activation Timer  
Main Menu

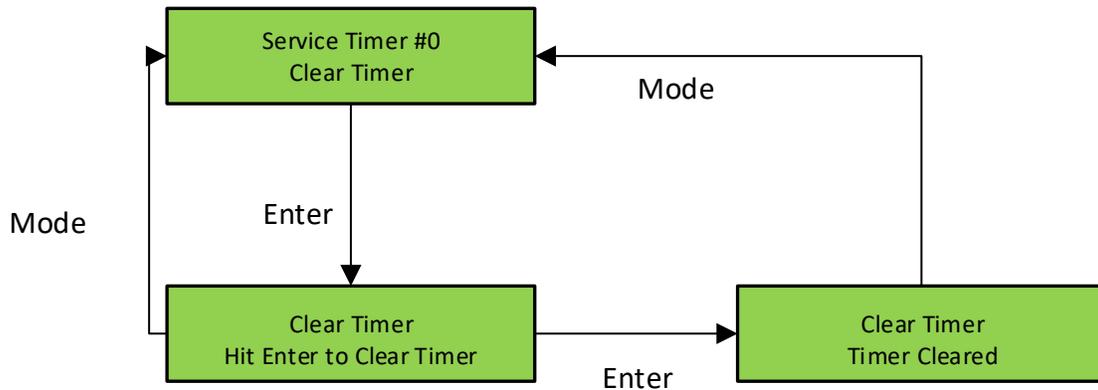


## LCD Interface - Copy Day of Week Timers Submenu


From Service Activation Timer  
Main Menu

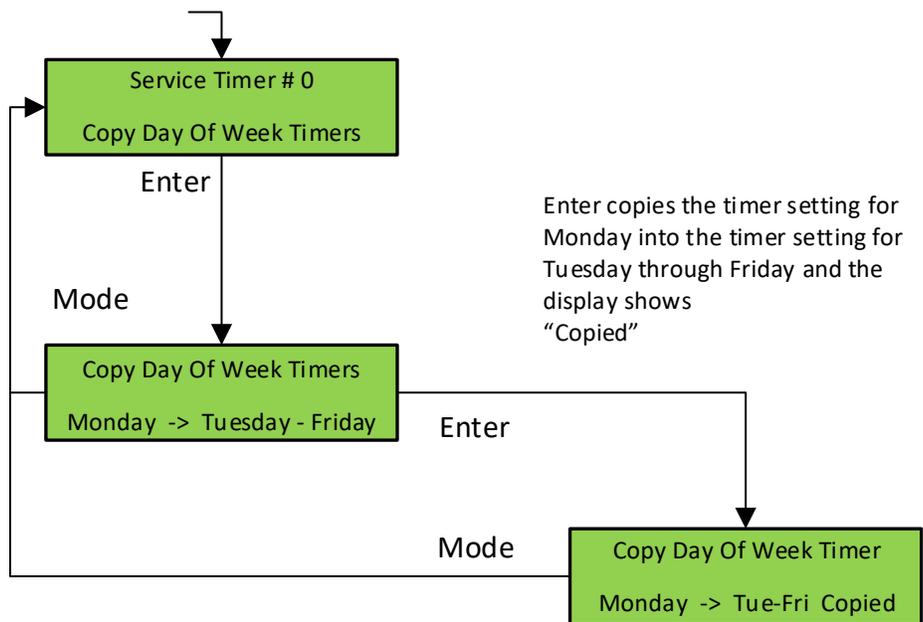


# LCD Interface – View/Modify Timer Status Submenu

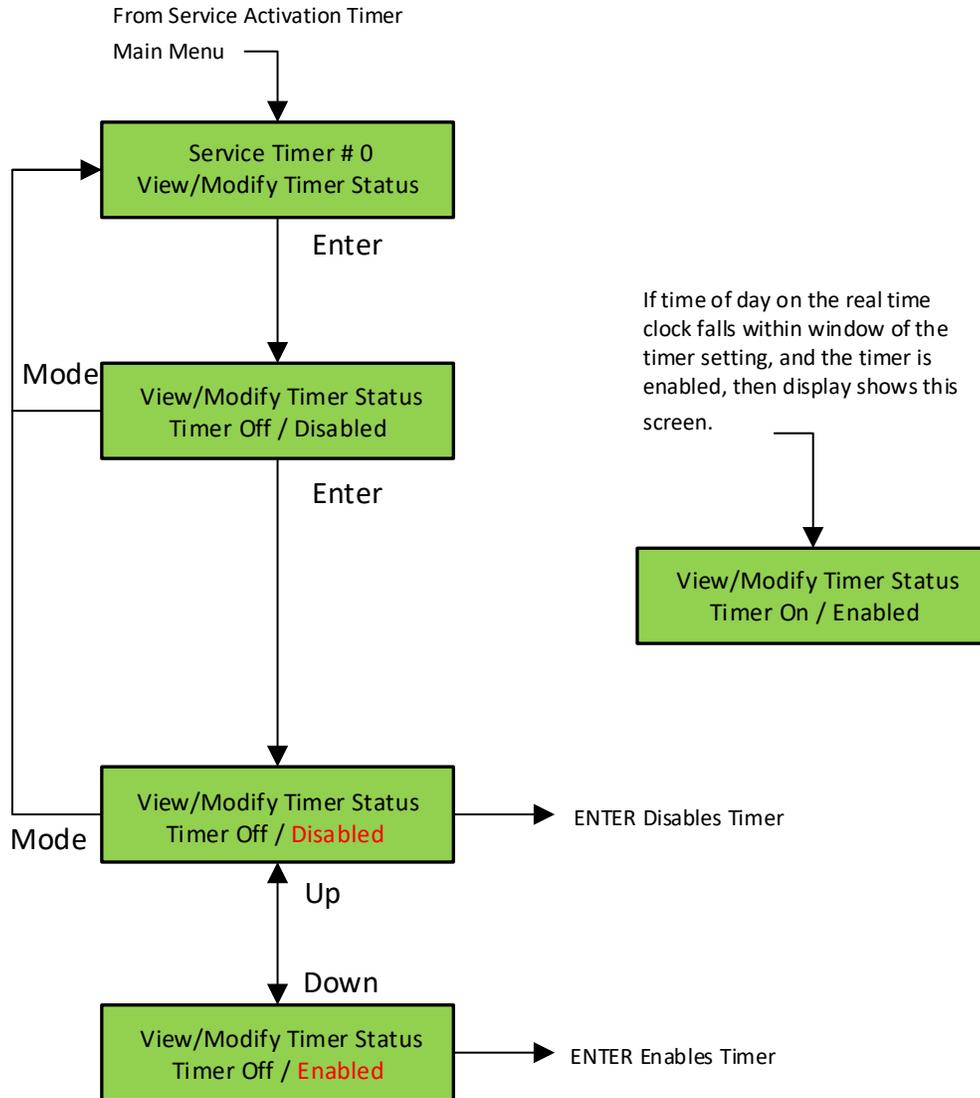

## LCD Interface - Set Timer Service Submenu

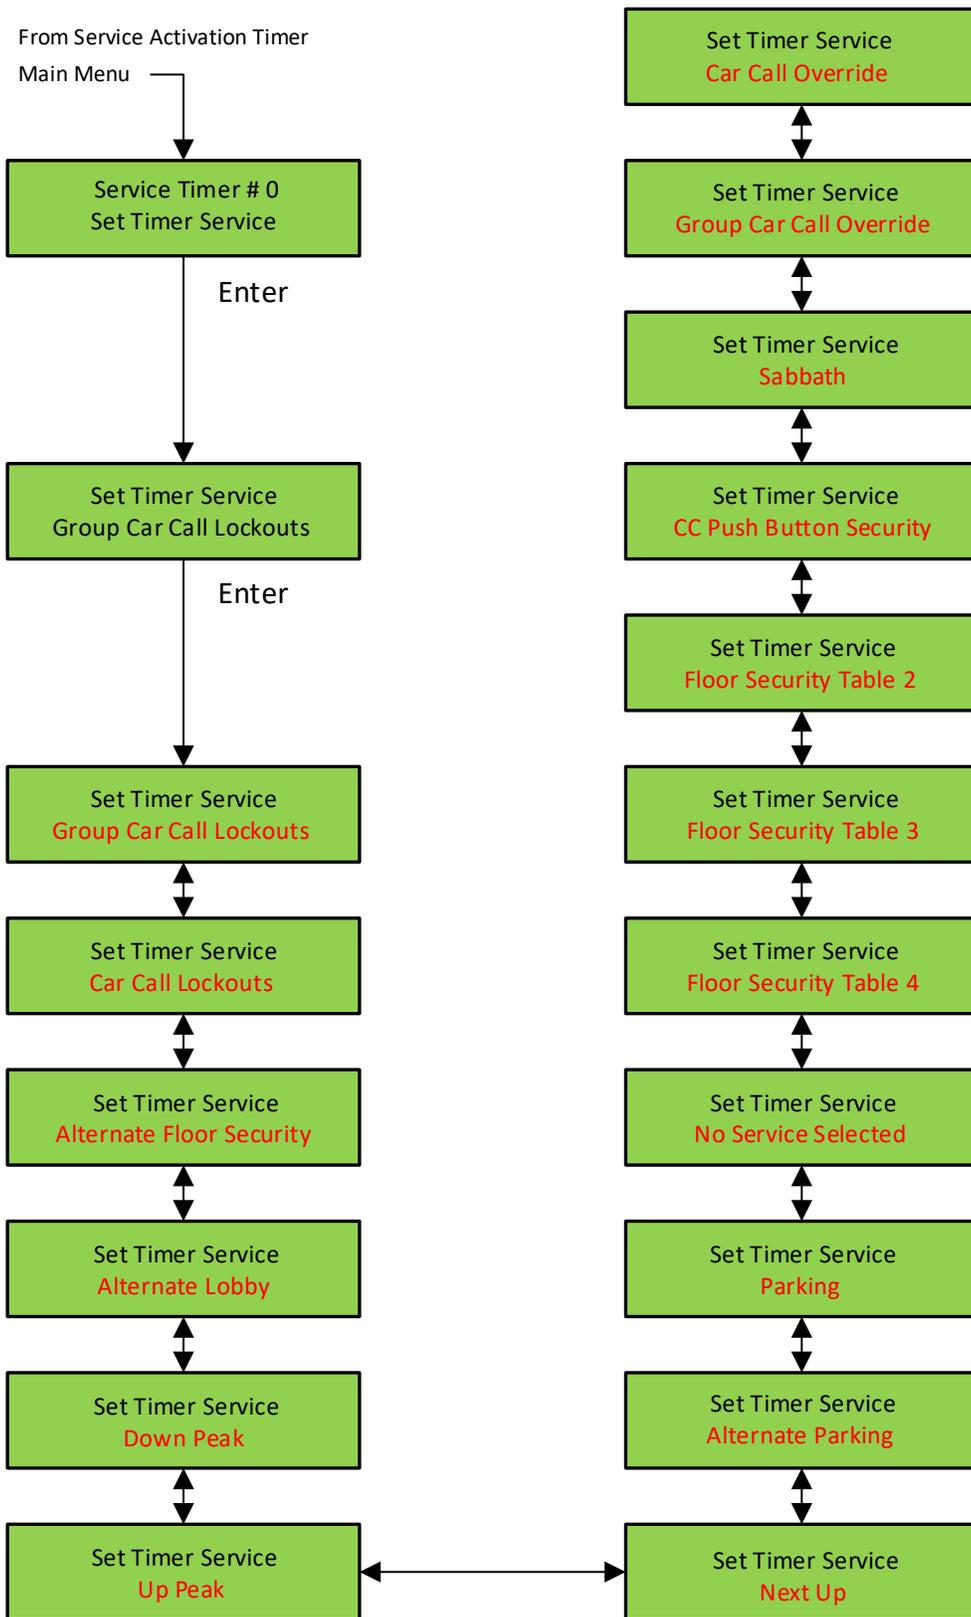

# LCD Interface - Set Day of Week Timers Submenu

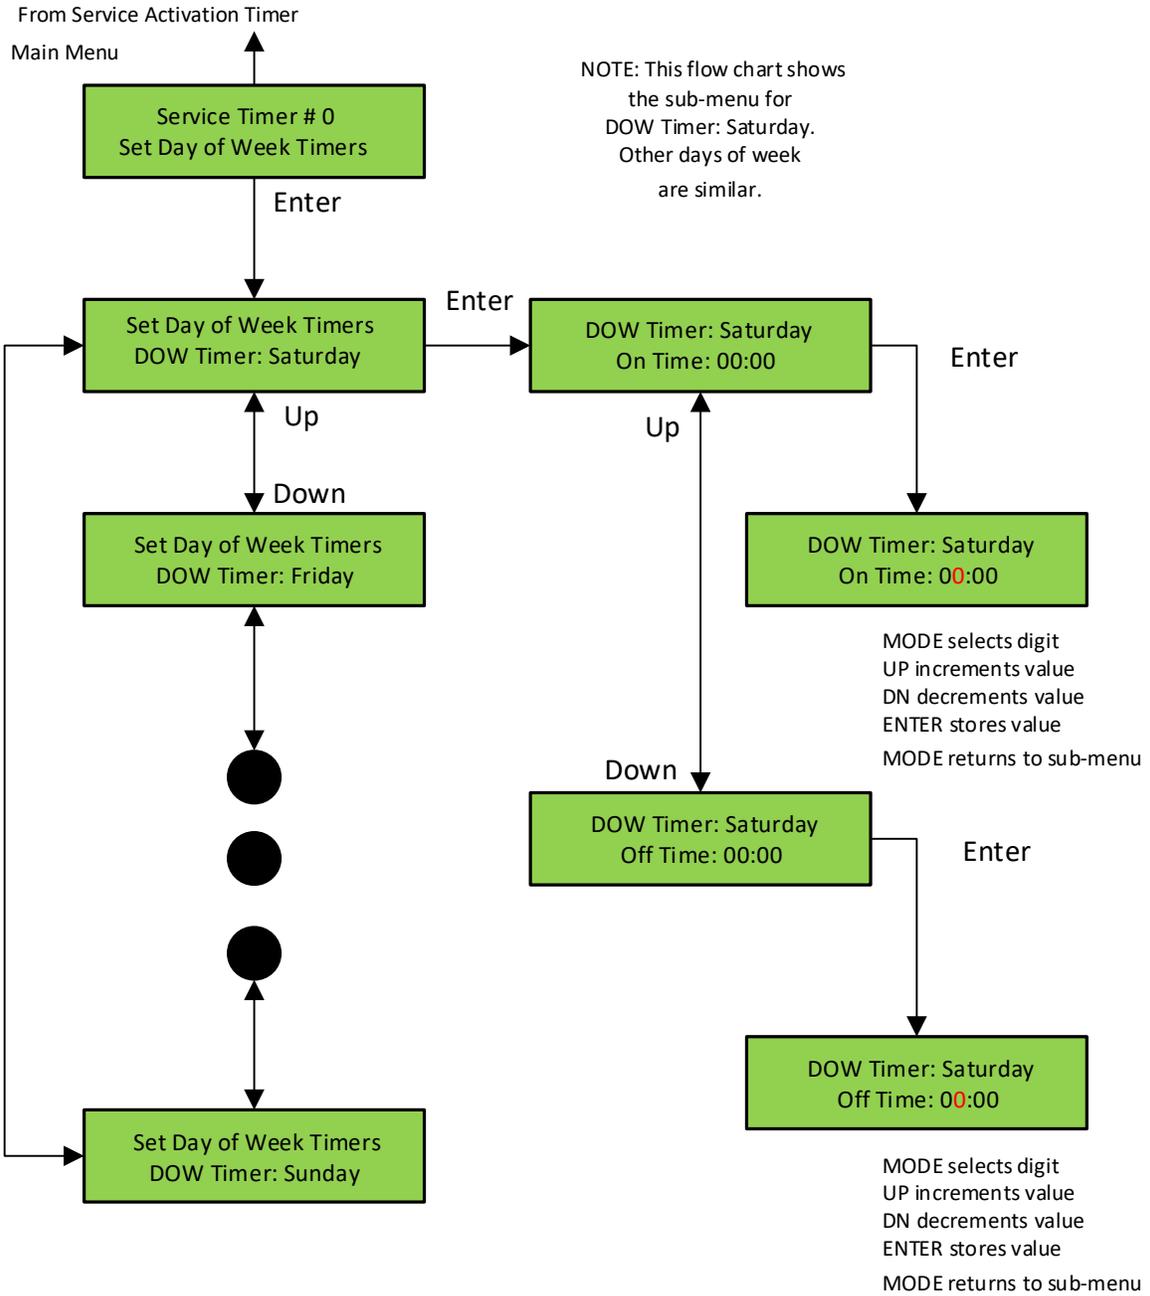

## Section 11 Main CPU Faults

Faults	Description	Possible Cause/Suggested Fix
Adv PreTrq Start Flt	Did not get safe on advance pre-torque start	<ul style="list-style-type: none"> <li>• Advance pre-torque is enabled. When it activated, the controller waits for 5 seconds and expects the car to have moved by then. If the car has not moved in the 5 seconds the fault gets declared. Possible Door operator or door lock failure caused car not to go.</li> </ul>
ASV Time-out Car 1	Automatic Service Time-out Car 1	<ul style="list-style-type: none"> <li>• Car was not able to answer group hall call within the automatic service time-out timer. Look for fault condition on car.</li> </ul>
ASV Time-out Car 2	Automatic Service Time-out Car 2	<ul style="list-style-type: none"> <li>• Car was not able to answer group hall call within the automatic service time-out timer. Look for fault condition on car.</li> </ul>
ASV Time-out Car 3	Automatic Service Time-out Car 3	<ul style="list-style-type: none"> <li>• Car was not able to answer group hall call within the automatic service time-out timer. Look for fault condition on car.</li> </ul>
ASV Time-out Car 4	Automatic Service Time-out Car 4	<ul style="list-style-type: none"> <li>• Car was not able to answer group hall call within the automatic service time-out timer. Look for fault condition on car.</li> </ul>
ASV Time-out Car 5	Automatic Service Time-out Car 5	<ul style="list-style-type: none"> <li>• Car was not able to answer group hall call within the automatic service time-out timer. Look for fault condition on car.</li> </ul>
ASV Time-out Car 6	Automatic Service Time-out Car 6	<ul style="list-style-type: none"> <li>• Car was not able to answer group hall call within the automatic service time-out timer. Look for fault condition on car.</li> </ul>
ASV Time-out Car 7	Automatic Service Time-out Car 7	<ul style="list-style-type: none"> <li>• Car was not able to answer group hall call within the automatic service time-out timer. Look for fault condition on car.</li> </ul>
ASV Time-out Car 8	Automatic Service Time-out Car 8	<ul style="list-style-type: none"> <li>• Car was not able to answer group hall call within the automatic service time-out timer. Look for fault condition on car.</li> </ul>

Faults	Description	Possible Cause/Suggested Fix
At Floor Shutdown	At floor shutdown	<ul style="list-style-type: none"> <li>• Car faulted out while at floor. Look at the fault log for a different fault at the same time to determine cause of failure.</li> </ul>
Aut Swg Fr Door Open	Automatic Swing Front Door Open Fault. The swing door can only close by removing the door open signal and allowing the door to close mechanically. This fault is declaring the door stayed open when the open signal was removed.	<ul style="list-style-type: none"> <li>• Verify that the ADO output has not failed on. If so then replace the output chip.</li> <li>• Verify that the door is not binding and is being prevented from closing.</li> </ul>
Aut Swg Rr Door Open	Automatic Swing Rear Door Open Fault. The swing door can only close by removing the door open signal and allowing the door to close mechanically. This fault is declaring the door stayed open when the open signal was removed.	<ul style="list-style-type: none"> <li>• Verify that the ADOR output has not failed on. If so then replace the output chip.</li> <li>• Verify that the door is not binding and is preventing from closing.</li> </ul>
Binary Input Fault	The floor position, read from binary inputs on the selector, does not match the car position.	<ul style="list-style-type: none"> <li>• Excessive wear on the selector guides.</li> <li>• Preset magnet is missing or misaligned.</li> <li>• Faulty hall effect sensor on sensor board.</li> <li>• Faulty output on selector driver board.</li> <li>• Improper wiring between selector and the Top of Car board (1037 or 1040 board).</li> <li>• Faulty BP1, BP2 or BP4 input</li> </ul>
BKS Fault Slowdown	BKS Brake Switch Fault Slowdown. The brake lift switch dropped during the run causing the car to slow down at the next available floor	<ul style="list-style-type: none"> <li>• Faulty brake lift switch.</li> <li>• Low brake hold voltage</li> </ul>
Bot Final Limit Flt	Bottom Final Limit Open	<ul style="list-style-type: none"> <li>• Car traveled onto the bottom final limit.</li> <li>• Faulty wiring of the final limit circuit.</li> </ul>

Faults	Description	Possible Cause/Suggested Fix
Bottom Door Lock Fault	The Bottom Door Lock <b>failed on</b> while the door was open.	<ul style="list-style-type: none"> <li>• Faulty door lock.</li> <li>• Door lock not adjusted properly.</li> <li>• Jumper placed on door lock circuit.</li> <li>• Faulty wiring to DLB input.</li> <li>• Faulty DLB and DLB-1 inputs (For this to occur both DLB and DLB-1 inputs must fail on).</li> <li>• DOL input failed. Replace DOL input chip.</li> <li>• Door operator open limit DOL is not adjusted properly</li> </ul>
Brake Drop Fault	Brake failed to drop. The BKS input did not close while stopped.	<ul style="list-style-type: none"> <li>• Improper adjustment of brake switch.</li> <li>• Brake failed to drop.</li> </ul>
Brake Pick Fault	Brake failed to pick. The BKS input did not open during the run.	<ul style="list-style-type: none"> <li>• Improper adjustment of brake switch.</li> <li>• Brake failed to pick.</li> </ul>
Brake Test Stall Flt	Brake Test Stall Fault. The elevator stalled during a brake test. A stall timer is running during the test using the <b>Learn HW Stall</b> time in the Car Timers menu. There is a protection timer that should never time out. In an event that the car does not move during the test, the 6 second velocity timer should always expire first.	<ul style="list-style-type: none"> <li>• Make sure the elevator can run properly at high speed.</li> <li>• Make sure the Learn HW Stall timer is set to 30 seconds or higher. The value set during a successful automatic hoistway learn would work fine.</li> </ul>
BRK CAN Com Error	Brake Board CAN Communication Error.	<ul style="list-style-type: none"> <li>• Faulty CAN communication wire connection. Verify proper twisted pair wires to the canh and canl terminals on the brake board.</li> <li>• Noise on the CAN bus. Verify that the shield wire is connected according to the job print.</li> </ul>
Brk Flt Set EM Brake	Emergency brake set from brake fault	<ul style="list-style-type: none"> <li>• 'Brake Lift Sw' parameter is set to 2 in 'Car Options'. There was a brake fault and this triggered an emergency brake/gripper fault.</li> </ul>

Faults	Description	Possible Cause/Suggested Fix
Brk Flt Set Gripper	The Rope Gripper was tripped when the brake did not drop. The 'Brake Lift Sw' adjustable variable in 'Car Options' can be set to only show the brake drop fault if the brake does not drop.	<ul style="list-style-type: none"> <li>• Improper adjustment of brake switch.</li> <li>• Brake failed to drop.</li> </ul>
BRK I/O Failed Off	The BRKi input or BRK output chip has failed off. The BRK contactor coil is wired through a NO contact of MC, a NO regulator release contact of the drive (DON) and a BRK triac of the controller.	<ul style="list-style-type: none"> <li>• Improper wiring of the brake BRK coil. Refer to prints for wire connections.</li> <li>• Faulty BRKi input. Replace BRKi input chip on 1038 board.</li> <li>• Faulty BRK output. Replace BRK output chip on 1038 board.</li> </ul>
BRK I/O Failed On	The BRK input or output has failed on.	<ul style="list-style-type: none"> <li>• Improper wiring of the brake BRK coil. Refer to prints for wire connections.</li> <li>• Faulty BRKi input. Replace BRKi input chip on 1038 board.</li> <li>• Faulty BRK output. Replace BRK output chip on 1038 board.</li> </ul>
BRK Low DC Bus Volts	Brake DC Bus Voltage (BK+, BK-) is less than 80% of expected	<ul style="list-style-type: none"> <li>• Incorrect Setting of Line to Line Brake voltage in Adjustable Variables</li> <li>• Incorrect dipswitch setting for Three Phase or Single Phase</li> <li>• Low Line Voltage</li> <li>• Rectifiers Blown or have bad connection</li> </ul>
BRK No Currnt w/Volt	Reading a resistance value (Vout/Aout) of 1000Ω or greater	<ul style="list-style-type: none"> <li>• No Brake Connected</li> <li>• Bad Current Sensor</li> </ul>
BRK No DC Bus Volts	DC Bus Voltage (BK+, BK-) is less than 5VDC	<ul style="list-style-type: none"> <li>• No AC Voltage Coming into AC1-AC2-AC3</li> <li>• Rectifiers Blown or have bad Connection</li> </ul>
BRK No Output Volts	If no DC Bus Faults, Requested Output Voltage is greater than 0, Actual Output voltage is less than 3VDC	<ul style="list-style-type: none"> <li>• IGBT Not Gating</li> </ul>

Faults	Description	Possible Cause/Suggested Fix
BRK Over Current Flt	Average Current is higher than Preset Limit (based on board configuration)	<ul style="list-style-type: none"> <li>• IGBT Shorted</li> <li>• Free Wheeling Diode Shorted</li> <li>• Gating Circuitry Shorted ON</li> </ul>
BRK Over Voltage Flt	Output Voltage is at least 20V greater than the Voltage Requested.	<ul style="list-style-type: none"> <li>• IGBT Shorted</li> <li>• Gating Circuitry shorted ON</li> </ul>
BRK Rq Volt > DC Bus	Requested Output Voltage is 5% greater than the DC Bus Voltage (BK+, BK-)	<ul style="list-style-type: none"> <li>• Incorrect Setting of Pick/Hold/Relevel Voltage in Adjustable Variables</li> <li>• Low Line Voltage</li> </ul>
Buffer Switch Fault	Buffer Switch Open	<ul style="list-style-type: none"> <li>• Verify that the buffer switch is set and the switch is closed.</li> <li>• Faulty wiring on the buffer switch circuit.</li> <li>• Car hit the buffer</li> </ul>
Can Bus Off Error	CAN Bus Off Error. The can bus has been inactive for too long a period of time.	<ul style="list-style-type: none"> <li>• Faulty CAN bus wiring. Check the CAN bus terminal connections on all boards.</li> </ul>
CAN spb bad command	Unintended Motion Command to Safety Processor unintentionally set	<ul style="list-style-type: none"> <li>• This fault should never occur. Contact GAL.</li> </ul>
Car 1 Comm Loss	Controller can't have this fault.	<ul style="list-style-type: none"> <li>• Faulty ram-flash memory chip.</li> <li>• Reset fault. If faults returns, replace memory chips.</li> </ul>
Car 2 Comm Loss	The group car is not communicating with Car 2.	<ul style="list-style-type: none"> <li>• Faulty wiring from R/T+ and R/T- from car to car.</li> <li>• Faulty 75176 driver chip on 1036 board.</li> <li>• Noise on shield wire. Connect shield only on one end.</li> <li>• Noise on the communication wires. Run wires in separate conduit.</li> </ul>
Car 3 Comm Loss	The group car is not communicating with Car 3.	<ul style="list-style-type: none"> <li>• Faulty wiring from R/T+ and R/T- from car to car.</li> <li>• Faulty 75176 driver chip on 1036 board.</li> <li>• Noise on shield wire. Connect shield only on one end.</li> <li>• Noise on the communication wires. Run wires in separate conduit.</li> </ul>

Faults	Description	Possible Cause/Suggested Fix
Car 4 Comm Loss	The group car is not communicating with Car 4.	<ul style="list-style-type: none"> <li>• Faulty wiring from R/T+ and R/T- from car to car.</li> <li>• Faulty 75176 driver chip on 1036 board.</li> <li>• Noise on shield wire. Connect shield only on one end.</li> <li>• Noise on the communication wires. Run wires in separate conduit.</li> </ul>
Car 5 Comm Loss	The group car is not communicating with Car 5.	<ul style="list-style-type: none"> <li>• Faulty wiring from R/T+ and R/T- from car to car.</li> <li>• Faulty 75176 driver chip on 1036 board.</li> <li>• Noise on shield wire. Connect shield only on one end.</li> <li>• Noise on the communication wires. Run wires in separate conduit.</li> </ul>
Car 6 Comm Loss	The group car is not communicating with Car 6	<ul style="list-style-type: none"> <li>• Faulty wiring from R/T+ and R/T- from car to car.</li> <li>• Faulty 75176 driver chip on 1036 board.</li> <li>• Noise on shield wire. Connect shield only on one end.</li> <li>• Noise on the communication wires. Run wires in separate conduit.</li> </ul>
Car 7 Comm Loss	The group car is not communicating with Car 7	<ul style="list-style-type: none"> <li>• Faulty wiring from R/T+ and R/T- from car to car.</li> <li>• Faulty 75176 driver chip on 1036 board.</li> <li>• Noise on shield wire. Connect shield only on one end.</li> <li>• Noise on the communication wires. Run wires in separate conduit.</li> </ul>
Car 8 Comm Loss	The group car is not communicating with Car 8	<ul style="list-style-type: none"> <li>• Faulty wiring from R/T+ and R/T- from car to car.</li> <li>• Faulty 75176 driver chip on 1036 board.</li> <li>• Noise on shield wire. Connect shield only on one end.</li> <li>• Noise on the communication wires. Run wires in separate conduit.</li> </ul>
Car Call Light Fuse	Car Call Light Fuse Blown	<ul style="list-style-type: none"> <li>• Check for short on the Car Call Light circuit.</li> </ul>
Car Call Power Fuse	Car Call Power Fuse Blown	<ul style="list-style-type: none"> <li>• Check for short on Car Call Power circuit.</li> </ul>
Car Com Device Reset	Serial Car board reset unexpectedly. Usually caused by loss of power to the individual board.	<ul style="list-style-type: none"> <li>• Usually caused by loss of power to the individual board. Check for loose connection on power terminal of the board.</li> <li>• Faulty I/O board.</li> </ul>

Faults	Description	Possible Cause/Suggested Fix
Car Gate Safe Fault	Car Gate safe fault	<ul style="list-style-type: none"> <li>• After Controller was safe with doors, gate switch and locks made, and ready to run, a Gate switch (front or rear) input turned OFF.</li> </ul>
Car Safe Fault	The Car Safe Fault occurs from the wanting to run but does not have a critical input energized. Some of the conditions for a car safe fault will also cause other faults to be logged.	<ul style="list-style-type: none"> <li>• The car does not have the gate or lock inputs and is running or trying to run</li> <li>• The gripper GTS input is not on.</li> <li>• The stop switch is open.</li> <li>• An Inspection String input fault. Only one input should be on in the inspection string (AUTO, CTI, ICI, ACC or MRI)</li> <li>• Gate or Lock Bypass switch is on when not on car top inspection.</li> </ul>
Car Safe Fault Preop	The car had a car safe fault while pre-opening the door.	<ul style="list-style-type: none"> <li>• The car lost the DZ input while leveling into the floor and the door was open.</li> </ul>
Car Safe Fault Start	The car had an onward call, had the door close limit but the car gate or door locks did not make after a 3 second time-out.	<ul style="list-style-type: none"> <li>• The locks are not making properly when the door closes.</li> <li>• The door is not closing properly.</li> </ul>
Car Safety Sw. Fault	Car Safety Switch Fault	<ul style="list-style-type: none"> <li>• Safety String Fault</li> <li>• Verify that the car safety is not tripped.</li> <li>• Faulty wiring in the car safety circuit</li> </ul>
Car Top Stop Switch	Car top stop switch	<ul style="list-style-type: none"> <li>• Safety String Fault. Refer to Safety String Page on diagrams. Check/replace CTS input Chip.</li> </ul>
CCB FET Open Blue	Car Call Board FET open blue	<ul style="list-style-type: none"> <li>• Faulty LED signal from RGB Board. Look at detailed car faults log to determine device. 'dev' gives you address for global CAN device, 'dv2' gives you local CAN device and 'pf1' the number for the IO location within the local board.</li> </ul>
CCB FET Open Green	Car Call Board FET open green	<ul style="list-style-type: none"> <li>• Faulty LED signal from RGB Board. Look at detailed car faults log to determine device. 'dev' gives you address for global CAN device, 'dv2' gives you local CAN device and 'pf1' the number for the IO location within the local board.</li> </ul>

Faults	Description	Possible Cause/Suggested Fix
CCB FET Open Red	Car Call Board FET open red	<ul style="list-style-type: none"> <li>Faulty LED signal from RGB Board. Look at detailed car faults log to determine device. 'dev' gives you address for global CAN device, 'dv2' gives you local CAN device and 'pf1' the number for the IO location within the local board.</li> </ul>
CCB FET Short Blue	Car Call Board FET short blue	<ul style="list-style-type: none"> <li>Faulty LED signal from RGB Board. Look at detailed car faults log to determine device. 'dev' gives you address for global CAN device, 'dv2' gives you local CAN device and 'pf1' the number for the IO location within the local board.</li> </ul>
CCB FET Short Green	Car Call Board FET short green	<ul style="list-style-type: none"> <li>Faulty LED signal from RGB Board. Look at detailed car faults log to determine device. 'dev' gives you address for global CAN device, 'dv2' gives you local CAN device and 'pf1' the number for the IO location within the local board.</li> </ul>
CCB FET Short Red	Car Call Board FET short red	<ul style="list-style-type: none"> <li>Faulty LED signal from RGB Board. Look at detailed car faults log to determine device. 'dev' gives you address for global CAN device, 'dv2' gives you local CAN device and 'pf1' the number for the IO location within the local board.</li> </ul>
CCB LED Open Blue	Car Call Board LED open blue	<ul style="list-style-type: none"> <li>Faulty LED signal from RGB Board. Look at detailed car faults log to determine device. 'dev' gives you address for global CAN device, 'dv2' gives you local CAN device and 'pf1' the number for the IO location within the local board.</li> </ul>
CCB LED Open Green	Car Call Board LED open green	<ul style="list-style-type: none"> <li>Faulty LED signal from RGB Board. Look at detailed car faults log to determine device. 'dev' gives you address for global CAN device, 'dv2' gives you local CAN device and 'pf1' the number for the IO location within the local board.</li> </ul>
CCB LED Open Red	Car Call Board LED open red	<ul style="list-style-type: none"> <li>Faulty LED signal from RGB Board. Look at detailed car faults log to determine device. 'dev' gives you address for global CAN device, 'dv2' gives you local CAN device and 'pf1' the number for the IO location within the local board.</li> </ul>
CCB LED Short Blue	Car Call Board LED short blue	<ul style="list-style-type: none"> <li>Faulty LED signal from RGB Board. Look at detailed car faults log to determine device. 'dev' gives you address for global CAN device, 'dv2' gives you local CAN device and 'pf1' the number for the IO location within the local board.</li> </ul>

Faults	Description	Possible Cause/Suggested Fix
CCB LED Short Green	Car Call Board LED short green	<ul style="list-style-type: none"> <li>Faulty LED signal from RGB Board. Look at detailed car faults log to determine device. 'dev' gives you address for global CAN device, 'dv2' gives you local CAN device and 'pf1' the number for the IO location within the local board.</li> </ul>
CCB LED Short Red	Car Call Board LED short red	<ul style="list-style-type: none"> <li>Faulty LED signal from RGB Board. Look at detailed car faults log to determine device. 'dev' gives you address for global CAN device, 'dv2' gives you local CAN device and 'pf1' the number for the IO location within the local board.</li> </ul>
CCB No Comm Aux Bd 1	Car Call Board local aux board 1 comm loss	<ul style="list-style-type: none"> <li>Comm loss to RGB Auxiliary Car Call Board. Check wiring and bus termination jumpers on boards. If problem persists, check Car Comm Status under diagnostics.</li> </ul>
CCB No Comm Aux Bd 2	Car Call Board local aux board 2 comm loss	<ul style="list-style-type: none"> <li>Comm loss to RGB Auxiliary Car Call Board. Check wiring and bus termination jumpers on boards. If problem persists, check Car Comm Status under diagnostics.</li> </ul>
CCB No Comm Board 1	Car Call Board local board 1 comm loss	<ul style="list-style-type: none"> <li>Comm loss to RGB Car Call Board. Check wiring and bus termination jumpers on boards. If problem persists, check Car Comm Status under diagnostics.</li> </ul>
CCB No Comm Board 2	Car Call Board local board 2 comm loss	<ul style="list-style-type: none"> <li>Comm loss to RGB Car Call Board. Check wiring and bus termination jumpers on boards. If problem persists, check Car Comm Status under diagnostics.</li> </ul>
CCB No LED Board	Car Call LED board missing	<ul style="list-style-type: none"> <li>Faulty LED signal from RGB Board. Look at detailed car faults log to determine device. 'dev' gives you address for global CAN device, 'dv2' gives you local CAN device and 'pf1' the number for the IO location within the local board.</li> </ul>
CCB Stuck Button	Car Call Board stuck button	<ul style="list-style-type: none"> <li>Faulty LED signal from RGB Board. Look at detailed car faults log to determine device. 'dev' gives you address for global CAN device, 'dv2' gives you local CAN device and 'pf1' the number for the IO location within the local board.</li> </ul>
Comp. Switch Fault	Compensating Rope Switch Open	<ul style="list-style-type: none"> <li>Verify that the compensating rope switch is set and the switch is closed.</li> <li>Improper cabling of the compensating ropes on the sheave.</li> </ul>

Faults	Description	Possible Cause/Suggested Fix
CWT Sw Error at DT	Car "above cwt" flag was set for above the counterweight when the car hit the down terminal slowdown limit.	<ul style="list-style-type: none"> <li>• The counterweight switch was not hit during the run or the car was lost when powered up.</li> <li>• Faulty wiring of the counterweight switch.</li> <li>• Improper adjustment of the counterweight switch.</li> </ul>
CWT Sw Error at UT	Car "above cwt" flag was set for below the counterweight when the car hit the up terminal slowdown limit.	<ul style="list-style-type: none"> <li>• The counterweight switch was not hit during the run or the car was lost when powered up.</li> <li>• Faulty wiring of the counterweight switch.</li> <li>• Improper adjustment of the counterweight switch.</li> </ul>
DBR Temperature Flt	Dynamic Braking Resistor Temperature Fault. The temperature for the dynamic braking resistors is read through a <b>temperature sensor</b> mounted above the resistors. The temperature sensor connects to the <b>temperature sensor input board</b> mounted on the DIO1 connector on the CPU board. When the temperature sensor opens a contact, the CPU detects a temperature fault, an error is recorded, the car is shut down at the next floor and the DBC relay is de-energized to open the DB Resistor circuit.	<ul style="list-style-type: none"> <li>• Faulty Temperature Sensor. If the DB Resistors are not hot, check the temperature sensor input board connected to the CPU board. The input LED should be on when the temperature is okay. If the LED is not on, jump the two terminals on the temperature input board and the LED should go on. If the LED goes on then the <b>Temperature Sensor</b> is bad. Replace the Temperature Sensor mounted near the resistors</li> <li>• Faulty Temperature Sensor Input Board. Test the sensor input as above. If the LED does not turn on when the input terminals are jumped together, replace the <b>Temperature Sensor Input Board</b> connected to the CPU.</li> </ul>
Delta Off Fault	DEL input did not come on at start or went off during a run.	<p><b>Traction</b> DEL=1 (on) at beginning and during a run. This fault means DEL never turned on or maybe dropped off during a run.</p> <ul style="list-style-type: none"> <li>• Faulty DEL input. Replace the DEL input chip.</li> </ul> <p><b>Hydro</b></p> <ul style="list-style-type: none"> <li>• The delta contact did not make on a Y-Delta starter.</li> <li>• The MC contact did not make on an across-the-line starter</li> <li>• The "at speed" contact did not make on an electronic soft-starter.</li> </ul> <p><b>NOTE:</b> On a Hyrdo DEL only turns on when moving UP, it is off when the car is moving down.</p>

Faults	Description	Possible Cause/Suggested Fix
Delta On Fault	DEL input failed on when is should have been off. This would occur at the start of a run when the I/Os are checked. The input failed on or the contact for the input failed closed.	<p><b>Traction</b> DEL=0 when the car is not running. This fault means that the input did not turn off when it was supposed to.</p> <ul style="list-style-type: none"> <li>Faulty DEL input (failed on). Check the input and output status on the LCD interface.</li> <li>Faulty contact for DEL input failed on. Replace the DEL input chip.</li> </ul> <p><b>Hydro</b> DEL did not turn off when it should have.</p> <ul style="list-style-type: none"> <li>Faulty DEL input. Replace the DEL input chip.</li> </ul> <p>NOTE: On a Hyrdo DEL only turns on when moving UP, it is off when the car is moving down.</p>
DL & DL-1 Opposite	Input failure on one of the Down Level sensor input	<ul style="list-style-type: none"> <li>Faulty DL or DL-1 input (replace input chips).</li> </ul>
DL Failed On Fault	DL Failed On Fault. The DL leveling sensor did not turn off during a run.	<ul style="list-style-type: none"> <li>DL hall effect sensor bad on selector sensor board. Replace sensor board.</li> <li>DL Output Driver failed on. Replace output on selector driver board GALX-1011.</li> <li>DL traveling cable wire is shorted to 120 VAC. Remove input wire to 1038 or 1064 board and verify that LED goes out. Correct short condition.</li> <li>DL inputs failed on. Short on 1038 or 1064 main I/O board. Replace main I/O board.</li> </ul>
DL20 Phone Test Failed	Phone Test from DL20 phone monitoring device indicated a failure	<ul style="list-style-type: none"> <li>Refer to the manufacturers troubleshooting guide for the DL20.</li> </ul>
DLB & DLB-1 Opposite	Input failure on one of the Door Lock Bottom (DLB) inputs.	<ul style="list-style-type: none"> <li>Faulty DLB or DLB-1 input (replace input chip).</li> </ul>
DLM & DLM-1 Opposite	Input failure on one of the Door Lock Middle (DLM) inputs.	<ul style="list-style-type: none"> <li>Faulty DLM or DLM-1 input (replace input chip).</li> </ul>
DLT & DLT-1 Opposite	Input failure on one of the Door Lock Top (DLT) inputs.	<ul style="list-style-type: none"> <li>Faulty DLT or DLT-1 input (replace input chip).</li> </ul>

Faults	Description	Possible Cause/Suggested Fix
Dn Normal SW Setup	Down Normal must always be on unless the car is <b>below</b> the lowest landing.	<ul style="list-style-type: none"> <li>The down normal needs to be moved down so when the car is Dead level at the bottom landing DN is ON. Allow at least 2 inches run before DN turns OFF</li> </ul>
DNR I/O Failed Off	The DNR input or output has failed off.	<p><b>Traction</b></p> <ul style="list-style-type: none"> <li>Fault on Safety Processor Board. This board can disable the run control to the DNR output chip. Check if the PIC or PAL inhibit LED turns on when the car attempts to run. Check the elevator service, faults, and inputs/outputs on the Safety Processor Board LCD display.</li> <li>Faulty DNR output or DNRI input. Replace the DNR output and DNRI input chip.</li> <li>No 24VDC from the drive. Refer to Schematics.</li> <li>Incorrect jumper placement on 1038 board. Verify that jumpers on the bottom of the board are positioned for the correct drive type (DSD or HPV).</li> <li>RUN, MC or BRK auxiliary contact not making properly. Contact GAL for instructions.</li> </ul> <p><b>Hydro</b></p> <ul style="list-style-type: none"> <li>Faulty wiring to the SD or SC terminal on the 1038/1064 board.</li> <li>Faulty wiring to the Down valve.</li> <li>Faulty SD output or SDi input. Replace output and input chip.</li> </ul>
DNR I/O Failed On	The DNR input or output has failed on.	<p><b>Traction</b></p> <ul style="list-style-type: none"> <li>Faulty DNR output. Replace the DNR output chip.</li> <li>Faulty DNRI input. Replace DNRI input chip.</li> <li>Incorrect jumper placement on 1038 board. Verify that jumpers on the bottom center of the board are positioned for the correct drive type (DSD or HPV). If necessary move the jumpers to the correct drive type.</li> </ul> <p><b>Hydro</b></p> <ul style="list-style-type: none"> <li>Faulty SDi input (replace input chip).</li> <li>Faulty SD output (replace output chip).</li> </ul>

Faults	Description	Possible Cause/Suggested Fix
DON I/O Failed Off	The DON input or the drive run relay contact has failed off. The run relay on the drive turns on the DON input (Drive ON) indicating that the regulator is released and the drive is controlling the motor.	<ul style="list-style-type: none"> <li>• Loss of voltage on terminal CS.</li> <li>• MC contact in series with the drive run relay opened.</li> <li>• The drive faulted on start and dropped the run contact .</li> </ul> Check the drive fault log. <ul style="list-style-type: none"> <li>• Faulty run relay in the drive.</li> <li>• Faulty DON input on the controller. Replace the DON input chip.</li> <li>• The run relay in the drive is not programmed properly.</li> </ul> Check the default drive setup for the Configure C3, Relay Coil 2= Speed Reg Rls parameter for a Magnetek drive.  Check do.83=DRO on a KEB drive.
DON I/O Failed On	The DON input or the drive output has failed on. When the drive is turned off, the run relay on the drive will drop out turning off DON.	<ul style="list-style-type: none"> <li>• Improper wiring of the brake BRK coil. Refer to prints for wire connections.</li> <li>• Faulty BRKi input. Replace BRKi input chip on 1038 board.</li> <li>• Faulty BRK output. Replace BRK output chip on 1038 board.</li> <li>• Fault on 1028 Safety Processor Board. The Safety Processor Board can disable the run control to the BRK output chip.</li> </ul> Check if the PIC or PAL inhibit LED turns on when the car attempts to run. Check the elevator service, faults, and inputs/outputs on the Safety Processor Board LCD display
Door Close Fault	The door did not reach the Door Close Limit within the door close protection time.	<ul style="list-style-type: none"> <li>• Door Close Limit (DCL) not adjusted properly.</li> <li>• Faulty Door Close Limit (DCL). Replace DCL input chip.</li> <li>• Trash in door track preventing door from closing.</li> </ul>
Door Lock Safe Fault	Door lock safe fault	<ul style="list-style-type: none"> <li>• After Controller was safe with doors, gate switch and locks made and ready to run, a door lock inputs turned OFF.</li> </ul>
Door Low Voltage Flt	Door Line Voltage Low	<ul style="list-style-type: none"> <li>• Voltage Sensor Board Related. Voltage being monitored for Door Operator dropped below the setting for parameter 'Low Door Volt '</li> </ul>
Door Motor Overload	Door Motor Overload	<ul style="list-style-type: none"> <li>• Door Motor Overload signal tripped. Check Input chip for DMO signal</li> </ul>
Door Open Fault	The door did not reach the Door Open Limit within the door open protection time.	<ul style="list-style-type: none"> <li>• Door Open Limit (DOL) not adjusted properly.</li> <li>• Faulty Door Open Limit (DOL). Replace DOL input chip.</li> </ul>

Faults	Description	Possible Cause/Suggested Fix
Door Zone Aux On Flt	The auxiliary door zone input failed on.	<ul style="list-style-type: none"> <li>• DZA output on selector board GALX-1011 failed on. (Replace DZA output on selector driver board).</li> <li>• One or both of the DZA sensors on the selector sensor board failed. Replace selector sensor board.</li> <li>• DZA input on the 1037/1040 board failed. Replace DZA input on 1037/1040 board.</li> </ul>
Door Zone Off Fault	The door zone input failed off.	<ul style="list-style-type: none"> <li>• DZ output on selector board GALX-1011 did not turn on. (Replace DZ output on selector driver board).</li> <li>• One or both of the DZ sensors on the selector sensor board failed. Replace selector sensor board.</li> <li>• DZ input on the 1040 board failed. Replace DZ input on 1037/1040 board.</li> </ul>
Door Zone On Fault	The door zone input failed on.	<ul style="list-style-type: none"> <li>• DZ output on selector board GALX-1011 did not turn off. (Replace DZ output on selector driver board).</li> <li>• One or both of the DZ sensors on the selector sensor board failed. Replace selector sensor board.</li> <li>• DZ input on the Main I/O board failed on. Replace DZ input on Main I/O board.</li> </ul>
DoorZone Aux Off Flt	The auxiliary door zone input failed off.	<ul style="list-style-type: none"> <li>• DZA output on selector board GALX-1011 did not turn on. (Replace DZA output on selector driver board).</li> <li>• One or both of the DZA sensors on the selector sensor board failed. Replace selector sensor board.</li> <li>• DZA input on the 1040 board failed. Replace DZA input on 1037/1040 board.</li> </ul>
Down Directional Fault	Car unexpectedly hit the Down Normal Limit while running down.	<ul style="list-style-type: none"> <li>• Faulty wiring for the DN limit.</li> <li>• The power common to the limit switches (CS) was lost. Check safety string prior to the CS terminal.</li> </ul>
DPM Input Fault	The DPM input fault occurs when door opens and the DPM input did not turn off.	<ul style="list-style-type: none"> <li>• DPM Cam not setup properly on the door operator.</li> <li>• Faulty DPM input. Replace DPM input chip.</li> </ul>
DPM Off/GS or DL On	DPM Off with Gate Switch or Door Lock On. The Door Protection Module input must go on before gate switch or door lock inputs go on.	<ul style="list-style-type: none"> <li>• The DPM switch on the door operator is not setup properly.</li> <li>• There is no DPM input on the door operator. Jump the DPM input to the GS (Gate Switch) terminal.</li> <li>• Fault DPM input. Replace the DPM input chip.</li> </ul>

Faults	Description	Possible Cause/Suggested Fix
Drive Com 8259 Error	Drive Communications 8259 Error. This error is used to detect a hardware failure on the controller communications port to the drive.	<ul style="list-style-type: none"> <li>• Hardware failure on the CPU board or 1036 board. If this error occurs, contact G.A.L.</li> </ul>
Drive Com Int Error	Drive Communications Interrupt Enable Error. This error is used to detect a hardware failure on the controller communications port to the drive.	<ul style="list-style-type: none"> <li>• Hardware failure on the CPU board or 1036 board. If this error occurs, contact G.A.L.</li> </ul>
Drive Com Rcv Error	Controller has a communications error with drive. The controller has not received a valid message from the drive for more than one second.	<ul style="list-style-type: none"> <li>• Faulty communications cable connection. Check the drive twisted pairs connected from the drive to the 1036 board.</li> <li>• Noise on the communication cable. Verify that the shield on the communications cable to the drive is connected to earth ground on one end.</li> <li>• Faulty communication chip. Replace the 75176 driver chips on the 1036 board.</li> </ul>
Drive Com Trm Error	Drive Communications Transmit Error. This error is used to detect a hardware failure on the controller communications port to the drive.	<ul style="list-style-type: none"> <li>• Hardware failure on the CPU board or 1036 board. If this error occurs, contact G.A.L.</li> </ul>
Drive Com Tx Stop Er	Drive Communications Transmit Stop Error. This error is used to detect a hardware failure on the controller communications port to the drive.	<ul style="list-style-type: none"> <li>• Missing jumper on J7 of the 1036 board (COM1 IRQ6). Install the jumper.</li> <li>• Hardware failure on the CPU board or 1036 board. If this error occurs and the jumper J7 is in place, contact G.A.L.</li> </ul>
Drive Com TxEmpty Er	Drive Communications Transmit Stop Error. This error is used to detect a hardware failure on the controller communications port to the drive.	<ul style="list-style-type: none"> <li>• Missing jumper on J7 of the 1036 board (COM1 IRQ6). Install the jumper.</li> <li>• Hardware failure on the CPU board or 1036 board. If this error occurs and the jumper J7 is in place, contact G.A.L.</li> </ul>

Faults	Description	Possible Cause/Suggested Fix
Drive has Com Error	Drive has a communications error. The controller has received a message from the drive that it has communication receive errors.	<ul style="list-style-type: none"> <li>• Faulty communications cable connection. Check the drive twisted pairs connected from the drive to the 1036 board.</li> <li>• Noise on the communication cable. Verify that the shield on the communications cable to the drive is connected to earth ground on one end.</li> <li>• Faulty communication chip. Replace the 75176 driver chips on the 1036 board.</li> </ul>
Drive Ready Fault	The drive has a fault	<ul style="list-style-type: none"> <li>• The drive has or had a fault. Check the drive fault log.</li> <li>• Faulty RDY input. (Replace the RDY input).</li> </ul>
DT Count Fault	The verification position count for the DT input switch was off by more than 10 inches when the switch was activated. This position count refers to the pulse count recorded during a hoistway learn.	<ul style="list-style-type: none"> <li>• The car was lost due to a preset error. Check the guides on the selector. Check the fault log for binary preset errors.</li> <li>• The controller has a faulty encoder signal for the pulse count. Check that the car can make long runs without overshooting the floor or stopping short of the floor. This refers to the CPU speed feedback.</li> <li>• The power common to the limit switches (CS) was lost. Check safety string prior to the CS terminal.</li> <li>• Incorrect counting of pulse counts. Check encoder connection to motor and encoder wiring.</li> <li>• Hoistway not learned properly. Perform a hoistway learn procedure.</li> <li>• DT switch not adjusted properly. Check at slow speed if switch is breaking, making and then breaking again. Switch needs to be closer to the cam.</li> </ul>
DT Failed On Fault	DT input Failed On Fault. The car was at the bottom floor and the DTS input was low true (DTS switch open) but the DT input was high (DT not made).	<ul style="list-style-type: none"> <li>• The DTS switch is not wired or the DTS switch is not used. If the DTS switch is not used, jump the DT and DTS inputs together.</li> <li>• The DT did not break at the bottom terminal landing. Adjust or replace the DT switch.</li> <li>• Faulty DT input. Replace the DT input chip.</li> </ul>

Faults	Description	Possible Cause/Suggested Fix
DT1 Count Fault	The verification position count for the DT1 input switch was off by more than 10 inches when the switch was activated. This position count refers to the pulse count recorded during a hoistway learn.	<ul style="list-style-type: none"> <li>• The car was lost due to a preset error. Check the guides on the selector. Check the fault log for binary preset errors.</li> <li>• The controller has a faulty encoder signal for the pulse count. Check that the car can make long runs without overshooting the floor or stopping short of the floor.</li> <li>• The power common to the limit switches (CS) was lost. Check safety string prior to the CS terminal.</li> <li>• Incorrect counting of pulse counts. Check encoder connection to motor and encoder wiring.</li> <li>• Hoistway not learned properly. Perform a hoistway learn procedure.</li> <li>• DT1 switch not adjusted properly. Check at slow speed if switch is breaking, making and then braking again. Switch needs to be closer to the cam.</li> </ul>
DT2 Count Fault	The verification position count for the DT2 input switch was off by more than 14 inches when the switch was activated. This position count refers to the pulse count recorded during a hoistway learn.	<ul style="list-style-type: none"> <li>• The car was lost due to a preset error. Check the guides on the selector. Check the fault log for binary preset errors.</li> <li>• The controller has a faulty encoder signal for the pulse count. Check that the car can make long runs without overshooting the floor or stopping short of the floor.</li> <li>• The power common to the limit switches (CS) was lost. Check safety string prior to the CS terminal.</li> <li>• Incorrect counting of pulse counts. Check encoder connection to motor and encoder wiring.</li> <li>• Hoistway not learned properly. Perform a hoistway learn procedure.</li> <li>• DT2 switch not adjusted properly. Check at slow speed if switch is breaking, making and then braking again. Switch needs to be closer to the cam.</li> </ul>
DT3 Count Fault	The verification position count for the DT3 input switch was off by more than 18 inches when the switch was activated. This position count refers to the pulse count recorded during a hoistway learn.	<ul style="list-style-type: none"> <li>• The car was lost due to a preset error. Check the guides on the selector. Check the fault log for binary preset errors.</li> <li>• The controller has a faulty encoder signal for the pulse count. Check that the car can make long runs without overshooting the floor or stopping short of the floor.</li> <li>• The power common to the limit switches (CS) was lost. Check safety string prior to the CS terminal.</li> <li>• Incorrect counting of pulse counts. Check encoder connection to motor and encoder wiring.</li> <li>• Hoistway not learned properly. Perform a hoistway learn procedure.</li> <li>• DT3 switch not adjusted properly. Check at slow speed if switch is breaking, making and then braking again. Switch needs to be closer to the cam.</li> </ul>

Faults	Description	Possible Cause/Suggested Fix
DT4 count Fault	<p>The verification position count for the DT4 input switch was off by more than 24 inches when the switch was activated. This position count refers to the pulse count recorded during a hoistway learn.</p>	<ul style="list-style-type: none"> <li>• The car was lost due to a preset error. Check the guides on the selector. Check the fault log for binary preset errors.</li> <li>• The controller has a faulty encoder signal for the pulse count. Check that the car can make long runs without overshooting the floor or stopping short of the floor.</li> <li>• The power common to the limit switches (CS) was lost. Check safety string prior to the CS terminal.</li> <li>• Incorrect counting of pulse counts. Check encoder connection to motor and encoder wiring.</li> <li>• Hoistway not learned properly. Perform a hoistway learn procedure.</li> <li>• DT4 switch not adjusted properly. Check at slow speed if switch is breaking, making and then braking again. Switch needs to be closer to the cam.</li> </ul>
DT5 count Fault	<p>The verification position count for the DT5 input switch was off by more than 32 inches when the switch was activated. This position count refers to the pulse count recorded during a hoistway learn.</p>	<ul style="list-style-type: none"> <li>• The car was lost due to a preset error. Check the guides on the selector. Check the fault log for binary preset errors.</li> <li>• The controller has a faulty encoder signal for the pulse count. Check that the car can make long runs without overshooting the floor or stopping short of the floor.</li> <li>• The power common to the limit switches (CS) was lost. Check safety string prior to the CS terminal.</li> <li>• Incorrect counting of pulse counts. Check encoder connection to motor and encoder wiring.</li> <li>• Hoistway not learned properly. Perform a hoistway learn procedure.</li> <li>• DT5 switch not adjusted properly. Check at slow speed if switch is breaking, making and then braking again. Switch needs to be closer to the cam.</li> </ul>
DT6 count Fault	<p>The verification position count for the DT6 input switch was off by more than 42 inches when the switch was activated. This position count refers to the pulse count recorded during a hoistway learn.</p>	<ul style="list-style-type: none"> <li>• The car was lost due to a preset error. Check the guides on the selector. Check the fault log for binary preset errors.</li> <li>• The controller has a faulty encoder signal for the pulse count. Check that the car can make long runs without overshooting the floor or stopping short of the floor.</li> <li>• The power common to the limit switches (CS) was lost. Check safety string prior to the CS terminal.</li> <li>• Incorrect counting of pulse counts. Check encoder connection to motor and encoder wiring.</li> <li>• Hoistway not learned properly. Perform a hoistway learn procedure.</li> <li>• DT6 switch not adjusted properly. Check at slow speed if switch is breaking, making and then braking again. Switch needs to be closer to the cam.</li> </ul>

Faults	Description	Possible Cause/Suggested Fix
DTS count Fault	Down Terminal Slowdown Limit Count Fault. The verification position count for the DTS input switch was off by more than 10 inches when the switch was activated. This position count refers to the pulse count recorded during a hoistway learn.	<ul style="list-style-type: none"> <li>• The car was lost due to a preset error. Check the guides on the selector. Check the fault log for binary preset errors.</li> <li>• The controller has a faulty encoder signal for the pulse count. Check that the car can make long runs without overshooting the floor or stopping short of the floor.</li> <li>• The power common to the limit switches (CS) was lost. Check safety string prior to the CS terminal.</li> <li>• Incorrect counting of pulse counts. Check encoder connection to motor and encoder wiring.</li> <li>• Hoistway not learned properly. Perform a hoistway learn procedure.</li> <li>• DTS switch not adjusted properly. Check at slow speed if switch is breaking, making and then braking again. Switch needs to be closer to the cam.</li> </ul>
DTS Failed On Fault	DTS input Failed On Fault. The car was at the bottom floor and the DT input was low true (DT switch open) but the DTS input was high (DTS not open).	<ul style="list-style-type: none"> <li>• The DT switch is not wired or DT input was lost.</li> <li>• The DTS did not break at the bottom terminal landing. Adjust or replace the DTS switch.</li> <li>• Faulty DTS input. Replace the DTS input chip.</li> </ul>
EBAi Input Off Fault	Emergency brake test contacts in BA1,BA2 failed off	<ul style="list-style-type: none"> <li>• Possible bad NC contact on BA1 or BA2 relays</li> <li>• Check wiring on emergency brake relays</li> <li>• Replace EBAi input on expansion i/o board</li> </ul>
EBAi Input On Fault	Emergency brake test contacts in BA1,BA2 failed on	<ul style="list-style-type: none"> <li>• Make sure BA1 and BA2 relays are being cycled</li> <li>• Replace EBAi input on expansion i/o board</li> </ul>
EBBi Input Off Fault	Emergency brake test contacts in BB1,BB2 failed off	<ul style="list-style-type: none"> <li>• Possible bad NC contact on BB1 or BB2 relays</li> <li>• Check wiring on emergency brake relays</li> <li>• Replace EBBi input on expansion i/o board</li> </ul>
EBBi Input On Fault	Emergency brake test contacts in BB1,BB2 failed on	<ul style="list-style-type: none"> <li>• Make sure BB1 and BB2 relays are being cycled</li> <li>• Replace EBBi input on expansion i/o board</li> </ul>
EBK1 Input Failed OFF	Emergency Brake EBK1i failed off fault	<ul style="list-style-type: none"> <li>• Locate EBK1 and visually determine if output is turning ON and OFF Faulty EBK1i input chip. Replace the EBK1i input chip.</li> <li>• Faulty EBK1 output Chip. Replace the EBK1 output chip.</li> <li>• Make sure the blue jumper connecting the input EBK1 to the output EBK1i is in place.</li> </ul>

Faults	Description	Possible Cause/Suggested Fix
EBK1 Input Failed ON	Emergency Brake EBK1 failed on fault	<ul style="list-style-type: none"> <li>• Locate EBK1 and visually determine if output is turning ON and OFF Faulty EBK1i input chip. Replace the EBK1i input chip.</li> <li>• Faulty EBK1 output Chip. Replace the EBK1 output chip.</li> <li>• Make sure the blue jumper connecting the input EBK1 to the output EBK1i is in place.</li> </ul>
EBK2 Input Failed OFF	Emergency Brake EBK2 failed off fault	<ul style="list-style-type: none"> <li>• Locate EBK2 and visually determine if output is turning ON and OFF Faulty EBK2i input chip. Replace the EBK2i input chip.</li> <li>• Faulty EBK2 output Chip. Replace the EBK2 output chip.</li> <li>• Make sure the blue jumper connecting the input EBK2 to the output EBK2i is in place.</li> </ul>
EBK2 Input Failed ON	Emergency Brake EBK2 failed on fault	<ul style="list-style-type: none"> <li>• Locate EBK2 and visually determine if output is turning ON and OFF Faulty EBK2i input chip. Replace the EBK2i input chip.</li> <li>• Faulty EBK1 output Chip. Replace the EBK2 output chip.</li> <li>• Make sure the blue jumper connecting the input EBK1 to the output EBK1i is in place.</li> </ul>
EE Ram Failed	EE Ram (Flash Memory) Fault. Valid flash memory is not found or memory chip is not large enough	<ul style="list-style-type: none"> <li>• Call factory to verify memory size on 1036 board. Replace memory chip with larger size.</li> <li>• Faulty 1036 board. Replace 1036 board</li> </ul>
EE Tst EE1 Failed OFF	Electric Eye Test. Freight door electric eye input EE1 failed off.	<ul style="list-style-type: none"> <li>• Verify that the electric eye input EE1 pulses on during the electric eye test.</li> <li>• Possible faulty electric eye device.</li> <li>• Possible faulty EE1 input - replace the input.</li> </ul>
EE Tst EE1 Failed ON	Electric Eye Test. Freight door electric eye input EE1 failed on.	<ul style="list-style-type: none"> <li>• Verify that the electric eye input EE1 is off before the electric eye test.</li> <li>• Possible faulty electric eye device.</li> <li>• Possible faulty EE1 input - replace the input.</li> </ul>
EE Tst EE2 Failed OFF	Electric Eye Test. Freight door electric eye input EE2 failed off.	<ul style="list-style-type: none"> <li>• Verify that the electric eye input EE2 pulses on during the electric eye test.</li> <li>• Possible faulty electric eye device.</li> <li>• Possible faulty EE2 input - replace the input.</li> </ul>

Faults	Description	Possible Cause/Suggested Fix
EE Tst EE2 Failed ON	Electric Eye Test. Freight door electric eye input EE2 failed on.	<ul style="list-style-type: none"> <li>• Verify that the electric eye input EE2 is off before the electric eye test.</li> <li>• Possible faulty electric eye device.</li> <li>• Possible faulty EE2 input - replace the input.</li> </ul>
EE Tst EER1 Failed OFF	Electric Eye Test. Freight rear door electric eye input EER1 failed off.	<ul style="list-style-type: none"> <li>• Verify that the electric eye input EER1 pulses on during the electric eye test.</li> <li>• Possible faulty electric eye device.</li> <li>• Possible faulty EER1 input - replace the input.</li> </ul>
EE Tst EER1 Failed ON	Electric Eye Test. Freight rear door electric eye input EER1 failed on.	<ul style="list-style-type: none"> <li>• Verify that the electric eye input EER1 is off before the electric eye test.</li> <li>• Possible faulty electric eye device.</li> <li>• Possible faulty EER1 input - replace the input.</li> </ul>
EE Tst EER2 Failed OFF	Electric Eye Test. Freight rear door electric eye input EER2 failed off.	<ul style="list-style-type: none"> <li>• Verify that the electric eye input EER2 pulses on during the electric eye test.</li> <li>• Possible faulty electric eye device.</li> <li>• Possible faulty EER2 input - replace the input.</li> </ul>
EE Tst EER2 Failed ON	Electric Eye Test. Freight rear door electric eye input EER2 failed on.	<ul style="list-style-type: none"> <li>• Verify that the electric eye input EER2 is off before the electric eye test.</li> <li>• Possible faulty electric eye device.</li> <li>• Possible faulty EER2 input - replace the input.</li> </ul>
EM Brake Input OFF	After the controller turns on the output EBKC, EBKi never came on	<ul style="list-style-type: none"> <li>• Improper wiring of the brake EBRKC coil. Refer to prints for wire connections.</li> <li>• Faulty EBKi input. Replace EBKi input chip on i/o board.</li> <li>• Faulty EBKC output. Replace EBKC output chip on i/o board</li> </ul>
EM Brake Input ON	The EBKi input or EBKC output has failed on.	<ul style="list-style-type: none"> <li>• Improper wiring of the brake Emergency Brake coil. Refer to prints for wire connections.</li> <li>• Faulty EBKi input. Replace EBKi input chip on i/o board.</li> <li>• Faulty EBKC output. Replace EBKC output chip on i/o board.</li> </ul>
EM Brake Switch OFF	Emergency brake switch EBKS failed off once the car stopped	<ul style="list-style-type: none"> <li>• Improper wiring of Emergency brake switch.</li> <li>• Faulty EBKS input. Replace EBKS input chip on i/o board.</li> </ul>

Faults	Description	Possible Cause/Suggested Fix
EM Brake Switch ON	Emergency brake switch EBKS failed off once the car stopped	<ul style="list-style-type: none"> <li>• Improper wiring of Emergency brake switch.</li> <li>• Faulty EBKS input. Replace EBKS input chip on i/o board.</li> <li>• Check adjustment of Emergency brake switch.</li> </ul>
EM BRK CAN Com Error	Emergency Brake Board Can Communication Error.	<ul style="list-style-type: none"> <li>• Faulty CAN communication wire connection. Verify proper twisted pair wires to the CANH and CANL terminals on the brake board.</li> <li>• Noise on the CAN Bus. Verify that the shield wire is connected according to the job print.</li> </ul>
Emergency Brake Trip	Emergency Brake Trip fault	<ul style="list-style-type: none"> <li>• Controller may have seen car overspeed, unintended motion or lost governor input (GOV). See last page of this Section for more detailed information: <b>Determining "Gripper/EBK fault" Device.</b></li> </ul>
Emergency Exit Flt	An emergency stop occurred while moving.	<ul style="list-style-type: none"> <li>• The Safety string opened while the car was running. Check the safety circuit.</li> <li>• The LC input is off. Check the LC fuse. If the LC fuse is blown check for short from LC to GND.</li> </ul>
Enc Can Bus Ack Err	Encoder CAN Bus acknowledge error	<p>Can Open Encoder is not pulling the acknowledge line when data is being transmitted to it. Verify the following:</p> <ul style="list-style-type: none"> <li>• The Encoder is properly wired according to the schematic.</li> <li>• The Controller's encoder can baud rate matches that of the encoder: <b>Adjustable Variables-&gt;System Options-&gt;Encoder Baud</b></li> <li>• Proper voltage is supplied to the encoder.</li> </ul>
Enc Can Bus Idle Err	Encoder CAN Bus idle	<p>Encoder CAN bus is floating for too many bit times so an idle bus is detected. Verify the following:</p> <ul style="list-style-type: none"> <li>• The Encoder is properly wired according to the schematic.</li> <li>• The Controller's encoder can baud rate matches that of the encoder: <b>Adjustable Variables-&gt;System Options-&gt;Encoder Baud</b></li> <li>• Proper voltage is supplied to the encoder.</li> </ul>

Faults	Description	Possible Cause/Suggested Fix
Enc Can Bus Off Err	Encoder CAN Bus off	Controller detected more than 255 transmit errors on CAN bus to the encoder. The CAN bus device is re-initialized to re-establish communications to the encoder. Verify the following: <ul style="list-style-type: none"> <li>• The Encoder is properly wired according to the schematic.</li> <li>• The Controller's encoder can baud rate matches that of the encoder: <b>Adjustable Variables-&gt;System Options-&gt;Encoder Baud</b></li> <li>• Proper voltage is supplied to the encoder.</li> </ul>
Enc Can Packet Fault	Encoder CAN Bus packet fault	Can Open Encoder did not respond with the expected packet. This could be caused by noise on the encoder cable. Make sure the encoder cable is properly shielded.
Encoder Busy Error	Encoder busy fault	Can Open Encoder appears as busy and it is not taking signals from controller. Check encoder to see if it failed. Check wiring and shield connections as well as voltage from the GALX- 1100 CPU Board.
Encoder Com Error	Encoder communication error. Encoder board detected Comm error while talking to the CAN Open encoder	<ul style="list-style-type: none"> <li>• Verify Connections on Encoder Board. Possible Noise on Encoder cable. Check Encoder Voltage. Check that the shield is wired on GALX-1100 CPU Board.</li> </ul>
Encoder Count Error	Encoder Count Error. An error is announced when the encoder count value is greater than 4 inches in 3 milliseconds. This is based on PPR (Pulses Per Inch) and the encoder is sending too many pulses.	<ul style="list-style-type: none"> <li>• Faulty encoder connection. Verify the encoder connection to the 1022 encoder isolation board.</li> <li>• Faulty 4I30 encoder board. Replace the 4I30 board.</li> <li>• Faulty 1022 encoder isolation board. Replace the encoder isolation board.</li> <li>• Bus address problem on the PC/104 bus. Contact GAL regarding this fault.</li> </ul>
Encoder Dir Fault	Encoder direction fault. Controller is in motion with an encoder velocity of more than 50 feet per minute and the direction of the encoder feedback is opposite to the direction run command	<ul style="list-style-type: none"> <li>• Check for proper Voltage on Encoder. Verify Connections on Encoder Board. Possible Noise on Encoder cable. Check that the shields are wired on encoder Isolation Board.</li> </ul>

Faults	Description	Possible Cause/Suggested Fix
Encoder Init	Encoder initialization fault. Encoder board failed to initialize CAN open Encoder	<ul style="list-style-type: none"> <li>• Verify Connections on Encoder Board.</li> <li>• Possible Noise on Encoder cable. Check Encoder Voltage.</li> <li>• Check that the shields are wired on GALX- 1100 CPU Board.</li> </ul>
Encoder PPR Error	PPR setting error from CAN Open encoder	<ul style="list-style-type: none"> <li>• Controller attempted to set PPR on the CAN Open Encoder but when we read it back, it did not change.</li> <li>• Possible Noise on Encoder cable. Check Encoder Voltage.</li> <li>• Check that the shields are wired on GALX- 1100 CPU Board.</li> </ul>
Encoder Preset Flt	Encoder Preset error generated because controller could not establish position from Can open encoder.	<ul style="list-style-type: none"> <li>• Can Open Encoder / Encoder Board lost track of car position.</li> <li>• Possible Noise on Encoder cable. Check Encoder Voltage.</li> <li>• Check that the shields are wired on GALX- 1100 CPU Board.</li> </ul>
EP Recall Car 1 OT	Emergency Power Recall Car Out of Service Car 1	<ul style="list-style-type: none"> <li>• Car 1 was out of service while elevators were in an Emergency Power Recall Sequence</li> <li>• Check faults for car 1</li> </ul>
EP Recall Car 2 OTS	Emergency Power Recall Car Out of Service Car 2	<ul style="list-style-type: none"> <li>• Car 2 was out of service while elevators were in an Emergency Power Recall Sequence</li> <li>• Check faults for car 2</li> </ul>
EP Recall Car 3 OTS	Emergency Power Recall Car Out of Service Car 3	<ul style="list-style-type: none"> <li>• Car 3 was out of service while elevators were in an Emergency Power Recall Sequence</li> <li>• Check faults for car 3</li> </ul>
EP Recall Car 4 OTS	Emergency Power Recall Car Out of Service Car 4	<ul style="list-style-type: none"> <li>• Car 4 was out of service while elevators were in an Emergency Power Recall Sequence</li> <li>• Check faults for car 4</li> </ul>
EP Recall Car 5 OTS	Emergency Power Recall Car Out of Service Car 5	<ul style="list-style-type: none"> <li>• Car 5 was out of service while elevators were in an Emergency Power Recall Sequence</li> <li>• Check faults for car 5</li> </ul>
EP Recall Car 6 OTS	Emergency Power Recall Car Out of Service Car 6	<ul style="list-style-type: none"> <li>• Car 6 was out of service while elevators were in an Emergency Power Recall Sequence</li> <li>• Check faults for car 6</li> </ul>

Faults	Description	Possible Cause/Suggested Fix
EP Recall Car 7 OTS	Emergency Power Recall Car Out of Service Car 7	<ul style="list-style-type: none"> <li>• Car 7 was out of service while elevators were in an Emergency Power Recall Sequence</li> <li>• Check faults for car 7</li> </ul>
EP Recall Car 8 OTS	Emergency Power Recall Car Out of Service Car 8	<ul style="list-style-type: none"> <li>• Car 8 was out of service while elevators were in an Emergency Power Recall Sequence</li> <li>• Check faults for car 8</li> </ul>
EPR Pwr Lost Moving	EP Recovery power lost while moving	<ul style="list-style-type: none"> <li>• Controller failed to turn on Normal Power Drive and Emergency Power Drive outputs (NPD and EPD) while in motion. Condition should not occur.</li> </ul>
EPRecall Car1 Tim-out	Emergency Power Recall Time-out Car 1	<ul style="list-style-type: none"> <li>• Car 1 timeout while it was in Emergency power recall mode</li> <li>• Make sure the field variable "Recall Timeout" is set properly to allow the car enough time to recover if it is between floors and away from Emergency Power Floor</li> <li>• If you have a blind shaft, consider increasing the Recovery Speed (default 25fpm)</li> </ul>
EPRecall Car2 Tim-out	Emergency Power Recall Time-out Car 2	<ul style="list-style-type: none"> <li>• Car 2 timeout while it was in Emergency power recall mode</li> <li>• Make sure the field variable "Recall Timeout" is set properly to allow the car enough time to recover if it is between floors and away from Emergency Power Floor</li> <li>• If you have a blind shaft, consider increasing the Recovery Speed (default 25fpm)</li> </ul>
EPRecall Car3 Tim-out	Emergency Power Recall Time-out Car 3	<ul style="list-style-type: none"> <li>• Car 3 timeout while it was in Emergency power recall mode</li> <li>• Make sure the field variable "Recall Timeout" is set properly to allow the car enough time to recover if it is between floors and away from Emergency Power Floor</li> <li>• If you have a blind shaft, consider increasing the Recovery Speed (default 25fpm)</li> </ul>
EPRecall Car4 Tim-out	Emergency Power Recall Time-out Car 4	<ul style="list-style-type: none"> <li>• Car 4 timeout while it was in Emergency power recall mode</li> <li>• Make sure the field variable "Recall Timeout" is set properly to allow the car enough time to recover if it is between floors and away from Emergency Power Floor</li> <li>• If you have a blind shaft, consider increasing the Recovery Speed (default 25fpm)</li> </ul>

Faults	Description	Possible Cause/Suggested Fix
EPRecall Car5 Tim-ot	Emergency Power Recall Time-out Car 5	<ul style="list-style-type: none"> <li>• Car 5 timeout while it was in Emergency power recall mode</li> <li>• Make sure the field variable "Recall Timeout" is set properly to allow the car enough time to recover if it is between floors and away from Emergency Power Floor</li> <li>• If you have a blind shaft, consider increasing the Recovery Speed (default 25fpm)</li> </ul>
EPRecall Car6 Tim-ot	Emergency Power Recall Time-out Car 6	<ul style="list-style-type: none"> <li>• Car 6 timeout while it was in Emergency power recall mode</li> <li>• Make sure the field variable "Recall Timeout" is set properly to allow the car enough time to recover if it is between floors and away from Emergency Power Floor</li> <li>• If you have a blind shaft, consider increasing the Recovery Speed (default 25fpm)</li> </ul>
EPRecall Car7 Tim-ot	Emergency Power Recall Time-out Car 7	<ul style="list-style-type: none"> <li>• Car 7 timeout while it was in Emergency power recall mode</li> <li>• Make sure the field variable "Recall Timeout" is set properly to allow the car enough time to recover if it is between floors and away from Emergency Power Floor</li> <li>• If you have a blind shaft, consider increasing the Recovery Speed (default 25fpm)</li> </ul>
EPRecall Car8 Tim-ot	Emergency Power Recall Time-out Car 8	<ul style="list-style-type: none"> <li>• Car 8 timeout while it was in Emergency power recall mode</li> <li>• Make sure the field variable "Recall Timeout" is set properly to allow the car enough time to recover if it is between floors and away from Emergency Power Floor</li> <li>• If you have a blind shaft, consider increasing the Recovery Speed (default 25fpm)</li> </ul>

Faults	Description	Possible Cause/Suggested Fix
Estop Fault	An emergency stop occurred while moving or attempting to move.	<p><b>Traction</b></p> <ul style="list-style-type: none"> <li>• The “P” input did not drop from MC, BRK or RUN contactors being energized.</li> <li>• The drive on (DON) input did not energize or dropped out while running.</li> <li>• The BRK contactor did not energize or dropped out while running.</li> <li>• BRKI input did not turn on or dropped out while running.</li> </ul> <p><b>Hydro</b></p> <ul style="list-style-type: none"> <li>• The DEL contactor did not energize or dropped out while running</li> <li>• The DEL input did not turn on or dropped out while running.</li> <li>• An emergency power recall was initiated while the car was running up.</li> </ul> <p><b>Both Traction and Hydro</b></p> <ul style="list-style-type: none"> <li>• The stop switch was pulled while running.</li> <li>• The car was not safe usually from clipping a door lock. See Car Safe Fault.</li> <li>• The stall protection timer timed-out.</li> <li>• The pulse count stopped counting.</li> </ul>
FDoor Close Cont Flt	Door Close Contact safe fault	<ul style="list-style-type: none"> <li>• After Controller was safe with doors, gate switch, door contacts and locks made and ready to run, a door contact input turned OFF.</li> </ul>
FETST OFF Fault	Front Door Electric Eye Test Failed OFF. Output is turned on cause the electric eye outputs to controller input EE1 and EE2 to pulse.	<ul style="list-style-type: none"> <li>• FETST output or FETST input failed in the off state.</li> <li>• Replace the FETST output chip.</li> <li>• Replace the FETST input chip.</li> </ul>
FETST ON Fault	Front Door Electric Eye Test Failed ON. Output is turned on cause the electric eye outputs to controller input EE1 and EE2 to pulse.	<ul style="list-style-type: none"> <li>• FETST output or FETST input failed in the on state.</li> <li>• Replace the FETST output chip.</li> <li>• Replace the FETST input chip.</li> </ul>
Field Vars Deflt Ini	Field Variables Default Initialization. Field adjustable variables are being initialized for the first time.	<ul style="list-style-type: none"> <li>• Job related parameters are invalid. This error occurs on the first time the 1036 board is being powered up.</li> </ul>

Faults	Description	Possible Cause/Suggested Fix
Field Vars Relocated	Field Variables Relocated. In software version 5.08 the adjustable field variables were relocated to a new location in flash memory to allow for additional future field variables.	<ul style="list-style-type: none"> <li>• The software has been updated to a version 5.08 or higher from a previous version. This is normal and should only occur once. If an older version software (earlier than 5.08) is later installed, the job parameters may be lost.</li> </ul>
Fire Fighter Stop Sw	Fire Fighter Stop switch is pulled while the car is in motion.	<ul style="list-style-type: none"> <li>• Fire Fighter Stop switch is pulled.</li> <li>• Faulty wire connection in the Fire Fighter stop switch circuit.</li> </ul>
Fld Var Partial Init	Field variables partial table initialized. Controller did not see extended memory initialized before. It should occur once when updating controller software	<ul style="list-style-type: none"> <li>• The software has been updated. This is normal and should only occur once. If fault constantly occurs please contact GAL.</li> </ul>
Front Det Edge Fault	Front Detector Edge Time-out	<ul style="list-style-type: none"> <li>• The Electric Eye signal stayed on continuously for longer than the parameter 'EE Time-out' is set to.</li> </ul>
FST I/O Failed Off	The FST input on the 1038 board did not pick up when expected.	<ul style="list-style-type: none"> <li>• Faulty FST output chip. Replace output chip.</li> <li>• Faulty FSTI input chip. Replace input chip.</li> </ul>
FST I/O Failed On	The FST input on the 1038 board did not drop out when expected.	<ul style="list-style-type: none"> <li>• Faulty FST output chip. Replace output chip.</li> <li>• Faulty FSTI input chip. Replace input chip.</li> </ul>
FSTP I/O Failed Off	The FSTP input on the 1038 board did not pick up when expected.	<ul style="list-style-type: none"> <li>• Faulty FST1 output chip. Replace output chip.</li> <li>• Faulty FSTI input chip. Replace input chip.</li> </ul>
FSTP I/O Failed On	The FSTP input on the 1038 board did not drop out up when expected	<ul style="list-style-type: none"> <li>• Faulty FST1 output chip. Replace output chip.</li> <li>• Faulty FSTI input chip. Replace input chip.</li> </ul>
FVARS Backup Init	Field Variables Backup Init. Field variables backed up for the first time.	Older software did not backup the field variables. When new software replaces the older software this error will be displayed. If this error occurs every time the CPU powers up, then the CPU may be faulty and should be replaced.

Faults	Description	Possible Cause/Suggested Fix
FVARS Backup Tbl Cksm	Field Variables Backup Table Checksum Error. The verification checksum for the backup field variable table has failed.	During power outages or brown-outs, enough noise can be generated on the 5V DC supply to cause an error in reading the field variables table on power up. For this reason we keep the data in two separate tables. If only one table checksum error occurs, then valid data will be restored. No action is required.
FVARS Backup Tbl Err	Field Variables Backup Table Error. The field variables from the backup MRAM table does not match the variable read into memory from the main MRAM table.	Most likely, if this error occurs, other FVARS errors will also occur. A once-in-a-while occurrence of this error can be ignored if it is not accompanied by the following errors: FVARS Both Tbl Chksum error or FVARS Tbl Chksum Error. If either error occurs with this error, the main CPU board should be replaced.
FVARS Both Tbl Chksum	Field Variables Both Table Checksum Table error. The verification checksum for both the main field variable table and backup table has failed.	Field Variable data is stored in two separate MRAM tables and a checksum of each table is stored in a separate location. When the system powers up, the checksum of each table is verified. If one table fails verification, the field variables are copied from the table that passed verification and then both tables are updated with valid data. If both checksum verifications fail, data is copied from the main table and an error code is displayed. <ul style="list-style-type: none"> <li>• If this fault occurs, replace the main CPU board.</li> </ul>
FVARS Tbl Chksum Err	Field Variables Table Checksum Error. The verification checksum for the main field variable table has failed.	During power outages or brown-outs, enough noise can be generated on the 5V DC supply to cause an error in reading the field variables table on power up. For this reason we keep the data in two separate tables. If only one table checksum error occurs, then valid data will be restored. No action is required.
Gate Switch Fault	The Gate Switch failed on while the door was open.	<ul style="list-style-type: none"> <li>• Gate switch not adjusted properly.</li> <li>• GS input failed on. Replace GS input on 1038/1064 board.</li> </ul>
Gate/Lock Bypass Switch Fault	The gate or lock bypass switch was on while the car was <b>NOT</b> on car top inspection.	<ul style="list-style-type: none"> <li>• Gate or Lock bypass switch on the controller 1038 board is in the on position.</li> <li>• Gate or Lock bypass input failed on. Replace GBP OR LBP input chip on 1038 board.</li> </ul>
Governor Switch Flt	Governor Switch Tripped.	<ul style="list-style-type: none"> <li>• Verify that the governor switch is set properly.</li> <li>• Verify that the drive is setup properly and that the car does not overspeed.</li> </ul>

Faults	Description	Possible Cause/Suggested Fix
Gripper did not Pick	The rope gripper did not pick when the GR1 and GR2 relays were energized.	<ul style="list-style-type: none"> <li>Faulty wiring to the rope gripper.</li> <li>Faulty GTS switch on rope gripper. Make sure that the switch opens and closes properly when the gripper is energized and dropped.</li> <li>Faulty GTS input. Replace the GTS input chip.</li> </ul>
Gripper Trip Fault	An overspeed or uncontrolled motion caused the rope gripper to trip.	<ul style="list-style-type: none"> <li>Check if the governor has tripped from.</li> <li>Make sure that the brake can hold the car.</li> </ul>
Group Comm Loss	Car 2 (or another car) is not communicating with Car 1.	<ul style="list-style-type: none"> <li>Faulty wiring from TX+/TX- from car to car.</li> <li>Faulty 75176 driver chip on the 1036 Comm/Memory board (next to the connector for the group comm).</li> <li>Noise on shield wire. Connect shield only on one end.</li> <li>Noise on the communication wires. Run wires in separate conduit.</li> </ul>
Grp Comm Config Err	Group Comm configuration error.	<ul style="list-style-type: none"> <li>There as a device trying to get initialized that should not be on the bus.</li> <li>Check detailed fault data for "dev" to identify board address</li> </ul>
GRT1 input Off Fault	While testing the rope gripper relays, the contacts for GR1R or GR2R did not close or the GRT1 input failed off.	<ul style="list-style-type: none"> <li>Faulty GR1R or GR2R relays. Replace both GR1R and GR2R relays.</li> <li>Faulty GRT1 input. Replace the GRT1 input chip.</li> </ul>
GRT1 Input On Fault	While testing the rope gripper relays, the contacts for GR1R or GR2R did not open or the GRT1 input failed on.	<ul style="list-style-type: none"> <li>Faulty GR1R or GR2R relays. Replace both GR1R and GR2R relays.</li> <li>Faulty GRT1 input. Replace the GRT1 input chip.</li> </ul>
GRT2 input Off Fault	While in a door zone the DZ and DZ1 contacts used in the rope gripper circuit were not closed or the GRT2 input failed off.	<ul style="list-style-type: none"> <li>Faulty DZ or DZ1 relays. Replace both DZ and DZ1 relays.</li> <li>Faulty GRT2 input. Replace the GRT2 input chip.</li> <li>Faulty LE or LE1 outputs. When a DZ input is turned on from the selector DZ output, LE and LE1 outputs control the DZ and DZ1 relays respectively. Replace the LE and LE1 output chips.</li> </ul>

Faults	Description	Possible Cause/Suggested Fix
GRT2 input On Fault	The DZ and DZ1 contacts used in the rope gripper circuit did not open during a run or the GRT2 input failed on.	<ul style="list-style-type: none"> <li>Faulty DZ or DZ1 relays. Replace both DZ and DZ1 relays.</li> <li>Faulty GRT2 input. Replace the GRT2 input chip.</li> <li>Faulty LE or LE1 outputs. When a DZ input is turned on from the selector DZ output, LE and LE1 outputs control the DZ and DZ1 relays respectively. Replace the LE and LE1 output chips.</li> </ul>
GS & GS-1 Opposite	Input failure on one of the Gate Switch (GS) inputs.	<ul style="list-style-type: none"> <li>GS or GS-1 input failed on. Replace GS or GS-1 input chip.</li> </ul> Check status of input from Input and Output menu on the LCD interface.
GTS Input Off Fault	Emergency Brake: GTS input did not turn on while doing the safety check for PFC and SFC relays.	<ul style="list-style-type: none"> <li>Check wiring for emergency brake</li> <li>Check emergency brake relays during safety check</li> <li>Faulty GTS input chip. Replace input chip.</li> </ul>
GTS Input On Fault	Emergency Brake: GTS input did not turn off while doing the safety check for PFC and SFC relays.	<ul style="list-style-type: none"> <li>Check wiring for emergency brake</li> <li>Check emergency brake relays during safety check</li> <li>Faulty GTS input chip. Replace input chip.</li> </ul>
Hall Call Light Fuse	Hall Call Light Fuse Blown	<ul style="list-style-type: none"> <li>Check for short on the Hall Call Light circuit.</li> </ul>
HC Com Device Reset	Serial Hall Call board reset unexpectedly. Usually caused by loss of power to the individual board.	<ul style="list-style-type: none"> <li>Usually caused by loss of power to the individual board.</li> <li>Faulty power connection to board.</li> <li>Faulty hall call board.</li> </ul>
HC DrvBd Rx from Bot	Not receiving packets from the bottom station	<ul style="list-style-type: none"> <li>Cable is bad or disconnected</li> <li>Cables going to wrong port (i.e., switched TO ABOVE and TO BELOW)</li> <li>Transmitter from device above or below is bad, check faults for that device.</li> <li>Receiver on driver board is bad – replace device</li> </ul>

Faults	Description	Possible Cause/Suggested Fix
HC DvrBd Tx to Bot	Can't internally read information from Transmitter to bottom station	<ul style="list-style-type: none"> <li>• Cable connecting two devices could be flip- flopped (i.e.,gray wire goes from pin 1 on one end to pin 8 on the other end &lt;- this is wrong). Disconnect cable, and if fault changes to Rx Fault, the problem is the cable.</li> <li>• Cables going to wrong port (i.e., switched TO ABOVE and TO BELOW)</li> <li>• Transmitter on driver board is bad – replace the Device.</li> </ul>
HC DvrBd Rx from Top	Not receiving packets from the top station.	<ul style="list-style-type: none"> <li>• Cable is bad or disconnected</li> <li>• Cables going to wrong port (i.e., switched TO ABOVE and TO BELOW)</li> <li>• Transmitter from device above or below is bad, check faults for that device.</li> <li>• Receiver on driver board is bad – replace device</li> </ul>
HC DvrBd Too Few Dev	Too Few stations detected based on configuration – will only trigger if loop is closed (i.e. will not trigger if device #5 is not functioning, causing driver to establish communication with all but one station.)	<ul style="list-style-type: none"> <li>• Check configuration and number of stations</li> </ul>
HC DvrBd TooMany Dev	Too Many stations detected based on configuration.	<ul style="list-style-type: none"> <li>• Check configuration and number of stations</li> </ul>
HC DvrBd Tx to Top	Can't internally read information from Transmitter to top station.	<ul style="list-style-type: none"> <li>• Cable connecting two devices could be flip- flopped (i.e.,gray wire goes from pin 1 on one end to pin 8 on the other end &lt;- This is wrong). Disconnect cable, and if fault changes to Rx Fault, the problem is the cable.</li> <li>• Cables going to wrong port (i.e., switched TO ABOVE and TO BELOW)</li> <li>• Transmitter on driver board is bad – replace the Device.</li> </ul>
HC Fuse Blown Fault	The HC input is off. No power on HC.	<ul style="list-style-type: none"> <li>• Make sure that the hall call power for each car is in phase. During a power up for car 1 while car 2 is powering the hall call power could cause a momentary short if the hall call power for each car is not in phase.</li> <li>• Short circuit in the hall call lighting circuitry.</li> </ul>

Faults	Description	Possible Cause/Suggested Fix
HCb Ax Dn Input OvlD	HCb Aux Down input overload	<ul style="list-style-type: none"> <li>• Controller detected overload in the input from the Aux terminal at the station. To identify fault device refer to Detailed Fault Log 'dev' and 'dv2' will provide address for Serial Driver address and Station where the fault was generated.</li> </ul>
HCb Ax Up Input OvlD	HCb Aux Up input overload	<ul style="list-style-type: none"> <li>• Controller detected overload in the input from the Aux terminal at the station. To identify fault device refer to Detailed Fault Log 'dev' and 'dv2' will provide address for Serial Driver address and Station where the fault was generated.</li> </ul>
HCb Device Comm Loss	The Driver does not see this HCb device	<ul style="list-style-type: none"> <li>• Comm faults above and below a device – check wiring</li> <li>• Board not powering up – check 24VAC (solid LED) and MCU (blinking LED) on device.</li> <li>• Fuses blown on driver.</li> </ul>
HCb Device Reset	The HCb has just comeback online	<ul style="list-style-type: none"> <li>• Fixed previous problem.</li> <li>• There is a power/communication problem, where the board is either resetting (power) or temporarily losing communication on both ports.</li> </ul>
HCb Dn FET Open	HCb fet open down	<ul style="list-style-type: none"> <li>• Replace GALX-1054AN (old) or GALX-1093AN (new)</li> </ul>
HCb Dn FET Short	HCb fet short down	<ul style="list-style-type: none"> <li>• Replace GALX-1054AN (old) or GALX-1093AN (new)</li> </ul>
HCb Dn Input Ovrload	HCb Down input overload	<ul style="list-style-type: none"> <li>• Controller detected overload in the input from the LED board at the station. To identify fault device refer to Detailed Fault Log 'dev' and 'dv2' will provide address for Serial Driver address and Station where the fault was generated.</li> </ul>
HCb Dn LED Open	HCb led open down	<ul style="list-style-type: none"> <li>• Make Sure there is a GALX-1056AN (old) or PBLB-0006AN (new) attached to the proper connector (Up LED always attached to CN5, Down LED attached to CN5 if only down call at that station (like the top floor), otherwise attached via ribbon at CN6.</li> <li>• Replace GALX-1056AN (old) or PBLB-0006AN (new) for the associated up or down call.</li> </ul>

Faults	Description	Possible Cause/Suggested Fix
HCb Dn LED Short	HCb led short down	<ul style="list-style-type: none"> <li>• Make Sure there is a GALX-1056AN (old) or PBLB-0006AN (new) attached to the proper connector (Up LED always attached to CN5, Down LED attached to CN5 if only down call at that station (like the top floor), otherwise attached via ribbon at CN6.</li> <li>• Replace GALX-1056AN (old) or PBLB-0006AN (new) for the associated up or down call.</li> </ul>
HCb FET Open Blue Dn	HCb fet open blue down	<ul style="list-style-type: none"> <li>• Replace GALX-1054AN (old) or GALX-1093AN (new)</li> </ul>
HCb FET Open Blue Up	HCb fet open blue up	<ul style="list-style-type: none"> <li>• Replace GALX-1054AN (old) or GALX-1093AN (new)</li> </ul>
HCb FET Open Grn Dn	HCb fet open green down	<ul style="list-style-type: none"> <li>• Replace GALX-1054AN (old) or GALX-1093AN (new)</li> </ul>
HCb FET Open Grn Up	HCb fet open green up	<ul style="list-style-type: none"> <li>• Replace GALX-1054AN (old) or GALX-1093AN (new)</li> </ul>
HCb FET Open Red Dn	HCb fet open red down	<ul style="list-style-type: none"> <li>• Replace GALX-1054AN (old) or GALX-1093AN (new)</li> </ul>
HCb FET Open Red Up	HCb fet short red up	<ul style="list-style-type: none"> <li>• Replace GALX-1054AN (old) or GALX-1093AN (new)</li> </ul>
HCb FET Short Blu Dn	HCb fet short blue down	<ul style="list-style-type: none"> <li>• Replace GALX-1054AN (old) or GALX-1093AN (new)</li> </ul>
HCb FET Short Blu Up	HCb fet short blue up	<ul style="list-style-type: none"> <li>• Replace GALX-1054AN (old) or GALX-1093AN (new)</li> </ul>
HCb FET Short Grn Dn	HCb fet short green down	<ul style="list-style-type: none"> <li>• Replace GALX-1054AN (old) or GALX-1093AN (new)</li> </ul>
HCb FET Short Grn Up	HCb fet short green up	<ul style="list-style-type: none"> <li>• Replace GALX-1054AN (old) or GALX-1093AN (new)</li> </ul>
HCb FET Short Red Dn	HCb fet short red down	<ul style="list-style-type: none"> <li>• Replace GALX-1054AN (old) or GALX-1093AN (new)</li> </ul>
HCb FET Short Red Up	HCb fet short red up	<ul style="list-style-type: none"> <li>• Replace GALX-1054AN (old) or GALX-1093AN (new)</li> </ul>

Faults	Description	Possible Cause/Suggested Fix
HCB Invalid Floor	HCB has invalid floor	<ul style="list-style-type: none"> <li>This fault is only intended for internal use to identify floors that need to be skipped in diagnostics. It should never occur</li> </ul>
HCB LED Open Blue Dn	HCB led open blue down	<ul style="list-style-type: none"> <li>Make Sure there is a GALX-1056AN (old) or PBLB-0006AN (new) attached to the proper connector (Up LED always attached to CN5, Down LED attached to CN5 if only down call at that station (like the top floor), otherwise attached via ribbon at CN6.</li> <li>Replace GALX-1056AN (old) or PBLB-0006AN (new) for the associated up or down call.</li> </ul>
HCB LED Open Blue Up	HCB led open blue up	<ul style="list-style-type: none"> <li>Make Sure there is a GALX-1056AN (old) or PBLB-0006AN (new) attached to the proper connector (Up LED always attached to CN5, Down LED attached to CN5 if only down call at that station (like the top floor), otherwise attached via ribbon at CN6.</li> <li>Replace GALX-1056AN (old) or PBLB-0006AN (new) for the associated up or down call.</li> </ul>
HCB LED Open Grn Dn	HCB led open green down	<ul style="list-style-type: none"> <li>Make Sure there is a GALX-1056AN (old) or PBLB-0006AN (new) attached to the proper connector (Up LED always attached to CN5, Down LED attached to CN5 if only down call at that station (like the top floor), otherwise attached via ribbon at CN6.</li> <li>Replace GALX-1056AN (old) or PBLB-0006AN (new) for the associated up or down call.</li> </ul>
HCB LED Open Grn Up	HCB led open green up	<ul style="list-style-type: none"> <li>Make Sure there is a GALX-1056AN (old) or PBLB-0006AN (new) attached to the proper connector (Up LED always attached to CN5, Down LED attached to CN5 if only down call at that station (like the top floor), otherwise attached via ribbon at CN6.</li> <li>Replace GALX-1056AN (old) or PBLB-0006AN (new) for the associated up or down call.</li> </ul>
HCB LED Open Red Dn	HCB led open red down	<ul style="list-style-type: none"> <li>Make Sure there is a GALX-1056AN (old) or PBLB-0006AN (new) attached to the proper connector (Up LED always attached to CN5, Down LED attached to CN5 if only down call at that station (like the top floor), otherwise attached via ribbon at CN6.</li> <li>Replace GALX-1056AN (old) or PBLB-0006AN (new) for the associated up or down call.</li> </ul>

Faults	Description	Possible Cause/Suggested Fix
HCB LED Open Red Up	HCB led short red up	<ul style="list-style-type: none"> <li>• Make Sure there is a GALX-1056AN (old) or PBLB-0006AN (new) attached to the proper connector (Up LED always attached to CN5, Down LED attached to CN5 if only down call at that station (like the top floor), otherwise attached via ribbon at CN6.</li> <li>• Replace GALX-1056AN (old) or PBLB-0006AN (new) for the associated up or down call.</li> </ul>
HCB LED Short Blu Dn	HCB led short blue down	<ul style="list-style-type: none"> <li>• Make Sure there is a GALX-1056AN (old) or PBLB-0006AN (new) attached to the proper connector (Up LED always attached to CN5, Down LED attached to CN5 if only down call at that station (like the top floor), otherwise attached via ribbon at CN6.</li> <li>• Replace GALX-1056AN (old) or PBLB-0006AN (new) for the associated up or down call.</li> </ul>
HCB LED Short Blu Up	HCB led short blue up	<ul style="list-style-type: none"> <li>• Make Sure there is a GALX-1056AN (old) or PBLB-0006AN (new) attached to the proper connector (Up LED always attached to CN5, Down LED attached to CN5 if only down call at that station (like the top floor), otherwise attached via ribbon at CN6.</li> <li>• Replace GALX-1056AN (old) or PBLB-0006AN (new) for the associated up or down call.</li> </ul>
HCB LED Short Grn Dn	HCB led short green down	<ul style="list-style-type: none"> <li>• Make Sure there is a GALX-1056AN (old) or PBLB-0006AN (new) attached to the proper connector (Up LED always attached to CN5, Down LED attached to CN5 if only down call at that station (like the top floor), otherwise attached via ribbon at CN6.</li> <li>• Replace GALX-1056AN (old) or PBLB-0006AN (new) for the associated up or down call.</li> </ul>
HCB LED Short Grn Up	HCB led short green up	<ul style="list-style-type: none"> <li>• Make Sure there is a GALX-1056AN (old) or PBLB-0006AN (new) attached to the proper connector (Up LED always attached to CN5, Down LED attached to CN5 if only down call at that station (like the top floor), otherwise attached via ribbon at CN6.</li> <li>• Replace GALX-1056AN (old) or PBLB-0006AN (new) for the associated up or down call.</li> </ul>

Faults	Description	Possible Cause/Suggested Fix
HCB LED Short Red Dn	HCB led short red down	<ul style="list-style-type: none"> <li>• Make Sure there is a GALX-1056AN (old) or PBLB-0006AN (new) attached to the proper connector (Up LED always attached to CN5, Down LED attached to CN5 if only down call at that station (like the top floor), otherwise attached via ribbon at CN6.</li> <li>• Replace GALX-1056AN (old) or PBLB-0006AN (new) for the associated up or down call.</li> </ul>
HCB LED Short Red Up	HCB led short red up	<ul style="list-style-type: none"> <li>• Make Sure there is a GALX-1056AN (old) or PBLB-0006AN (new) attached to the proper connector (Up LED always attached to CN5, Down LED attached to CN5 if only down call at that station (like the top floor), otherwise attached via ribbon at CN6.</li> <li>• Replace GALX-1056AN (old) or PBLB-0006AN (new) for the associated up or down call.</li> </ul>
HCB Low Supply Volt	Hall call board has low supply voltage	<ul style="list-style-type: none"> <li>• Low voltage at Hall call device level. To identify fault device refer to Detailed Fault Log 'dev' and 'dv2' will provide address for Serial Driver address and Station where the fault was generated.</li> </ul>
HCB No Dn Led Board	HCB No Down Led Board Detected	<ul style="list-style-type: none"> <li>• HCB board could not detect an LED board</li> <li>• Replace LED board (GALX-1085AN)</li> </ul>
HCB No Up Led Board	HCB No Up Led Board Detected	<ul style="list-style-type: none"> <li>• HCB board could not detect an LED board</li> <li>• Replace LED board (GALX-1085AN)</li> </ul>
HCB Rx from above fl	HCB rx fault up to above floor	<ul style="list-style-type: none"> <li>• Receiver on driver board is bad – replace device</li> <li>• Cable is bad or disconnected</li> <li>• Cables going to wrong port (i.e., switched to above and to below)</li> <li>• Transmitter from device above is bad.</li> </ul>
HCB Rx from below fl	HCB rx fault down from below floor	<ul style="list-style-type: none"> <li>• Receiver on driver board is bad – replace device</li> <li>• Cable is bad or disconnected</li> <li>• Cables going to wrong port (i.e., switched to above and to below)</li> <li>• Transmitter from device below is bad.</li> </ul>

Faults	Description	Possible Cause/Suggested Fix
HCB Stuck Dn Button	HCB stuck button down	<ul style="list-style-type: none"> <li>• Button is physically stuck – fix button</li> <li>• Input is stuck on or shorted – replace device</li> </ul>
HCB Stuck Up Button	HCB stuck button up	<ul style="list-style-type: none"> <li>• Button is physically stuck – fix button</li> <li>• Input is stuck on or shorted – replace device</li> </ul>
HCB Tx to above fl	Can't internally read information from Transmitter to device above	<ul style="list-style-type: none"> <li>• Cable connecting two devices could be flip- flopped (i.e.,gray wire goes from pin 1 on one end to pin 8 on the other end &lt;- this is wrong). Disconnect cable, and if fault changes to Rx Fault, the problem is the cable.</li> <li>• Transmitter is bad, Replace the Device</li> </ul>
HCB Tx to below fl	Can't internally read information from Transmitter to device below	<ul style="list-style-type: none"> <li>• Cable connecting two devices could be flip- flopped (i.e.,gray wire goes from pin 1 on one end to pin 8 on the other end &lt;- this is wrong). Disconnect cable, and if fault changes to Rx Fault, the problem is the cable.</li> <li>• Transmitter is bad, Replace the Device</li> </ul>
HCB Up FET Open	HCB fet open up	<ul style="list-style-type: none"> <li>• Replace GALX-1054AN (old) or GALX-1093AN (new)</li> </ul>
HCB Up FET Short	HCB fet short up	<ul style="list-style-type: none"> <li>• Replace GALX-1054AN (old) or GALX-1093AN (new)</li> </ul>
HCB Up Input Ovrload	HCB Up input overload	<ul style="list-style-type: none"> <li>• Controller detected overload in the input from the LED board at the station. To identify fault device refer to Detailed Fault Log 'dev' and 'dv2' will provide address for Serial Driver address and Station where the fault was generated.</li> </ul>
HCB Up LED Open	HCB led open up	<ul style="list-style-type: none"> <li>• Make Sure there is a GALX-1056AN (old) or PBLB-0006AN (new) attached to the proper connector (Up LED always attached to CN5, Down LED attached to CN5 if only down call at that station (like the top floor), otherwise attached via ribbon at CN6.</li> <li>• Replace GALX-1056AN (old) or PBLB-0006AN (new) for the associated up or down call.</li> </ul>

Faults	Description	Possible Cause/Suggested Fix
HCB Up LED Short	HCB led short up	<ul style="list-style-type: none"> <li>• Make Sure there is a GALX-1056AN (old) or PBLB-0006AN (new) attached to the proper connector (Up LED always attached to CN5, Down LED attached to CN5 if only down call at that station (like the top floor), otherwise attached via ribbon at CN6.</li> <li>• Replace GALX-1056AN (old) or PBLB-0006AN (new) for the associated up or down call.</li> </ul>
Hoist Motor Overload	Hoist Motor Overload	<ul style="list-style-type: none"> <li>• Hoist Motor Overload signal tripped. Check Input chip for HMO input</li> </ul>
Hoistway Default Ini	Hoistway Default Initialization. Hoistway values are being initialized for the first time.	<ul style="list-style-type: none"> <li>• Job related hoistway setup information is invalid. This occurs the first time the 1036 board is being powered up.</li> </ul>
Hoistway Learn Fault	Car is on automatic and the hoistway has not been learned.	<ul style="list-style-type: none"> <li>• Hoistway learn procedure needs to be performed.</li> <li>• Faulty ram-flash memory chip.</li> </ul>
Hoistway Update Init	Hoistway Update Initialization. Table of door zone positions for hoistway used to update position count while traveling has been initialized for the first time.	<ul style="list-style-type: none"> <li>• Job related hoistway setup information is invalid. This occurs on the first time the 1036 board is being powered up.</li> </ul>
Inspection Input Fault	More than one input is on in the inspection string <b>or</b> no input are on. The inspection string condition is also shown on the safety processor.	<ul style="list-style-type: none"> <li>• Faulty Top of Car inspection wiring. Verify voltage on CTA and ICA terminals when car top inspection switch is in the run position. Verify INS input when switch in the inspection position.</li> <li>• Verify that one and only one inspection string inputs is on: AUTO, MRI, INS, ICI and ACC.</li> <li>• Faulty inspection string input: AUTO, MRI, INS, ICI or ACC. Replace faulty input chip</li> </ul>

Faults	Description	Possible Cause/Suggested Fix
Inspection Up/Dn Sw	An up or down inspection run input was on when first entering into inspection operation. This caused from a faulty inspection up or down switch or from someone holding the up or down run button when placing the car on inspection.	<ul style="list-style-type: none"> <li>• Faulty inspection up or down input: IU, ID, MRIU, MRIU, BAD, BAU, TAD or TAU. Replace faulty input chip.</li> <li>• Faulty inspection wiring keeping an inspection up or down input on.</li> <li>• Placing the car on inspection while holding an up or down run button</li> </ul>
Invalid DT or DT1 Cnt	Invalid DT or DT1 Count. The position count for DT is greater than the count for DT1	<ul style="list-style-type: none"> <li>• Invalid hoistway learn. Re-learn the hoistway.</li> <li>• The hoistway has not been learned. Learn the hoistway.</li> <li>• If this problem is not corrected with a hoistway learn, contact the factory</li> </ul>
Invalid FL Offset Cnt	Invalid Floor Offset Count. If the offset count is greater than 3 inches.	<ul style="list-style-type: none"> <li>• The offset starts out at zero and is modified by the adjuster. This value should never be greater than 3 inches.</li> <li>• Encoder was changed from lower resolution to higher resolution which would cause the offset value to be out of range. Correct the offset value.</li> </ul>
Invalid DN or DT Cnt	Invalid DN or DT Count. The position count for DN is greater than the count for DT	<ul style="list-style-type: none"> <li>• Invalid hoistway learn. Re-learn the hoistway.</li> <li>• The hoistway has not been learned. Learn the hoistway.</li> <li>• If this problem is not corrected with a hoistway learn, contact the factory</li> </ul>
Invalid Floor Count	Invalid Floor Count. The floor count of the floor above must always be larger than the floor below. An above floor count was lower than the floor below in the floor hoistway table	<ul style="list-style-type: none"> <li>• Invalid hoistway learn. Re-learn the hoistway.</li> <li>• The hoistway has not been learned. Learn the hoistway.</li> <li>• If this problem is not corrected with a hoistway learn, contact the factory</li> </ul>
Invalid SEL Bot Cnt	Invalid Selector Bottom Count. (Tapeless selector) The bottom floor count is less than 4000. The count is initialized at 5000.	<ul style="list-style-type: none"> <li>• Invalid hoistway learn. Re-learn the hoistway.</li> <li>• The hoistway has not been learned. Learn the hoistway.</li> <li>• If this problem is not corrected with a hoistway learn, contact the factory</li> </ul>

Faults	Description	Possible Cause/Suggested Fix
Invalid SEL Top Cnt	Invalid Selector Top Count. The top selector count – the bottom selector count is less than the number of floors times 30. The count averaged less than 30 counts per floor.	<ul style="list-style-type: none"> <li>• Invalid hoistway learn. Re-learn the hoistway.</li> <li>• The hoistway has not been learned. Learn the hoistway.</li> <li>• If this problem is not corrected with a hoistway learn, contact the factory</li> </ul>
Invalid UT or UN Cnt	Invalid UT or UN Count. The position count for UT is greater than the count for UN	<ul style="list-style-type: none"> <li>• Invalid hoistway learn. Re-learn the hoistway.</li> <li>• The hoistway has not been learned. Learn the hoistway.</li> <li>• If this problem is not corrected with a hoistway learn, contact the factory</li> </ul>
Invld DT1 or DT2 Cnt	Invalid DT1 or DT2 Count. The position count for DT1 is greater than the count for DT2	<ul style="list-style-type: none"> <li>• Invalid hoistway learn. Re-learn the hoistway.</li> <li>• The hoistway has not been learned. Learn the hoistway.</li> <li>• If this problem is not corrected with a hoistway learn, contact the factory</li> </ul>
Invld DT2 or DT3 Cnt	Invalid DT2 or DT3 Count. The position count for DT2 is greater than the count for DT3	<ul style="list-style-type: none"> <li>• Invalid hoistway learn. Re-learn the hoistway.</li> <li>• The hoistway has not been learned. Learn the hoistway.</li> <li>• If this problem is not corrected with a hoistway learn, contact the factory</li> </ul>
Invld DT3 or DT4 Cnt	Invalid DT3 or DT4 Count. The position count for DT3 is greater than the count for DT4	<ul style="list-style-type: none"> <li>• Invalid hoistway learn. Re-learn the hoistway.</li> <li>• The hoistway has not been learned. Learn the hoistway.</li> <li>• If this problem is not corrected with a hoistway learn, contact the factory</li> </ul>
Invld DT4 or DT5 Cnt	Invalid DT4 or DT5 Count. The position count for DT4 is greater than the count for DT5	<ul style="list-style-type: none"> <li>• Invalid hoistway learn. Re-learn the hoistway.</li> <li>• The hoistway has not been learned. Learn the hoistway.</li> <li>• If this problem is not corrected with a hoistway learn, contact the factory</li> </ul>
Invld DT5 or DT6 Cnt	Invalid DT5 or DT6 Count. The position count for DT5 is greater than the count for DT6	<ul style="list-style-type: none"> <li>• Invalid hoistway learn. Re-learn the hoistway.</li> <li>• The hoistway has not been learned. Learn the hoistway.</li> <li>• If this problem is not corrected with a hoistway learn, contact the factory</li> </ul>

Faults	Description	Possible Cause/Suggested Fix
Invld DZU or DZD Cnt	Invalid DZU or DZD Count. If the DZU count is greater than the floor position count or the DZD count is less than the floor position count, then this error is declared.	<ul style="list-style-type: none"> <li>• Invalid hoistway learn. Re-learn the hoistway.</li> <li>• The hoistway has not been learned. Learn the hoistway.</li> <li>• If this problem is not corrected with a hoistway learn, contact the factory</li> </ul>
Invld UT1 or UT Cnt	Invalid UT1 or UT Count. The position count for UT1 is greater than the count for UT	<ul style="list-style-type: none"> <li>• Invalid hoistway learn. Re-learn the hoistway.</li> <li>• The hoistway has not been learned. Learn the hoistway.</li> <li>• If this problem is not corrected with a hoistway learn, contact the factory</li> </ul>
Invld UT2 or UT1 Cnt	Invalid UT2 or UT1 Count. The position count for UT2 is greater than the count for UT1	<ul style="list-style-type: none"> <li>• Invalid hoistway learn. Re-learn the hoistway.</li> <li>• The hoistway has not been learned. Learn the hoistway.</li> <li>• If this problem is not corrected with a hoistway learn, contact the factory</li> </ul>
Invld UT3 or UT2 Cnt	Invalid UT3 or UT2 Count. The position count for UT3 is greater than the count for UT2	<ul style="list-style-type: none"> <li>• Invalid hoistway learn. Re-learn the hoistway.</li> <li>• The hoistway has not been learned. Learn the hoistway.</li> <li>• If this problem is not corrected with a hoistway learn, contact the factory</li> </ul>
Invld UT4 or UT3 Cnt	Invalid UT4 or UT3 Count. The position count for UT4 is greater than the count for UT3	<ul style="list-style-type: none"> <li>• Invalid hoistway learn. Re-learn the hoistway.</li> <li>• The hoistway has not been learned. Learn the hoistway.</li> <li>• If this problem is not corrected with a hoistway learn, contact the factory</li> </ul>
Invld UT5 or UT4 Cnt	Invalid UT5 or UT4 Count. The position count for UT5 is greater than the count for UT4	<ul style="list-style-type: none"> <li>• Invalid hoistway learn. Re-learn the hoistway.</li> <li>• The hoistway has not been learned. Learn the hoistway.</li> <li>• If this problem is not corrected with a hoistway learn, contact the factory</li> </ul>
Invld UT6 or UT5 Cnt	Invalid UT6 or UT5 Count. The position count for UT6 is greater than the count for UT5	<ul style="list-style-type: none"> <li>• Invalid hoistway learn. Re-learn the hoistway.</li> <li>• The hoistway has not been learned. Learn the hoistway.</li> <li>• If this problem is not corrected with a hoistway learn, contact the factory</li> </ul>

Faults	Description	Possible Cause/Suggested Fix
Invlid Top Floor Cnt	Invalid Top Floor Count. The top floor count is zero.	<ul style="list-style-type: none"> <li>• Invalid hoistway learn. Re-learn the hoistway.</li> <li>• The hoistway has not been learned. Learn the hoistway.</li> <li>• If this problem is not corrected with a hoistway learn, contact the factory</li> </ul>
KEB Not In Run Mode	Keb drive not in run mode. We need to verify that the drive is in Run Mode before we do every Run.	<ul style="list-style-type: none"> <li>• LF.03 was not set to zero with the car in automatic. If the error occurred while troubleshooting disregard error. If it happens when in service, check drive for possible cause of this parameter not being set properly.</li> </ul>
L1 Low Line Voltage	L1 Line Voltage Low	<ul style="list-style-type: none"> <li>• Voltage Sensor Board Related. Voltage being monitored on L1 dropped below the setting for parameter ' Low Line Volt '</li> </ul>
L2 Low Line Voltage	L2 Line Voltage Low	<ul style="list-style-type: none"> <li>• Voltage Sensor Board Related. Voltage being monitored on L2 dropped below the setting for parameter ' Low Line Volt '</li> </ul>
L3 Low Line Voltage	L3 Line Voltage Low	<ul style="list-style-type: none"> <li>• Voltage Sensor Board Related. Voltage being monitored on L3 dropped below the setting for parameter ' Low Line Volt '</li> </ul>
LC Fuse Blown Fault	The LC input is off. No power on LC.	<ul style="list-style-type: none"> <li>• Short from LC to GND.</li> </ul>
Learn HW Safe Fault	Part of the safety string open while in automatic learn hoistway mode	<ul style="list-style-type: none"> <li>• Check for possible faults on the safety processor or drive</li> <li>• Door locks, gate switch or contacts open while in motion</li> </ul>
Learn HW Stall Fault	Car timed out while learning hoistway in auto mode.	<ul style="list-style-type: none"> <li>• Increase field variable "Hoistway Learn Stall Time" and try again</li> </ul>
Lev Flt Set EM Brake	Emergency brake set from leveling fault	<ul style="list-style-type: none"> <li>• A leveling fault occurred and the parameter 'Adjustable Options-&gt;Car Options-&gt;Leveling Fault = ' is set so it trips the Rope Gripper/Emergency Brake</li> </ul>
Lev Flt Set Gripper	Gripper set from leveling fault	<ul style="list-style-type: none"> <li>• A leveling fault occurred and the parameter 'Adjustable Options-&gt;Car Options-&gt;Leveling Fault = ' is set so it trips the Rope Gripper/Emergency Brake</li> </ul>

Faults	Description	Possible Cause/Suggested Fix
Level Stop Cnt Fault	Leveling stop fault occurred from incorrect count. As the car was leveling off the pulses, UL or DL turned off.	<ul style="list-style-type: none"> <li>• Floor offset value set too high</li> <li>• Increase dead zone when the car is configured to stop on the pulses instead of just the magnet</li> <li>• Ensure outer sensors are set no more than 7.5" apart</li> </ul>
Leveling Fault	Leveling Fault. When the car attempted to drop the brake, the car moved out of the dead level. The leveling fault count was incremented. If this occurs more times than the adjustable variable "Level Fault Cnt" then this error is declared.	<ul style="list-style-type: none"> <li>• Brake is dropping too slowly. Adjust the drop of the brake.</li> <li>• The drive is not holding zero speed. Run the car on inspection at 5fpm and while running change the inspection speed to zero. The car should stop and hold zero.</li> <li>• The response is not high enough on the drive.</li> <li>• Brake contactor is not dropping properly.</li> </ul>
Leveling Tim-out Flt	Leveling Time-out Fault	<ul style="list-style-type: none"> <li>• Car overshot floor and continue leveling.</li> <li>• Car targeted floor too soon and was creeping to the floor in leveling.</li> <li>• Check for causes of invalid pulse counts or invalid floor positions</li> <li>• Invalid floor position preset</li> <li>• Faulty encoder connection</li> <li>• Faulty encoder wiring</li> </ul>
Limit Opp Dir Flt	Car hit limits in wrong direction. In a single Run every Limit switch signal should only change state once or not change at all. If car was travelling down and an Up Terminal Slowdown switch goes LOW after we go in motion we will detect that as a fault.	<ul style="list-style-type: none"> <li>• If Controller is not really faulting, check that Slowdowns are not at the same position as the dead level position. In Gear-less jobs roll back could cause this extra change of state and therefore generate the fault. In that event reposition Terminal Slowdown by a couple of inches.</li> </ul>
Load Weigh Var Init	Load weigher init	<ul style="list-style-type: none"> <li>• Invalid load weigher table on power up. The load weigher table will be re-initialized to zero and the load weigher must be re-setup.</li> <li>• If this error persist, the MRAM on the CPU board is faulty. Replace the CPU board.</li> <li>• Ignore this error if the load weigher is not being used.</li> </ul>

Faults	Description	Possible Cause/Suggested Fix
Lobby Hall Call Fuse	Lobby Call common fuse	<ul style="list-style-type: none"> <li>Lobby Common fuse blown. Check Input chip for LHC</li> </ul>
LW Calibration Error	Load Weigher Calibration Error. The Load Weigher attempted to do an automatic calibration and could not be calibrated.	The load weigher device should be re-calibrated according to the manufacturer's instructions.
MCA I/O Failed Off	The MCA input or output has failed off.	<ul style="list-style-type: none"> <li>Faulty MCAi input chip. Replace input chip.</li> <li>Faulty MCA output chip. Replace output chip.</li> </ul>
MCA I/O Failed On	The MCA input or output has failed on.	<ul style="list-style-type: none"> <li>Faulty MCAi input chip. Replace input chip.</li> <li>Faulty MCA output chip. Replace output chip.</li> </ul>
MCC I/O Failed Off	The MCC input or output has failed off.	<ul style="list-style-type: none"> <li>Faulty MCCi input chip. Replace input chip.</li> <li>Faulty MCC output chip. Replace output chip.</li> </ul>
MCC I/O Failed On	The MCC input or output has failed on.	<ul style="list-style-type: none"> <li>Faulty MCCi input chip. Replace input chip.</li> <li>Faulty MCC output chip. Replace output chip.</li> </ul>
Middle Door Lock Fault	The Middle Door Lock failed on while the door was open.	<ul style="list-style-type: none"> <li>Faulty door lock.</li> <li>Jumper on door lock circuit.</li> <li>Door lock not adjusted properly.</li> <li>Faulty wiring to DLM input.</li> <li>Faulty DLM and DLM-1 inputs (For this to occur both DLM and DLM-1 inputs must fail on).</li> <li>DOL input failed. Replace DOL input chip.</li> <li>Door operator open limit DOL is not adjusted properly</li> </ul>
Motion Exit GTS Flt	GTS Motion emergency exit	<p>GTS input opened unexpectedly during a run.</p> <ul style="list-style-type: none"> <li>Faulty GTS switch on the rope gripper. Replace or correct the switch activation</li> </ul>
Motion Exit Ins Flt	Emergency motion exit from inspection	Car was in motion before going in inspection Mode. Check for inspection inputs faulting out or Automatic input going low.
MRAM Hardware Fault	MRAM Fault	The MRAM is tested on power up and has failed the test. Replace the CPU board.

Faults	Description	Possible Cause/Suggested Fix
MRAM Write Error	MRAM Write Error. After parameter data RAM has been modified through the user interface, the data is automatically written to MRAM for non-volatile storage. After the data is stored it is compared with the original parameter data. If it does not match a fault is recorded.	<ul style="list-style-type: none"> <li>This error should not occur. If it does occur, the problem is either a fault CPU board or MRAM chip. Replace the CPU board.</li> </ul>
NV Ram Failed	NV Ram (Battery Backed) Fault. Valid battery backed ram memory is not found or memory chip is not large enough	<ul style="list-style-type: none"> <li>Call factory to verify memory size on 1036 board. Replace memory chip with larger size.</li> <li>Faulty 1036 board. Replace 1036 board</li> </ul>
Overspeed Fault	Car overspeed fault. If the car goes 15% over contract speed the fault will be logged and the car will do an emergency stop.	<ul style="list-style-type: none"> <li>Encoder PPR incorrectly set. Set to match the Drive's Encoder Pulses.</li> <li>Encoder RPM incorrectly set. Set to match the Motor's RPM.</li> <li>The drive is not controlling the hoist machine motor. Check the response setting on the drive.</li> </ul>
P input off Fault	The normally closed contacts on MC, BRK or RUN contactors did not drop.	<ul style="list-style-type: none"> <li>Not enough current draw through all three contacts. Place a 10K 3W resistor from the normally closed contact of RUN to GND.</li> <li>Faulty normally closed contacts on MC, BK (traction only) or RUN. Replace auxiliary contacts.</li> </ul>
P Input On Fault	The "P" input did not drop out while the car was running. This input should drop out when MC, BRK and Run contactors are energized.	<p><b>Traction</b></p> <ul style="list-style-type: none"> <li>Faulty contactor or auxiliary contacts on MC, BRK or RUN. Replace auxiliary contacts or entire contactor.</li> </ul> <p><b>Hydro</b></p> <ul style="list-style-type: none"> <li>Faulty Soft-Starter Fault contactor failed to pick. Verify that the fault contactor has power from MST output. Refer to schematic and check voltage for Soft-Starter overload.</li> </ul>
PC/104 Bus Error	PC/104 Bus Error. During two consecutive reads to the encoder board the count value was different.	<ul style="list-style-type: none"> <li>This error detects a hardware error on the PC/104 bus. Contact GAL regarding this error.</li> </ul>

Faults	Description	Possible Cause/Suggested Fix
PFC Relay Failed Off	PFC relay did not pick up as expected	<ul style="list-style-type: none"> <li>Faulty PFC output chip. Replace output chip.</li> <li>Faulty PFC relay on main I/O Board (1038 or 1064). Replace PFC relay.</li> </ul>
PFC Relay Failed On	PFC relay did not drop as expected when performing a SFC/PFC test.	<ul style="list-style-type: none"> <li>Faulty PFC output chip. Replace output chip.</li> <li>Faulty PFC relay on main I/O Board (1038 or 1064). Replace PFC relay.</li> </ul>
PFC-SFC Test Lost DZ	Lost DZ input when performing a SFC/PFC test.	<ul style="list-style-type: none"> <li>DZ output on selector board did not turn on. (Replace DZ output on selector driver board).</li> <li>One or both of the DZ sensors on the selector sensor board failed. Replace selector sensor board.</li> <li>DZ input on the 1040 board failed. Replace DZ input on 1037/1040 board.</li> <li>Check leveling magnet.</li> </ul>
Pit Door Switch Flt	Pit Door Switch Open	<ul style="list-style-type: none"> <li>Verify that the pit door switch is closed.</li> <li>Faulty wiring on the pit door switch circuit.</li> </ul>
Pit Switch Fault	Pit Switch Input Open	<ul style="list-style-type: none"> <li>Verify that the pit switch is closed.</li> <li>Faulty wiring on the pit switch circuit.</li> </ul>
Pls Er 75% Top Speed	Pulse Error occurred while car is running greater than 75% of contract speed. The pulse counts have to change a minimum distance by the time the car reaches 75% of top speed.	<ul style="list-style-type: none"> <li>This error occurs if the car loses its pulse feedback from the encoder. Make sure that the encoder is not slipping. Check the encoder cable from the drive to the controller. Also check the ribbon cable from the encoder isolation board (1022N) to the encoder board (4130) on the PC/104 CPU stack.</li> <li>Possible faulty encoder isolation board (1022N), faulty ribbon cable or faulty encoder board (4130).</li> </ul>
Position Fault	The Terminal limits do not match the car position (UT or DT is hit but the car position is not at the top or bottom floor).	<ul style="list-style-type: none"> <li>Car is out of step from faulty selector inputs. Check that the DZ, UL and DL selector inputs work properly at each floor.</li> <li>UT or DT input lost from the safety string being opened.</li> <li>Improper adjustment of UT or DT limit switches.</li> </ul> <p><b>Hydro</b></p> <ul style="list-style-type: none"> <li>Car missed a slowdown input magnet. Check that the US and DS selector inputs work properly prior to each landing.</li> </ul>

Faults	Description	Possible Cause/Suggested Fix
Possible DRV/1028 Err	The controller CPU lost the car top stop switch input CTS, but has the SS and GTS inputs ON indicating that the drive or Safety Processor (1028) board has opened the safety string.	<ul style="list-style-type: none"> <li>• View the faults on the Safety Processor board display and debug from the fault code listed.</li> <li>• <b>Traction Only</b> - View the drive faults log or led status and debug as directed from the drive manual.</li> </ul>
Power Up Reset	Whenever power is cycled on the controller this error will indicate that the controller CPU was reset.	<ul style="list-style-type: none"> <li>• This error code is normal for a power loss. If power was <i>not</i> lost and the CPU re-boots, verify the +5VDC on the CPU power connector reads in the range of 4.90 and 5.1 VDC. If out of range, adjust the 5VDC supply pot for the correct voltage.</li> </ul>
Pulse Error > 75 fpm	Pulse count shows a travel distance less than 2 inches while the car demand velocity is greater than 75 fpm. Insufficient number of pulses from the encoder.	<ul style="list-style-type: none"> <li>• Make sure that the encoder is not slipping. Check the ribbon cable from the encoder isolation board (1022N) to the encoder board (4I30) on the PC/104 CPU stack.</li> <li>• Possible faulty encoder isolation board (1022N), faulty ribbon cable or faulty encoder board (4I30).</li> </ul>
PWL UPS Comm Fault	Power loss: Controller cannot establish comm to UPS	<ul style="list-style-type: none"> <li>• Check wiring and shielded pairs</li> <li>• Defective comm board</li> <li>• Possible bad UPS unit</li> </ul>
PWL UPS Low Bat Flt	Power loss: ups battery fault	<ul style="list-style-type: none"> <li>• UPS Battery voltage has dropped below 18V</li> <li>• Replace unit</li> </ul>
PWL UPS Low Bat Volt	Power loss: ups batter fault	<ul style="list-style-type: none"> <li>• Defective battery inside UPS unit</li> <li>• Make sure the UP is charging.</li> <li>• Replace UPS</li> </ul>
PWL UPS On Bat Power	Power loss: ups on battery power	<ul style="list-style-type: none"> <li>• No Line voltage on UPS. Unit running on battery power</li> </ul>
PWL UPS Turned Off	Power loss: ups turned off	<ul style="list-style-type: none"> <li>• Power loss on UPS. Power has been turned off</li> </ul>

Faults	Description	Possible Cause/Suggested Fix
RCM / Lock Flt	Retiring Cam/Lock fault. Job has door contacts and door lock inputs as well as retiring cam output. Door locks are not coming on when trying to leave the floor.	<ul style="list-style-type: none"> <li>• Door Contacts were already closed and the controller attempted to energize the retiring cam (RCM) several times and the door locks did not turn on. After 4 attempts, it will declare this fault. Check locks or retiring cam device.</li> </ul>
RDoor Close Cont Flt	Rear Door Close Contact safe fault	<ul style="list-style-type: none"> <li>• After Controller was safe with doors, gate switch, door contacts and locks made and ready to run, a door contact input turned OFF.</li> </ul>
Rear Bottom Door Lock Fault	The Rear Bottom Door Lock failed on while the door was open (door on the rear door open limit).	<ul style="list-style-type: none"> <li>• Faulty door lock.</li> <li>• Jumper placed on door lock circuit.</li> <li>• Rear door lock not adjusted properly.</li> <li>• Faulty wiring to DLB input.</li> <li>• Faulty DLB and DLB-1 inputs (For this to occur both DLB and DLB-1 inputs must fail on).</li> <li>• DOLR input failed. Replace DOLR input chip.</li> <li>• Rear door operator open limit is not adjusted properly</li> </ul>
Rear Det Edge Fault	Rear Detector Edge Time-out	<ul style="list-style-type: none"> <li>• The Rear Electric Eye signal stayed on continuously for longer than the parameter 'EE Time-out' is set to.</li> </ul>
Rear Door Close Fault	The rear door did not reach the Rear Door Close Limit within the door close protection time.	<ul style="list-style-type: none"> <li>• Rear Door Close Limit (DCLR) not adjusted properly.</li> <li>• Faulty Rear Door Close Limit (DCLR). Replace DCRL input.</li> <li>• Trash in door track preventing door from closing.</li> </ul>
Rear Door Open Fault	The rear door did not reach the Rear Door Open Limit within the door open protection time.	<ul style="list-style-type: none"> <li>• Rear Door Open Limit (DOLR) not adjusted properly.</li> <li>• Faulty Rear Door Open Limit (DOLR). Replace DOLR input.</li> </ul>
Rear Gate Switch Fault	The Rear Gate Switch failed on while the door was open.	<ul style="list-style-type: none"> <li>• Rear Gate switch not adjusted properly.</li> <li>• RGS input failed on. Replace RGS input.</li> </ul>

Faults	Description	Possible Cause/Suggested Fix
Rear Middle Door Lock Fault	The Middle Door Lock failed on while the door was open.	<ul style="list-style-type: none"> <li>• Faulty door lock.</li> <li>• Jumper placed on door lock circuit.</li> <li>• Rear door lock not adjusted properly.</li> <li>• Faulty wiring to RLM input.</li> <li>• Faulty RLM and RLM-1 inputs (For this to occur both RLM and RLM-1 inputs must fail on).</li> <li>• DOLR input failed. Replace DOLR input chip.</li> <li>• Rear door operator open limit is not adjusted properly</li> </ul>
Rear Top Door Lock Fault	The Rear Top Door Lock failed on while the door was open.	<ul style="list-style-type: none"> <li>• Faulty door lock.</li> <li>• Jumper placed on door lock circuit.</li> <li>• Rear door lock not adjusted properly.</li> <li>• Faulty wiring to DLT input.</li> <li>• Faulty DLT and DLT-1 inputs (For this to occur both DLT and DLT-1 inputs must fail on).</li> <li>• DOLR input failed. Replace DOLR input chip.</li> <li>• Rear door operator open limit is not adjusted properly</li> </ul>
Reset Fault	<p>Any time the system detects one of the following faults a reset fault is logged:</p> <ul style="list-style-type: none"> <li>• Power is cycled</li> <li>• Controller finds itself out of the door zone.</li> <li>• Binary input fault.</li> <li>• Terminal limits do not match the current position.</li> <li>• Car has been switched off of inspection.</li> <li>• After an open safety string has been closed.</li> </ul>	<ul style="list-style-type: none"> <li>• This fault is logged under normal conditions. Check the fault log for error that would indicate a fault condition prior to the reset fault.</li> </ul>
RETST OFF Fault	Rear Door Electric Eye Test Failed OFF. Output is turned on cause the electric eye outputs to controller input EER1 and EER2 to pulse.	<ul style="list-style-type: none"> <li>• RETST output or RETST input failed in the on state.</li> <li>• Replace the RETST output chip.</li> <li>• Replace the RETST input chip.</li> </ul>
RETST ON Fault	Rear Door Electric Eye Test Failed ON. Output is turned on cause the electric eye outputs to controller input EER1 and EER2 to pulse.	<ul style="list-style-type: none"> <li>• RETST output or RETST input failed in the on state.</li> <li>• Replace the RETST output chip.</li> <li>• Replace the RETST input chip.</li> </ul>

Faults	Description	Possible Cause/Suggested Fix
RGS & RGS-1 Opposite	Input failure on one of the Rear Gate Switch (RGS) inputs.	<ul style="list-style-type: none"> <li>Faulty RGS or RGS-1 input. Replace input chip.</li> </ul>
RLM & RLM-1 Opposite	Input failure on one of the Rear Lock Middle (RLM) inputs	<ul style="list-style-type: none"> <li>Faulty RLM or RLM-1 input. Replace input chip.</li> </ul>
RPM Input Fault	RPM Input Fault. The Rear Door Protection input stayed on when the rear door reached full open.	<ul style="list-style-type: none"> <li>RPM switch not setup properly on the door operator.</li> <li>Faulty RPM input. Replace RPM input chip.</li> </ul>
RPM Off/RGS or DL On	RPM Off with Rear Gate Switch or Door Lock On. The Rear Door Protection Module input must go on before rear gate switch or door lock inputs go on.	<ul style="list-style-type: none"> <li>The RPM switch on the door operator is not setup properly.</li> <li>There is no RPM input on the door operator. Jump the RPM input to the RGS terminal.</li> <li>Faulty RPM input. Replace the RPM input chip.</li> </ul>
Run Fault: Shutdown	<p>Run Fault: Shutdown. If the car attempts to run 4 consecutive times and incurs a specific type of emergency stop without making a successful run, the car is shut down and this error code is shown. The specific types of emergency stops to cause this fault are as follows:</p> <ol style="list-style-type: none"> <li>The car has picked the brake and is in the run mode for more than 2 seconds and the position pulse has not changed.</li> <li>The car is demanding a velocity greater than 75 fpm and change in position count is less than 3 inches.</li> <li>The run stall protection timer has expired (Adjustable Variables-&gt;Car Timers-&gt;Stall Time).</li> </ol>	<ul style="list-style-type: none"> <li>Verify that the brake is lifting properly.</li> <li>Verify that the encoder pulses increment and decrement when running up or down.</li> </ul>

Faults	Description	Possible Cause/Suggested Fix
RUN I/O Failed On	The RUN input or output has failed on (has not dropped).	<p><b>Traction</b></p> <ul style="list-style-type: none"> <li>• Faulty wiring to RN1 terminal.</li> <li>• Faulty RUNi input. Replace the RUNi input chip.</li> <li>• Faulty RUN output. Replace the RUN output chip.</li> </ul> <p><b>Hydro</b></p> <ul style="list-style-type: none"> <li>• Faulty wiring at the SC terminal. Verify that the valve common SC terminal on the 1038 board is connected properly.</li> <li>• Faulty RUNi input. Replace the RUNi input chip.</li> <li>• Faulty RUN output. Replace the RUN output chip.</li> </ul>
Run Inhibit Rset Cnt	Run inhibit from reset count	<ul style="list-style-type: none"> <li>• Once the car is in Reset mode, the controller attempted 5 times to come off reset but it keeps being sent back in reset.</li> </ul>
RUN O/RUN I Failed	RUN output failed off or run input failed on	<ul style="list-style-type: none"> <li>• Faulty RUNi input chip. Replace input chip.</li> <li>• Faulty RUN output chip. Replace output chip.</li> </ul>
RUN O/RUNA I Failed	RUN output failed off or RUNAi input failed on	<ul style="list-style-type: none"> <li>• Faulty RUNAi input chip. Replace input chip.</li> <li>• Faulty RUN output chip. Replace output chip.</li> </ul>
RUNA I/O Failed Off	The RUNA input or output has failed off.	<p><b>Traction</b></p> <ul style="list-style-type: none"> <li>• Fault on Safety Processor Board. This board can disable the run control to the RUNA output chip. Check if the PIC or PAL inhibit LEDs are on or if they turn on when the car attempts to run. Check the elevator service, faults, and inputs/outputs on the Safety Processor Board LCD display.</li> <li>• Faulty RUNAi input. Replace the RUNAi input chip.</li> <li>• Faulty RUNA output. Replace the RUNA output chip.</li> </ul> <p><b>Hydro</b></p> <ul style="list-style-type: none"> <li>• Faulty wiring at the SC terminal. Verify that the valve common SC terminal on the 1038 board is connected properly.</li> <li>• Faulty RUNAi input. Replace RUNAi input chip.</li> <li>• Faulty RUNA output. Replace RUNA output chip.</li> <li>• Faulty RUN output. Replace RUN output chip.</li> </ul>

Faults	Description	Possible Cause/Suggested Fix
RUNA I/O Failed Off	The RUNA input or output has failed off.	<p><b>Traction</b></p> <ul style="list-style-type: none"> <li>• Fault on Safety Processor Board. This board can disable the run control to the RUNA output chip. Check if the PIC or PAL inhibit LEDs are on or if they turn on when the car attempts to run. Check the elevator service, faults, and inputs/outputs on the Safety Processor Board LCD display.</li> <li>• Faulty RUNAi input. Replace the RUNAi input chip.</li> <li>• Faulty RUNA output. Replace the RUNA output chip.</li> </ul> <p><b>Hydro</b></p> <ul style="list-style-type: none"> <li>• Faulty wiring at the SC terminal. Verify that the valve common SC terminal on the 1038/1064 board is connected properly.</li> <li>• Faulty RUNAi input. Replace RUNAi input chip.</li> <li>• Faulty RUNA output. Replace RUNA output chip.</li> <li>• Faulty RUN output. Replace RUN output chip</li> </ul>
RUNA I/O Failed On	The RUNA input or output has failed on	<p><b>Traction</b></p> <ul style="list-style-type: none"> <li>• Faulty RUNAi input. Replace the RUNAi input chip.</li> <li>• Faulty RUNA output. Replace the RUNA output chip.</li> </ul> <p><b>Hydro</b></p> <ul style="list-style-type: none"> <li>• Faulty wiring at the SC terminal. Verify that the valve common SC terminal on the 1038 board is connected properly.</li> <li>• Faulty RUN output. Replace RUN output chip.</li> <li>• Faulty RUNAi input. Replace RUNAi input chip.</li> <li>• Faulty RUNA output. Replace RUNA output chip.</li> </ul>
RUNA O/RUN I Failed	RUNA output or RUNI input failed	<ul style="list-style-type: none"> <li>• RUNA output failed off. Replace the RUNA output chip. Or</li> <li>• RUNI input failed off. Replace the RUNI input chip.</li> </ul>
Safety String Fault	<p>Safety string fault occurs from the following conditions:</p> <ul style="list-style-type: none"> <li>• The safety string is open (SS input is off).</li> <li>• The drive ready input is not energized from the drive.</li> <li>• The potential to run input "P" is off.</li> </ul>	<ul style="list-style-type: none"> <li>• The safety string is open (SS input if off). Refer to the job prints and check all circuits ahead of the SS input.</li> </ul>

Faults	Description	Possible Cause/Suggested Fix
SEB CAN Com Error	Serial Expansion Board CAN Communications Error. One of the Serial Expansion boards is not communicating with the main CPU.	<ul style="list-style-type: none"> <li>From the LCD user interface, select the Diagnostic menu and then the Car Com Status menu. The device that is not communicating will be shown with the online status equal 0. Check the terminal connection for the twisted pair wires and check power to the board. A 5V LED should be on solid and the MCU &amp; COM LEDs should blink on and off at the same rate.</li> </ul>
Selector Count Fault	Selector Count Fault. If the hoistway has been learned and the selector count init flag (tapeless selector) is not set then this error is declared.	<ul style="list-style-type: none"> <li>The governor encoder has lost battery power.</li> <li>The encoder was disconnected from the governor.</li> <li>Faulty encoder connection to the governor</li> <li>Loss of communications from the Safety Processor Board to the encoder.</li> </ul>
Selector Preset Flt	Selector preset position fault	<ul style="list-style-type: none"> <li>Controller could not establish position from selector pulse count or tapeless encoder. It tried to establish position but pulse count did not match floor tables.</li> <li>Check pulses on Safety processor board, encoder comm and 485 encoder.</li> </ul>
SFC Relay Failed Off	SFC relay did not pick up as expected.	<ul style="list-style-type: none"> <li>Faulty SFC output chip. Replace output chip.</li> <li>Faulty SFC relay on main I/O Board (1038 or 1064). Replace SFC relay.</li> <li>Verify the software version on the safety processor board (1028) is 3.07 or higher.</li> </ul>
SFC Relay Failed On	SFC relay did not drop as expected when performing a SFC/PFC test.	<ul style="list-style-type: none"> <li>Faulty SFC output chip. Replace output chip.</li> <li>Faulty SFC relay on main I/O Board (1038 or 1064). Replace SFC relay.</li> <li>Verify the software version on the safety processor board (1028) is 3.07 or higher.</li> </ul>
Side Emerg. Exit Flt	Side Emergency Exit Fault	<ul style="list-style-type: none"> <li>Verify that the side emergency exit is properly shut and the switch is closed.</li> <li>Faulty wiring in the side emergency exit circuit.</li> </ul>
Slip Detect Fault	SPB Velocity difference fault. There is a speed difference between the CPU and the safety processor board possibly because of Rope Slippage	<ul style="list-style-type: none"> <li>This is a Slip detection mechanism required for 2010 code. The parameter Adjustable Variables-&gt;Car Options-&gt;Slip Vel Diff determines how many feet per minute the two speeds could be apart when Adjustable Variables-&gt;Car Options-&gt;Slip Det Dis is set to zero.</li> </ul>

Faults	Description	Possible Cause/Suggested Fix
SPB CAN Com Error	Safety Processor Board CAN Communications Error. The Safety Processor Board is not communicating to the main CPU.	<ul style="list-style-type: none"> <li>• Check the terminal connection for the twisted pair wires.</li> <li>• Verify that the bus termination jumper is placed on the Safety Processor Board (1028 or 1066).</li> <li>• Verify that the bus termination jumper is place on the 1036 Comm/Memory board.</li> <li>• Disconnect the CAN wires to the traveling cable. If the SPB (1028 or 1066) starts communicating, verify that the bus termination jumper is placed on the TOC board (1037 or 1040). Replace the traveling cable CAN wires.</li> </ul>
SPB Enc Opp Dir Flt	Safety Processor encoder opposite direction fault in tapeless encoder jobs. Car moving up while CPU is giving a Down command or vice versa.	<ul style="list-style-type: none"> <li>• Speed was greater than 100 foot per minute while the Safety Processor detected velocity in the opposite direction of the controller run command.</li> <li>• Possible Noise on Encoder cable. Check Encoder Voltage.</li> <li>• Check for wires shield connections on GALX- 1102 Board.</li> <li>• Make sure AdjVar-&gt;Enc Dir is set correctly in the Safety Processor.</li> </ul>
SPB SFC Off Fault	Safety Processor Board SFC fault. CPU detected SFC (Secondary Fault Controller) turn off while the ready input (RDY) was still on	<ul style="list-style-type: none"> <li>• Check faults in safety processor board</li> <li>• Replace SFC (EQR) input chip</li> <li>• If no voltage at SFC terminal and no faults in safety processor, replace output chip for SFC on the main i/o board</li> </ul>
SPB Unintend Motion	Safety Processor Board unintended motion	<ul style="list-style-type: none"> <li>• Safety processor detected unintended motion of elevator with the doors open.</li> </ul>
Speed Control Exit	Speed Control Exited from a fault condition.	<ul style="list-style-type: none"> <li>• The Electrical Safety String was open during a run. Check the safety string inputs.</li> <li>• The Drive dropped the SFD relay causing the RDY input to drop. Check the drive for faults.</li> <li>• The S10 input turned off. Possible short in traveling cable or bad S10 input. Correct short condition or replace S10 input on 1064 board.</li> <li>• GTS input turned off during run. Rope Gripper turned off.</li> <li>• Inspection Switch applied during run.</li> </ul>

Faults	Description	Possible Cause/Suggested Fix
Stalled Fault	Stall Fault occurs if the motion run timer exceeds the stall protection time. The motion run timer is incremented while the car is trying to run.	<ul style="list-style-type: none"> <li>• Increase Stall Timer on the controller under Adjustable Variables and Car Timers.</li> </ul>
Stop Switch Fault	Stop switch is pulled while the car is in motion.	<ul style="list-style-type: none"> <li>• Stop switch is pulled (in car stop switch).</li> <li>• Faulty wire connection in the stop switch circuit.</li> </ul>
Target Fault at DT	When going down, the target count should always be below the position count. This fault is logged if the target count is above the position count when the DT slowdown limit is hit.	<ul style="list-style-type: none"> <li>• This fault should never occur. Please call the factory if this fault occurs.</li> </ul>
Target Fault at DT1	This fault is logged if the target count is above the position count when the DT1 slowdown limit is hit.	<ul style="list-style-type: none"> <li>• This fault should never occur. Please call the factory if this fault occurs.</li> </ul>
Target Fault at DT2	This fault is logged if the target count is above the position count when the DT2 slowdown limit is hit.	<ul style="list-style-type: none"> <li>• This fault should never occur. Please call the factory if this fault occurs.</li> </ul>
Target Fault at DT3	This fault is logged if the target count is above the position count when the DT3 slowdown limit is hit.	<ul style="list-style-type: none"> <li>• This fault should never occur. Please call the factory if this fault occurs.</li> </ul>
Target Fault at DT4	This fault is logged if the target count is above the position count when the DT4 slowdown limit is hit.	<ul style="list-style-type: none"> <li>• This fault should never occur. Please call the factory if this fault occurs.</li> </ul>

Faults	Description	Possible Cause/Suggested Fix
Target Fault at DT5	This fault is logged if the target count is above the position count when the DT5 slowdown limit is hit.	<ul style="list-style-type: none"> <li>This fault should never occur. Please call the factory if this fault occurs.</li> </ul>
Target Fault at DT6	This fault is logged if the target count is above the position count when the DT6 slowdown limit is hit.	<ul style="list-style-type: none"> <li>This fault should never occur. Please call the factory if this fault occurs.</li> </ul>
Target Fault at DTS	This fault is logged if the target count is above the position count when the DTS slowdown limit is hit.	<ul style="list-style-type: none"> <li>This fault should never occur. Please call the factory if this fault occurs.</li> </ul>
Target Fault at UT	When going up, the target count should always be above the position count. This fault is logged if the target count is below the position count when the UT slowdown limit is hit.	<ul style="list-style-type: none"> <li>This fault should never occur. Please call the factory if this fault occurs.</li> </ul>
Target Fault at UT1	This fault is logged if the target count is below the position count when the UT1 slowdown limit is hit.	<ul style="list-style-type: none"> <li>This fault should never occur. Please call the factory if this fault occurs.</li> </ul>
Target Fault at UT2	This fault is logged if the target count is below the position count when the UT2 slowdown limit is hit.	<ul style="list-style-type: none"> <li>This fault should never occur. Please call the factory if this fault occurs.</li> </ul>
Target Fault at UT3	This fault is logged if the target count is below the position count when the UT3 slowdown limit is hit.	<ul style="list-style-type: none"> <li>This fault should never occur. Please call the factory if this fault occurs.</li> </ul>

Faults	Description	Possible Cause/Suggested Fix
Target Fault at UT4	This fault is logged if the target count is below the position count when the UT4 slowdown limit is hit.	<ul style="list-style-type: none"> <li>• This fault should never occur. Please call the factory if this fault occurs.</li> </ul>
Target Fault at UT5	This fault is logged if the target count is below the position count when the UT5 slowdown limit is hit.	<ul style="list-style-type: none"> <li>• This fault should never occur. Please call the factory if this fault occurs.</li> </ul>
Target Fault at UT6	This fault is logged if the target count is below the position count when the UT6 slowdown limit is hit.	<ul style="list-style-type: none"> <li>• This fault should never occur. Please call the factory if this fault occurs.</li> </ul>
Target Fault at UTS	This fault is logged if the target count is above the position count when the UTS slowdown limit is hit.	<ul style="list-style-type: none"> <li>• This fault should never occur. Please call the factory if this fault occurs.</li> </ul>
TOC CAN Com Error	Top of Car Board Communication Error.	<ul style="list-style-type: none"> <li>• Faulty CAN wire connection. Verify the traveling cable connections from the 1036 Comm/Memory board, to the Safety Processor Board (GALX-1028 or GALX-1066) and to the TOC board (1037 or 1040).</li> <li>• Jumper for bus termination resistors not placed. Verify that the bus termination resistor jumpers are placed on the TOC (1037 or 1040), on the 1036 Comm/Memory Board, and on the Safety Processor Board (GALX-1028 or GALX-1066).</li> <li>• Noise on the communication cable. Verify that the traveling cable shield wires are connected only at one end or is not connected at all.</li> <li>• Faulty communication chip. Replace the CAN bus driver chip 82C251.</li> <li>• Faulty 5V isolated supply for CAN driver on TOC board (1037 or 1040). Measure DC voltage between pins 2 and 3 on the 82C251 CAN driver chip. Call GAL for instructions.</li> </ul>

Faults	Description	Possible Cause/Suggested Fix
Top Door Lock Fault	The Top Door Lock failed on while the door was open.	<ul style="list-style-type: none"> <li>• Faulty door lock.</li> <li>• Jumper on door lock circuit.</li> <li>• Door lock not adjusted properly.</li> <li>• Faulty wiring to DLT input.</li> <li>• Faulty DLT and DLT-1 inputs (For this to occur both DLT and DLT-1 inputs must fail on).</li> <li>• DOL input failed. Replace DOL input chip.</li> <li>• Door operator open limit DOL is not adjusted properly</li> </ul>
Top Emerg. Exit Flt	Top Emergency Exit Fault	<ul style="list-style-type: none"> <li>• Verify that the top emergency exit is properly shut and the switch is closed.</li> <li>• Faulty wiring in the top emergency exit circuit.</li> <li>• Faulty wiring in the side emergency exit circuit.</li> </ul>
Top Final Limit Flt	Top Final Limit Open.	<ul style="list-style-type: none"> <li>• Car traveled onto the top final limit.</li> <li>• Faulty wiring of the final limit circuit.</li> </ul>
UF I/O Failed On	The UF input or output has failed on.	<p><b>Traction</b></p> <ul style="list-style-type: none"> <li>• Faulty UF or B1 output. Replace the UF or B1 output chip.</li> <li>• Faulty UFi or B1i input. Replace UFi or B1i input chip.</li> <li>• Incorrect jumper placement on 1038 board. Verify that jumpers on the bottom center of the board are positioned for the correct drive type (DSD or HPV). If necessary move the jumpers to the correct drive type.</li> </ul> <p><b>Hydro</b></p> <ul style="list-style-type: none"> <li>• Faulty SUFi input (replace input chip).</li> <li>• Faulty SUF output (replace output chip).</li> </ul>
UL & UL-1 Opposite	Input failure on one of the Up Level sensor input	<ul style="list-style-type: none"> <li>• Faulty UL or UL-1 input (replace input chips).</li> </ul>
UL and DL Fault	Both UL and DL level sensors are off when car is at a floor.	<ul style="list-style-type: none"> <li>• Faulty adjustment of the selector head.</li> <li>• Worn selector guides. Replace selector guides.</li> <li>• Faulty Door Zone Magnet. If this fault occurs at one particular floor, replace the door zone magnet at the floor.</li> <li>• Faulty sensor board. Replace the selector sensor board.</li> </ul>

Faults	Description	Possible Cause/Suggested Fix
UL Failed On Fault	UL Failed On Fault. The UL leveling sensor did not go off during a run.	<ul style="list-style-type: none"> <li>• UL hall effect sensor is bad on selector sensor board. Replace sensor board.</li> <li>• UL Output Driver failed on. Replace output on selector driver board.</li> <li>• UL traveling cable wire is shorted to 120 VAC. Remove input wire to 1038 or 1064 board and verify that LED goes out. Correct short condition.</li> <li>• UL inputs failed on. Short on 1038 or 1064 main I/O board. Replace main I/O board.</li> </ul>
UL,DL & DZ Off at FL	UL, DL & DZ sensors off at floor. The car thinks it should be at a floor or is at a floor and all the floor sensors have turned off.	<ul style="list-style-type: none"> <li>• Loss of power on the selector.</li> <li>• Faulty cable from the selector driver board to the sensor or sensor board.</li> <li>• Faulty wiring from the selector driver board to the main I/O board (1038 or 1064).</li> </ul>
UL,DL Learn Cnt Flt	Pulses per inch are incorrect from the Encoder RPM/ PPR settings	<ul style="list-style-type: none"> <li>• Dead Zone was estimated to be greater than eight inches.</li> <li>• Make sure the car is running at correct speed before learning the hoistway.</li> <li>• The recommended distance between UL and DL sensors in tapeless system is 7.5 inches (center of UL to center of DL) if the controller is configured to stop on pulses.</li> </ul>
UL/DL Dir Seq Fault	UL and DL Direction Fault. Once the car is in Motion, controller verifies the order for the leveling signals. UL, DZ and DL should come in the right sequence depending in the direction of travel.	<ul style="list-style-type: none"> <li>• During Setup, the leveling signals may be wired incorrectly. Once in service this fault should not occur. If detected, Check Detailed Fault data to determine direction of travel as well as possible inputs causing error.</li> </ul>
Unintended Motion Flt	Unintended Motion fault	<ul style="list-style-type: none"> <li>• Unintended motion occurred. Car moved out of door zone with doors open or it had a speed feedback when not running from main encoder. Please keep Encoder feedback to the Safety Processor away from power wires to prevent induced voltages.</li> </ul> <p>If Adjustable Variables-&gt;Car Options-&gt;Griper/EBK Trip is SET then Safety processor speed could cause fault as well.</p>

Faults	Description	Possible Cause/Suggested Fix
Up Directional Fault	Car unexpectedly hit the Up Normal Limit while running up.	<ul style="list-style-type: none"> <li>Faulty wiring for the UN limit.</li> <li>The power common to the limit switches (CS) was lost. Check safety string prior to the CS terminal.</li> </ul>
UP I/O Failed Off	The UP input or output has failed off	<p><b>Traction</b></p> <ul style="list-style-type: none"> <li>Fault on Safety Processor Board. This board can disable the run control to the UP output chip. Check if the PIC or PAL inhibit LED turns on when the car attempts to run. Check the elevator service, faults, and inputs/outputs on the SPB LCD display.</li> <li>Faulty UP output or UPi input. Replace the UP output and UPi input chips.</li> <li>No 24VDC from the drive. Refer to Schematics.</li> <li>Incorrect jumper placement on 1038/1064 board. Verify that jumpers on the bottom of the board are positioned for the correct drive type (DSD or HPV).</li> <li>RUN or MC auxiliary contact not making properly. Contact GAL for instructions.</li> </ul> <p><b>Hydro</b></p> <ul style="list-style-type: none"> <li>Faulty wiring to the SU or SC terminal on the 1038/1064 board.</li> <li>Faulty wiring to the Up valve.</li> <li>Faulty SUi input. Replace SUi input chip.</li> <li>Faulty SU output. Replace SU output chip.</li> </ul>
UP I/O Failed On	The UP input or output has failed on.	<p><b>Traction</b></p> <ul style="list-style-type: none"> <li>Faulty UP output. Replace the UP output chip.</li> <li>Faulty UPi input. Replace UPi input chip.</li> <li>Incorrect jumper placement on 1038/1064 board. Verify that jumpers on the bottom center of the board are positioned for the correct drive type (DSD or HPV).</li> </ul> <p><b>Hydro</b></p> <ul style="list-style-type: none"> <li>Faulty SUi input. Replace SUi, input chip.</li> <li>Faulty SU output. Replace SU output chip.</li> </ul>
Up Normal SW Setup	Up Normal must turn off <b>after</b> reaching the top floor dead level.	<ul style="list-style-type: none"> <li>Up Normal (UN) switch turned off before controller detected top landing. The up normal switch must be mounted to break <b>above</b> the top landing. If problem persists, look at hoistway tables to detect possible defective magnets.</li> </ul>

Faults	Description	Possible Cause/Suggested Fix
UPF I/O Failed Off	The UPF input or output has failed off.	<p><b>Traction</b></p> <ul style="list-style-type: none"> <li>• Fault on Safety Processor Board. This Board can disable the run control to the UPF/B1 output chip. Check if the PIC or PAL inhibit LED turns on when the car attempts to run. Check the elevator service, faults, and inputs/outputs on the Safety Processor Board LCD display.</li> <li>• Faulty UPF/B1 output. Replace the UPF/B1 output chip.</li> <li>• Faulty UPFi/B1i input. Replace UPFi/B1i input chip.</li> <li>• No 24VDC from the drive. Verify the 24VDC between terminals 10 and 12 on the drive.</li> <li>• Incorrect jumper placement on 1038 board. Verify that jumpers on the bottom center of the board are positioned for the correct drive type (DSD or HPV). If necessary move the jumpers to the correct drive type.</li> <li>• RUN, MC or BRK auxiliary contact not making properly. Contact GAL for instructions.</li> </ul> <p><b>Hydro</b></p> <ul style="list-style-type: none"> <li>• Fault on 1028 Safety Processor Board. The Safety Processor Board can disable the run control to the UPF output chip. Check if the PIC or PAL inhibit LED turns on when the car attempts to run. Check the elevator service, faults, and inputs/outputs on the Safety Processor Board LCD display.</li> <li>• Faulty wiring to the SC common on the 1038 board.</li> <li>• Faulty wiring to the SUF terminal on the 1038 board.</li> <li>• Faulty wiring to the Up Fast valve.</li> </ul>
UPS Low Bat Capacity	Power loss ups battery capacity low fault.	Battery Capacity went below the threshold set by the parameter Adjustable Variables->System Options->Low Bat Cap Lev.
User Variable Init	User variable initialization	User related parameters such a password and telephone numbers are being initialized. This error occurs on the first time the GALX-1100 CPU board is being powered up.

Faults	Description	Possible Cause/Suggested Fix
UT Count Fault	The verification position count for the UT input switch was off by more than 10 inches when the switch was activated. The car was lost due to a preset error or the controller has a faulty encoder signal for the pulse count. This position count refers to the pulse count recorded during a hoistway learn.	<ul style="list-style-type: none"> <li>• The car was lost due to a preset error. Check the guides on the selector. Check the fault log for binary preset errors.</li> <li>• The controller has a faulty encoder signal for the pulse count. Check that the car can make long runs without overshooting the floor or stopping short of the floor.</li> <li>• The power common to the limit switches (CS) was lost. Check safety string prior to the CS terminal.</li> <li>• Incorrect counting of pulse counts. Check encoder connection to motor and encoder wiring.</li> <li>• Hoistway not learned properly. Perform a hoistway learn procedure.</li> <li>• UT switch not adjusted properly. Check at slow speed if switch is breaking, making and then braking again. Switch needs to be closer to the cam.</li> </ul>
UT Failed On Fault	UT input Failed On Fault. The car was at the top floor and the UTS input was low true (UTS switch made) but the UT input was high (UT not made).	<ul style="list-style-type: none"> <li>• The UTS switch is not wired or the UTS switch is not used. If the UTS switch is not used, jump the UT and UTS inputs together.</li> <li>• The UT did not break at the bottom terminal landing. Adjust or replace the UT switch.</li> </ul>
UT1 Count Fault	The verification position count for the UT1 input switch was off by more than 10 inches when the switch was activated. The car was lost due to a preset error or the controller has a faulty encoder signal for the pulse count. This position count refers to the pulse count recorded during a hoistway learn.	<ul style="list-style-type: none"> <li>• The car was lost due to a preset error. Check the guides on the selector. Check the fault log for binary preset errors.</li> <li>• The controller has a faulty encoder signal for the pulse count. Check that the car can make long runs without overshooting the floor or stopping short of the floor.</li> <li>• The power common to the limit switches (CS) was lost. Check safety string prior to the CS terminal.</li> <li>• Incorrect counting of pulse counts. Check encoder connection to motor and encoder wiring.</li> <li>• Hoistway not learned properly. Perform a hoistway learn procedure.</li> <li>• UT1 switch not adjusted properly. Check at slow speed if switch is breaking, making and then braking again. Switch needs to be closer to the cam.</li> </ul>

Faults	Description	Possible Cause/Suggested Fix
UT2 Count Fault	<p>The verification position count for the UT2 input switch was off by more than 14 inches when the switch was activated. The car was lost due to a preset error or the controller has a faulty encoder signal for the pulse count. This position count refers to the pulse count recorded during a hoistway learn.</p>	<ul style="list-style-type: none"> <li>• The car was lost due to a preset error. Check the guides on the selector. Check the fault log for binary preset errors.</li> <li>• The controller has a faulty encoder signal for the pulse count. Check that the car can make long runs without overshooting the floor or stopping short of the floor.</li> <li>• The power common to the limit switches (CS) was lost. Check safety string prior to the CS terminal.</li> <li>• Incorrect counting of pulse counts. Check encoder connection to motor and encoder wiring.</li> <li>• Hoistway not learned properly. Perform a Hoistway learn procedure.</li> <li>• UT2 switch not adjusted properly. Check at slow speed if switch is breaking, making and then braking again. Switch needs to be closer to the cam.</li> </ul>
UT3 Count Fault	<p>The verification position count for the UT3 input switch was off by more than 18 inches when the switch was activated. The car was lost due to a preset error or the controller has a faulty encoder signal for the pulse count. This position count refers to the pulse count recorded during a hoistway learn.</p>	<ul style="list-style-type: none"> <li>• The car was lost due to a preset error. Check the guides on the selector. Check the fault log for binary preset errors.</li> <li>• The controller has a faulty encoder signal for the pulse count. Check that the car can make long runs without overshooting the floor or stopping short of the floor.</li> <li>• The power common to the limit switches (CS) was lost. Check safety string prior to the CS terminal.</li> <li>• Incorrect counting of pulse counts. Check encoder connection to motor and encoder wiring.</li> <li>• Hoistway not learned properly. Perform a hoistway learn procedure.</li> <li>• UT3 switch not adjusted properly. Check at slow speed if switch is breaking, making and then braking again. Switch needs to be closer to the cam.</li> </ul>
UT4 count Fault	<p>The verification position count for the UT4 input switch was off by more than 24 inches when the switch was activated. The car was lost due to a preset error or the controller has a faulty encoder signal for the pulse count. This position count refers to the pulse count recorded during a hoistway learn.</p>	<ul style="list-style-type: none"> <li>• The car was lost due to a preset error. Check the guides on the selector. Check the fault log for binary preset errors.</li> <li>• The controller has a faulty encoder signal for the pulse count. Check that the car can make long runs without overshooting the floor or stopping short of the floor.</li> <li>• The power common to the limit switches (CS) was lost. Check safety string prior to the CS terminal.</li> <li>• Incorrect counting of pulse counts. Check encoder connection to motor and encoder wiring.</li> <li>• Hoistway not learned properly. Perform a hoistway learn procedure.</li> <li>• UT4 switch not adjusted properly. Check at slow speed if switch is breaking, making and then braking again. Switch needs to be closer to the cam.</li> </ul>

Faults	Description	Possible Cause/Suggested Fix
UT5 count Fault	The verification position count for the UT5 input switch was off by more than 32 inches when the switch was activated. The car was lost due to a preset error or the controller has a faulty encoder signal for the pulse count. This position count refers to the pulse count recorded during a hoistway learn.	<ul style="list-style-type: none"> <li>• The car was lost due to a preset error. Check the guides on the selector. Check the fault log for binary preset errors.</li> <li>• The controller has a faulty encoder signal for the pulse count. Check that the car can make long runs without overshooting the floor or stopping short of the floor.</li> <li>• The power common to the limit switches (CS) was lost. Check safety string prior to the CS terminal.</li> <li>• Incorrect counting of pulse counts. Check encoder connection to motor and encoder wiring.</li> <li>• Hoistway not learned properly. Perform a hoistway learn procedure.</li> <li>• UT5 switch not adjusted properly. Check at slow speed if switch is breaking, making and then braking again. Switch needs to be closer to the cam.</li> </ul>
UT6 count Fault	The verification position count for the UT6 input switch was off by more than 42 inches when the switch was activated. The car was lost due to a preset error or the controller has a faulty encoder signal for the pulse count. This position count refers to the pulse count recorded during a hoistway learn.	<ul style="list-style-type: none"> <li>• The car was lost due to a preset error. Check the guides on the selector. Check the fault log for binary preset errors.</li> <li>• The controller has a faulty encoder signal for the pulse count. Check that the car can make long runs without overshooting the floor or stopping short of the floor.</li> <li>• The power common to the limit switches (CS) was lost. Check safety string prior to the CS terminal.</li> <li>• Incorrect counting of pulse counts. Check encoder connection to motor and encoder wiring.</li> <li>• Hoistway not learned properly. Perform a hoistway learn procedure.</li> <li>• UT6 switch not adjusted properly. Check at slow speed if switch is breaking, making and then braking again. Switch needs to be closer to the cam.</li> </ul>
UTM Contact/GTS Flt	UTM contact/GTS input pick fault	GTS input did not come on. Gripper (or UTM Relay) is set and GTS did not come on or turned OFF momentarily.

Faults	Description	Possible Cause/Suggested Fix
UTS count Fault	Up Terminal Slowdown Limit Count Fault. The verification position count for the UTS input switch was off by more than 10 inches when the switch was activated. The car was lost due to a preset error or the controller has a faulty encoder signal for the pulse count. This position count refers to the pulse count recorded during a hoistway learn.	<ul style="list-style-type: none"> <li>• The car was lost due to a preset error. Check the guides on the selector. Check the fault log for binary preset errors.</li> <li>• The controller has a faulty encoder signal for the pulse count. Check that the car can make long runs without overshooting the floor or stopping short of the floor.</li> <li>• The power common to the limit switches (CS) was lost. Check safety string prior to the CS terminal.</li> <li>• Incorrect counting of pulse counts. Check encoder connection to motor and encoder wiring.</li> <li>• Hoistway not learned properly. Perform a hoistway learn procedure.</li> <li>• UTS switch not adjusted properly. Check at slow speed if switch is breaking, making and then braking again. Switch needs to be closer to the cam.</li> </ul>
UTS Failed On Fault	UTS input Failed On Fault. The car was at the top floor and the UT input was low true (UT switch open) but the UTS input was high (UTS switch made).	<ul style="list-style-type: none"> <li>• The UT switch is not wired or UT input was lost.</li> <li>• The UTS did not break at the top terminal landing. Adjust or replace the UTS switch.</li> </ul>
Velocity Diff Fault	Velocity difference between demand and encoder feedback.	<ul style="list-style-type: none"> <li>• Controller detected a difference between demand and feedback speed greater than the setting under 'Velocity Diff'. Make sure speed is tracking properly in acceleration and deceleration. Set Adjustable Variables-&gt;Car Options-&gt;Velocity Diff based on Speed of the car.</li> </ul>

Faults	Description	Possible Cause/Suggested Fix
Wrong Dir Pls Run Dn	Wrong Direction Pulses while car running down. The pulse counts should be counting down while the car is running down.	<p>This fault refers to CPU pulses.</p> <p><b>If CAN Open Encoder speed feedback:</b>  Check “Encoder Dir” in the Car Motion menu. Run the car in the up direction. If the controller pulse count increments then the “Encoder Dir” bit is fine, else if the count decrements, change the “Encoder Dir” parameter to the opposite value. Check for roll back of the car. The controller will allow for some counts in the wrong direction on start but if the roll back becomes excessive, the fault may occur. If this job is not in setup and has been running with an older mechanical Turck encoder, the encoder could be faulty. The mechanical Turck encoders use reed switches in the encoder to latch higher order digits of the absolute value. If this encoder is placed near a magnetic source or if the reed switch is faulty, the count can appear to jump in the opposite direction. Please also check for accompanying fault messages.</p> <p><b>If Motor Encoder speed feedback:</b></p> <ul style="list-style-type: none"> <li>• Check the jumper on the encoder isolation board. If this car has been previously running properly, the encoder isolation board could be faulty. If during initial setup, change the jumpers for A and A not.</li> </ul>

Faults	Description	Possible Cause/Suggested Fix
Wrong Dir Pls Run Up	Wrong Direction Pulses while car running up. The pulse counts should be counting up while the car is running up.	<p>This fault refers to CPU pulses.</p> <p><b>If CAN Open Encoder speed feedback:</b>  Check "Encoder Dir" in the Car Motion menu. Run the car in the up direction. If the controller pulse count increments then the "Encoder Dir" bit is fine, else if the count decrements, change the "Encoder Dir" parameter to the opposite value. Check for roll back of the car. The controller will allow for some counts in the wrong direction on start but if the roll back becomes excessive, the fault may occur. If this job is not in setup and has been running with an older mechanical Turck encoder, the encoder could be faulty. The mechanical Turck encoders use reed switches in the encoder to latch higher order digits of the absolute value. If this encoder is placed near a magnetic source or if the reed switch is faulty, the count can appear to jump in the opposite direction. Please also check for accompanying fault messages.</p> <p><b>If Motor Encoder speed feedback:</b></p> <ul style="list-style-type: none"> <li>• Check the jumper on the encoder isolation board. If this car has been previously running properly, the encoder isolation board could be faulty. If during initial setup, change the jumpers for A and A not.</li> </ul>
XBK Low DC Bus Volts	Aux Brake board low dc bus voltage fault	<ul style="list-style-type: none"> <li>• Incorrect Setting of Line to Line Brake voltage in Adjustable Variables</li> <li>• Incorrect dip-switch setting for Three Phase or Single Phase</li> <li>• Low Line Voltage</li> <li>• Rectifiers Blown or have bad Connection</li> </ul>
XBK No Currnt w/Volt	Aux Brake board no current fault with voltage applied	<ul style="list-style-type: none"> <li>• No Brake Connected</li> <li>• Bad Current Sensor</li> <li>• Check if board is low current or high current board.</li> </ul>
XBK No DC Bus Volts	Aux Brake board no dc bus voltage fault	<ul style="list-style-type: none"> <li>• No AC Voltage Coming into AC1-AC2-AC3</li> <li>• Rectifiers Blown or have bad Connection</li> </ul>
XBK No Output Volts	Aux Brake board not output voltage fault	<ul style="list-style-type: none"> <li>• IGBT Not Gating</li> </ul>

Faults	Description	Possible Cause/Suggested Fix
XBK Over Current Flt	Aux Brake board over current fault	<ul style="list-style-type: none"> <li>• IGBT Shorted</li> <li>• Free Wheeling Diode Shorted</li> <li>• Gating Circuitry Shorted ON</li> </ul>
XBK Over Voltage Flt	Aux Brake board over voltage fault	<ul style="list-style-type: none"> <li>• IGBT Shorted</li> <li>• Gating Circuitry shorted ON</li> </ul>
XBK Rq Volt > DC Bus	Aux Brake board demand voltage greater than dc bus voltage fault	<ul style="list-style-type: none"> <li>• Incorrect Setting of Pick/Hold/Re-level Voltage in Adjustable Variables</li> <li>• Low Line Voltage</li> </ul>
Zero Vel Decel Roll	Zero Velocity Deceleration Roll. The controller calculated a velocity value of zero during the roll in to constant deceleration.	<ul style="list-style-type: none"> <li>• This fault should never occur. Please call the factory if this fault occurs.</li> </ul>

## Determining “Gripper/EBK Fault” Device

This section explains how to determine what might be causing “Gripper/EBK Fault” *status* by looking at the device number. The device number can be found in the detailed faults screen of the 1021/1101 LC Screen: go to Fault Log->View Fault Log and press “Enter” when you find: “Gripper Trip Fault” **or** “Emergency Brake Trip”, press “Enter” again to see the detailed faults.

For each detailed fault you will see a list of all the flags that were set at the time when the fault occurred. Look for what the “**dev**” (old CPU) or “**PF1**” (new CPU) is equal to and compare that to the table below.

dev / PF1 #	Fault Description
1	Encoder velocity is over 125% compared to car speed set in the cons file. You may want to check the parameter "Adjustable Variables->Car Motion->Overspeed Trip" and set the percentage properly.
2	This also relates to of the car but it occurs when the field adjustable variable "Adjustable Variables->Car Options->Gripper/EBK Trip" is set to +2 for over speeding.
3	Gripper fault with this device will only occur if field adjustable variable "Adjustable Variables->Car Options->Gripper/EBK Trip" is set to +1 (SPB) or +4 (ENC) or both added together. Mainly you should check the Safety Processor or the Encoder.
4	Gripper fault with this device will only occur if the GOV input is low and LC input is high and field adjustable variable "Adjustable Variables->Car Options->GOV Gripper/EBK" is set to "0".
5	Faults with this device number only occur when you are on Car Top or Machine Room inspection mode and <b>both</b> car gate and hoistway doors are open and you are <b>not</b> on a door zone.
6	When on Automatic, both car gate and hoistway doors are open and car moves from door zone will cause the fault with this DEV/PF1 number.
NOTE: If emergency brakes are enabled you would get an "Emergency Brake Trip" fault, otherwise you would get "Gripper Trip Fault".	

## 11.1 Detailed Faults

### SRV Service Flag

- 0 = Out of Service
- 1 = Automatic
- 2 = Independent
- 3 = Load Weighing Bypass
- 4 = Attendant
- 5 = Code Blue
- 6 = Fire Phase 2
- 7 = Emergency Power
- 8 = Earthquake Emergency
- 9 = Fire Phase 1 Main Egress
- 10 = Fire Phase 1 Alternate Egress
- 11 = Homing
- 12 = Reset Run Up
- 13 = Reset Run Down
- 14 = Low Oil Operation
- 15 = Return to Lobby
- 16 = Load Overload
- 17 = Massachusetts Medical Emergency
- 18 = Calibrate load weigher
- 19 = CS Elevator Off
- 20 = HS Elevator Off
- 21 = Low Pressure Operation
- 22 = Hospital Service Operation
- 23 = VIP Service Operation
- 24 = Security Recall
- 25 = Sabbath service
- 26 = TUG Service operation

### PRC Process Flag

- 1 = Reset
- 2 = Inspection
- 3 = Motion:
  - hsf=1, dir=1, Up Fast
  - hsf=0, dir=1, ul=0 Up Transition
  - hsf=0, dir=1, ul=1, Up Leveling
  - hsf=1, dir=2, Down Fast
  - hsf=0, dir=2, dl=0, Down Transition
  - hsf=0, dir=2, dl=1, Down Leveling
- 4 = Motion Mode 1 – Soft Start
- 5 = Motion Mode 2 – Constant Acceleration
- 6 = Motion Mode 3 – Roll Over to Max Velocity
- 7 = Motion Mode 4 – Constant Velocity
- 8 = Motion Mode 5 – Roll Over to Deceleration
- 9 = Motion Mode 6 – Constant Deceleration
- 10 = Motion Mode 7 – Targeting Floor

- 11 = Motion Mode 8 – Emergency Slowdown
- 12 = Safety String
- 13 = Turned Off
- 14 = Parked
- 15 = Waiting Assignment
- 16 = Doors Operation
- 17 = Elevator Stalled (or Low Oil for Hydro)
- 18 = Elevator Resetting Hydro Jack
- 19 = Elevator on Low Oil Pressure mode
- 20 = Elevator is in Automatic Learn Hoistway

#### **DRF Front Door Flag**

- 0 = Door Closed
- 1 = Door Opening
- 2 = Door Dwelling
- 3 = Door Closing
- 4 = Door Nudging Closed

#### **RDF Rear Door Flag**

- 0 = Door Closed
- 1 = Door Opening
- 2 = Door Dwelling
- 3 = Door Closing
- 4 = Door Nudging Closed

#### **DPR Direction Preference Flag**

- 0 = None
- 1 = Up
- 2 = Down

#### **DIR Car Direction Flag**

- 0 = None
- 1 = Up
- 2 = Down

#### **EMP Emergency Power Flag**

- 0 = Not on Emergency Power
- 1 = On Emergency Power Waiting
- 2 = On Emergency Power Waiting with Doors Open
- 3 = On Emergency Power Returning Home
- 4 = On Em. Power Returned Home with Doors Open
- 5 = On Em. Power Returned Home with Doors Closed
- 6 = On Emergency Power and Selected to Run
- 7 = On Emergency Power waiting with Doors Closed

**MED Medical Emergency**

- 0 = No Medical Emergency Service
- 1 = Recall Car to Medical Emergency Recall Floor
- 2 = At Return Floor with Door Open (Return Complete)
- 4 = On EMS Car Call Service
- 5 = On EMS Car Hold Service (key off but not at the recall floor)

**CBL Code Blue Flag**

- 0 = No Code Blue
- 1 = Recall to Emergency Floor
- 2 = At Code Blue Floor
- 3 = At Code Blue Floor with Door Open
- 4 = Finished Code Blue

**EQU Earthquake Flag**

- 0 = Not on Earthquake Operation
- 1 = Earthquake Sensor Activated
- 2 = Counterweight Derailment Sensor Activated
- 3 = Recover Away From the Counterweight
- 4 = Stopped at a Floor

**FIR Fire Flag**

- 0 = Not on Fire Service
- 1 = Phase 1 Main Egress Return
- 2 = Phase 1 Alternate Egress Return
- 3 = Phase 1 Completed
- 4 = Phase 2 Door Hold
- 5 = Phase 2 Constant Pressure Door Open
- 6 = Phase 2 Constant Pressure Door Close
- 7 = Phase 2 Door Hold

**RFI Rear Fire Flag**

- 0 = Not on Fire Service
- 1 = Phase 1 Main Rear Egress Return
- 2 = Phase 1 Alternate Rear Egress Return
- 3 = Phase 1 Completed
- 4 = Phase 2 Rear Door Hold
- 5 = Phase 2 Constant Pressure Rear Door Open
- 6 = Phase 2 Constant Pressure Rear Door Close
- 7 = Phase 2 Rear Door Hold

**HSF High Speed Flag**

- 0 = No High Speed
- 1 = High Speed

**STF Start Flag**

- 0 = Not valid Start
- 1 = Start of Run

**CAL Direction of Calls**

- 0 = No Call
- 1 = Above Call
- 2 = Below Call
- 3 = Above and Below Calls

**ESP Emergency Stop Flag**

- 1 = Emergency Stop

**NST Need to Stop Flag**

- 1 = Car need to stop at next floor

**RLV Re-level Flag**

- 1 = Car in re-leveling

**STE Step Flag**

- 1 = Step to the next position (non-distance feedback)

**PDO Pre-open Door Flag**

- 1 = Pre-open door

**STO Next Stop Floor**

Floor number of next stop

**INS Inspection Status Flag.** (Status bit set to "1" when switch is on)

- Bit 0: Car Top Inspection
- Bit 1: Machine Room Inspection
- Bit 2: Access
- Bit 3: In Car Inspection
- Bit 4: Lock Bypass
- Bit 5: Gate Bypass
- Bit 6: Not in Automatic (AUTO==0)

**NDS Next Car Up Sequence**

- 0 = Initiate Next Up Door Open
- 1 = Opening Next Up Door
- 2 = Door full open on Next Up
- 3 = Allow door close for onward call
- 4 = Allow door close while on next up

**DEV – Boards not communicating. (p.306)**

**PF1 – Internal GAL use**

**PF2 – Internal GAL use**

**DV2 – Internal GAL use**

**STATUSF Control Status Flag.** (Status bit set to “1” when status active)

*Example: 00000400 = BIT10: Stop Switch open*

*(Third set of bits -- BIT 8=Binary 1 / Bit 9=Binary 2 / Bit 10=Binary 4 / Bit 11=Binary 8)*

Bit 0: NO LC power

Bit 1: NO HC power

Bit 2: NO SS input

Bit 3: Drive not ready

Bit 4: Gripper error

Bit 5: I/O error during redundancy check

Bit 6: Inspection or lock bypass fault

Bit 7: Binary Position Input Error

Bit 8: Position Error

Bit 9: No automatic Doors

Bit 10: Stop switch open

Bit 11: Door Zone fault

Bit 12: Gate or Door lock fault

Bit 13: No Potential “P” Input

Bit 14: No DCL

Bit 15: No gate or lock

Bit 16: Brake lift switch error

Bit 17: Top of Car Communications Error

Bit 18: Drive Communications Error

Bit 19: Safety Processor Board Comm Error

Bit 20: DB Resistor Temp. Error

Bit 21: Shutdown (too many fault runs)

Bit 22: Annual Safety Test

Bit 23: Waiting for Car to be safe

Bit 24: UT, UTS, DT or DTS limit error

Bit 25: GTS input off

Bit 26: UL, DL and DZ off at floor

Bit 27: Brake Board Can Error

Bit 28: Fire Fighter Stop Switch

Bit 29: Selector Can error

Bit 30: UL or DL fault

Bit 31: Leveling fault

**IO0 to IOD (p.308)**

**DPP Position counts in pulses**

**TG Target Count in pulses**  
**DMD Velocity in feet per minute**  
**ENC Encoder Velocity in fpm**  
**SPB Position Count in pulses**

**Service – Safety Processor Service** (Section 13)

*Example: 11h = UNMOTION*

0 = AUTO  
1 = CT INS  
2 = GATE BYP  
3 = LOCK BYP  
4 = ACCESS  
5 = MR (Motor Room Inspection)  
6 = IC INS (In Car Inspection)  
7 = INS ERR  
8 = BYP ERR  
9 = Inspection VEL ERR  
0A = UP ERR  
0B = DNR ERR  
0C = DNR/UP  
0D = EEP ERR  
0E = NO UTS  
0F = NO DTS  
10 = PLS ERR  
11 = UNMOTION

**SPB Vel – Safety processor Velocity in fpm**


**Status – Safety Processor Status.**

*Example: 5h = Bit0 + Bit2 = Secondary Fault + Leveling Speed Control*

Bit 0: Secondary Fault Control  
Bit 1: PIC Enable (On is normal)  
Bit 2: Leveling Speed Control  
Bit 3: Comm Fault  
Bit 4: Velocity Fault  
Bit 5: Position Count Initialized  
Bit 6: Active Fault  
Bit 7: Position Count Updated

### Decoding IO0 - IO1

**IO1 = 2C h**

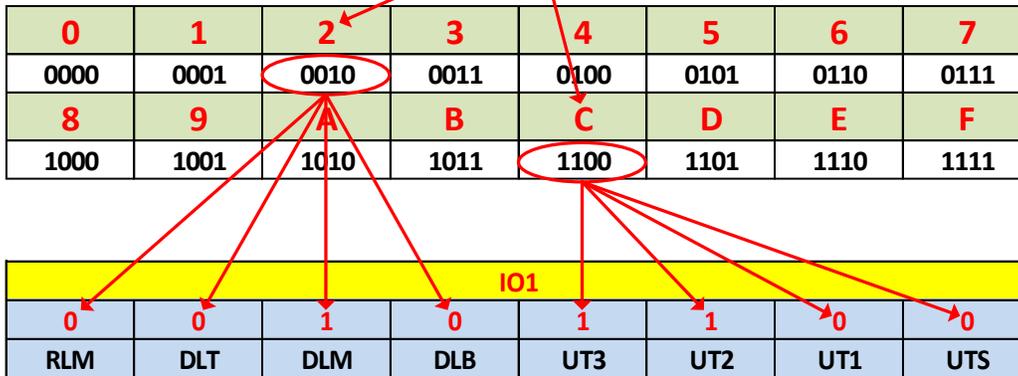

In the example above we are illustrating IO1=2Ch. The “h” signifies that the number is in hexadecimal notation, the actual hexadecimal number is “2C” and the “h” can be ignored.

The “2C” is converted to binary using the chart above (green) and the binary values transferred to the appropriate IO line, IO1 in our example (blue). In binary notation we count from the right - LSB - (Least Significant Bit) to the left - MSB - (Most significant Bit), which is why binary “1” is written as 0001 - it begins at the right.


A binary “1” indicates a high input or output, meaning it is “ON”. A binary “0” indicates the input or output is low, meaning it is “OFF”.

In our example above we can see that UTS, UT1, DLB, DLT and RLM are all low, or OFF, and UT2, UT3, and DLM are all ON.

### Decoding “Status”

Statusf is 32 bits long and each digit in “=0000 0000” is four bits.

Example: Statusf=0000 D000 = 0000 0000 0000 0000 1101 0000 0000 0000

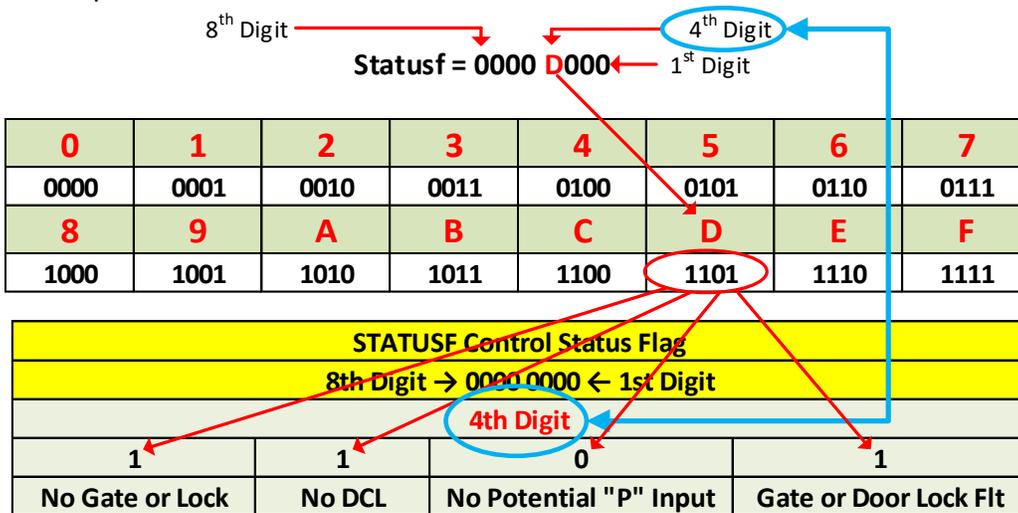

Starting from the right it can be seen that there is a “Gate or Door Lock Fault”, a “No DCL” fault, and a “No Gate or Lock” fault.

“Safety Processor Status” and “Inspection Status” work similarly.

<b>0</b>	<b>1</b>	<b>2</b>	<b>3</b>	<b>4</b>	<b>5</b>	<b>6</b>	<b>7</b>
0000	0001	0010	0011	0100	0101	0110	0111
<b>8</b>	<b>9</b>	<b>A</b>	<b>B</b>	<b>C</b>	<b>D</b>	<b>E</b>	<b>F</b>
1000	1001	1010	1011	1100	1101	1110	1111
<b>INS Inspection Status Flag</b>							
<b>2nd Digit → 00 ← 1st Digit</b>							
<b>Only updated when ON inspection - If on AUTO this shows last Inspection status</b>							
<b>1st Digit =</b>							
ICI (In Car Insp)	ACCESS		MRI (Motor Room Insp)		CTI (Car Top Insp)		
<b>2nd Digit =</b>							
Not Used	NOT AUTO		GBP (Gate Bypass)		LBP (Lock Bypass)		

<b>STATUSF Control Status Flag</b>							
<b>8th Digit → 0000 0000 ← 1st Digit</b>							
<b>1st Digit =</b>							
Drive Not Ready	NO SS Input		NO HC Power		NO LC Power		
<b>2nd Digit =</b>							
Binary Position Err	Ins or Lock Bypass Error		IO Error - Redundancy		Gripper Error		
<b>3rd Digit =</b>							
Door Zone Fault	Stop Sw Open		No Automatic Doors		Position Error		
<b>4th Digit =</b>							
No Gate or Lock	No DCL		No Potential "P" Input		Gate or Door Lock Flt		
<b>5th Digit =</b>							
Safety Proc Comm Err	Drive Comm Error		TOC Comm Error		Brake Lift Sw Err		
<b>6th Digit =</b>							
Waiting For Safe	Annual Safety Test		Too Many Flt Runs		DB Resistor Temp Err		
<b>7th Digit =</b>							
Brake Board CAN Err	UL, DL, DZ Off At Floor		GTS Input Off		UT, UTS, DT, DTS Lim Err		
<b>8th Digit =</b>							
Leveling Fault	UL or DL Fault		Selector Can Err		Fire Fighter Stop Sw		

<b>0</b>	<b>1</b>	<b>2</b>	<b>3</b>	<b>4</b>	<b>5</b>	<b>6</b>	<b>7</b>
0000	0001	0010	0011	0100	0101	0110	0111
<b>8</b>	<b>9</b>	<b>A</b>	<b>B</b>	<b>C</b>	<b>D</b>	<b>E</b>	<b>F</b>
1000	1001	1010	1011	1100	1101	1110	1111
<b>SPB Stat - Safety Processor Status</b>							
<b>2nd Digit → 00 ← 1st Digit</b>							
<b>Secondary Fault Control (SFCO) 0=Normal Operation      PIC Enable 1=Normal Operation</b>							
<b>1st Digit =</b>							
<b>Comm Fault</b>	<b>Leveling Speed Ctrl</b>		<b>PIC Enable</b>		<b>Secondary Fault</b>		
<b>2nd Digit =</b>							
<b>Position Count Updated</b>	<b>Active Fault</b>		<b>Pos Count Initialized</b>		<b>Velocity Fault</b>		

## Car Com Device Reset – HC Com Device Reset

Look for **DEV=xxh** in the detailed fault log, find the **HEX** number below, in the **RED** column. The board address to the right of the HEX number refers to the DIP switch address of the I/O board (if the board has a dip switch – the car top board for example has a permanent address of “9” and no DIP switch).

<b>Device (HEX)</b>	<b>Description of the Device</b>
<b>02h</b>	Can start index
<b>02h</b>	Encoded Tape Selector
<b>03h</b>	Emergency Brake
<b>04h</b>	Brake Board
<b>05h</b>	Safety processor board
<b>06h</b>	Selector board
<b>07h</b>	Front Door board
<b>08h</b>	Rear Door Board
<b>09h</b>	Load Weigher
<b>0Ah</b>	Voltage Sensor
<b>0Bh</b>	Serial I/O Expansion board address 1
<b>0Ch</b>	Serial I/O Expansion board address 2
<b>0Dh</b>	Serial I/O Expansion board address 3
<b>0Eh</b>	Serial I/O Expansion board address 4
<b>0Fh</b>	Serial I/O Expansion board address 5
<b>10h</b>	Serial I/O Expansion board address 6
<b>11h</b>	Serial I/O Expansion board address 7
<b>12h</b>	Serial I/O Expansion board address 8
<b>13h</b>	Serial I/O TOC Top of Car Board address 9
<b>14h</b>	Serial PI and Lantern (global address for all pi and lantern devices)
<b>14h</b>	Serial I/O Expansion board address 10 (Uses special address)
<b>15h</b>	Serial I/O Expansion board address 11
<b>16h</b>	Serial I/O Expansion board address 12
<b>17h</b>	Serial I/O Expansion board address 13
<b>18h</b>	Serial I/O Expansion board address 14
<b>19h</b>	Serial I/O Expansion board address 15
<b>1Ah</b>	Serial I/O Expansion board address 16
<b>1Bh</b>	Serial I/O Expansion board address 17
<b>1Ch</b>	Serial I/O Expansion board address 18
<b>1Dh</b>	Serial I/O Expansion board address 19
<b>1Eh</b>	Serial I/O Expansion board address 20
<b>1Fh</b>	Serial I/O Expansion board address 21
<b>20h</b>	Serial I/O Expansion board address 22
<b>20h</b>	Last can device
<b>29h</b>	Special address for SEB 10 since it conflicts with PI address
<b>32h</b>	ID to swap to standard address for pi/lantern board 20
<b>FFh</b>	Global can address

## Serial Hall Calls – Secondary Device

For serial hall calls the **dev=XX** (previous page) indicates which serial driver board and **dv2=XX** indicates which hall station has communications errors.

The possible faults are:

<b>hcb tx dn</b>	<b>hcb dev reset</b>	<b>hcb fet short green up</b>
<b>hcb tx up</b>	<b>hcb dn led brd</b>	<b>hcb fet short blue up</b>
<b>hcb rx dn</b>	<b>hcb up led brd</b>	<b>hcb fet short blue dn</b>
<b>hcb rx up</b>	<b>hcb led short red up</b>	<b>hcb fet short green dn</b>
<b>hcb stuck up</b>	<b>hcb led short green up</b>	<b>hcb fet short red dn</b>
<b>hcb stuck dn</b>	<b>hcb led short blue up</b>	<b>hcb fet open red up</b>
<b>hcb led open dn</b>	<b>hcb led short blue dn</b>	<b>hcb fet open green up</b>
<b>hcb led open up</b>	<b>hcb led short green dn</b>	<b>hcb fet open blue up</b>
<b>hcb led short dn</b>	<b>hcb led short red dn</b>	<b>hcb fet open blue dn</b>
<b>hcb led short up</b>	<b>hcb led open red up</b>	<b>hcb fet open green dn</b>
<b>hcb fet open dn</b>	<b>hcb led open green up</b>	<b>hcb fet open red dn</b>
<b>hcb fet open up</b>	<b>hcb led open blue up</b>	<b>hcb low supply voltage</b>
<b>hcb fet short dn</b>	<b>hcb led open blue dn</b>	<b>hcb up input overload</b>
<b>hcb fet short up</b>	<b>hcb led open green dn</b>	<b>hcb dn input overload</b>
<b>hcb inv fl</b>	<b>hcb led open red dn</b>	<b>hcb xu input overload</b>
<b>hcb no com</b>	<b>hcb fet short red up</b>	

## Serial RGB Car Stations – Secondary Device & Specific I/O

For Serial RGB Car Stations **dev=XX** (previous page) indicates which driver board has comm issues (bear in mind that Serial RGB drives have three board addresses: example Address 18, 19 & 20 for first serial RGB driver board), **dv2=XX** indicates which board in the local bus and **pf1-XX** indicates which I/O is declaring an error.

The possible faults are:

<b>ccb led short red</b>	<b>ccb fet short green</b>
<b>ccb led short green</b>	<b>ccb fet short blue</b>
<b>ccb led short blue</b>	<b>ccb fet open red</b>
<b>ccb led open red</b>	<b>ccb fet open green</b>
<b>ccb led open green</b>	<b>ccb fet open blue</b>
<b>ccb led open blue</b>	<b>ccb led board</b>
<b>ccb fet short red</b>	<b>ccb stuck button</b>

0	1	2	3	4	5	6	7
0000	0001	0010	0011	0100	0101	0110	0111
8	9	A	B	C	D	E	F
1000	1001	1010	1011	1100	1101	1110	1111
<b>IO0 =</b>							
UT	UN	DT3	DT2	DT1	DTS	DT	DN
<b>IO1 =</b>							
RLM	DLT	DLM	DLB	UT3	UT2	UT1	UTS
<b>IO2 =</b>							
TAD	BAU	BAD	ACC	RLM-1	DLT-1	DLM-1	DLB-1
<b>IO3 =</b>							
SS	HC	FS	BP	ALT	MES	MRS	HWS
<b>IO4 =</b>							
5D	4D	DT5/3D	DT4/2D	4U	RTL/3U	UT5/2U	UT4/1U
<b>IO5 =</b>							
DL-1	UL-1	BKS	DEL	AD	IND	LBP	GBP
<b>IO6 =</b>							
INS	LC	GS-1	GS	DPM	DL	DZ	UL
<b>IO7 =</b>							
AUTO	MRID	MRIU	MRI	ICI	CS	ID	IU
<b>IO8 =</b>							
DON	BRKI	GTR2	GTR1	RDY	GTS	FST	P/RTL
<b>IO9 =</b>							
LVC	SECF/SVSD	RGS-1	RGS	MCAI	MCCI	RUNAI	RUNI
<b>IOA =</b>							
PS	GOV	RDPM	CTS	UFI	UPI	DFI	DNI
<b>IOB =</b>							
DS	US	DZA	BP16	BP8	BP4	BP2	BP1
<b>IOC =</b>							
LWD	LWB	OVL	LWA	SE	EE	DCL	DOL
<b>IOD =</b>							
CLF	FB/NB	FL	CDL	P6	NUD	DC	DO

## ***Section 12 Combined Field Adjustable Variables***

This section contains the combined field adjustable variables:

Main CPU Adjustable Variables

Safety Processor Adjustable Variables

NTS Processor Adjustable Variables

Table 1: Car Motion					
Field Variable	Min	Max	Initial	Units	Description
Acceleration	50	300	92	fpm/s	<b>Acceleration Rate.</b> The constant acceleration rate to reach top speed.
Access Speed	0	75	35	fpm	<b>Access Speed.</b> Car velocity while running on access.
Adv Pre Torque	0	0	0		<b>Advance Pretorque.</b> When set, the controller will pick the motor contactor and pretorque the motor when the door closes to the DLM limit. It is enabled to improve floor to floor times when pretorque is used. <b>0=Off</b> <b>1=On</b>
Balanced Load	0	100	40	%	<b>Balanced Load.</b> Percent load of the counterweight.
Decel Jerk	50	480	125	fpm/s/s	<b>Deceleration Jerk Rate.</b> Maximum jerk rate to roll from top speed to constant deceleration.
Decel Rate	50	300	92	fpm/s	<b>Deceleration Rate.</b> The constant deceleration rate from top speed to leveling speed when stopping for a floor.
Dist Feed Fwd	0	1.3	0		<b>Distance Feed Forward.</b> During the final approach to the floor, when using a tape selector, the number of pulses to calculate the velocity is 64 pulses per foot. So during this time, if the CPU does not see a distance change, it calculates the distance the car should move over the next ten millisecond period and then uses that value to calculate next velocity value. This value is a multiplier for what percentage of the velocity calculation to uses. When the next pulse comes in, the CPU calculates the velocity value as normal.

Table 1: Car Motion					
Field Variable	Min	Max	Initial	Units	Description
DON Start Ctrl	0	1	1	-	<b>Drive ON Start Control.</b> 0 = Off 1 = The controller starts the pattern delay after the drive on signal (DON) from the drive.
Drv Speed Mult	0.25	2.000	1.000	-	<b>Drive Speed Multiplier.</b> Used for KEB drive to adjust the speed of the elevator.
EM Decel Lev	50	300	100	fpm/s	<b>Emergency Deceleration Leveling Rate.</b> The rate at which the elevator will go from decel to leveling while on Emergency Slowdown.
Em Decel Rate	80	360	180	fpm/s	<b>Emergency Deceleration Rate.</b> The rate at which the elevator will decelerate when it is doing an emergency slowdown.
Encoder Dir	0	1	0	-	<b>Encoder Direction for CAN Bus Encoder.</b> Set to zero or one during Setup to get correct direction of pulses for the CAN encoder.
Encoder PPR	60	3200	2048	PPR	<b>Encoder Pulses Per Revolution.</b> The number of pulses the motor encoder generates per revolution.
Encoder RPM	1	3000	105	RPM	<b>Encoder Revolutions Per Minute.</b> The number of revolutions per minute the motor makes at top speed.
Field Weaken	60	110	110	% vel	<b>Field Weakening Velocity.</b> Percent of velocity above which the motor field is weakened to allow the car to reach top speed.
Floor Targ Dis	1.2	25	12	inches	<b>Floor Target Distance.</b> Distance to start leveling mode into the floor. Increasing this distance will lower the jerk rate.

Table 1: Car Motion					
Field Variable	Min	Max	Initial	Units	Description
Ins Decel Stop	50	480	300	fpm/s	<b>Inspection Deceleration Stop Rate.</b> The rate for the elevator to decelerate from inspection speed to zero.
Inspect Speed	0	150	40	fpm	<b>Inspection Speed.</b> Maximum car speed while running on inspection.
Leveling Speed	1	15	5	fpm	<b>Leveling Speed.</b> Maximum car speed while leveling into the floor.
Motor RPM	0	3000	500	rpm	<b>Motor RPM.</b> Used for KEB drive only.
Overspeed Trip	80	125	110	%	<b>Over Speed Trip.</b> Percentage of contract speed at which the controller will drop the rope gripper.
Pattern Delay	0	3	0	sec	<b>Pattern Delay.</b> Delay time before the speed profile will start.
Pls Cnt Upd Ere	0	2	1	inches	<b>Position Count Update Error.</b> If the pulse count is off by more than this value and the update flag is enabled, the position pulse count is updated. If this value is set to zero and the update flag is enabled, then the pulse count is updated every time the DZ is hit at high speed.
Pls Err Delay	1	10000	5000	1/sec	<b>Position Count Update Error Delay.</b> This number is the time delay from when DZ is hit until the input is read. The time delay parameter, times the current speed of the car, is used to estimate the number of pulses the count will change during the turn on time of the DZ input.

Table 1: Car Motion					
Field Variable	Min	Max	Initial	Units	Description
Pos Count Upd	0	7	0		<p><b>Position Count Update Flag.</b> The pulse count is checked every time the DZ input is hit.  <b>+1</b>=Update the DPP floor count as the elevator passes by a landing and hits DZ.  <b>+2</b>=Interrupt the CPU when DZ hit otherwise the update is done during the loop time (roughly 1 msec).  <b>+4</b>=Update every time the DZ is hit and the car is at constant speed regardless of the pulse count update error value.</p>
Preopen Delay	0	3200	0.5	sec	<p><b>Preopen Delay.</b> Delay time to preopen the door starting from when the car reaches 3 inches from dead level and the door can safely be opened.</p>
Recovery Speed	15	100	25	fpm	<p><b>Recovery Speed.</b> Recovery Speed to the nearest floor.</p>
Relev Pat Dly	0	3	0	sec	<p><b>Relevel Pattern Delay.</b> Delay time before speed profile will start on a relevel.</p>
Relev St Time	0	2	0	sec	<p><b>Relevel Start Velocity Hold Time.</b> If relevel start speed is set to a non zero value, the controller will use that value for the speed before going in relevel velocity This parameter controls how long we stay in Relevel Start Velocity.</p>
Relev Strt Spd	0	15	0	fpm	<p><b>Re-level Start Speed.</b> Maximum starting velocity for a re-level. Car will stay in relevel Start speed for a time set by parameter ' Relev St Time ' and then switch to relevel Speed</p>
Relevel Speed	1	15	6	fpm	<p><b>Re-level Speed.</b> Maximum car speed during re-leveling operation.</p>
Roll Over Jerk	50	480	125	fpm/s/s	<p><b>Rollover Jerk Rate.</b> Maximum roll jerk rate while rolling into top speed.</p>

Table 1: Car Motion					
Field Variable	Min	Max	Initial	Units	Description
Rope Comp Torq	0	50	0	offset	<b>Rope Compensation Torque.</b> Used primarily on gearless machines that do not have any compensating chains. This parameter adds torque to the pretorque value to compensate for weight of the elevator cables holding the car. The value is calculated from the position of the car in the hoistway.
Soft Start Jerk	50	480	125	fpm/s/s	<b>Soft Start Jerk Rate.</b> Maximum jerk rate to roll into constant acceleration from a dead stop.
Soft Stop Time	0.2	30	1	sec	<b>Soft Stop Time.</b> <b>Hydraulic Elevators</b> – time the motor is kept running after the valve is turned off. <b>Traction Elevators</b> – time that zero speed is held until the brake is set.
Stop Decel Rate	5	225	50	fpm/s	<b>Stop Deceleration Rate.</b> Rate to bring the velocity from leveling speed to zero speed.
Stop On Pos Cnt	0	1	0		<b>Stop On Position Count.</b> Enable to stop the elevator on position pulse count. Used only for tapeless application. It requires cons file setting to be enabled and readjustment of leveling sensors for it to work. <b>0= Off</b> <b>1=On</b>
Top Speed	25	Contract Speed	0	fpm	<b>Top Speed or Contract Speed of the Car.</b> If set to zero, or set to a value greater than top speed, it will use top speed in cons file.
Torque Amount	0	100	0	gain	<b>Torque Amount.</b> Multiplier for the amount of torque proportional to the load. A value of 100 will give 100percent torque with 100 percent load or 60 percent torque with an empty car.

Table 1: Car Motion					
Field Variable	Min	Max	Initial	Units	Description
Torque Down Amt	0	100	0	gain	<p><b>Torque Down Amount.</b> Torque Amount for down direction of travel. Multiplier for the amount of torque proportional to the load. A value of 100 will give 100 percent torque with 100 percent load or 60 percent torque with an empty car. If this value is set to zero then the Torque Amount parameter above will be used for both up and down direction.</p>
Torque Ramp Tim	0	1	0	sec	<p><b>Torque Ramp Time.</b> The amount of time for the torque to ramp up prior to the elevator leaving the floor during pattern delay.</p>

Table 2: Car Brake					
Field Variable	Min	Max	Initial	Units	Description
BrakeDropDel	0	5	0.1	sec	<b>Brake DropDelay.</b> Delay time to drop the brake after the car has stopped and is dead level at the floor.
BrakeHold Volt	10	400	160	volts	<b>Brake Hold Voltage.</b> Voltage to hold the brake for the remainder of the run.
BrakeOptoDly	0	7372	5500	3686/msec	<b>Brake OptoDelay.</b> The SCR Brake board trigger circuit uses optocoupler devices that have a turn on delay of roughly 1 millisecond but can vary from part to part and vary from different input filtering. This parameter is used to compensate for different turn on delays to start of triggering of the SCRs. Only change this value at the advice of a G.A.L.Technician.
BrakePick Del	0	5	0	sec	<b>Brake PickDelay.</b> Delay time to pick the brake after the run relay is energized.
BrakePick Time	0.1	6	3	sec	<b>Brake PickTime.</b> Duration of applied brake pick voltage before changing to the hold voltage.
BrakePick Volt	10	400	230	volts	<b>Brake PickVoltage.</b> DC Voltage to pick the brake. Brake voltage will start at start voltage and then ramp to pick voltage.
Brk ACL-L Volt	80	300	240	volts	<b>Brake AC Line to LineVoltage.</b> AC input voltage to the brake board.
BrkDropRate	0	5	0	sec	<b>Brake Drop RateTime.</b> Time value for brake to ramp from start voltage to zero.
BrkDropStart	0	1	0	-	<b>Brake Drop Timing During Leveling.</b> 0 = Normal brake drop 1 = Early drop selected

Table 2: Car Brake					
Field Variable	Min	Max	Initial	Units	Description
BrkDropVolt	0	200	0	volts	<b>Brake Initial Drop Voltage.</b> DC Voltage to start the brake drop. Brake voltage will start at this value ramp down to zero volts.
Brk Pick Rate	0	2	0	sec	<b>Brake Pick Rate Time.</b> Time value for brake to ramp from start voltage to pick voltage.
Brk Pick Start	0	400	0	volts	<b>Brake Pick Start Voltage.</b> Initial DC Voltage to pick the brake. Brake voltage will ramp to pick voltage.
BrkRelev Rate	0	2	0	sec	<b>Brake Relevel Rate Time.</b> Time value for brake to ramp from relevel start voltage to relevel voltage.
BrkRelev Start	0	400	0	volts	<b>Brake Relevel Start Voltage.</b> Initial DC Voltage to pick the brake on a relevel. Brake voltage will ramp to relevel voltage.
BrkRelev Volt	10	400	230	volts	<b>Brake Relevel Voltage.</b> Brake voltage applied on the brake coil during a relevel. This parameter is useful to have a partial brake lift on relevel. Relevel brake voltage will start at relevel start voltage and then ramp to relevel voltage.
Brk Resistance	0.1	500	283	Ohms	<b>Brake Resistance.</b> Resistance value measured on the brake coil in ohms.
EmBkDropDly	0	360	0	sec	<b>Emergency Brake Drop Delay.</b> Delay time to drop the brake after the car has stopped and is dead level at the floor.
EmBkDropRate	0	1.5	0	sec	<b>Emergency Brake Drop Rate Time.</b> Time value for brake to ramp from start voltage to zero.

Table 2: Car Brake					
Field Variable	Min	Max	Initial	Units	Description
EmBkHold Volt	0	400	160	volts	<b>Emergency Brake Hold Voltage.</b> Voltage to hold the emergency brake for the remainder of the run.
EmBkL-L VAC	80	300	240	volts	<b>Brake AC Line to Line Voltage.</b> AC input voltage to the brake board.
EmBkOptoDly	0	7372	5500	3686/msec	<b>Emergency Brake Opto Delay.</b> The SCR Brake board trigger circuit uses optocoupler devices that have a turn on delay of roughly 1 millisecond but can vary from part to part and vary from different input filtering. This parameter is used to compensate for different turn on delays to start of triggering of the SCRs. Only change this value at the advice of a G.A.L. Technician.
EmBkPick Rate	0	2	0	sec	<b>Emergency Brake Pick Rate Time.</b> Time value for emergency brake to ramp from start voltage to pick voltage. Only used if two brake boards are installed.
EmBkPick Tim	0	10	3	sec	<b>Emergency Brake Pick Time.</b> Duration of applied emergency brake pick voltage before changing to the hold voltage. Only used if two brake boards are installed.
EmBkPick Volt	10	400	230	volts	<b>Emergency Brake Pick Voltage.</b> DC Voltage to pick the emergency brake. Brake voltage will start at start voltage and then ramp to pick voltage. Only used if two brake boards are installed.
Pwl BkOffTim	0	5	0	sec	<b>Power Loss Brake Off Time.</b> <b>When Pwl Bk On Tim and Pwl Bk Off Tim</b> are set to a non zero values, the timers are used to pulse the brake contactor output on and off while recovering the car with Power loss brake option.

Table 2: Car Brake					
Field Variable	Min	Max	Initial	Units	Description
Pwl BrkOnTim	0	5	1	sec	<b>Power Loss Brake On Time.</b> When Pwl Bk On Tim and Pwl Bk Off Tim are set to a non zero values, the timers are used to pulse the brake contactor output on and off while recovering the car with Power loss brake option.
RelevBrk Delay	0	5	0	sec	<b>Relevel Brake Delay.</b> Time delay to lift the brake during a relevel.
RelevBrk LowV	0	1	0	-	<b>Relevel Brake Low Voltage.</b> Set to a 1 to relevel the car with the hold voltage to create a partialpickof the brake. Not used with electronic brakeboard. 0=Off 1=On

**Table 3: Modified Motion**

Field Variable	Min	Max	Initial	Units	Description
EP Accel Rate	50	300	92	fpm/s	<b>Emergency Power Accel Rate</b>
EPDecelJerk	50	480	125	fpm/s/s	<b>Emergency Power Decel Jerk Rate</b>
EPDecelRate	50	300	92	fpm/s	<b>Emergency Power Decel Rate</b>
EP Recov Speed	10	100	25	fpm	<b>Emergency Power Recovery Speed.</b> Recovery speed during emergency car recovery. Used when the emergency power recovery source can only provide enough power to bring the car to the floor in the direction of the load.
EP Roll Jerk	50	480	125	fpm/s/s	<b>Emergency Power Roll Jerk Rate</b>
EPSoftStJerk	50	480	125	fpm/s/s	<b>Emergency Power Soft Start Jerk</b>
EPTargetDist	1.2	25	12	inches	<b>Emergency Power Floor Target Distance</b>
EPTopSpeed	10	Contract Speed	100	fpm	<b>Top Speed for Emergency Power</b>
ShFIAccel Rate	50	300	92	fpm/s	<b>Short Floor Acceleration Rate.</b> The constant acceleration rate to reach top speed.
ShFIDecelRate	50	300	92	fpm/s	<b>Short Floor Deceleration Rate.</b> The constant deceleration rate from top speed to leveling speed when stopping for a floor.
ShFISoftStJrk	50	480	125	fpm/s/s	<b>Short Floor Soft Start Jerk Rate.</b> Maximum jerk rate to roll into constant acceleration from a dead stop.

**Table 3: Modified Motion**

Field Variable	Min	Max	Initial	Units	Description
ShortFICntrl	0	7	0	-	<p><b>Short Floor Control.</b>  <b>0</b>=Default. The car relevels to the shortfloor.  <b>+1</b>=Car will make a run between very short floors instead of re-leveling.  <b>+2</b>= Short floor slowdown magnets between short floors (non-distancefeedback).  <b>+4</b>=Mid Short floor slowdown magnets between short floors (non- distancefeedback).</p>
ShortFIDist	10	72	30	inches	<p><b>Short Floor Distance.</b>  Any floor less than this distance is considered a short floor.The short floor flag gets set and if preopening is enabled, it can be specifically disabled for the short floorrn.</p>
ShrtFIDeclJrk	50	480	125	fpm/s/s	<p><b>Short Floor Deceleration Jerk Rate.</b>  Maximum jerk rate to roll over from top speed to constant deceleration.</p>
ShrtFIRoll Jrk	50	480	125	fpm/s/s	<p><b>Short Floor Rollover Jerk Rate.</b>  Maximum roll jerk rate while rolling into top speed (acceleration).</p>
ShrtFITargDis	1.2	25	8	inches	<p><b>Short Floor Target Distance.</b>  Distance to start leveling mode into the floor. Increasing this distance will lower the jerk rate.</p>

Table 4: Car Timers					
Field Variable	Min	Max	Initial	Units	Description
AdvDoorEnTim	0	240	0	sec	<b>Advanced Door Enable Time.</b> Door open advance enable time to open the opposite door when operating with non-simultaneous doors. If there is a request for both doors, instead of waiting for the first open door to close completely before opening the second door, the second door starts to open after the advance door enable time while the first door is closing.
AttBuz Delay	0	900	60	sec	<b>Attendant Buzzer Delay. If this parameter is enabled, Service options &gt; HC Acknwldg Buz will not work.</b> Buzzer sounds if a hall call is entered and the car has not started moving within this delay time. This function is disabled when set to zero.
AttBuzOffTime	0	30	0	sec	<b>Attendant Buzzer Off Time.</b> Cycle off time to turn attendant buzzer on and off once attendant delaytime function has been met (See ATT Buz Delay). Buzzer will stay on continuously if this timer set to zero.
AttBuzOnTime	1	30	5	sec	<b>Attendant Buzzer On Time.</b> Cycle on timer to turn attendant buzzer on and off once attendant delaytime function has been met (See ATTBuzDelay).
AutoSwgDODly	0	10	1.0	sec	<b>Auto Swing Door Open Delay.</b> Delay time to enable the auto swing door open output.
CarCallDwell	1	900	2	sec	<b>Car Call Dwell.</b> Door open dwell time when answering a car call only.
CBDoorTime	1	3200	60	sec	<b>Code Blue Door Time.</b> Door time for Code blue operation once elevator is at the emergency floor before EMS is energized.
ChimeonCCTime	0.1	2	0.2	sec	<b>Chime on Car Call Time.</b> Handicap buzzer on Car Call. Length of beep time.
CL Pulse Time	0	320	5	sec	<b>Car Lantern Pulse Time.</b>

Table 4: Car Timers					
Field Variable	Min	Max	Initial	Units	Description
DoorDelayTime	0	1.5	0	sec	<b>Door Delay Time.</b> Delay time between DO and DC to switch when opening or closing the door.
DoorFailTime	10	3200	25	sec	<b>Door Fail Time.</b> Time with power on the door without getting the door open limit.
EETestTime	0	2	2	sec	<b>Electric Eye Test Time for Automatic Freight Doors.</b>
EETime- out	0	3200	40	sec	<b>Electric Eye Time-out Time.</b> If the Electric Eye or detector edge is on continuously for this amount of time, it will be flagged as timed-out and the controller will ignore the EE input and close the door on nudging. When set to zero, this feature is disabled.
FaultTime	0	10	2	sec	<b>Fault Time.</b> Delay time before allowing the car to run after a fault occurs.
FR DCTime- out	1	3200	1	sec	<b>Freight Door Close Time-out.</b> The amount of time prior to closing the doors on automatic freight door operation.
FR PwrDOTime	0	30	1	sec	<b>Freight Door Power Door Open Time.</b> The amount of time to turn on the power door open relay on automatic freight door operation.
Gen/Lt/FanTime	30	3200	360	sec	<b>Generator Run/Cab Light/Fan Time.</b> Length of time to leave the generator running or the Cab light and fan on after there is no longer a demand to run.
Grip/EBK Rset T	0	20	4	sec	<b>Gripper/Emergency Brake Reset Time.</b> The amount of time it takes for the rope gripper to reset on power-up.

Table 4: Car Timers					
Field Variable	Min	Max	Initial	Units	Description
HallCallDwell	1	60	4	sec	<b>Hall Call Dwell.</b> Door open dwell time when answering a hall call or both a hall and car call.
HallLantDly	0	15	0	sec	<b>Hall Lantern Delay Time.</b> By default, when set to zero, hall lanterns go off as soon as the car starts to slow down to arrive at a floor. When set to a nonzero value, this will be used as a timer for the hall lantern to go off prior to arriving at the floor. For example, if set to three seconds, hall lanterns will turn on approximately three seconds before the car arrives to the floor regardless of the speed of the car. We recommend to set this parameter for high speedcars.
Handicap Dwell	1	120	25	sec	<b>Handicap Dwell.</b> Extended door time from pressing the ED button in the car.
HEOF Auto Rst T	0	3200	0	sec	<b>HEOF Auto Reset Time.</b> When the hall elevator off function is activated from the HEOF input being turned on, the car will be taken out of service until the input is turned off. Once the input is off, the car will stay out of service until the auto reset timer times out.
LantOffTime	0	2	0.2	sec	<b>Lantern Off Time.</b> Used for double stroke gongs. The lantern off time is the delay time after the lantern first turns on until it turns off.
LantOnTime	0	2	0.7	sec	<b>Lantern On Time.</b> Used for double stroke gongs. The lantern will turn on, turn off and then turn on again. The Lantern on time is the delay time from when the lantern first turns on until it turns on the second time.

Table 4: Car Timers					
Field Variable	Min	Max	Initial	Units	Description
LearnHW Stall	1	3200	30	sec	<b>Automatic Hoistway Learn Stall Time.</b> The time required for a hoistway learn is calculated by the number of floors at an average height of 12.5 feet. This stall time value is added to the calculated value for the maximum time allowed for the autohoistway learn to run. If floor heights are taller or if there is a blind shaft, this timer may need to be increased to the additional floor height times 1.2 (multiplier for car running at 30fpm). For a blind shaft of 50 feet use a timer value of $50 * 1.2 = 60.0$ seconds.
LobbyDwell	1	60	5	sec	<b>Lobby Dwell.</b> Door open dwell time for a car at the lobby.
ManDoor BuzDly	0	900	0	sec	<b>Manual Door Buzzer Delay.</b> On a car with manual doors, sound the buzzer if the door is left open and a call is entered after this time delay. This function is disabled when set to zero.
MaxDoorHldT	0	3200	0	sec	<b>Maximum Door Hold Time.</b> Hold time to be allowed when the extended dwelling input (ED) is pressed. If set to zero, there will be no limit on how long the car will be held on ED. When set to a value, this will be the maximum allowed time for the car to be held by ED input, then the car will go on regular dwelling timers (car or hall call dwelling timers).
Non InterferT	1	60	2	sec	<b>Non-Interference Time.</b> Time between when you stop and when you can run again.
Nudging Time	20	3200	60	sec	<b>Nudging Time.</b> Delay time for a door to be held before going into nudging.
OSERBTFlrTim	0	900	60	sec	<b>Out of Service Between Floors Time.</b> Timer to control the OSERL output. Used with OSERL Control option 1 for 'between floors for over a minute' set to 2.
OSERNcall Tim	0	900	600	sec	<b>Out of Service Not Responding to Calls Time.</b> Timer to control the OSERL output. Used with OSERL Control option 1 for 'not responding to calls' set to 1.

Table 4: Car Timers					
Field Variable	Min	Max	Initial	Units	Description
OSERSopenTim	0	900	60	sec	<b>Out of Service Safety String Open Time.</b> Time to control the OSERL output. Used with OSERL control option 1 for 'SS open' set to 4.
PasChimeTime	0.2	2	0.5	sec	<b>Floor Passing Chime Time.</b> Length of time the floor passing chime will sound when a floor is passed.
RCdropfailTim	0.5	5.5	0.5	sec	<b>Retiring Cam Drop Fail Time.</b> Retiring cam drop fail safe delay for manual doors. Time it waits when car arrives to the floor before it drops the output.
RC Pick Delay	0	7	0	sec	<b>Retiring Cam Pick Delay.</b> The amount of delay time for the retiring cam to pick once the doors are closed.
RelevDlyTim	0	2	1	sec	<b>Relevel Delay Time.</b> The amount of delay time before the car will re-level. This would be used for jobs that have excessive rope stretch.
ResetTime	0	10	5	sec	<b>Reset Time.</b> Delay time in the reset mode before allowing the car to run.
RTLDwellTime	1	60	8	sec	<b>Return To Lobby Dwell Time.</b> If Return To Lobby is set to cycle doors at the lobby, use this timer to control how long they will dwell before closing in return to lobby mode.
RunCycleTime	0	300	0	hours	<b>Run Cycle Time.</b> Used to initiate a run when the elevator has been sitting idle for a period of time. Used for jobs that have high friction bearing machines.

Table 4: Car Timers					
Field Variable	Min	Max	Initial	Units	Description
SabbBuzz Delay	1	10	5	sec	<b>Sabbath Door Buzzer Timer Prior To Doors Closing.</b> In jobs where the light curtain is disabled in Sabbath operation it is required to ring a buzzer prior to the door closing sequence. This timer warns people when the light curtains are about to be enabled (output name: SABUZ).
SabbathDwell	1	60	10	sec	<b>Sabbath Door Dwell Time.</b> The Car will wait this amount of time on every floor for Sabbath operation except at the lobby where it will follow the handicap dwell door time (separate timer).
SecDisableTim	0	3200	0	sec	<b>Security Disable Time.</b> This timer is used with a security disable input button at the lobby. When the button is pressed, the car call security is disabled for the time value set from this parameter.
ShortDwellTim	0	60	1	sec	<b>Short Door Dwell Time.</b> Door open dwell time when the doors re-open on a door open button, electric eye, safety edge or door hold button.
StallTime	20	3200	60	sec	<b>Stall Time.</b> Maximum time a run is requested but the car is not moving.
VIPDoorTime	1	3200	20	sec	<b>VIP Door Time.</b> The amount of time the car will park at the VIP recall floor prior to returning to automatic service.
YDeltaTime	1	5	1.5	sec	<b>Y-Delta Time.</b> Transfer time to change motor from Y start to Delta run. This timer is also used for DEL or MCX turn on time with controllers without y-delta starters.

Table 5: Car Options					
Field Variable	Min	Max	Initial	Units	Description
Arrival Lant	0	1	0	-	<b>Arrival Lantern</b> <b>0</b> =Disable <b>1</b> =Activate lant/gong without onward call
BehindCCcanc	0	1	0	-	<b>Behind Car Call Cancel.</b> <b>When enabled the elevator will not latch any car calls in the opposite direction of travel.</b>
Binary Preset	0	1	0	-	<b>Binary Preset.</b> <b>0</b> =Update the car position count based on the binary preset when the car recovers into a floor. <b>1</b> =Always update the car position count based on binary preset when the position doesn't match.
BrakeLiftSw	0	2	1	-	<b>Brake Lift Switch.</b> If set to 1 or 2 a brake lift switch fault is detected. <b>0</b> =The Brake switch is ignored. <b>1</b> =The car is prevented from running if the brake does not drop or if the brake did not pick on the previous run. The car is allowed to run after the brake drops. <b>2</b> =The rope gripper will set if the brake does not drop and then can only be reset by placing the car on inspection and back to automatic.
CabLantCtrl	0	2	0	-	<b>Cab Lantern Control.</b> The default is for the cab lanterns to go off when the door is fully open. This allows the cab lanterns to go off earlier. <b>+1</b> Ring cab lanterns as soon as door starts to open. <b>+2</b> Ring the cab lanterns when the door reaches DPM point.
CCSonSabbath	0	1	0	-	<b>Car Call Security on Sabbath.</b> When this parameter is enabled, sabbath car calls will not latch on floors that have been secured using car call lockouts security.
Cl Gate No Pref	0	1	0	-	<b>Close Gate (Swing Door) When No Onward Preference.</b> The gate on a swing door normally stays open until a call is placed. This bit causes the gate to close while the car is sitting at the floor.

Table 5: Car Options					
Field Variable	Min	Max	Initial	Units	Description
COP/RemoteCC	0	7	0	-	<p><b>COP/Remote Car CallSelect.</b></p> <p><b>0</b>=Both: COP and Remote Car Call Station used to enter calls.  <b>+1</b>=Separate: COP only or Remote CC only used to enter car calls.  <b>+2</b>=C-R: Car calls entered on the COP sets the acknowledgment light on the Remote station.  <b>+4</b>=R-C: Car calls entered on the Remote station sets the acknowledgment light on the COP.</p>
COP/RemoteDis	0	14	0	-	<p><b>COP/Remote Disable.</b></p> <p><b>+1</b>=Up Direction DisableCOP  <b>+2</b>=Down Direction Disable COP  <b>+4</b>=Up Direction Disable Remote Panel  <b>+8</b>=Down Direction Disable Remote Panel</p>
DCBCancDwell	0	1	0	-	<p><b>Door Close Button Cancel Dwell Time.</b></p> <p><b>0</b>= The DCB cancels door dwell time.  <b>1</b>= DCB does not cancel the door dwell time.  This parameter basically disables DCB to shorten door dwell time.</p>
DO NoActvDOL	0	1	0		<p><b>Door Open Output When No Active DOL.</b></p> <p>When the door is fully open and hits the DOL, the DO is turned off and stays off even if the door drifts off DOL.  With this bit set, the DO output will turn on any time the DOL is lost.</p>
DOBOverNudg	0	1	0		<p><b>DOB Over Nudging.</b></p> <p>If set the door open button will open the door when the door is nudging closed.</p>
DoorOpen LCtrl	0	16	0	-	<p><b>Door Open Light Control.</b></p> <p><b>The way 'DoorOpenL Ctrl' parameter works is as below:</b></p> <p><b>+1</b>=Set OPENL on phase 1 completed  <b>+2</b>=Set OPENL on RTL return to lobby  <b>+4</b>=Set OPENL on EMP returne home with doors open, also sets OPENL on EMP and selected to run  <b>+8</b>=Set OPENL on when Lobby Floor  <b>+16</b>=Set OPENL all the time.</p>

Table 5: Car Options					
Field Variable	Min	Max	Initial	Units	Description
DoubleStroke	0	1	1	-	<p><b>Double Stroke Gong Selection.</b>            Select 1 or 2 gongs for down hall calls.  <b>0</b>=1 Gong  <b>1</b>=2 Gongs.</p>
DriveRdy Flts	1	10	5	count	<p><b>Drive Ready Fault Reset Count.</b>            Number of times the drive can be reset in a 20 minute time period.</p>
DZ gripper ctl	0	1	0	-	<p><b>DZ Gripper Trip Control.</b>  <b>0</b>=The gripper will trip when the car is out of the door zone, only DZ needs to go low.  <b>+1</b>=The gripper will trip when both DZ and DZA go low which changes the trip zone from 2 inches to 6 inches.</p>
EECancelDwell	0	1	0	-	<p><b>Electric Eye Cancel Dwell.</b>            By turning this parameter on you disable the short dwelling door time from the electric eye signal (EE). By default the short dwelling time is enabled.</p>
EM Brake Sw	0	1	0	-	<p><b>Emergency Brake Switch Control.</b>  <b>0</b>=Don't start if brake switch does notpick.  <b>1</b>=Ignore brake switch on start.</p>
Enc DirFltDis	0	1	0	-	<p><b>Encoder Direction Fault Disable.</b>  <b>0</b>=Enable Fault.  <b>1</b>=Disable Fault.</p>
GOVGripper/E BK	0	1	0	-	<p><b>Governor Switch Gripper/Emergency Brake Trip Control.</b>  <b>0</b>=Sets and latches a gripper fault immediately when the governor switch is opened.  <b>1</b>=Latches the gripper fault only if the governor switch is opened while the car is traveling at contract speed or above 150 fpm. When the gripper fault is latched it must be reset from the LCD interface for the car to run.</p>

Table 5: Car Options					
Field Variable	Min	Max	Initial	Units	Description
Griper / EB K Buz	0	1	0	-	<b>Gripper/Emergency Brake Buzzer.</b> Turn on buzzer if you have an active rope gripper or emergency brake fault.
Gripper/E BKTrip	0	3	3	-	<b>Gripper/Emergency Brake Trip.</b> <b>0=Off</b> <b>+1=</b> Safety Processor Speed <b>+2=</b> Overspeed
HB/PIDisNVFI	0	1	0	-	<b>Handicap Buzzer/PI Display Control.</b> <b>1=</b> Do not sound HB or update floor PI when passing an invalid floor.
Hndcap TimeFlr	Bottom Floor	Top loor	1	floor	<b>Handicap Time Floor.</b> If the job is configured to have an extended door input at a hall station, this parameter configures the floor number when parameter will change door timing. Follows fvexdt timer. It will operate for EDHL (Extended Door Hold) only.
lInvertBLS	0	1	0	-	<b>Invert Brake Lift Switch.</b> <b>1=</b> Inverts the logic for the brake lift switch to use a normally closed switch instead of normally open.
InvertCLF	0	1	1	-	<b>Invert The Logic For The Car Light/Fan.</b> <b>0=</b> Car light fan is normally open. <b>1=</b> Car light fan is normally closed.
InvertISER	0	7	0	-	<b>Invert In Service Output.</b> <b>1=</b> The in service light output is turned off when the car is in service instead of turned on. <b>2=</b> The ISER output will function as an elevator in use light. <b>4=</b> This output functions as out of service from a shutdown and doesnot include independent, inspection or recovery mode.

Table 5: Car Options					
Field Variable	Min	Max	Initial	Units	Description
LantPref Dly	0	3	0	sec	<b>Lantern Preference Change Delay.</b> When the direction preference for the elevator changes, we clear the lanterns and wait for this amount of time before the lanterns are turned on again.
LevelFaultCnt	3	10	3	count	<b>Level Fault Count.</b> Maximum count of consecutive re-level tries when a re-level error is detected. A relevel error is detected when the brake is dropped and the car moves out the level zone.
Leveling Fault	0	1	0	-	<b>Leveling Fault Effect.</b> <b>0</b> =Drop everything <b>1</b> =Set emergency brake or gripper when a leveling fault occurs. The fault will have to be manually reset.
Lim DirFltDis	0	1	0	-	<b>Limit Direction Fault Disable.</b> Controller confirms the car direction of travel as it hits the terminal limits. <b>0</b> =Enable Fault. <b>1</b> =Disable Fault.
LobbyLan NCU/IR	0	1	0	-	<b>Lobby Lantern NCU/IR.</b> <b>0</b> =Light the lanterns on IR service at each floor. The lantern will notlight at the lobby if next up operation is selected because the IR car will not be selected to be the next upcar. <b>1</b> =The IR car will light the lantern at all the floors and the lobby even with the system on next up operation.
LowDoorVolt	0	600	198	Vrms	<b>Low Door Voltage.</b> <b>Settings for Line Voltage Monitor Board.</b> This parameter sets the value of voltage for 'Door Low Voltage Fault' to be triggered.
LowLineVolt	0	600	198	Vrms	<b>Low Line Voltage.</b> <b>Settings for Line Voltage Monitor Board.</b> This parameter sets the value of voltage for a 'Low Line Voltage Fault' to be triggered.

Table 5: Car Options					
Field Variable	Min	Max	Initial	Units	Description
MinDoorTimEn	0	1	0	-	<b>Minimum Door Time Enable.</b> 1=The minimum door time for a car call or a hall call is set from the car or hall call dwell timers and cannot be shortened by the Door Close button.
NCULantCtrl	0	3	0	-	<b>Next Up Direction Lantern Control.</b> +1=Turn off hall lantern after next uptime. +2=Turn off cab lantern after next uptime.
NCUPref Ctrl	0	1	0	-	<b>Next Up Preference Control.</b> 1=Allows direction preference to change before the door starts to close, after the next up door time.
No HCDoorReop	0	3	0	-	<b>No Hall Call Button Door Reopen.</b> 1=Do not reopen the door from an at floor hall call.
Non-SimulDoors	0	2	0	-	<b>Non-Simultaneous Doors.</b> 0=Both front and rear doors will open at the same time if there is a demand at both the front and rear openings. 1=The front doors will open first before the rear doors open if there is a demand to open. 2=The rear doors will open first before the front doors open if there is a demand to open.
NudgeDisCtl	0	7	0	-	<b>Nudging Disable Control.</b> +1=Do not turn on the NUD output when doors are in nudging close mode, basically you are disabling nudging output. +2=When doors are in nudging close mode and SE input is ON, keep doors open and also keep FB/NB output latched. +4=Sound the nudging buzzer but do not close the doors on nudging.
Nudge No Calls	0	1	0	-	<b>Nudge With No Calls.</b> 1=The doors will close on nudging even if the elevator has no onward calls.

**Table 5: Car Options**

Field Variable	Min	Max	Initial	Units	Description
OSERLOutCtrl1	0	7	0	-	<p><b>Out of Service Light Control.</b></p> <p><b>+1</b>=Not responding to calls.</p> <p><b>+2</b>=Between floors for over a minute.</p> <p><b>+4</b>=SS open. When this parameter as well as OSERL OutCtrl 2 is set to zero,the output will just operate as an Out of Service light.</p>
OSERLOutCtrl2	0	1	0	-	<p><b>Out of Service Light Control 2.</b></p> <p><b>+1</b>=Alarm. When this parameter as well as OSERL OutCtrl 2 is set to zero,the output will just operate as an Out of Service light.</p>
Preopen Doors	0	3	0	-	<p><b>Preopen Doors.</b></p> <p><b>+1</b>=Will enable preopening of the doors. If retiring cam used with auto door, RCM will also turn on at the preopening point.</p> <p><b>+2</b>=Exclude short floors.</p>
RadPos Ind	6	48	6	inches	<p><b>Radial Position Indicator.</b></p> <p>Used for radial Position indicator output. This parameter adjusts the range for the distace from the floor where the poistion indicator outputs should turn on and off.</p>
RCFoutenable	0	1	0	-	<p><b>Retiring Cam for Freight Output Enable.</b></p> <p>When you turn on this parameter it creates a retiring cam output in the controller, RCF, that mirrors the signal from RCM. You need to reboot CPU everytime you change this parameter for the change to take effect.</p>
RCMControl	0	3	0	-	<p><b>Retiring Cam Control.</b></p> <p><b>1</b>=Hold the retiring cam up at the floor if there is no pilot to open the door (manual doors). The retiring cam will drop after 5 minutes.</p> <p><b>2</b>=RCM output turns on when DZ is hit to advance the RCM ahead of the door open (auto door with retiring cam) otherwise the default is that RCM turns on when dead level.</p> <p>If preopening is set RCM and DO turn on when DZ is hit.</p>

Table 5: Car Options					
Field Variable	Min	Max	Initial	Units	Description
SabbathEnCtl	0	7	0	-	<p><b>Sabbath Enable Control.</b>  <b>0</b>=Disables all options.  <b>+1</b>=Allow IR momentarily to override Sabbath operation.  <b>+2</b>=Lobby Dwell time in Sabbath follows handicap door dwell time instead of the lobby dwell time.  <b>+4</b>=Wait until car is at lobby to turn off Sabbath operation.</p>
SabbathEnCtl2	0	3	0	-	<p><b>Sabbath Enable Control 2.</b>  <b>+1</b>=When the car is placed on Sabbath operation, it waits to go to the lobby before switching to Sabbath Operation.  <b>+2</b>=Use the cab lanterns as directional arrows. This allows people on the hallways to know direction of travel for the elevator.</p>
Sabbath Mode	0	1	0	-	<p><b>Sabbath Collective Mode.</b>  <b>0</b>=Down collective car calls  <b>1</b>=Up collective car calls.</p>
SecndRISR Lant	0	1	0	-	<p><b>Second Riser Lantern.</b>  Turn on cab lantern only when IR call answered. If this parameter is set cab lanterns will only turn on when answering second riser calls.</p>
SlipDetDis	0	1	0	-	<p><b>Slip Velocity Difference Disable.</b>  <b>0</b>=Enable Fault.  <b>1</b>=Disable Fault Can only be disabled with code previous to A17.12010.</p>
SlipVelDiff	0	300	150	fpm	<p><b>Slip Velocity Difference Fault Trip Value.</b>  This parameter determines Maximum allowable difference between Safety processor speed and controller speed.</p>
SPB DirFltDis	0	1	0	-	<p><b>SPB Direction Fault Disable.</b>  <b>0</b>=Enable Fault.  <b>1</b>=Disable Fault.</p>

**Table 5: Car Options**

Field Variable	Min	Max	Initial	Units	Description
ULDLDirFltDis	0	1	0	-	<b>UL/DL Direction Fault Disable.</b> Controller confirms the car direction of travel when it passes the UL and DL door zone limits. <b>0</b> =Enable Fault. <b>1</b> =Disable Fault.
VelDiffDis	0	1	0	fpm	<b>Velocity Difference Fault Disable.</b> <b>0</b> =Enable Fault. <b>1</b> =Disable Fault.
Velocity Diff	50	300	150	fpm	<b>Velocity Difference.</b> Maximum velocity difference between Encoder feedback and demand velocity. When the difference exceeds this setting, 'Velocity DiffFault' will occur.

Table 6: Service Options					
Field Variable	Min	Max	Initial	Units	Description
Access BotFl	Bottom Floor	Top Floor	1	floor	<b>Access Bottom Floor.</b> Floor for bottom access.
AccessDoorCls	0	1	0	-	<b>Access Door Close.</b> When on access operation the car runs with the Door Lock and GS open. By turning this parameter on, the car needs to have the gate switch signal ON in order to run. It should be used on hoistways where the car door will physically hit something if moved on access operation.
Access TopFl	Bottom Floor	Top Floor	2	floor	<b>Access Top Floor.</b> Floor for top access.
Att Buz ctrl	0	1	1	-	<b>Attendant Buzzer Control.</b> 0=Hall Calls only. 1=Hall Calls and Car Calls.
Att CCfromHC	0	1	0	-	<b>Attendant Car Call from Hall Call.</b> When set to 1 and the car is on Attendant service the respective car call will register when a hall call is registered.
CB Buzzer Ctrl	0	1	0	-	<b>Code Blue Buzzer Control.</b> 1=Turn buzzer on while in code blue recall.
CB OverInd	0	1	0	-	<b>Code Blue Override Independent.</b> 1=Wait for timer to expire and then recall the car.
CB singlecall	0	1	0	-	<b>Code Blue Single Car Call.</b> 0=Car on Code Blue operation allows multiple car calls on Hospital Service. 1=Allow only a single call once placed on Hospital Service.

Table 6: Service Options					
Field Variable	Min	Max	Initial	Units	Description
CCPBS onGp Sec	0	1	0	-	<b>CCPBS On Group Car Call Security.</b> This variable enables <b>Car Call Push Button Security</b> with group car call lockout switches. The configuration (CONS) file setting for security type and car call push button security must also be set.
CEOFControl	0	7	0	-	<b>Car Elevator Off Options.</b> <b>+1=Recall.</b> <b>+2=Keep Door Open.</b> <b>+4=Turn off CLF.</b>
CEOFControl2	0	15	0	-	<b>Car Elevator Off Options 2.</b> <b>+1=Keep doors Closed (do not cycle on reversal).</b> <b>+2=Do not blink Elevator Off Light.</b> <b>+4=Elevator Off Auto Reset With Timer.</b> <b>+8=Enable Elevator Off Light to indicate the car finished recall of elevator off mode.</b>
DOBOverSec	0	5	0	-	<b>DOB Override Security.</b> This parameter allows the car to open the door at a secured floor when the car is secured from the following conditions: <b>1=</b> The DOB will be allowed to open the door at any secured floor. <b>2=</b> The DOB can open the door at floors secured from group security floor mask table. <b>3=</b> Allows the DOB to open the front door at floors secured by car call lockout security (switches or cardreader). <b>4=</b> Allows the DOB to open the rear door at floors secured from rear car call lockout security. <b>5=</b> Allows the DOB to open the door at floors locked out by group security floor mask tables when the car is also on Independent.
DoorHold Msg	0	1	0	-	<b>Door Hold Message.</b> Set to enable <b>Extended Door Time Message Indicator</b> in CE Driver board.

Table 6: Service Options					
Field Variable	Min	Max	Initial	Units	Description
Elev OffRet Fl	0	Top Floor	0	floor	<b>Elevator Off Return Floor.</b> Related to HEOF input. This setting is to be used in conjunction with 'Elev Off Ctl =+1'. If the elevator is configured to recall, this parameter will determine what floor the car should be recalled to in elevator off mode. If Parameter is set to zero, car will be returned to the lobby.
Em Power Floor	Bottom Floor	Top Floor	1	floor	<b>Emergency Power Recall Floor.</b>
EMS/HSafterCB	0	1	0	-	<b>EMS (Emergency Medical Service) / HS (Hospital Service) after Code Blue.</b> This is a Code Blue bypass control. <b>0</b> =Car goes from Auto to Hospital service, by passing the code blue sequence when EMS switch is turned on. <b>1</b> =Hospital service only activates after a code blue recall.
EP Recovery Dir	0	1	0	-	<b>Emergency Power Recovery Direction.</b> Recover to the nearest floor on emergency power. <b>0</b> =Based on movement of the car when brake is picked. <b>1</b> =Based on load weighing device. Used when the emergency power recovery source can only provide enough power to bring the car to the floor in the direction of the load.
EPS SelNo Grp	0	2	0	-	<b>Emergency Power Selection Switch Operation with no Group Active.</b> <b>0</b> =Run Automatic. <b>1</b> =Recall first and then run Automatic. <b>2</b> =Recall only; do not run after recall.
FlashCBLight	0	1	0	-	<b>Flash Code Blue Light.</b> <b>1</b> =The code blue light inside the car station will flash.
Handicap Load	0	100	40	%	<b>Handicap Load (Car Capacity).</b> Percent of load, when above this value, the car may not have enough room for a person in a wheelchair. Cars with loads below this value would be given a preference to get an assignment at a floor requested by a handicap person.

**Table 6: Service Options**

Field Variable	Min	Max	Initial	Units	Description
HCAcknwdg Bzz	0	1	0	-	<b>HC Acknowledge Attendant Buzzer - Buzz Once (for one second every time a call comes in). Car Timers-&gt;Att Buz Delay must be set to "0".</b> 0=Disable. 1=Enable.
HEOFControl	0	7	0	-	<b>Hall Elevator Off Control.</b> +1=Recall car when key switch activated. +2=Keep door open at the shutdown floor. +4=Allow the cab light and fan to time-out even though the door is open but the car is shutdown.
HEOFControl2	0	15	0	-	<b>Hall Elevator Off Options 2.</b> +1=Keep doors Closed (do not cycle). +2=Do not blink HEOFL. +4=Auto Reset when input off and timer expires. +8=Use HEOFL to indicate car finished recall.
HEOFControl3	0	1	0	-	<b>Hall Elevator Off Options 3.</b> +1=Only activate if doors are closed. See other Hall Elevator Off Options as well.
HEOFOverInd	0	1	0	-	<b>Hall Elevator Off Override Independent.</b> 1=Wait for timer to expire and then recall the car.
HSV DoorCICC	0	1	0	-	<b>Hospital Service Close Door Car Call.</b> Close the doors from a car call when the car is on Hospital Service.
IND DoorCICC	0	1	0	-	<b>Independent Door Close Car Call.</b> 1=Enable to close the doors from a car call when the elevator is on independent.
Ind OverSec	0	7	0	-	<b>Independent Overrides Security.</b> 1=Allow independent service to override security car call lockouts. 2=Override Security Floor Mask configurations. 4=Override remote car call station.

Table 6: Service Options					
Field Variable	Min	Max	Initial	Units	Description
IND Rclto Lby	0	1	0	-	<b>Independent Recall to Lobby.</b> 1=Forces the car to recall to the lobby when on independent and no calls are made.
INDRcl2Lby tmr	10	60	20	sec	<b>Independent Recall to Lobby Timer.</b> Recall delay for car in independent when 'IND Rcl to Lby' is set.
InsDoorClose	0	1	0	-	<b>Inspection Door Close.</b> 1=The door close output will turn on when the up or down inspection run button is pressed.
INSECOupCtl	0	1	0	-	<b>INSEC - In Security Output Invert.</b> Output located on the car call security board.
LoadAntinuisan	0	100	20	%	<b>Load Anti-nuisance.</b> Percent of load, when below this set point will cause the car to drop its car calls.This function is disabled when set to zero.
LoadBypass	0	100	60	%	<b>Load Bypass.</b> Percent of load, when above this set point will cause the car to bypass hall calls.This function is disabled when set to zero.
Load Dispatch	0	100	40	%	<b>Load Dispatch.</b> This set point is used as a trigger to activate Up Peak operations in the group. Each time the car leaves the lobby with a load greater than this value, the group will increment the Up Peak Trigger.This function is disabled when set to zero.

**Table 6: Service Options**

Field Variable	Min	Max	Initial	Units	Description
LoadOverload	0	125	110	%	<b>Load Overload.</b> Percent of load, when above this set point will cause the car to go on overload operation (sit at the floor with the door open and the overload light on). When the load goes below this value, the car will automatically return to service. This function is disabled when set to zero.
LWAnti- nuisan	0	50	0	count	<b>Load Weighing Anti-nuisance.</b> Set to the maximum number of car calls that can be entered before all car calls are cancelled without the load switch LWA input on. Once the load switch is on, all car calls will stay latched. If set to 0, this function is disabled.
ManualDirEn	0	4	0	-	<b>Attendant Manual Direction Enable.</b> <b>1</b> =Works in conjunction with the ATTUP and ATTDN to determine direction of travel. <b>2</b> =Reads the ATTUP input and use it as a START button. <b>4</b> =Will not allow car calls to be registered until the door is fully closed.
MedCCSOvrride	0	1	0	-	<b>Medical Service Override Car Call Security.</b> <b>1</b> =Medical service car will override car call security.
MedDoorReopen	0	2	0	-	<b>Medical Service Door Reopen.</b> When car is in medical Service, this parameter determines the door open sequence for re-open: <b>0</b> =Stop. <b>1</b> =Constant pressure. <b>2</b> =Momentary to DOL.
MedEmFloor	Bottom Floor	Top Floor	1	floor	<b>Medical Emergency Return Floor.</b>
Med EmSwLoc	0	1	0	-	<b>Medical Emergency Switch Location.</b> Selects the switch location for the front or rear door.

Table 6: Service Options					
Field Variable	Min	Max	Initial	Units	Description
MedInd Ovrride	0	2	0	-	<b>Medical Service Overrides Independent Control.</b> 0=Immediate. 1= After Delay. 2=No override.
No Psg Run Cnt	0	10	0	count	<b>No Passenger Run Count.</b> When set to a number other than zero, the car call antinuisance feature is activated. This count is the number of times the car will run from a car call without detecting that a passenger has broken the detector edge. Once the count is reached, all remaining car calls will be cancelled.
PI Serv Msg1	0	Max Service	0	Service Number	<b>PI Service Message 1.</b> When the car service matches this number, user message 1 is sent to the PI display. This will correspond to user P Idisplay message 17.
PI Serv Msg2	0	Max Service	0	Service Number	<b>PI Service Message 2.</b> When the car service matches this number, user message 2 is sent to the PI display. This will correspond to user PI display message 18.
PI Serv Msg3	0	Max Service	0	Service Number	<b>PI Service Message 3.</b> Used for Custom messages. Need to be programmed byCE electronics and GAL for special messages.
ReturnToLobby	0	7	0	-	<b>Return to Lobby Option.</b> +1=Cycle door at lobby. +2=Cancel car calls when activated. +4=Cycle door on reversal.
RTLDoorSelct	0	2	0	-	<b>Return To Lobby Door Select.</b> This variable allows you to specify door open type on 'Return to Lobby' service. 0=The car will open only the front door. 1=The car will open only the rear door. 2=The car will open both front and rear doors.

Table 6: Service Options					
Field Variable	Min	Max	Initial	Units	Description
Sec Reassign CC	0	3	0	-	<p><b>Security Reassign Car Call.</b>  Re-assign secured car call to opposite door. Used with security configuration, cons.dat file setting: <b>cons[SecFICfg]=2</b>.  <b>0</b>=Disabled.  <b>+1</b>=In case front CC are secured, reassign them as rear.  <b>+2</b>=In case rear CC are secured, reassign them as front.</p>
Sec Recall2	0	2	0	-	<p><b>Security Recall Control 2.</b>  <b>0</b>=Out of group on first recall.  <b>1</b>=Out of group on all recalls.  <b>2</b>=No out of group recalls.</p>
Security Floor	0	Top Floor	1	floor	<p><b>Security Floor.</b>  The security recall floor. This is the floor where the security guard would be stationed. This floor would not be locked out when on security.</p>
Security Recall	0	15	0	-	<p><b>Security Recall Selection.</b>  <b>0</b>=No Recall.  <b>+1</b>=Recall to Security Floor on activation of security.  <b>+2</b>=Cycle front door once recalled to the Security Floor.  <b>+4</b>=Cycle rear door once recalled to the Security Floor.  <b>+8</b> =Always recall to security floor after each run.</p>

**Table 6: Service Options**

Field Variable	Min	Max	Initial	Units	Description
ServiceLTCTL	0	30	0	Service Number	<p><b>Service Light Control.</b>                      When the configuration file parameter <b>cons[servOUT]</b> is set to 1 or 2, the service output <b>SERVO</b> will turn on when the car service matches the car service number in this parameter.                      The available options are:  <b>0: Out of Service</b>  <b>1: Automatic Service</b>  <b>2: Independent Service</b>  <b>3: Load Weighing Bypass</b>  <b>4: Attendant Service</b>  <b>5: Code Blue Service</b>  <b>6: Fire Service Phase 2</b>  <b>7: Emergency Power Service</b>  <b>8: Earthquake Service</b>  <b>9: Fire Phase 1 Main Return</b>  <b>10: Fire Phase 1 Alt Return</b>  <b>11: Homing</b>  <b>12: Reset Going Up</b>  <b>13: Reset Going Down</b>  <b>14: Stalled Out of Service</b>  <b>15: Return to Lobby</b>  <b>16: Load Weighing Overload</b>  <b>17: Medical Emergency Serv</b>  <b>18: Calibrate Load Weigher</b>  <b>19: Car Switch Elevator Off</b>  <b>20: Hall Switch Elevator Off</b>  <b>21: Low Pressure</b>  <b>22: Hospital Service</b>  <b>23: Priority Service</b>  <b>24: Security Recall</b>  <b>25: Sabbath Service</b>  <b>26: TUG Service</b>  <b>27: Hot Oil Operation</b>  <b>28: Riot Control</b>  <b>29: Car Switch Elevator Off 2</b></p>
SR CCSecbyDir	0	2	0	-	<p><b>Second Riser Car Call Security by Direction.</b>                      Allows calls in the one direction but disables them in the other.  <b>1=Allow calls in the up direction (above the floor) but disable them going down.</b>  <b>2=Allow calls in the down direction (below the floor) but disable then going up.</b></p>

**Table 6: Service Options**

Field Variable	Min	Max	Initial	Units	Description
StopAt Lobby	0	15	0	-	<b>Stop at Lobby.</b> <b>0</b> =Do not automatically stop at lobby. <b>+1</b> =The car will stop at the lobby when the car is traveling up and the car is below the lobby floor. <b>+2</b> =The car will stop at the lobby when the car is traveling down and the car is above the lobby floor. <b>+3</b> =The car will stop at the lobby when traveling in either direction. <b>+4</b> =Stop at lobby with any onward call past the lobby. <b>+8</b> =Recall to the lobby.
Vip LantCtrl	0	3	0	-	<b>VIP Lantern Control.</b> <b>0</b> =Do not ring lanterns on VIP. <b>1</b> =Ring up or down lantern at VIP floor when the door is fully open. <b>2</b> =Ring up or down lantern at VIP floor before the door is opened.
VIP multicall	0	1	0	-	<b>VIP Multiple Calls.</b> <b>0</b> =VIP feature works as single call. <b>1</b> =The car will be allowed to make multiple VIP calls until no more car calls are entered and until the VIP sequence time-out timer is expired.

Table 7: Fire Options					
Field Variable	Min	Max	Initial	Units	Description
ALTFireFloor	Bottom Floor	Top Floor	2	floor	<b>Alternate Fire Floor.</b>
Alt RclFSOff	0	3	0	-	<b>Alternate Floor Recall Fire Service Off.</b> <b>+1</b> =Have the elevator recall back to the alternate floor when the lobby fire switch is turned to the off position and car recalled to the main fire floor. <b>+2</b> =Allows the car to return to the alternate landing even if sensor was reset.
Aux.FireSw.	0	1	0	-	<b>Auxiliary Fire Switch.</b> <b>1</b> =The controller expects an auxiliary hall fire switch to be used.
CB overFS	0	1	0	-	<b>Code Blue Over Fire Service.</b> <b>+1</b> =Prevent Code Blue car from recalling in Fire Service.
Cl DoorF1Rcl	0	1	0	-	<b>Close Door After Fire Phase 1 Recall.</b> <b>1</b> =Elevator will close the doors after phase 1 recall and reopen from a hall call (Denver Fire service amendment).
F1DCTime-out	10	60	20	sec	<b>Fire Phase 1 Door Close Time-out.</b> The amount of time it will take before the car doors start to close while the car is on Independent or Attendant service prior to recalling the elevator on Fire Phase 1.
F1DoorDwell	1	90	60	sec	<b>Fire Phase 1 Door Dwell Time.</b> Fire Service Phase one complete dwell time when 'Cl Door F1Rcl' parameter is set. (Denver FS phase 1 dwell time).
F2DOBovrDCB	0	1	0	-	<b>Fire Phase 2 Door Open Button Overrides Door Close Button.</b> <b>1</b> =Allows the Door Open Button to override Door Close Button when on phase 2. (Miami Fire Service).
FireMain Floor	Bottom Floor	Top Floor	1	floor	<b>Fire Main Floor.</b>

Table 7: Fire Options					
Field Variable	Min	Max	Initial	Units	Description
FireOption	0	3	0	-	<p><b>Fire Option. Recall Reset Selection.</b></p> <p><b>0</b>=Reset fire service phase 1 after hall switch is turned off and car returns to fire floor.</p> <p><b>1</b>=Reset phase 1 immediately after hall switch is turned off.</p>
FireOption2	0	3	1	-	<p><b>Fire Option 2.</b></p> <p><b>+1</b>=Initiate a phase 2 recall only when the door is open (Chicago Fire Service).</p> <p><b>+2</b>=Disable flashing FL on phase 2 (Chicago Fire service).</p>
FireSwLoc	0	4	0	-	<p><b>Fire Switch Location. Location of Fire Hall Switch.</b></p> <p><b>0</b>=Main/Alt Front.</p> <p><b>1</b>=Main Rear/Alt Front.</p> <p><b>2</b>=Main Front/Alt Rear.</p> <p><b>3</b>=Main/Alt Rear.</p> <p><b>4</b>=Set from Dispatcher Car selection.</p>
FireLEmerPwr	0	1	1	-	<p><b>Fire Light Control During Emergency Power.</b></p> <p><b>1</b>=Cause the fire light FL to turn off if the car is not selected to run.</p>
FireLOTSRet	0	1	0	-	<p><b>Fire Light Control for Out of Service Cars.</b></p> <p><b>1</b>=Enabling this parameter will turn off the fire light in the event the car cannot recall for being out of service. The cause could be due to Earthquake, low oil, stall,etc.</p>
FS2DoorReopen	0	1	0	-	<p><b>NYC FS2 Door Reopen on Stop Switch.</b></p> <p><b>When the elevator is on FS2 and DCB is pressed, the doors will behave thus:</b></p> <p><b>0</b>=While the door is closing, if you hit the in car stop switch the doors continue to close.</p> <p><b>1</b>=While the door is closing and you hit the in car stop switch,the doors re-open.</p>

Table 7: Fire Options					
Field Variable	Min	Max	Initial	Units	Description
HallFireLight	0	4	0	-	<p><b>Hall Fire Light.</b>  <b>This variable controls the FLH output on the controller so it can be used for a hall fire light or a fire security override.</b>  <b>0</b>=FLH turns on while the car is on phase 1 or phase 2 fire service.  <b>+1</b>=FLH turns on while phase 1 is ineffect.  <b>+2</b>=Flash FLH at 1 second intervals while activated.  <b>+4</b>=FLH follows the Fire Light (FL) logic.</p>
Hoistw FireRet	0	1	0	-	<p><b>Hoistway Fire Sensor Return Floor Selection.</b>  <b>0</b>=Return to the Main fire floor.  <b>1</b>=Return to the Alternate fire floor.</p>
HWS2FireLoc	0	1	50	-	<p><b>Fire Service Hoistway HWS2 Sensor Location.</b>  <b>0</b>= Same hoistway.  <b>1</b>=Separate hoistway.</p>
HWS2FireRet	0	1	0	-	<p><b>Second Hoistway Fire Service Sensor Return Option.</b>  <b>0</b>=Main recall floor.  <b>1</b>=Alternate recall floor.</p>
MachRm FireRet	0	1	0	-	<p><b>Machine Room Fire Sensor Return Floor Selection.</b>  <b>0</b>=Return to the Main fire floor.  <b>1</b>=Return to the Alternate fire floor.</p>
RclfromF1Alt	0	1	0	-	<p><b>Recall From Fire Phase 1 Alternate Floor.</b>  <b>0</b>=If the car has returned to the alternate floor from a smoke sensor and when two fire hall switches are used, both must be on to recall the car from the alternate floor to the main floor.  <b>1</b>=The car will recall from the alternate floor to the main floor from either hall fire key switch. (Set to 1 for Mass. fire service).</p>
Recall Reset	0	3	0	-	<p><b>Recall Reset Selection.</b>  <b>0</b>=Reset fire service phase 1 after hall switch cycled through reset and turned off and car returns to fire floor.  <b>1</b>=Reset phase 1 immediately after hall switch is cycled through reset and then turned off.  <b>2</b>=Reset fire service without cycling fire switch through reset but turned off only if the smoke sensors were not activated.</p>

Table 7: Fire Options					
Field Variable	Min	Max	Initial	Units	Description
Recall Reset 2	0	1	0	-	<b>Recall Reset Selection 2.</b> <b>0</b> =Reset fire service phase 1 with car at any floor. <b>1</b> =Reset phase 1 only if car at fire recall floor.

Table 8: Group Dispatch					
Field Variable	Min	Max	Initial	Units	Description
AltLobbyFloor	1	Top Floor	1	floor	<p><b>Alternate Lobby Floor.</b> Galaxy groups can be configured to have an alternate lobby. Switching between regular lobby and alternate lobby can be done by means of liftnet, Galileo, controller input or service timer. Oncethe alternate lobby is enabled, controllers will use this landing as the lobby floor for all dispatching purposes.</p>
Alt Parking Fl	1	Top Floor	1	floor	<p><b>Alternate Parking Floor.</b> Normally, during parking operation, one car is always parked at the lobby. With alternate parking floor operation, a free car is parked at the alternate parking floor instead of the lobby floor.This operation is controlled by an input or from a service timer.</p>
Asgn Park FIDO	0	1	0	-	<p><b>Assign Parking Floor with Door Open.</b> By default we only park cars that have the doors closed after a time delay. This parameter allows to re-assign parking to cars with doors open as long as they do not have a direction to run.</p>
AutoSVctm-out	0	1	0	-	<p><b>Auto Service Time-out.</b> When this parameter is enabled and 'Auto SVC tot TM' parameter time is set accordingly, each car is checked for answering assigned hall calls. If the car does not move to answer calls in the required time, it is put into AST service. Hall calls that are assigned to that car are reassigned to working cars in the group. The group then periodically assigns hall calls to the AST car to verify if it can beput back into the group for normal operation. <b>0</b>=Disable. <b>1</b>=Enable</p>
AutoSVctotTM	10	3200	120	sec	<p><b>Auto Service Time Out Time.</b> This time, in seconds, is used in conjunction with 'Auto SVctm-out' and is the amount of time that the group will wait before setting a 'not moving/responding' car as timed out.</p>
Dn Peak Contrl	0	1	0	-	<p><b>Down Peak Control.</b> <b>0</b>=Normal down peak. <b>1</b>=Heavy down peak.</p>

Table 8: Group Dispatch					
Field Variable	Min	Max	Initial	Units	Description
Dn PkTrigCnt	1	100	12	count	<b>Down Peak Trigger Count.</b> Number of down hall calls above the lobby that are set within the down peak trigger time to place the system on down peak operation.
Dn PkTrigTime	0	3200	60	sec	<b>Down Peak Trigger Time.</b> The time interval to count the number of down hall calls above the lobby to activate down peak operation.
DownPeak Pool	0	Number Cars	0	car	<b>Down Peak Pool.</b> Number of cars to be utilized for down peak.
DownPeak Time	0	3200	180	sec	<b>Down Peak Duration Time.</b> The duration time for down peak operation once down peak is activated.
ETA CoCCTime	0	60	15	sec	<b>ETA Coincident Car Call Time.</b> Hall calls will be assigned to the car with the coincident car call unless the car without the coincident car call can reach the call faster then ETA Coincident Car Call Time.
ETAMin Time	0	60	6	sec	<b>ETA Minimum Time.</b> For a hall call to be assigned to a new car, the difference in ETA must be greater than the ETA Minimum Time.
GrpTimerPark	0	Number Cars	0	car	<b>Group Service Timer Park Cars.</b> This is the number of parking cars when parking is set from the Service Activation Timer for Group parking.

Table 8: Group Dispatch					
Field Variable	Min	Max	Initial	Units	Description
High PriortyFL	0	Top Floor	0	floor	<p><b>High Priority Floor.</b></p> <p>When this parameter is set to a floor number other than zero the high priority operation is activated. If there is a call latched at the high priority floor and the timer set from the 'High PriorityTM' expires, the group will choose the best car by considering only car calls. It will remove all hall calls on that best car except for the priority floor hall call. The car will serve all car calls and then service the priority floor before being assigned another hall call from the group.</p>
High PriortyTM	6	254	60	sec	<p><b>High Priority Time.</b></p> <p>Works in conjunction with parameter 'High Priority Floor', it is the amount of time to wait before removing hall calls assigned to the selected best car.</p>
LobbyFloor	Bottom Floor	Top Floor	1	floor	<p><b>Lobby Floor.</b></p>
LobbyReq Cntrl	0	1	0	-	<p><b>Lobby Request Control.</b></p> <p>If the lobby request variable is set to non-zero, then that is how many cars are requested to the lobby all the time.</p> <p><b>1</b>=The lobby request is only used when next up is active. Next Up can be active all the time, from a dedicated input or from UpPeak.</p>
LobbyRequest	0	Number Cars	0	car	<p><b>Lobby Request.</b></p> <p>Number of Cars Requested to the Lobby floor. Used with Next Car Up operation.</p>

Table 8: Group Dispatch					
Field Variable	Min	Max	Initial	Units	Description
NextCarUp	0	7	0	-	<p><b>Next Car Up.</b>  <b>Set to 1 or 2 will activate the Next Car Up operation.</b>  <b>+1=</b>The Next Up car will open its door at the lobby and keep it open. The car is allowed to leave the floor after the Lobby Dwell time expires but will remain at the floor with the door open until an onward call is assigned to it.  <b>+2=</b>The Next Up car will close its door after the Lobby Dwell time expires and go off on Next Up but will remain at the lobby. An up hall call at the lobby will cause the car to open its door and go on Next Up.  <b>+4=</b>Next Up is activated on Up Peak detection only. Next Up can also be activated from an input.</p>
ParkDelayTime	0	120	8	sec	<p><b>Parking Delay Time.</b>  Time delay an idle car waits before being parked.</p>
Parking	0	Number Cars	1	car	<p><b>Number of Cars to Park.</b>  One car is parked at the lobby. The remaining cars in the group are parked at the most used floors of the building. If set to zero, no cars are parked.</p>
Parking floor1	0	Top Floor	0	floor	<p><b>Parking Floor 1.</b>  Floor to park the <b>second</b> idle car, the first idle car is parked at the Lobby. If set to zero, the group will use number of hall call history to decide where to park the car. The 'Parking' variable must be set to at least 1 for this function to work. See also Parking Type.</p>
Parking floor2	0	Top Floor	0	floor	<p><b>Parking Floor 2.</b>  Floor to park the <b>third</b> idle car, the first idle car is parked at the Lobby. If set to zero, the group will use number of hall call history to decide where to park the car. The parking variable must be set to at least 1 for this function to work. See also Parking Type.</p>

Table 8: Group Dispatch					
Field Variable	Min	Max	Initial	Units	Description
Parking floor3	0	Top Floor	0	floor	<b>Parking Floor 3.</b> Floor to park the <b>fourth</b> idle car, the first idle car is parked at the Lobby. If set to zero, the group will use number of hall call history to decide where to park the car. The parking variable must be set to at least 1 for this function to work. See also Parking Type.
Parking floor4	0	Top Floor	0	floor	<b>Parking Floor 4.</b> Floor to park the <b>fifth</b> idle car, the first idle car is parked at the Lobby. If set to zero, the group will use number of hall call history to decide where to park the car. The parking variable must be set to at least 1 for this function to work. See also Parking Type.
Parking floor5	0	Top Floor	0	floor	<b>Parking Floor 5.</b> Floor to park the <b>sixth</b> idle car, the first idle car is parked at the Lobby. If set to zero, the group will use number of hall call history to decide where to park the car. The parking variable must be set to at least 1 for this function to work. See also Parking Type.
Parking floor6	0	Top Floor	0	floor	<b>Parking Floor 6.</b> Floor to park the <b>seventh</b> idle car, the first idle car is parked at the Lobby. If set to zero, the group will use number of hall call history to decide where to park the car. The parking variable must be set to at least 1 for this function to work. See also Parking Type.
Parking floor7	0	Top Floor	0	floor	<b>Parking Floor 7.</b> Floor to park the <b>eighth</b> idle car, the first idle car is parked at the Lobby. If set to zero, the group will use number of hall call history to decide where to park the car. The parking variable must be set to at least 1 for this function to work. See also Parking Type.

Table 8: Group Dispatch					
Field Variable	Min	Max	Initial	Units	Description
Parking Type	0	3	0	-	<p><b>Parking Type.</b> Determines the type of parking operation that is implemented by the group.</p> <p><b>0</b>=Park free cars to floors with the most hall calls for that 15-minute period.</p> <p><b>1</b>=Divide the hoistway by the number of cars and place a car in each zone starting with the lobby.</p> <p><b>2</b>=Park cars according to the adjustable variable 'Parking Floor'.</p> <p>Note that during parking, a car is always parked at the Lobby except when the option for alternate parking floor is selected through an input.</p>
Parking Width	0	Top Floor	0	floor	<p><b>Parking Width.</b> The number of floors that a car is within to be considered parked at the parking floor. See also ParkingType.</p>
Up Peak Contrl	0	1	0	-	<p><b>Up Peak Control.</b> <b>0</b>=Normal up peak. <b>1</b>=Heavy up peak.</p>
Up Peak Pool	0	Number Cars	1	car	<p><b>Up Peak Pool.</b> Number of cars to be utilized for up peak.</p>
Up Peak Time	0	3200	180	sec	<p><b>Up Peak Duration Time.</b> The duration time for up peak operation once up peak is activated. If set to zero, up peak operation will never turn on.</p>
Up PkCCCount	1	40	3	count	<p><b>Up Peak Car Call Count.</b> Number of car calls the car must have when leaving the lobby to count as an up peak trigger.</p>
Up PkTrigCnt	1	100	3	count	<p><b>Up Peak Trigger Count.</b> The number of up peak triggers that are set within the up peak trigger time to activate up peak operation. Up peak triggers are counted when the car leaves the lobby with the load dispatch input set or with more car calls than the up peak car call count.</p>

Table 8: Group Dispatch					
Field Variable	Min	Max	Initial	Units	Description
Up PkTrigTime	0	3200	60	sec	<b>Up Peak Trigger Time.</b> The time interval to count the number of up peak triggers.

Table 9: Group Options					
Field Variable	Min	Max	Initial	Units	Description
1st EP Run Car	0	Number Cars	1	car	<b>First Emergency Power Run Car.</b> This is the first car selected to run. If this car cannot run, the next consecutive car is selected.
1st Rcl EPSF2	0	Number Cars	2	car	<b>Frst Return Car Emergency Power Service Feeder 2.</b> This will be the first car recalled in Emergency Power (the rest are done sequentially in a loop) for power feeder 2.
1stRecall Car	0	Number Cars	1	car	<b>First Recall Car.</b> This is the first car allowed to recall during the emergency power recall sequence. The recall sequence continues in consecutive order and then loops around until all cars are recalled.
1stRun EPSF2	0	Number Cars	2	car	<b>First Run Car Emergency Power Service Feeder 2.</b> This will be the first car selected to run on emergency power (the rest are done sequentially in a loop) for power feeder 2.
2nd IRCar	0	Number Cars	0	car	<b>2nd Inconspicuous Riser Car.</b> Set this option to have a second car answer the Inconspicuous Riser calls.
ATT Pref Time	0	60	0	sec	<b>Attendant ETA Preference Time.</b> When set to non-zero, the car <b>not</b> on attendant service has this time added to its ETA time. This causes the attendant car to be given a preference for the hall call.
CB Button Loc	0	2	0	-	<b>Code Blue Location.</b> <b>0</b> =CB onCB. <b>1</b> =CB on HCB. <b>2</b> =CB onIR.

Table 9: Group Options					
Field Variable	Min	Max	Initial	Units	Description
CBIRPenalty	0	60	10	sec	<b>IR Car Code Blue Penalty Time.</b> This is used to calculate and give preference to cars in fully automatic operation.
CB Rcll Any Car	0	1	0	-	<b>Code Blue Recall Any Call.</b> <b>0</b> =Disable. <b>1</b> =Enables dispatcher to recall any car If Code Blue Cars 1 and 2 are not available. If you want to select any car as your primary option, make Code Blue Car and Code Blue Car #2 equal to zero and enable this setting.
CB Req Ind Car	0	1	0	-	<b>Code Blue Request Independent Car.</b> Code blue request for car on independent operation. Set to a 1 in dispatcher and in all cars so the car can be requested (flash EML) if the car is in independent mode.
CB SellIRCar	0	1	0	-	<b>Code Blue Over IR Car.</b>
CBSRiserCar	0	Number Cars	0	car	<b>Code Blue Second Riser Car Select.</b>
CodeBlue Car	0	Number Cars	0	car	<b>Code Blue Car.</b> When a code blue call is initiated, this will be the first car to respond. If car is not available, see variables 'Code Blue Car# 2' and 'CB Rcll Any Car' for more options.
CodeBlue Car#2	0	Number Cars	0	car	<b>Code Blue Car# 2.</b> When a code blue call is initiated, this will be the second car to respond. In the event that first 'Code Blue Car' is not available, see variables 'Code Blue Car' and 'CB Rcll Any Car' for more options.
Dis OppHC Time	10	30	10	sec	<b>Disable Opposite Hall Call Time.</b> Specify amount of time the opposite hall call will be disabled.

**Table 9: Group Options**

Field Variable	Min	Max	Initial	Units	Description
DisableOppHC	0	15	0	-	<p><b>Disable Opposite Hall Call After Initial Hall Call Is Entered.</b></p> <p>When the first up or down hall call is hit, disable opposite call for the time set;</p> <p><b>+1</b>=Front HC riser.  <b>+2</b>=Rear HC riser.  <b>+4</b>=IR Front HC riser.  <b>+8</b>=IR Rear HC riser.</p>
Dispatcher Car	0	Number Cars	0	car	<p><b>Dispatcher Car.</b></p> <p>If set to 1, this car is allowed to become the dispatcher. In normal operation, this variable would be set to zero and car #1 would be the dispatcher. If car #1 is shut down, car #2 automatically becomes the dispatcher. During installation, it may be necessary to force car #3 or above to be the dispatcher until car #1 or #2 are brought online.</p>
Em Power Cars	1	Number Cars	1	car	<p><b>Number of Emergency Power Cars.</b></p> <p>Number of cars that can run at the same time on the emergency power source.</p>
Emerg Dispatch	0	7	0	-	<p><b>Emergency Dispatch.</b></p> <p>This parameter is applied to both the car that is selected as the dispatcher and also the non-dispatcher cars. If set to 1 and hall call is power lost, the dispatcher car will set <b>down hall calls</b> above the lobby and <b>up hall calls</b> at and below the lobby. For the non-dispatcher cars, if set to a 1, and communications is lost to the dispatcher car, the car will dispatch itself to <b>down hall calls</b> above the lobby and <b>up hall calls</b> below the lobby. The front hall call and rear hall call bits settings are only used for the dispatcher car and when set, if communication is lost to a particular hall call board, hall calls are set for the affected floors.</p>

Table 9: Group Options					
Field Variable	Min	Max	Initial	Units	Description
EMPATTcar 1st	0	1	0	-	<b>Emergency Power Attendant Car First.</b> Select and Prioritize the attendant car for running on emergency power service. It won't be recalled. After recall is complete for the group, It recovers and goes back in service.
EmPwrOpOutput	0	3	0	-	<b>Emergency Power Operation LED.</b> This parameter controls the group outputs for emergency power status for each car. <b>0</b> =Outputs are on for cars that are operational. <b>1</b> =Outputs are on for cars on normal power. <b>2</b> =Outputs are on for cars on emergency power. <b>3</b> =Outputs are on for cars that are being recalled.
EmPwrPk Output	0	2	0	-	<b>Emergency Power Park LED.</b> This parameter controls the group outputs for emergency power parked status for eachcar. <b>0</b> =Cars are parked on emergency power. <b>1</b> =Cars are parked or selected to run.
EP ManSelEn	0	3	1	-	<b>Emergency Power Manual Select Enable.</b> <b>0</b> =The recall sequence is aborted and any moving car will stop at the next floor to allow the selected car torun. <b>+1</b> =Car is selected to run when the currently selected car completes its recall. <b>+2</b> =Makes the selected car wait for all the cars to recall before being selected to run.
EP RclOuten	0	1	0	-	<b>Emergency Cars Finished Recalling Output Enable.</b> This enables an output in the hall call board for Emergency Power Complete (EPCOM). This setting is only read in power up so after changing this setting you need to reboot the controller.

Table 9: Group Options					
Field Variable	Min	Max	Initial	Units	Description
EP Recall Delay	0	3200	15	sec	<b>Emergency Power Recall Delay Time.</b> Time delay before the group starts the emergency power recall sequence.
EP Recover Tim	1	60	20	sec	<b>Emergency Power Recover Time.</b> When elevators are in Emergency Power recall, this is the time that the dispatcher will wait for each car to recover to a floor. If the car is in the middle of a blind shaft, you need to calculate the time each car may take to get to a floor in emergency power recovery speed.
GrpCCOverride	0	1	0	-	<b>Group Car Call Override.</b> Normally visitor access allows the car call security to be overridden momentarily from a push button in an owner's apartment. <b>1</b> =The security override works directly from a key switch input.
Grp CCSecOvrT	1	240	60	sec	<b>Group Car Call Security Override Timer.</b> This is the amount of time that the car call security is overridden when a group car call security override button is pressed.
Handicap Wait	0	255	0	sec	<b>Handicap Car Wait Time.</b> Special operation that when a passenger presses a handicap hall button, the group adds this time to the ETA of all cars that do not have enough capacity. See Handicap Capacity in 'Car Options'. Normally, if a car is at the floor of the handicap hall call, it will get the assignment regardless of the handicap capacity unless this value is set to 255.

Table 9: Group Options					
Field Variable	Min	Max	Initial	Units	Description
HC Asg SecType	0	15	0	-	<p><b>Hall Call Assignment Security Type.</b>  <b>Use with Special Priority Service. Determines what hall calls should be given a special priority.</b></p> <p>1=Up.  2=Down.  4=Up Rear.  8=Down Rear.</p>
HCSecurityctrl	0	2	0	-	<p><b>Hall Call Security Control.</b>  Set what riser the hall call security inputs work with:</p> <p>0=Only standard hall calls.  1=Standard hall calls and Second Riser hall calls.  2=Only Second Riser hall calls.</p>
HC X-AssignEn	0	5	0	-	<p><b>Hall Call Cross Assignment Enable.</b>  1=Front hall call cross assignment is enabled.  4=Rear hall call cross assignment.  5=Front and rear hall call cross assignment.</p> <p>The group will look for cross assignment calls as well as hall calls.</p> <p><b><i>Power should be cycled on controller after this variable is modified so all communications to all devices are made.</i></b></p> <p>2=Hall call cross cancellation is used and hall calls are are not cancelled when all cars are out ofservice.</p> <p><b><i>A setting of 3 for both hall call assignment and cancellation is not valid and may cause unpredictable results.</i></b></p>
HCX-AssignETA	0	500	60	sec	<p><b>Hall Call Cross Assignment ETA Limit.</b>  If ETA for hall call assignment is greater than this ETA limit, the hall call will be cross-assigned to the old group controller.</p>

Table 9: Group Options					
Field Variable	Min	Max	Initial	Units	Description
IRCar	0	Number Cars	0	car	<b>Inconspicuous Riser Car.</b> This car is assigned all the IR hall calls.
IRControl	0	7	0	-	<b>Inconspicuous Riser Control.</b> <b>This parameter alters how IR riser service is activated or deactivated.</b> <b>0</b> =IR active from ICR or RICR input. <b>+1</b> =IR activated when any IR call is activated. <b>+2</b> =Finish car calls then answer IR calls. <b>+4</b> =Finish car calls before going off IR.
Number VipCars	0	Number Cars	1		<b>Number of VIP Cars.</b> Number of cars allowed to service VIP (priority service) calls at one time.
OTS NoHCCanc	0	1	0	-	<b>Out of Service No Hall Call Cancelled.</b> Do not cancel hall calls if cars are out of service. This is used in accordance with cross assignment feature.
Recall Timeout	1	600	60	sec	<b>Recall Time-out.</b> The time allowed for the car to reach the recall floor during the emergency power recall sequence. If this timer expires, the next car is selected to recall.
Sabbath Restart	0	3200	8	sec	<b>Sabbath Restart Delay Time.</b> The amount of time after the elevator answered the last sabbath call to restart the process.

Table 9: Group Options					
Field Variable	Min	Max	Initial	Units	Description
SecndRISR Ctl	0	3	0	-	<p><b>Second Riser Control.</b>  <b>Defines the second riser operation.</b>  <b>0</b>=Car defined for second riser answer second riser call and standard hall calls.  <b>1</b>=Car defined for second riser answer only second riser calls.  <b>2</b>=Second riser call or'ed with standard riser calls if second riser operation not selected from input.</p>
SingleAuto PB	0	5	0	-	<p><b>Single Automatic Push Button Operation.</b>  <b>0</b>=Manual Doors (this would be the normal operation for cars with manual doors).  <b>1</b>=Enable SAPB operation for simplex car with automatic doors.  <b>2</b>=Disable SAPB operation for cars with manual doors.  <b>3=Invalid setting.</b>  <b>4</b>=Allow only one car call to be entered at floor for cars with manual doors regardless of the door position.  <b>5</b>=Allow only one car call to be entered at floor for cars with automatic doors.  This feature normally allows only hall calls and car calls to register when the doors are closed.</p>
Skip Car@RcFLDO	0	1	0	-	<p><b>Skip Car at Recall Floor with Door Open.</b>  While on Emergency Power Recall sequence, if enabled, out of service cars at the Emergency Power Recall floor with door open will be given a chance to run.  <b>0</b>=Override immediately.  <b>1</b>=Override after time delay.  Time delay defined by variable 'EP RecoverTim'.</p>
SkipCarN@RcFLDO	0	1	0	-	<p><b>Skip Car Not at Recall Floor with Door Open.</b>  While on Emergency Power Recall sequence, if enabled, out of service cars at the Emergency Power Recall floor with door open will be given a chance to run.  <b>0</b>=Override immediately.  <b>1</b>=Override after time delay.  Time delay defined by variable 'EP RecoverTim'.</p>

Table 9: Group Options					
Field Variable	Min	Max	Initial	Units	Description
ThirdRiser Ctrl	0	1	0	-	<p><b>Third Riser Control.</b>            Defines the third riser operation.  <b>0</b>=Car defined for third riser answers third riser calls and standard hall calls.  <b>1</b>=Car defined for third riser answers only third riser calls.</p>
Vid PosCar1	1	Number Cars	1	car	<p><b>Video Position Car 1.</b>            The column where the car is displayed, on the group screen, starts from left to right for positions 1 through 6 (8 for high rise cars). Car 1 through 6 positions are defaulted to display positions 1 through 6 respectively. Changing the car's video position changes the column where the car is displayed.</p>
Vid PosCar2	1	Number Cars	2	car	<p><b>Video Position Car 2.</b>            See Video Position Car 1 for an explanation.</p>
Vid PosCar3	1	Number Cars	3	car	<p><b>Video Position Car 3.</b>            See Video Position Car 1 for an explanation.</p>
Vid PosCar4	1	Number Cars	4	car	<p><b>Video Position Car 4.</b>            See Video Position Car 1 for an explanation.</p>
Vid PosCar5	1	Number Cars	5	car	<p><b>Video Position Car 5.</b>            See Video Position Car 1 for an explanation.</p>
Vid PosCar6	1	Number Cars	6	car	<p><b>Video Position Car 6.</b>            See Video Position Car 1 for an explanation.</p>
Vid PosCar7	1	Number Cars	7	car	<p><b>Video Position Car 7.</b>            See Video Position Car 1 for an explanation.</p>

Table 9: Group Options					
Field Variable	Min	Max	Initial	Units	Description
Vid PosCar8	1	Number Cars	8	car	<b>Video Position Car 8.</b> See Video Position Car 1 for an explanation.
Vip Button Loc	0	2	0	-	<b>VIP Button Location.</b> <b>0</b> =VIP on VIP Board. <b>1</b> =VIP on HC Board. <b>2</b> =VIP on IR Board.
VIPOperation	0	3	0	-	<b>VIP (Priority Call) Operation.</b> <b>+1</b> =Cancel hall call if no cars available for VIP call. <b>+2</b> =Cancel car call upon initiation of being selected as the VIP car.
X-Assign Cars	0	Number Cars	0	car	<b>Cross Assignment Cars.</b> Number of cars in the old group to assign calls using cross assignment system.

**Table 10: CC & COP Lights**

Field Variable	Min	Max	Initial	Units	Description
Backlight Lt	0	63	0	color	<b>Enable Backlight Output Lights for RGB Style Output Lights in COP.</b> <b>Bit 0:</b> Fire <b>Bit 1:</b> Medical <b>Bit 2:</b> Emergency <b>Bit 3:</b> OTS (Out Of service) <b>Bit 4:</b> Att Up/DnLight <b>Bit 5:</b> Non-CC
CC AttDnBlue	0	100	0	%	<b>Car Call Button Attendant Down Light Blue Intensity.</b>
CC AttDn Bright	0	100	100	%	<b>Car Call Button Attendant Down Light Brightness.</b>
CC AttDn Color	0	15	0	color	<b>Car Call Button Attendant Down Light Color.</b> <b>0 Based on Parameters</b> <b>1 Red</b> <b>2 Orange</b> <b>3 Yellow</b> <b>4 Chartreuse</b> <b>5 Green</b> <b>6 Aquamarine</b> <b>7 Cyan</b> <b>8 Azure</b> <b>9 Blue</b> <b>10 Violet</b> <b>11 Magenta</b> <b>12 Rose</b> <b>13 Rose White</b> <b>14 Warm White</b> <b>15 Cool White</b>
CC AttDnGreen	0	100	0	%	<b>Car Call Button Attendant Down Light Green Intensity.</b>
CC AttDnRed	0	100	100	%	<b>Car Call Button Attendant Down Light Red Intensity.</b>
CC AttUpBlue	0	100	0	%	<b>Car Call Button Attendant Up Light Blue Intensity.</b>
CC AttUpBright	0	100	100	%	<b>Car Call Button Attendant Up Light Brightness.</b>

Table 10: CC &amp; COP Lights

Field Variable	Min	Max	Initial	Units	Description
CC AttUp Color	0	15	0	color	<b>Car Call Button Attendant Up Light Color</b> <b>0 Based on Parameters</b> <b>1 Red</b> <b>2 Orange</b> <b>3 Yellow</b> <b>4 Chartreuse</b> <b>5 Green</b> <b>6 Aquamarine</b> <b>7 Cyan</b> <b>8 Azure</b> <b>9 Blue</b> <b>10 Violet</b> <b>11 Magenta</b> <b>12 Rose</b> <b>13 Rose White</b> <b>14 Warm White</b> <b>15 Cool White</b>
CC AttUpGreen	0	100	100	%	<b>Car Call Button Attendant Up Light Green Intensity.</b>
CC AttUpRed	0	100	0	%	<b>Car Call Button Attendant Up Light Red Intensity.</b>
CCLightCtl	0	3	0		<b>Flashing Car Call Lights.</b> <b>+1=Flash Car Call Security.</b> <b>+2=Flash Attendant Annunciator Sequence.</b>
CCOffBlue	0	100	50	%	<b>Car Call Off Blue Intensity.</b>
CCOffBright	0	100	20	%	<b>Car Call Output Off Brightness For LED.</b>

**Table 10: CC & COP Lights**

Field Variable	Min	Max	Initial	Units	Description
CCOffColor	0	15	15	color	<b>Car Call Button Light Off Color</b> <b>0 Based on Parameters</b> <b>1 Red</b> <b>2 Orange</b> <b>3 Yellow</b> <b>4 Chartreuse</b> <b>5 Green</b> <b>6 Aquamarine</b> <b>7 Cyan</b> <b>8 Azure</b> <b>9 Blue</b> <b>10 Violet</b> <b>11 Magenta</b> <b>12 Rose</b> <b>13 Rose White</b> <b>14 Warm White</b> <b>15 Cool White</b>
CCOffGreen	0	100	100	%	<b>Car Call Off Green Intensity</b>
CCOffRed	0	100	62.5	%	<b>Car Call Off Red Intensity</b>
CCOnBlue	0	100	50	%	<b>Car Call On Blue Intensity</b>
CCOnBright	0	100	100	%	<b>Car Call Output On Brightness For LED</b>

**Table 10: CC & COP Lights**

Field Variable	Min	Max	Initial	Units	Description
CCOnColor	0	15	15	color	<b>Car Call Button Light On Color</b> <b>0 Based on Parameters</b> <b>1 Red</b> <b>2 Orange</b> <b>3 Yellow</b> <b>4 Chartreuse</b> <b>5 Green</b> <b>6 Aquamarine</b> <b>7 Cyan</b> <b>8 Azure</b> <b>9 Blue</b> <b>10 Violet</b> <b>11 Magenta</b> <b>12 Rose</b> <b>13 Rose White</b> <b>14 Warm White</b> <b>15 Cool White</b>
CCOnGreen	0	100	100	%	<b>Car Call On Green Intensity</b>
CC OnRed	0	100	62.5	%	<b>Car Call On Red Intensity</b>
CCSecBlue	0	100	100	%	<b>Car Call Security Light Blue Intensity</b>
CCSecBright	0	100	100	%	<b>Car Call Security Light Brightness</b>

**Table 10: CC & COP Lights**

Field Variable	Min	Max	Initial	Units	Description
CCSecColor	0	15	15	color	<b>Car Call Button Security Color</b> <b>0 Based on Parameters</b> <b>1 Red</b> <b>2 Orange</b> <b>3 Yellow</b> <b>4 Chartreuse</b> <b>5 Green</b> <b>6 Aquamarine</b> <b>7 Cyan</b> <b>8 Azure</b> <b>9 Blue</b> <b>10 Violet</b> <b>11 Magenta</b> <b>12 Rose</b> <b>13 Rose White</b> <b>14 Warm White</b> <b>15 Cool White</b>
CCSecGreen	0	100	0	%	<b>Car Call Security Light Green Intensity</b>
CCSecRed	0	100	100	%	<b>Car Call Security Light Red Intensity</b>
EmerLtBlue	0	100	0	%	<b>Emergency Light Blue Intensity</b>
EmerLtBright	0	100	100	%	<b>Emergency Light Brightness</b>

**Table 10: CC & COP Lights**

Field Variable	Min	Max	Initial	Units	Description
EmerLtColor	0	15	0	color	<b>Emergency Light Color</b> <b>0 Based on Parameters</b> <b>1 Red</b> <b>2 Orange</b> <b>3 Yellow</b> <b>4 Chartreuse</b> <b>5 Green</b> <b>6 Aquamarine</b> <b>7 Cyan</b> <b>8 Azure</b> <b>9 Blue</b> <b>10 Violet</b> <b>11 Magenta</b> <b>12 Rose</b> <b>13 Rose White</b> <b>14 Warm White</b> <b>15 Cool White</b>
EmerLtGreen	0	100	100	%	<b>Emergency Light Green Intensity</b>
EmerLtRed	0	100	75	%	<b>Emergency Light Red Intensity</b>
FireLtBlue	0	100	50	%	<b>Fire Light Blue Intensity</b>
FireLtBright	0	100	100	%	<b>Fire Light Brightness</b>

**Table 10: CC & COP Lights**

Field Variable	Min	Max	Initial	Units	Description
FireLtColor	0	15	0	color	<b>Fire Light Color</b> <b>0 Based on Parameters</b> <b>1 Red</b> <b>2 Orange</b> <b>3 Yellow</b> <b>4 Chartreuse</b> <b>5 Green</b> <b>6 Aquamarine</b> <b>7 Cyan</b> <b>8 Azure</b> <b>9 Blue</b> <b>10 Violet</b> <b>11 Magenta</b> <b>12 Rose</b> <b>13 Rose White</b> <b>14 Warm White</b> <b>15 Cool White</b>
FireLtGreen	0	100	100	%	<b>Fire Light Green Intensity</b>
Fire LtRed	0	100	62.5	%	<b>Fire Light Red Intensity</b>
MedLtBlue	0	100	100	%	<b>Medical Light Blue Intensity</b>
MedLtBright	0	100	100	%	<b>Medical Light Brightness</b>

**Table 10: CC & COP Lights**

Field Variable	Min	Max	Initial	Units	Description
MedLtColor	0	15	0	color	<b>Medical Light Color</b> <b>0 Based on Parameters</b> <b>1 Red</b> <b>2 Orange</b> <b>3 Yellow</b> <b>4 Chartreuse</b> <b>5 Green</b> <b>6 Aquamarine</b> <b>7 Cyan</b> <b>8 Azure</b> <b>9 Blue</b> <b>10 Violet</b> <b>11 Magenta</b> <b>12 Rose</b> <b>13 Rose White</b> <b>14 Warm White</b> <b>15 Cool White</b>
MedLtGreen	0	100	0	%	<b>Medical Light Green Intensity</b>
MedLtRed	0	100	0	%	<b>Medical Light Red Intensity</b>
OTSLtBlue	0	100	0	%	<b>Out of Service Light Blue Intensity</b>
OTSLtBright	0	100	100	%	<b>Out of Service Light Brightness</b>

**Table 10: CC & COP Lights**

Field Variable	Min	Max	Initial	Units	Description
OTSLtColor	0	15	0	color	<b>Out of Service Light Color</b> <b>0 Based on Parameters</b> <b>1 Red</b> <b>2 Orange</b> <b>3 Yellow</b> <b>4 Chartreuse</b> <b>5 Green</b> <b>6 Aquamarine</b> <b>7 Cyan</b> <b>8 Azure</b> <b>9 Blue</b> <b>10 Violet</b> <b>11 Magenta</b> <b>12 Rose</b> <b>13 Rose White</b> <b>14 Warm White</b> <b>15 Cool White</b>
OTSLtGreen	0	100	40	%	<b>Out of Service Light Green Intensity</b>
OTSLtRed	0	100	100	%	<b>Out of Service Light Red Intensity</b>

Table 11: HC & IR Call Lights					
Field Variable	Min	Max	Initial	Units	Description
HCOffBrght	0	100	20	%	<b>Hall Call Light Off Brightness.</b> Select the brightness for LED hall call button when button is NOT pressed. Used only with GAL serial hall button fixtures.
HConBrght	0	100	100	%	<b>Hall Call Light On Brightness for LED Hall Call Buttons.</b> Used only with GAL serial hall button fixtures.
HCDnOffBlue	0	100	50	%	<b>Hall Call Down Light Off Blue Intensity.</b> Used only with GAL serial hall button fixtures.
HCDnOffBrght	0	100	20	%	<b>Hall Call Down Light Off Brightness for LED Hall Call Buttons.</b> Used only with GAL serial hall button fixtures.
HCDnOffColor	0	15	15	color	<b>Hall Call Down Light Off Color.</b> Select what color LED to illuminate on hall call button when button is NOT pressed. Used only with GAL serial hall button fixtures. <b>0 Based on Parameters</b> <b>1 Red</b> <b>2 Orange</b> <b>3 Yellow</b> <b>4 Chartreuse</b> <b>5 Green</b> <b>6 Aquamarine</b> <b>7 Cyan</b> <b>8 Azure</b> <b>9 Blue</b> <b>10 Violet</b> <b>11 Magenta</b> <b>12 Rose</b> <b>13 Rose White</b> <b>14 Warm White</b> <b>15 Cool White</b>
HCDnOffGreen	0	100	100	%	<b>Hall Call Light Down Off Green Intensity.</b> Used only with GAL serial hall button fixtures.
HCDnOffRed	0	100	62.5	%	<b>Hall Call Light Down Off Red Intensit</b> Used only with GAL serial hall button fixtures.

Table 11: HC & IR Call Lights					
Field Variable	Min	Max	Initial	Units	Description
HCDnOnBlue	0	100	50	%	<b>Hall Call Light Down On Blue Intensit</b> Used only with GAL serial hall button fixtures.
HCDnOnBright	0	100	100	%	<b>Hall Call Light Down On Brightness for LED Hall Call Button</b> Used only with GAL serial hall button fixtures.
HCDnOnColor	0	15	15	color	<b>Hall Call Down On Light Color.</b> Select what color LED to illuminate on hall call button when button is pressed. Used only with GAL serial hall button fixtures. <b>0 Based on Parameters</b> <b>1 Red</b> <b>2 Orange</b> <b>3 Yellow</b> <b>4 Chartreuse</b> <b>5 Green</b> <b>6 Aquamarine</b> <b>7 Cyan</b> <b>8 Azure</b> <b>9 Blue</b> <b>10 Violet</b> <b>11 Magenta</b> <b>12 Rose</b> <b>13 Rose White</b> <b>14 Warm White</b> <b>15 Cool White</b>
HCDnOnGreen	0	100	100	%	<b>Hall Call Light Down On Green Intensit</b> Used only with GAL serial hall button fixtures.
HCDnOnRed	0	100	62.5	%	<b>Hall Call Light Down On Red Intensity</b> Used only with GAL serial hall button fixtures.
HCUpOffBlue	0	100	50	%	<b>Hall Call Up Light Off Blue Intensity</b>
HCUpOffBrght	0	100	20	%	<b>Hall Call Up Light Off Brightness for LED</b>

Table 11: HC & IR Call Lights					
Field Variable	Min	Max	Initial	Units	Description
HCUpOffColor	0	15	15		<b>Hall Call Button Up Light Off Color</b> <b>0 Based on Parameters</b> <b>1 Red</b> <b>2 Orange</b> <b>3 Yellow</b> <b>4 Chartreuse</b> <b>5 Green</b> <b>6 Aquamarine</b> <b>7 Cyan</b> <b>8 Azure</b> <b>9 Blue</b> <b>10 Violet</b> <b>11 Magenta</b> <b>12 Rose</b> <b>13 Rose White</b> <b>14 Warm White</b> <b>15 Cool White</b>
HCUpOffGreen	0	100	100	%	<b>Hall Call Up Light Off Green Intensity</b>
HCUpOffRed	0	100	62.5	%	<b>Hall Call Up Light Off Red Intensity</b>
HCUpOnBlue	0	100	50	%	<b>Hall Call UP Light On Blue Intensity</b>
HCUpOnBright	0	100	0	%	<b>Hall Call Up Light On Brightness for LED</b>

Table 11: HC & IR Call Lights					
Field Variable	Min	Max	Initial	Units	Description
HCUponColor	0	15	15	color	<b>Hall Call Button Up Light On Color</b> <b>0 Based on Parameters</b> <b>1 Red</b> <b>2 Orange</b> <b>3 Yellow</b> <b>4 Chartreuse</b> <b>5 Green</b> <b>6 Aquamarine</b> <b>7 Cyan</b> <b>8 Azure</b> <b>9 Blue</b> <b>10 Violet</b> <b>11 Magenta</b> <b>12 Rose</b> <b>13 Rose White</b> <b>14 Warm White</b> <b>15 Cool White</b>
HCUponGreen	0	100	100	%	<b>Hall Call Up Light On Green Intensity</b>
HCUponRed	0	100	62.5	%	<b>Hall Call Up Light On Red Intensity</b>
IRColorCtrl	0	1	0	-	<b>IR Light Color Control</b> <b>0=IR Color.</b> <b>1=HC Color until IR activated.</b>
IRDnOffBlue	0	100	50	%	<b>Hall Call IR Down Light Off Blue Intensity</b>
IRDnOffBrght	0	100	20	%	<b>Hall Call IR Down Light Off Brightness</b>

Table 11: HC & IR Call Lights					
Field Variable	Min	Max	Initial	Units	Description
IRDnOffColor	0	15	15	color	<b>Hall Call IR Down Light Off Color</b> <b>0 Based on Parameters</b> <b>1 Red</b> <b>2 Orange</b> <b>3 Yellow</b> <b>4 Chartreuse</b> <b>5 Green</b> <b>6 Aquamarine</b> <b>7 Cyan</b> <b>8 Azure</b> <b>9 Blue</b> <b>10 Violet</b> <b>11 Magenta</b> <b>12 Rose</b> <b>13 Rose White</b> <b>14 Warm White</b> <b>15 Cool White</b>
IRDnOffGreen	0	100	100	%	<b>Hall Call IR Down Light Off Green Intensity</b>
IRDnOffRed	0	100	62.5	%	<b>Hall Call IR Down Light Off Red Intensity</b>
IRDnOnBlue	0	100	50	%	<b>Hall Call IR Down Light On Blue Intensity</b>
IRDnOnBright	0	100	20	%	<b>Hall Call IR Down Light On Brightness</b>

**Table 11: HC & IR Call Lights**

Field Variable	Min	Max	Initial	Units	Description
IRDnOnColor	0	15	15	color	<b>Hall Call IR Down Light On Color</b> <b>0 Based on Parameters</b> <b>1 Red</b> <b>2 Orange</b> <b>3 Yellow</b> <b>4 Chartreuse</b> <b>5 Green</b> <b>6 Aquamarine</b> <b>7 Cyan</b> <b>8 Azure</b> <b>9 Blue</b> <b>10 Violet</b> <b>11 Magenta</b> <b>12 Rose</b> <b>13 Rose White</b> <b>14 Warm White</b> <b>15 Cool White</b>
IRDnOnGreen	0	100	100	%	<b>Hall Call IR Down Light On Green Intensity</b>
IRDnOnRed	0	100	62.5	%	<b>Hall Call IR Down Light On Red Intensity</b>
IRUpOffBlue	0	100	50	%	<b>Hall Call IR Up Light Off Blue Intensity</b>
IRUpOffBrght	0	100	100	%	<b>Hall Call IR Up Light Off Brightness</b>

Table 11: HC & IR Call Lights					
Field Variable	Min	Max	Initial	Units	Description
IRUpOffColor	0	15	15	color	<b>Hall Call IR Up Light Off Color</b> <b>0 Based on Parameters</b> <b>1 Red</b> <b>2 Orange</b> <b>3 Yellow</b> <b>4 Chartreuse</b> <b>5 Green</b> <b>6 Aquamarine</b> <b>7 Cyan</b> <b>8 Azure</b> <b>9 Blue</b> <b>10 Violet</b> <b>11 Magenta</b> <b>12 Rose</b> <b>13 Rose White</b> <b>14 Warm White</b> <b>15 Cool White</b>
IRUpOffGreen	0	100	100	%	<b>Hall Call IR Up Light Off Green Intensity</b>
IRUpOffRed	0	100	62.5	%	<b>Hall Call IR Up Light Off Red Intensity</b>
IRUpOnBlue	0	100	50	%	<b>Hall Call IR Up On Blue Intensity</b>
IRUpOnBright	0	100	100	%	<b>Hall Call IR Up On Brightness</b>

**Table 11: HC & IR Call Lights**

Field Variable	Min	Max	Initial	Units	Description
IRUpOnColor	0	15	15	color	<b>Hall Call IR Up On Color</b> <b>0 Based on Parameters</b> <b>1 Red</b> <b>2 Orange</b> <b>3 Yellow</b> <b>4 Chartreuse</b> <b>5 Green</b> <b>6 Aquamarine</b> <b>7 Cyan</b> <b>8 Azure</b> <b>9 Blue</b> <b>10 Violet</b> <b>11 Magenta</b> <b>12 Rose</b> <b>13 Rose White</b> <b>14 Warm White</b> <b>15 Cool White</b>
IRUpOnGreen	0	100	100	%	<b>Hall Call IR Up On Green Intensity</b>
IRUpOnRed	0	100	62.5	%	<b>Hall Call IR Up On Red Intensity</b>

<b>Table 12: CB, VIP &amp; Hsec Call Lights</b>					
<b>Field Variable</b>	<b>Min</b>	<b>Max</b>	<b>Initial</b>	<b>Units</b>	<b>Description</b>
CB OffBlue	0	100	100	%	Hall Call CB Light Off Blue Intensity
CBOffBright	0	100	20	%	Hall Call CB Light Off Brightness
CB OffColor	0	15	0	color	Hall Call CB Light Off Color <b>0</b> Based on Parameters <b>1</b> Red <b>2</b> Orange <b>3</b> Yellow <b>4</b> Chartreuse <b>5</b> Green <b>6</b> Aquamarine <b>7</b> Cyan <b>8</b> Azure <b>9</b> Blue <b>10</b> Violet <b>11</b> Magenta <b>12</b> Rose <b>13</b> Rose White <b>14</b> Warm White <b>15</b> Cool White
CBOffGreen	0	100	0	%	Hall Call CB Light Off Green Intensity
CB OffRed	0	100	0	%	Hall Call CB Light Off Red Intensity
CB OnBlue	0	100	100	%	Hall Call CB Light On Blue Intensity
CBOnBright	0	100	100	%	Hall Call CB Light On Brightness

**Table 12: CB, VIP & Hsec Call Lights**

Field Variable	Min	Max	Initial	Units	Description
CB OnColor	0	15	0	color	<b>Hall Call CB Light On Color</b> <b>0 Based on Parameters</b> <b>1 Red</b> <b>2 Orange</b> <b>3 Yellow</b> <b>4 Chartreuse</b> <b>5 Green</b> <b>6 Aquamarine</b> <b>7 Cyan</b> <b>8 Azure</b> <b>9 Blue</b> <b>10 Violet</b> <b>11 Magenta</b> <b>12 Rose</b> <b>13 Rose White</b> <b>14 Warm White</b> <b>15 Cool White</b>
CBOngreen	0	100	0	%	<b>Hall Call CB Light On Green Intensity</b>
CB OnRed	0	100	0	%	<b>Hall Call CB Light On Red Intensity</b>
HC SecBlue	0	100	100	%	<b>Hall Call Light Security Blue On Intensity</b> Used only with GAL serial hall button fixtures.
HCSecBright	0	100	100	%	<b>Hall Call Security Brightness for Secured Floors</b>

Table 12: CB, VIP & Hsec Call Lights					
Field Variable	Min	Max	Initial	Units	Description
HCSecColor	0	15	15	color	<b>Hall Call Security Color</b> Select what color to illuminate the hall buttons when the system is on security. Used only with GAL serial hall button fixtures. <b>0 Based on Parameters</b> 1 Red 2 Orange 3 Yellow 4 Chartreuse 5 Green 6 Aquamarine 7 Cyan 8 Azure 9 Blue 10 Violet 11 Magenta 12 Rose 13 Rose White 14 Warm White 15 Cool White
HC SecCtl	0	7	0	-	<b>Hall Call Button Security Light Control</b> +1=Invert security. +2=Flash security. +4=Master Security Enabled.
HCSecGreen	0	100	0	%	<b>Hall call Light Green Intensity When On Security.</b> Used only with GAL serial hall button fixtures.
HC SecRed	0	100	100	%	<b>Hall Call Light Red Intensity When On Security.</b> Used only with GAL serial hall button fixtures.
Vip OffBlue	0	100	0	%	<b>Hall Call VIP Light Off Blue Intensity</b>
VipOffBright	0	100	20	%	<b>Hall Call VIP Light Off Brightness</b>

**Table 12: CB, VIP & Hsec Call Lights**

Field Variable	Min	Max	Initial	Units	Description
VipOffColor	0	15	0	color	<b>Hall Call VIP Light Off Color</b> <b>0 Based on Parameters</b> <b>1 Red</b> <b>2 Orange</b> <b>3 Yellow</b> <b>4 Chartreuse</b> <b>5 Green</b> <b>6 Aquamarine</b> <b>7 Cyan</b> <b>8 Azure</b> <b>9 Blue</b> <b>10 Violet</b> <b>11 Magenta</b> <b>12 Rose</b> <b>13 Rose White</b> <b>14 Warm White</b> <b>15 Cool White</b>
VipOffGreen	0	100	40	%	<b>Hall Call VIP Light Off Green Intensity</b>
Vip OffRed	0	100	100	%	<b>Hall Call VIP Light Off Red Intensity</b>
Vip OnBlue	0	100	0	%	<b>Hall Call VIP Light On Blue Intensity</b>
VipOnBright	0	100	100	%	<b>Hall Call VIP Light On Brightness</b>

Table 12: CB, VIP & Hsec Call Lights					
Field Variable	Min	Max	Initial	Units	Description
VipOnColor	0	15	0	color	<b>Hall Call VIP Light On Color</b> <b>0 Based on Parameters</b> <b>1 Red</b> <b>2 Orange</b> <b>3 Yellow</b> <b>4 Chartreuse</b> <b>5 Green</b> <b>6 Aquamarine</b> <b>7 Cyan</b> <b>8 Azure</b> <b>9 Blue</b> <b>10 Violet</b> <b>11 Magenta</b> <b>12 Rose</b> <b>13 Rose White</b> <b>14 Warm White</b> <b>15 Cool White</b>
VipOnGreen	0	100	40	%	<b>Hall Call VIP Light On Green Intensity</b>
Vip OnRed	0	100	100	%	<b>Hall Call VIP Light On Red Intensity</b>

**Table 13: System Options**

Field Variable	Min	Max	Initial	Units	Description
Auto Fault Dpy	0	1	0	-	<b>Automatic Fault Display.</b> Enable to automatically display a fault on the LCD screen.
CANBaud Rate	0	1	0	bps	<b>CAN Baud Rate.</b> Set to zero and do not change. Special jobs utilize a different baud rate for CAN Bus. All devices need to be reconfigured for new rate. <b>0</b> =115.2K <b>1</b> =57.6K
CANSync Count	0	7	4	count	<b>CAN Sync Count.</b> Frequency to update CAN Bus devices. Units are 1/4 seconds. It sets Synchronization Count in 250 millisecond increments.
COM1Baud Rate	0	3	0	bps	<b>Com 1 User Interface Baud Rate.</b> <b>Selects the bit rate of the COM 1 serial port.</b> <b>0</b> =2400bps. <b>1</b> =4800bps. <b>2</b> =9600bps. <b>3</b> =19200bps.
Com 1Port Sel	0	3	0	-	<b>Com 1 Port Select.</b> <b>Selects the operation of COM 1 port.</b> <b>0</b> =Comm Diag. <b>1</b> =Comm Debug <b>2</b> =Galcom. <b>3</b> =DL20.
Com 2Baud Rate	0	3	0	bps	<b>COM 2 User Baud Rate.</b> <b>Selects the bit rate of the COM 2 serial port.</b> <b>0</b> =2400bps. <b>1</b> =4800bps. <b>2</b> =9600bps. <b>3</b> =19200bps.

Table 13: System Options					
Field Variable	Min	Max	Initial	Units	Description
Com 2Port Sel	0	3	0	-	<b>Com 2 Port Select.</b> <b>Selects the operation of COM 2 port.</b> <b>0=Comm Diag.</b> <b>1=Comm Debug.</b> <b>2=Galcom.</b> <b>3=DL20.</b>
CPUTimOutput	0	7	0	-	<b>CPU Timing Output.</b> <b>The CPU has three test point pins that output timing signals depending upon the setting of this parameter. These are 5 Volt signals that can be monitored by an oscilloscope.</b> <b>0=Z6 LED 1 second pulse.</b> <b>1=Inc time.</b> <b>2=Grp IO.</b> <b>4=10 msec.</b>
DriveBaud Rate	0	3	0	bps	<b>Drive Baud Rate.</b> <b>0=19200 (HPV-900, DSD-412, HPV-600 and QuattroDrives).</b> <b>1=38400 (KEBDrives).</b> <b>2=57600.</b> <b>3=115000.</b>
DriveModbus	0	5	0	-	<b>Drive Modbus Protocol.</b> <b>0-5 = N1, N2, E1, E2, O1, O2 (Always 8 data bits, parity, stop bits).Used for Delta drive.</b>
DrvUpdate Rate	0	2	0	-	<b>Drive Command Update Rate.</b> <b>Rate at which commands are sent to the drive.</b> <b>0=10 msec (HPV-900, DSD-412, HPV-600 and QuattroDrives).</b> <b>1=15msec.</b> <b>2=20msec.</b>
EEMemoryType	0	1	0	-	<b>EE Memory Type.</b> <b>Selects the type of memory chip used with the TS-5600 CPU.</b> <b>0=STK16C88</b> <b>1=STK16C68.</b> <b>Not used with GALX-1100AN CPU board.</b>

**Table 13: System Options**

Field Variable	Min	Max	Initial	Units	Description
Encoder Baud	0	1	0	bps	<b>Encoder CAN Open Baud Rate.</b> 0=250K bits per second. 1=125K bits per second.
Encoder Intrvl	1	5	3	-	<b>Encoder Interval.</b> Defines the intervals for sampling the encoder reads for calculating speed. Default value of 3 will work on most jobs. For cars with distance feedback from pulses on a tape selector, a value of 5 will work best.
Encoder NodeID	1	127	63	-	<b>Encoder Node ID.</b> Selects the Node ID for the CAN Open encoder. Must be set for the specific vendor's encoder (also see encoder type): 1=Dynapar. 63=Turck 127=Wachendorff. Not used when Encoder Type = 4 (TapeSelector).
Encoder Sample	2	10	10	-	<b>Encoder Samples.</b> Determines the number of samples used to calculate the speed from the encoder. Default values should work in all jobs.
Encoder Type	0	3	0	-	<b>Encoder Type.</b> Selects type of encoder feed back used. 0=CONS file setting. 1=Turck CAN Open Encoder. 2=Dynapar CAN Open Encoder. 3=Wachendorff CAN Open Encoder.
Exclusion FLT 1	0	Max Faults	0	fault	<b>Exclusion Fault 1.</b> Set to fault code number. This prevents faults from being recorded in the fault log. It should only be set for nuisance and noncritical faults. Controller still goes through all the logic for each fault code except a fault is not recorded in the fault log.

Table 13: System Options					
Field Variable	Min	Max	Initial	Units	Description
Exclusion FLT 2	0	Max Faults	0	fault	<b>Exclusion Fault 2.</b> Set to fault code number. This prevents faults from being recorded in the fault log. It should only be set for nuisance and noncritical faults. Controller still goes through all the logic for each fault code except a fault is not recorded in the fault log.
Exclusion FLT 3	0	Max Faults	0	fault	<b>Exclusion Fault 3.</b> Set to fault code number. This prevents faults from being recorded in the fault log. It should only be set for nuisance and noncritical faults. Controller still goes through all the logic for each fault code except a fault is not recorded in the fault log.
Exclusion FLT 4	0	Max Faults	0	fault	<b>Exclusion Fault 4.</b> Set to fault code number. This prevents faults from being recorded in the fault log. It should only be set for nuisance and noncritical faults. Controller still goes through all the logic for each fault code except a fault is not recorded in the fault log.
Exclusion FLT 5	0	Max Faults	0	fault	<b>Exclusion Fault 5.</b> Set to fault code number. This prevents faults from being recorded in the fault log. It should only be set for nuisance and noncritical faults. Controller still goes through all the logic for each fault code except a fault is not recorded in the fault log.
Exclusion FLT 6	0	Max Faults	0	fault	<b>Exclusion Fault 6.</b> Set to fault code number. This prevents faults from being recorded in the fault log. It should only be set for nuisance and noncritical faults. Controller still goes through all the logic for each fault code except a fault is not recorded in the fault log.
KEB Dpy Type	0	1	0	-	<b>KEB Display Type.</b> <b>0</b> =Standard Red LED Display. <b>1</b> =LCD Display. Power must be cycled for change in serial protocol
LowBat CapLev	0	101	50	%	<b>UPS Low Battery Capacity.</b> For UPS Systems, this is the battery level at which the controller will declare a fault due to Low Battery Capacity.

Table 13: System Options					
Field Variable	Min	Max	Initial	Units	Description
Password	0	9999	0	-	<b>Password.</b> Password code to modify and adjust field variables.
Pword Time-out	0	3200	300	sec	<b>Password Time-out.</b> The amount of inactive time for the LCD to lock out the field variables.
RS485COMBaud	0	3	0	bps	<b>RS485 COM Baud Rate.</b> <b>0</b> =2400. <b>1</b> =4800. <b>2</b> =9600. <b>3</b> =19.2K.
SafeTestDay	1	31	0	day	<b>Safety Test Day.</b>
SafeTestMonth	1	12	0	month	<b>Safety Test Month.</b>
SafeTestYear	2000	2999	0	year	<b>Safety Test Year.</b>
ServiceUPS	0	1	0	-	<b>Service UPS Mode.</b> Turning on this parameter disables UPS faults. It should only be used in Construction mode or while servicing the UPS.
UPS Baud Rate	0	3	2	bps	<b>UPS Baud Rate.</b> <b>0</b> =2400. <b>1</b> =4800. <b>2</b> =9600. <b>3</b> =19200.
Video Timeout	0	3200	0	sec	<b>Video Time-out.</b> Turn off the machine room video after this timer times out. This function is disabled when set to zero.

Table 14: Safety Processor Adjustable Variables					
Field Variables	Min	Max	Initial	Units	Description
2Stop	0	1	0		<p><b>2 Stop.</b> Set to 1 if this car travels to only two landings. This parameter tells the Safety Processor that there are no middle door locks.</p>
BuffTyp	0	1	0	-	<p><b>Buffer Type.</b> This parameter is set to 1 when there is a reduced stroke buffer, and enables the use of the ETU and ETD verification limits. This parameter must match the job configuration setting for reduced stroke buffer in the configuration file (CONS) and the ETS board must be detected by the PAL on the 1066 (Safety Processor) board. If all three do not match, the car is not allowed to run.</p>
CANBaud	0	1	0	bps	<p><b>CAN Baud Rate.</b> Sets the baud rate for the CAN Bus. <b>0</b>=115.2K. <b>1</b>=57.6K</p>
ComChk	0	1	0	-	<p><b>Communications Check.</b> This parameter disables the CAN Bus communications check. This variable allows a new Safety Processor Board to be used on older GALaxy I or II controllers that did not use CAN Bus communications. On GALaxy III controllers, the main CPU must have CanBus communications.</p>
CtrlTyp	0	2	0	-	<p><b>Control Type.</b> This parameter tells the Safety Processor what the controller configuration is intended to be. <b>0</b>=Hydro. <b>1</b>=Traction Non-Distance Feedback. <b>2</b>=Traction Distance Feedback.</p>
DTCOUNT	0	10000	12	count	<p><b>DT Count.</b> Number of pulse count after the DT limit is hit when the slowdown velocity check is made.</p>

**Table 14: Safety Processor Adjustable Variables**

Field Variables	Min	Max	Initial	Units	Description
DT Vel	0	500	200	fpm	<p><b>Down Terminal Slowdown Velocity.</b> Maximum velocity to hit the down terminal slowdown “software” limit. The sequence is this: the DT Switch is hit and the software counts the number of pulses set in "DT Count" (See above, set to 12), it is when the "DT Count" elapses that the velocity check is performed. Hitting the limit at a higher velocity than set by this parameter will cause the safety processor board to shut the car down from a velocity error.</p>
DTSVel	0	1600	200	fpm	<p><b>Down Emergency Terminal Slowdown Velocity.</b> Maximum velocity allowed when activating the down terminal slowdown limit. Hitting the limit at a higher velocity will cause the Safety Processor board to shut the car down from a velocity error. For cars with speeds greater than 200 fpm.</p>
DTS2Vel	0	1600	200	fpm	<p><b>Down Emergency Terminal 2 Slowdown Velocity.</b> When the car is setup with reduced stroke buffer, if the car hits the DTS2 limit at a velocity greater than this value, the PAL will drop the RUN and Brake contactors to stop the car.</p>
EncDir	0	1	0	-	<p><b>Encoder Direction.</b> Determines if rotation for the up direction is clockwise or counter-clockwise. <b>0</b> =CW. <b>1</b>=CCW.</p>
EncPPR	10	18000	2048	PPR	<p><b>Encoder PPR.</b> Pulses Per Revolution of the Encoder.</p>
EncRPM	2.5	1800	105	RPM	<p><b>Encoder RPM.</b> Revolutions Per Minute of the Encoder.</p>

Table 14: Safety Processor Adjustable Variables					
Field Variables	Min	Max	Initial	Units	Description
FdbkType	0	4	0	-	<p><b>Feedback Type.</b> Type of feedback used by the Safety Processor to calculate the car's velocity.</p> <p><b>0</b>=Tape. <b>1</b>=Governor Encoder. <b>2</b>=Encoded Tape. <b>3</b>=Governor Pulses. <b>4</b>=Incremental Encoder.</p>
InsVel	0	200	140	fpm	<p><b>Inspection Velocity.</b> Maximum velocity the car is allowed to run on inspection.</p>
LevVel	0	200	140	fpm	<p><b>Leveling Velocity.</b> Maximum velocity the car is allowed to run while leveling with the doors open.</p>
PlsFtim	1	10	2	sec	<p><b>Pulse Count Fault Delay Time.</b> Time delay to detect that the selector pulses have stopped.</p>
Pulses/Ft	1	3200	16	ppf	<p><b>Pulses Per Foot.</b> Number of pulses in one foot.</p>
RearDoors	0	1	0	-	<p><b>Rear Door.</b> Indicates that the car has rear doors and the Safety Processor must verify the rear door gate and locks.</p>
ShortFl	0	3	0	-	<p><b>Short Floor.</b> This parameter informs the Safety Processor there is a short floor at the top or bottom landing. This parameter informs the safety processor that the car can be on floor next to the terminal landing and have the terminal limits still active.</p> <p><b>0</b>=No Short Floor. <b>1</b>=Top Floor. <b>2</b>=Bottom Floor. <b>3</b>=Both.</p>

**Table 14: Safety Processor Adjustable Variables**

Field Variables	Min	Max	Initial	Units	Description
SoftStop	1	10	1	sec	<b>Soft Stop Timer.</b> During a soft stop, the speed command is brought to zero, then the brake is dropped and finally the run outputs are turned off. This timer is used to keep the run outputs from timing out during a soft stop.
SpdChk	0	1	0	-	<b>Speed Check.</b> If the car speed is 150 fpm or less, the Safety Processor Speed Check can be disabled from this variable. <b>If the speed is greater than 150 fpm, the variable can still be disabled but the speed check is made anyway.</b> The speed check function, verifies the car speed on inspection, in leveling with the door open and when the UT, DT, UTS and DTS limits are hit. The Safety Processor will also shut the car down if it stops getting pulses while the car is running (has an up or down run signal).
TopSpd	25	2000	200	fpm	<b>Top Speed or Contract Speed of the car.</b>
UnMotion	0	1	0	-	<b>Unintended Motion Check.</b> <b>0</b> =Enable Motion Check. <b>1</b> =Disable Unintended Motion Check.
UTCOUNT	0	10000	12	count	<b>UT Count.</b> Number of pulse count after the UT limit is hit where the slowdown velocity check is made.
UT Vel	0	500	200	fpm	<b>Up Terminal Slowdown Velocity.</b> Maximum velocity to hit the down terminal slowdown "software" limit. The sequence is this: the UT Switch is hit and the software counts the number of pulses set in "UT Count" (See above, set to 12), it is when the "UT Count" elapses that the velocity check is performed. Hitting the limit at a higher velocity than set by this parameter will cause the safety processor board to shut the car down from a velocity error.

Table 14: Safety Processor Adjustable Variables					
Field Variables	Min	Max	Initial	Units	Description
UTSVel	0	1600	200	fpm	<b>UP Emergency Terminal Slowdown Velocity.</b> Maximum velocity to hit the up terminal slowdown limit. Hitting the limit at a higher velocity will cause the Safety Processor board to shut the car down from a velocity error. For cars with speeds greater than 200 fpm.
UTS2Vel	0	1600	200	fpm	<b>UP Emergency Terminal 2 Slowdown Velocity.</b> When the car is setup with reduced stroke buffer, if the car hits the UTS2 limit at a velocity greater than this value, the PAL will drop the RUN and Brake contactors to stop the car.

**Table15: NTS Processor AdjustableVariables (GALX-0320AN Board)**

Field Variables	Min	Max	Initial	Units	Description
CANBaud Rate	0	1	0	bps	<p><b>CAN Baud Rate.</b> Set the baud rate for the CAN Bus. <b>0</b>=115.2K. <b>1</b>=57.6K</p>
DecRate	50	700	180	fpm/sec	<p><b>Deceleration Rate.</b> Deceleration rate for the demand velocity when an emergency slowdown is commanded.</p>
LevVel	2	25	6	fpm	<p><b>Leveling Velocity.</b> After an emergency slowdown is activated, the demand velocity is reduced at the deceleration rate until the Leveling Velocity is reached. The leveling velocity is demanded until the controller demand velocity to the drive goes below the Leveling Velocity.</p>
NumLim	1	4	4	-	<p><b>Number of Slowdown Limits.</b> The number of Up and Down slowdown limit pairs monitored. UT/DT is counted as one slowdown limit.</p>
DTVel	0	1000	200	fpm	<p><b>Down Terminal Slowdown Velocity.</b> Maximum velocity to hit the down terminal slowdown limit. Hitting the limit at a higher velocity will cause the NTS Processor to initiate an emergency slowdown. The NTS processor will independently decelerate the demand velocity to the drive at the Decel Rate until the Lev Vel is reached. The demand velocity to the drive will stay at the Lev Vel value until the demand velocity from the controller goes below that value.</p>
DT1Vel	0	1000	200	fpm	<p><b>Down Terminal Slowdown Velocity 1.</b> Maximum velocity to hit the down terminal slowdown limit. Hitting the limit at a higher velocity will cause the NTS Processor to initiate an emergency slowdown. The NTS processor will independently decelerate the demand velocity to the drive at the Decel Rate until the Lev Vel is reached. The demand velocity to the drive will stay at the Lev Vel value until the demand velocity from the controller goes below that value.</p>


Table15: NTS Processor AdjustableVariables (GALX-0320AN Board)					
Field Variables	Min	Max	Initial	Units	Description
DT2Vel	0	2000	200	fpm	<b>Down Terminal Slowdown Velocity 2.</b> Maximum velocity to hit the down terminal slowdown limit. Hitting the limit at a higher velocity will cause the NTS Processor to initiate an emergency slowdown. The NTS processor will independently decelerate the demand velocity to the drive at the Decel Rate until the Lev Vel is reached. The demand velocity to the drive will stay at the Lev Vel value until the demand velocity from the controller goes below that value.
DT3Vel	0	2000	200	fpm	<b>Down Terminal Slowdown Velocity 3.</b> Maximum velocity to hit the down terminal slowdown limit. Hitting the limit at a higher velocity will cause the NTS Processor to initiate an emergency slowdown. The NTS processor will independently decelerate the demand velocity to the drive at the Decel Rate until the Lev Vel is reached. The demand velocity to the drive will stay at the Lev Vel value until the demand velocity from the controller goes below that value.
DrvBaud	0	3	0	baud	<b>Drive Baud Rate.</b> <b>0</b> =19200 (HPV-900, DSD-412, HPV-600 and Quattro Drives). <b>1</b> =38400. <b>2</b> =57600. <b>3</b> =11500. (KEB Drives).
MtrRPM	0.5	1800	1170	rpm	<b>Motor RPM.</b> Revolutions per Minute of the Motor.
DrvType	0	3	0	-	<b>Drive Type.</b> Type of drive used. <b>0</b> =HPV-900 (HPV or Quattro). <b>1</b> =DSD-412. <b>2</b> =KEB LED Keypad. <b>3</b> =KEB LCD Keypad.
TopSpd	25	2000	200	fpm	<b>Top Speed.</b> Contract speed of the car.

**Table15: NTS Processor AdjustableVariables (GALX-0320AN Board)**

Field Variables	Min	Max	Initial	Units	Description
UTVel	0	1000	200	fpm	<b>Up Terminal Slowdown Velocity.</b> Maximum velocity to hit the up terminal slowdown limit. Hitting the limit at a higher velocity will cause the NTS Processor to initiate an emergency slowdown. The NTS processor will independently decelerate the demand velocity to the drive at the Decel Rate until the Lev Vel is reached. The demand velocity to the drive will stay at the Lev Vel value until the demand velocity from the controller goes below that value.
UT1Vel	0	1000	200	fpm	<b>Up Terminal Slowdown Velocity 1.</b> Maximum velocity to hit the up terminal slowdown limit. Hitting the limit at a higher velocity will cause the NTS Processor to initiate an emergency slowdown. The NTS processor will independently decelerate the demand velocity to the drive at the Decel Rate until the Lev Vel is reached. The demand velocity to the drive will stay at the Lev Vel value until the demand velocity from the controller goes below that value.
UT2Vel	0	2000	200	fpm	<b>Up Terminal Slowdown Velocity 2.</b> Maximum velocity to hit the up terminal slowdown limit. Hitting the limit at a higher velocity will cause the NTS Processor to initiate an emergency slowdown. The NTS processor will independently decelerate the demand velocity to the drive at the Decel Rate until the Lev Vel is reached. The demand velocity to the drive will stay at the Lev Vel value until the demand velocity from the controller goes below that value.
UT3Vel	0	2000	200	fpm	<b>Up Terminal Slowdown Velocity 3.</b> Maximum velocity to hit the up terminal slowdown limit. Hitting the limit at a higher velocity will cause the NTS Processor to initiate an emergency slowdown. The NTS processor will independently decelerate the demand velocity to the drive at the Decel Rate until the Lev Vel is reached. The demand velocity to the drive will stay at the Lev Vel value until the demand velocity from the controller goes below that value.

## Section 13 - Safety Processor 1066 LCD Interface

### Operating the 1066 LCD Interface

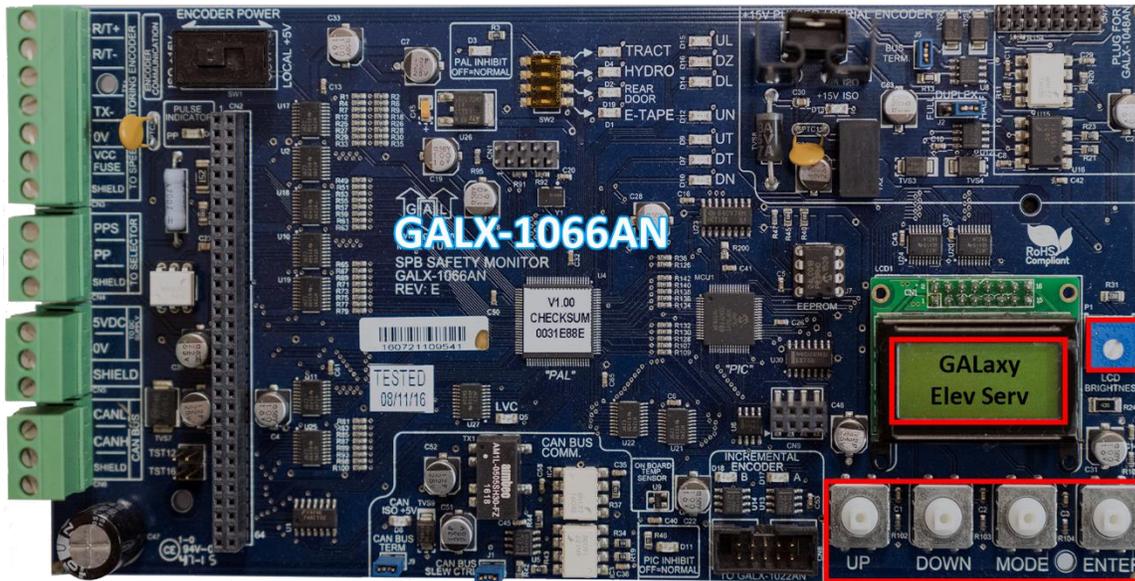

**UP** button is used to scroll up to the next menu item or to increment a data value.



**DOWN** button is used to scroll down to the next menu item or to decrement a data value.



**MODE** button is used to go back to the previous menu or to select a digit of a data value.



**ENTER** button is used to select the menu item or to complete the operation of changing a data value.




**Potentiometer** is used to adjust the viewing angle. It will make the display lighter or darker.


The four input buttons used with the 1066 LCD interface are, UP, DOWN, MODE and ENTER. The UP and DOWN buttons are used to scroll up and down to each menu item. When an appropriate menu item is reached, the ENTER button is used to select the item. Some menu items, once selected, show a second menu. Again, use the UP and DOWN buttons to scroll through the menu items and the ENTER button to select a particular item. The MODE button is used to go back to the previous menu. When a menu item is an adjustable variable, select the item with the ENTER button and change the variable with the UP or DOWN button. The MODE button is used to move the cursor to the next digit. When the appropriate value is reached, use the ENTER button to complete the variable change operation and return to the current menu.

The diagram in the next page illustrates the Safety Processor Functions. All these functions are monitored and any one function can cause the Safety Processor to deny or stop a run.

### Safety Processor Functions

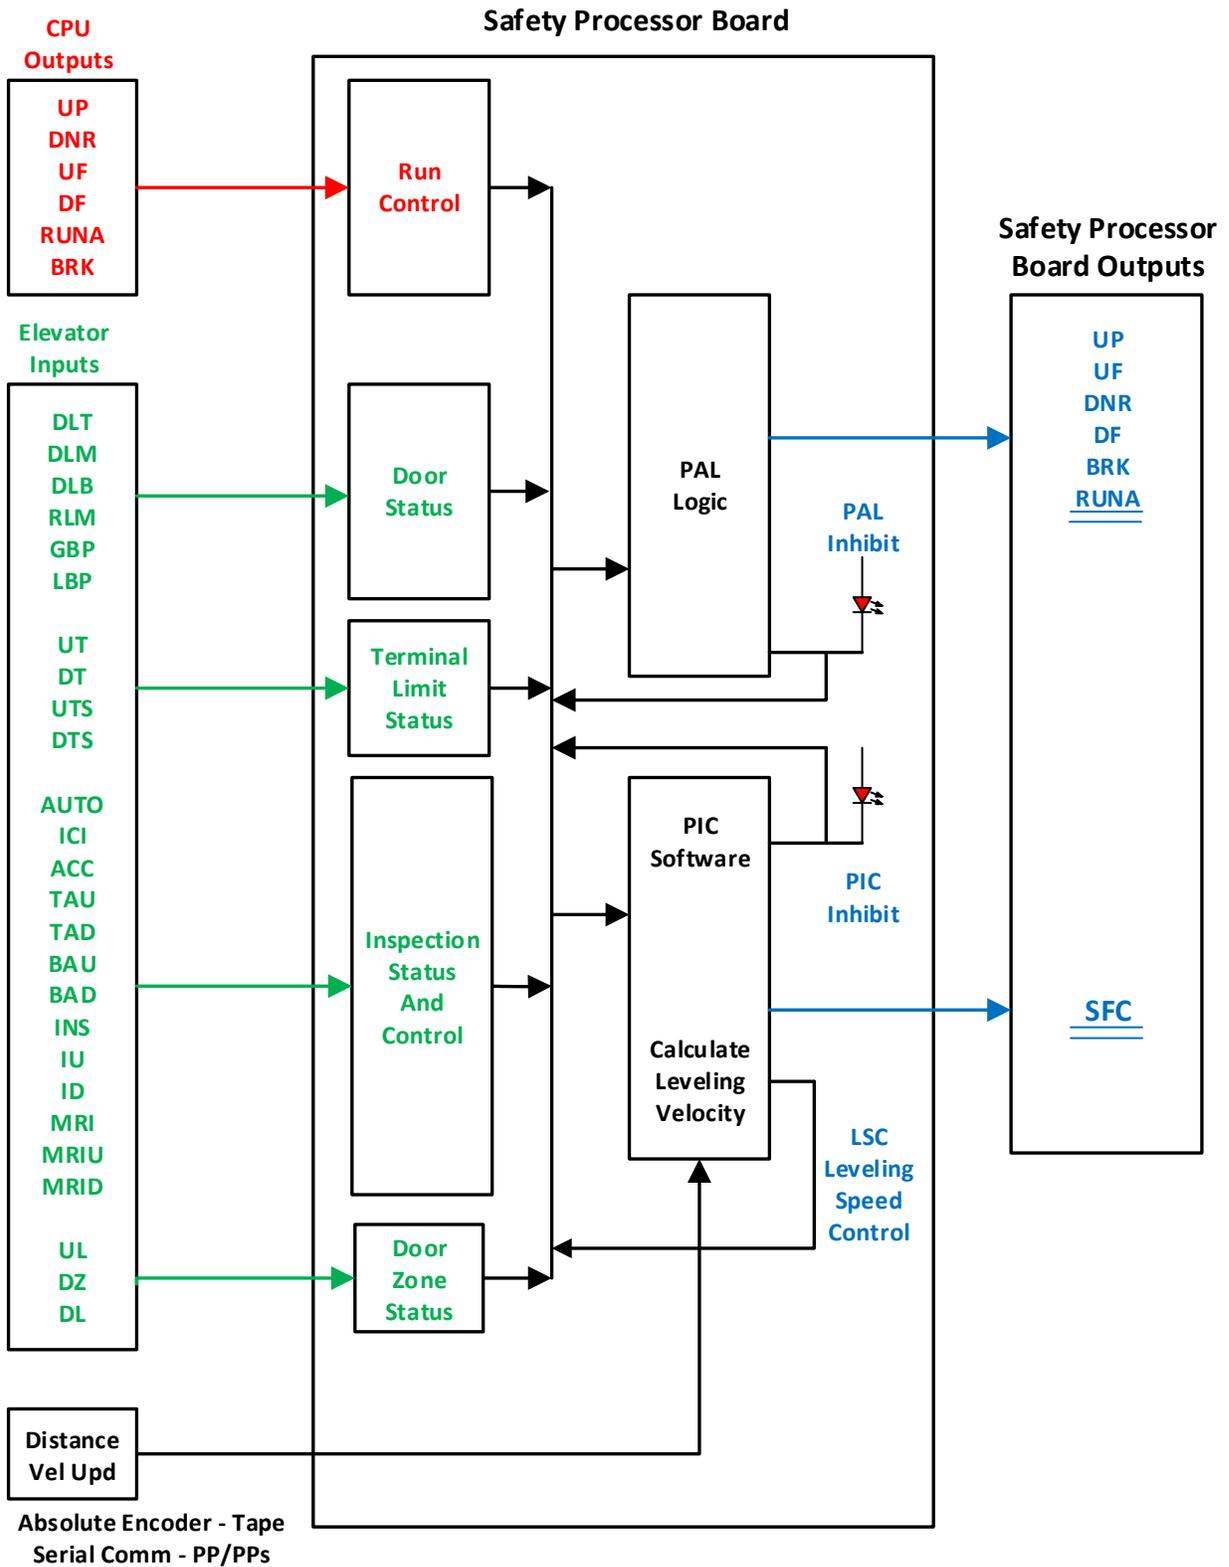


# 1066 LCD Interface Main Menu

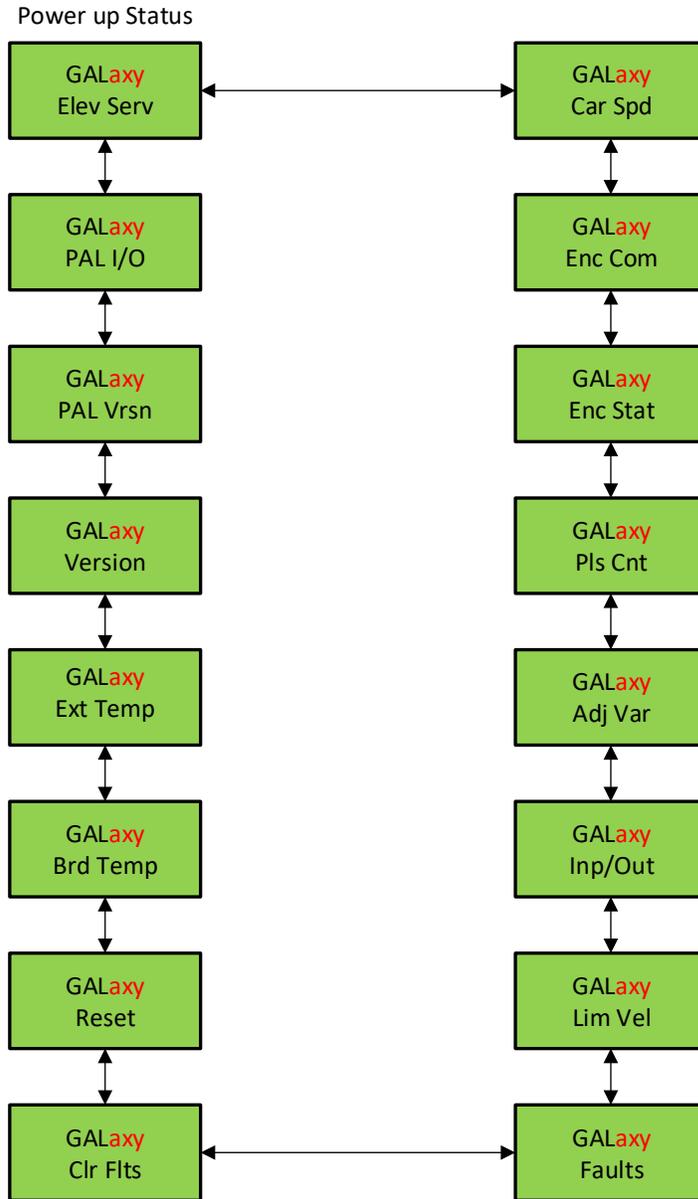

## 1066 LCD Interface Elevator Service


This diagram below shows the current operation type based on the state of the inspection inputs and the gate and lock bypass switch inputs. It also displays the door status based on the condition of the gate and lock inputs. If any inputs are in error, the error status is displayed. The list below describes the different types of status and errors displayed

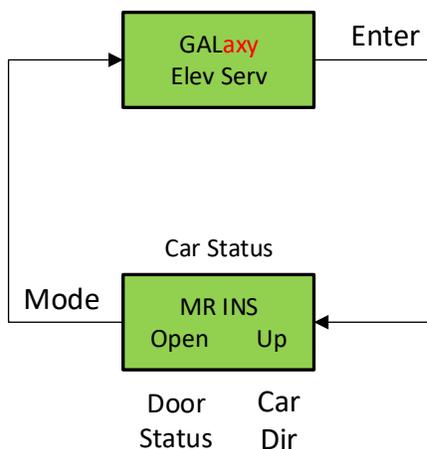


**Table 1: Safety Processor Elevator Service**

<b>Table 1: Safety Processor Elevator Service</b>	
<b>Elevator Service</b>	<b>Condition for Service</b>
AUTO	Auto input is on and all inspection inputs are off.
CT INS	Car is on car top inspection
GATE BYP	Car is on car top inspection and the gate bypass switch is on.
LOCK BYP	Car is on car top inspection and the lock bypass switch is on.
ACCESS	Car is on access operation.
MR INS	Car is on motor room inspection.
IC INS	Car is on in car inspection
INS ERR	An inspection error has occurred. There must be one and only one inspection or auto input on. All inputs are off or more than one input is on.
BYP ERR	A gate or lock bypass switch is on but the car is not on car top inspection.
VEL ERR	The car has a velocity error from inspection speed, leveling speed or a terminal slowdown speed.
UP ERR	The up output is on during power up.
DNR ERR	The down output is on during power up.
DNR/UP	Both up and down outputs are on during power up.
EEP ERR	Safety Processor board has an EEPROM error.
NO UTS	UTS input not detected at top terminal landing.
NO DTS	DTS input not detected at bottom terminal landing.

### 1066 LCD Interface Car Speed

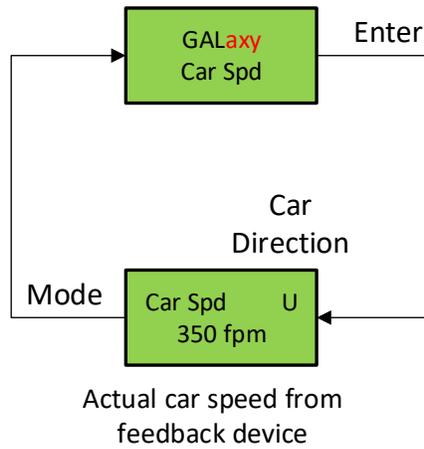


### 1066 LCD Interface Encoder Comm

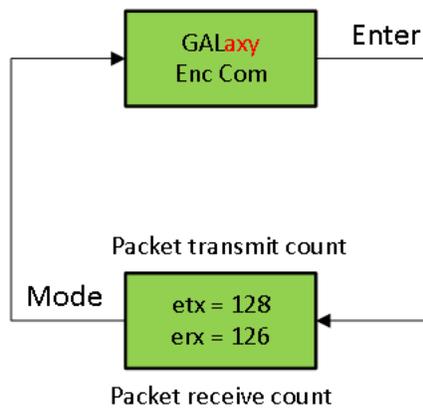


The graphic above shows the communication status between the Safety Processor board and the Turck Absolute Encoder.

The diagram above shows the communications status between the Safety Processor Board and the Turck Absolute Encoder.


# 1066 LCD Interface Encoder Status

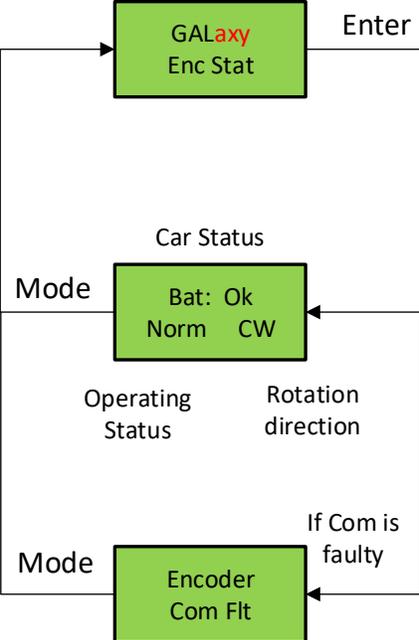


### 1066 LCD Interface Pulse Count

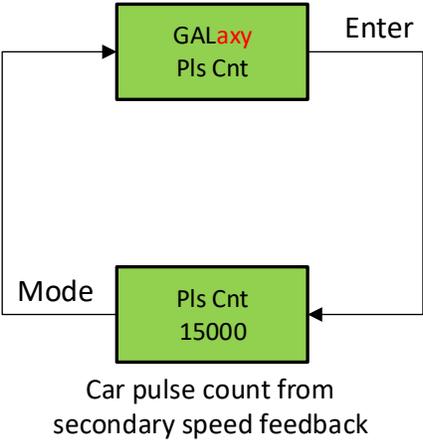

# 1066 LCD Interface Adjustable Variables

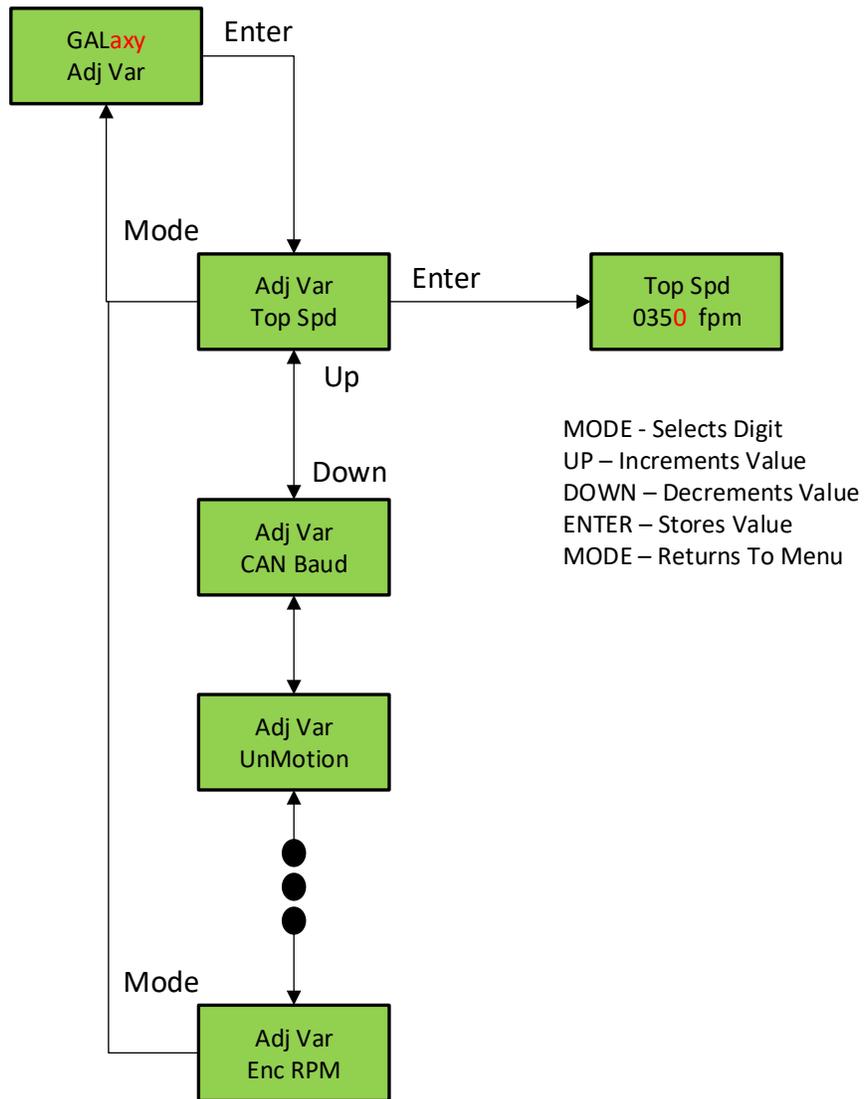

### 1066 LCD Interface Inputs & Outputs

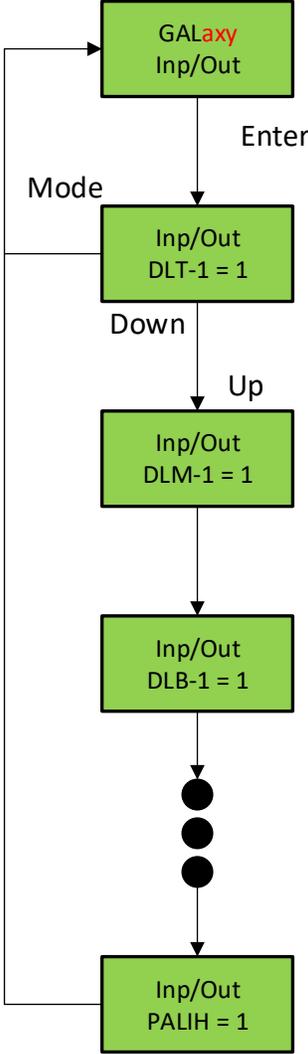


This display shows all of the inputs and outputs for the Safety Processor. The following table lists these I/Os and their associated descriptions.

**Table 3: Safety Processor Inputs & Outputs**

<b>Table 3: Safety Processor Inputs &amp; Outputs</b>	
Name	Description
DLT-1	Door Lock Top Secondary Input. Input equals 1 when the top door lock is made.
DLM-1	Door Lock Middle Secondary Input. Input equals 1 when the middle door locks are made.
DLB-1	Door Lock Bottom Secondary Input. Input equals 1 when the bottom door lock is made.
GS-1	Gate Switch Secondary Input. Input equals 1 when the front door gate switch is made.
RLM-1	Rear Lock Middle Input. Input equals 1 when the rear middle locks are made.
RGS	Rear Gate Switch. Input equals 1 when the rear door gate switch is made.
GBP	Gate Bypass. This is the input from the gate bypass switch. 1=bypass switch is on.
LBP	Lock Bypass. This is the input from the lock bypass switch. 1=bypass switch is on.
MRI	Motor Room Inspection. Input equals 1 when the car is on motor room inspection.
CTI	Car Top Inspection. Input equals 1 when the car is on car top inspection.
ACC	Access. Input equals 1 when the car is on access operation.
ICI	In Car Inspection. Input equals 1 when the car is on in-car inspection operation.
AUTO	Auto Input. Input equals 1 when the car is on automatic operation.
UL-1	Up Level Secondary Input. Input from the selector that the car is on the up level sensor in the door zone.
DL-1	Down Level Secondary Input. Input from the selector that the car is on the down level sensor in the door zone.
UP	Up Run Output. Output from the main CPU when the car is running up.
DNR	Down Run Output. Output from the main CPU when the car is running down.
UTS	Up Emergency Terminal Slowdown. Input goes low when the car is on the up emergency terminal slowdown limit.

<b>Table 3: Safety Processor Inputs &amp; Outputs</b>	
Name	Description
DTS	Down Emergency Terminal Slowdown. Input goes low when the car is on the down emergency terminal slowdown limit.
UT	Up Terminal Slowdown. Input goes low when the car is on the up terminal slowdown limit.
DT	Down Terminal Slowdown. Input goes low when the car is on the down terminal slowdown limit.
LSCS	Leveling Speed Control. Output comes on when the car is traveling less than 150 fpm.
SFCO	Safety Fault Control Output. Output must be on to energize the SFC relay. When this relay is dropped out, the safety string will be opened.
PICEN	PIC Enable. The Safety Processor uses a PIC CPU. This is the enable line to the PAL device that allows the run outputs from main CPU. 1=OK to run.


## 1066 LCD Interface Limit Velocity

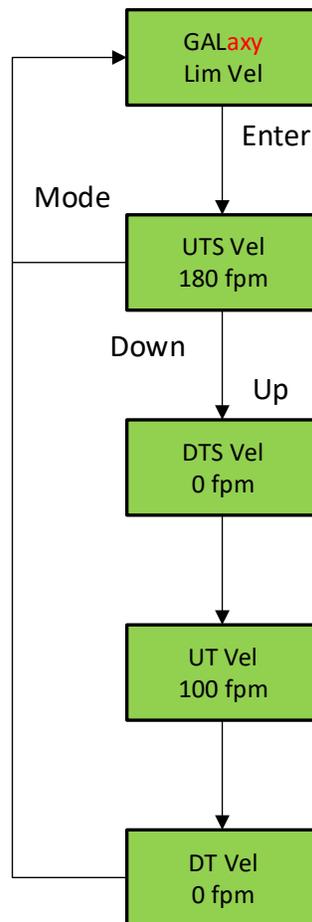

When the car runs to the terminal landings and activates the terminal limit switches, the velocity of the car is recorded at each limit switch. This velocity value is cleared when the car runs in the opposite direction. This display is used to setup the Safety Processor Board speed clamps in the 1066 LCD interface, "Adj Var" menu. Once the car is running on automatic, send the car to the terminal landing and record the velocity values after the car stops. Begin with a one-floor run and increase the distance of the run by one floor until the car reaches top speed.

When the highest value is determined for each limit switch, add 20 fpm and enter those values in the 1066 LCD interface "Adj Var" menu, "UTS Vel", "UT Vel", "DTS Vel", and "DT Vel" respectively.

## 1066 LCD Interface Faults

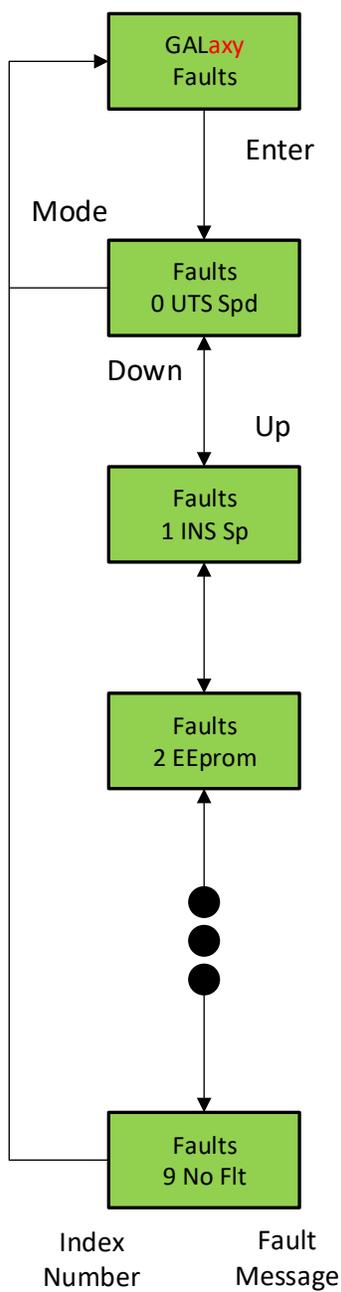

Faults are displayed in the order that they occur with index “0” being the most recent. In the figure above, an EEprom fault occurred followed by an Inspection Speed fault followed by a UTS Speed fault. Any index location that does not yet contain a fault will show “No Flt”.

There are 10 fault locations all of which are cleared on power up or from the Clear Fault menu. Below is a list of faults and their possible causes.

**Table 2: Safety Processor Faults**


Table 4: Safety Processor Faults	
Fault	Description and Cause
DL/GS	Door Lock/Gate Switch Fault. Car is moving outside the door zone with the door open. The car will immediately shut down.
Add Er	Address for Safety Processor Board should not be set internally to a value different than 5. Replace PIC micro controller unit
Com Er	CAN communication with CPU timed out. Safety Processor Board stopped receiving packages from the CPU. This fault always occurs once when the controller powers up.
DT Spd	DT Speed Fault. The car hit the DT limit at a higher velocity than the value set for the DT Velocity adjustable variable. The car will immediately shut down.
DTS Sp	DTS Speed Fault. The car hit the DTS limit at a higher velocity than the value set for the DTS Velocity adjustable variable. The car will immediately shut down.
EEprom	EEprom fault. Defective EEprom device or EEprom device is not installed. The car will not be able to run until the EEprom is installed or replaced.
EncBat	Encoder Battery Error. The encoder uses an internal battery to maintain position of the car when power is off. While the system is powered up and communicating, the Safety Processor Board monitors the status of the encoder battery. If the battery level is too low to maintain the position count, a battery error is declared. Replace the encoder.
EncCom	Encoder Communication Error. Encoder and Safety Processor Board stopped communicating. Possible causes: <ul style="list-style-type: none"> <li>• Improper connection on SPB for R./T+ or R/T-</li> <li>• Faulty driver chip on Safety Processor Board</li> <li>• Improper connection on Encoder</li> </ul>
EncFlt	Encoder Fault. The encoder has detected an internal fault. Replace the encoder.
Enclni	Encoder Initialization Error. On power up of the controller the Safety Processor Board will request the position count from the encoder. If the SPB is unable to receive the position count and the encoder is still communicating, an initialization error will be declared. See possible causes under EncCom error.

Table 4: Safety Processor Faults	
Fault	Description and Cause
EncPos	Encoder Position Error. Once the encoder position count has been initialized during the learn hoistway procedure, the Safety Processor Board will monitor that the count does not go above 30,000,000. If it does, then a position error is declared. Possible causes: <ul style="list-style-type: none"> <li>Faulty encoder coupling to governor</li> <li>Car was lost from fault UT or DT limit switch and ran down. If the count decrements past zero it will roll over to 35,000,000.</li> </ul>
EncVel	Encoder Velocity Error. To calculate velocity from the encoder a position update must be received every 50 milliseconds. If the SBP fails to receive 5 consecutive data packets from the encoder, then the velocity cannot be calculated properly and you will get this error. See EncCom error for possible causes.
INS DO	Inspection Door Open Fault. A door is open while running on inspection and the gate and locks are not being bypassed. The car will immediately shut down.
INS Sp	Inspection Speed Fault. The car exceeded the INS Velocity adjustable variable while running on inspection. The car will immediately shut down.
Invalid	Invalid fault number. (This can only be caused by a programming error in the chip).
IO Flt	I/O Fault. An input is on in error. The Elev Serv display will show the I/O error. Possible causes are as follows: <ul style="list-style-type: none"> <li>All inspection inputs and the auto input are off.</li> <li>More than one inspection or auto input is on at the same time.</li> <li>A bypass input is on while the car is not on Car top inspection.</li> <li>Both up and down run output from the main CPU are on at the same time.</li> </ul>
LEV Sp	Leveling Speed Fault. The car exceeded the LEV Velocity adjustable variable while leveling with a door open. The car will immediately shut down.
No Flt	No fault is recorded in this index location.
PAL Er	<ul style="list-style-type: none"> <li>PAL chip not responding</li> <li>Reset Safety Processor Board</li> <li>Replace PAL chip</li> <li>Replace Safety Processor</li> </ul>


**Table 4: Safety Processor Faults**

Fault	Description and Cause
Pls Er	<p>Pulse Error. Not enough pulses have occurred during the Pulse Fault Time period. This error is detected only on automatic operation. Verify that the pulse LED on the Safety Processor board blinks while the car is running on inspection. Possible causes are as follows:</p> <ul style="list-style-type: none"> <li>• Improper connection for PP and PPS. Refer to the job specific prints.</li> <li>• PP and PPS field wires need to be swapped.</li> <li>• Photocoupler in selector is faulty. Call the Factory.</li> <li>• Voltage from PP to PPS on the Safety Processor Board is less than 15 VDC with the PP and PPS wires disconnected. Call the Factory.</li> </ul>
UmotEr	<p>Unintended motion detected. No up or down run signal and velocity greater than 75 fpm.</p>
UT Spd	<p>UT Speed Fault. The car hit the UT limit at a higher velocity than the value set for the UT Velocity adjustable variable. The car will immediately shut down.</p>
UTS Sp	<p>UTS Speed Fault. The car hit the UTS limit at a higher velocity than the value set for the UTS Velocity adjustable variable. The car will immediately shut down.</p>


### 1066 LCD Interface Clear Faults

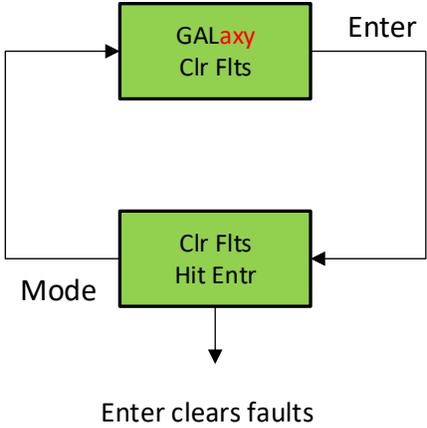

### 1066 LCD Interface Reset Fault Latch

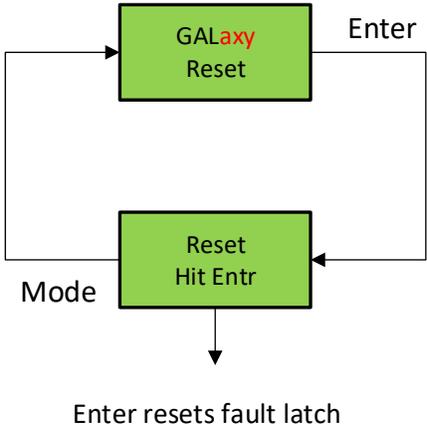


### 1066 LCD Interface Board Temperature

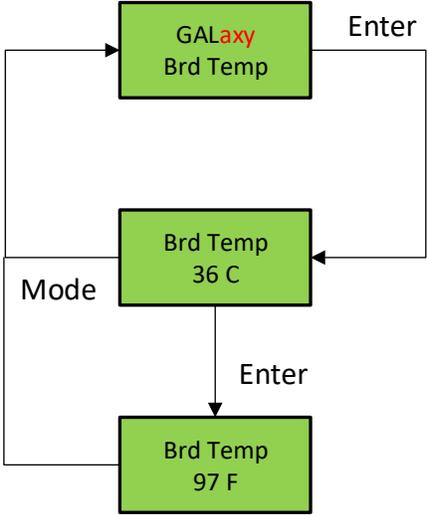

### 1066 LCD Interface External Temperature

**NOTE:** Only valid if external Temperature sensor is provided

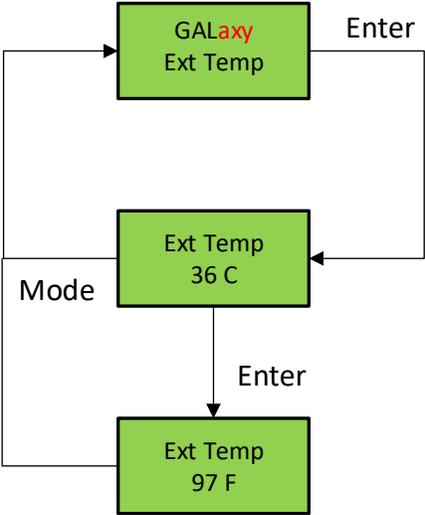


## Section 14 - GALX-0320AN NTSD Board

This board is a retrofit for the GALaxy III Controller.


The board's function is to detect if the set limit velocities are exceeded, if so then the board commands the drive to slow down through the drive communications.

The image below shows the connections and LEDs for the board.



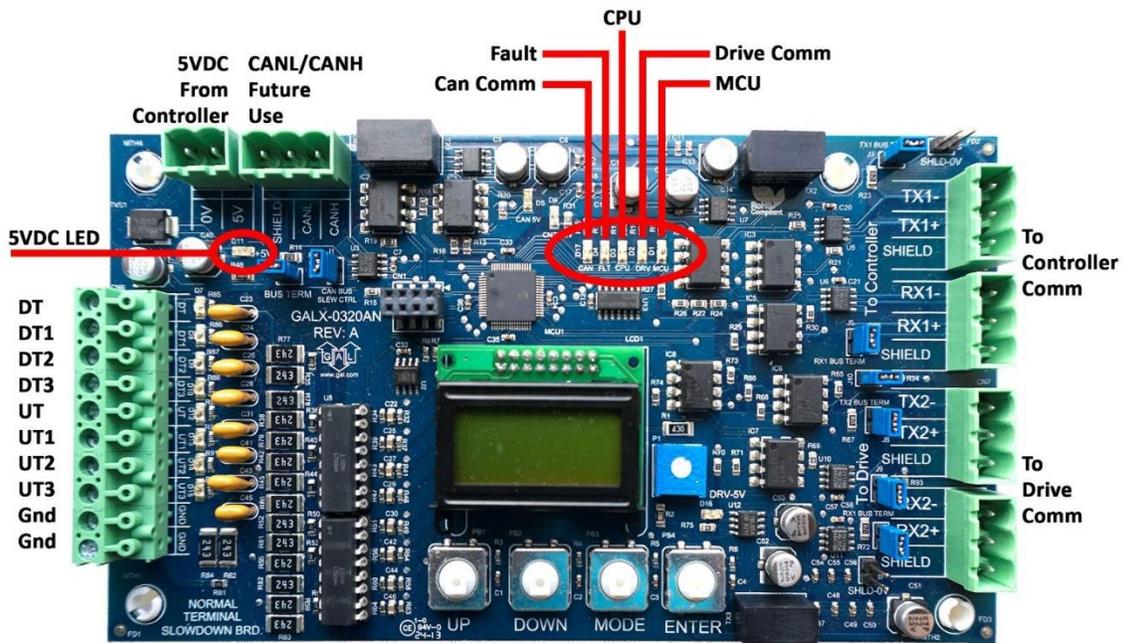


**GALX-0320AN**

In the schematic example below we only monitor DT/UT.

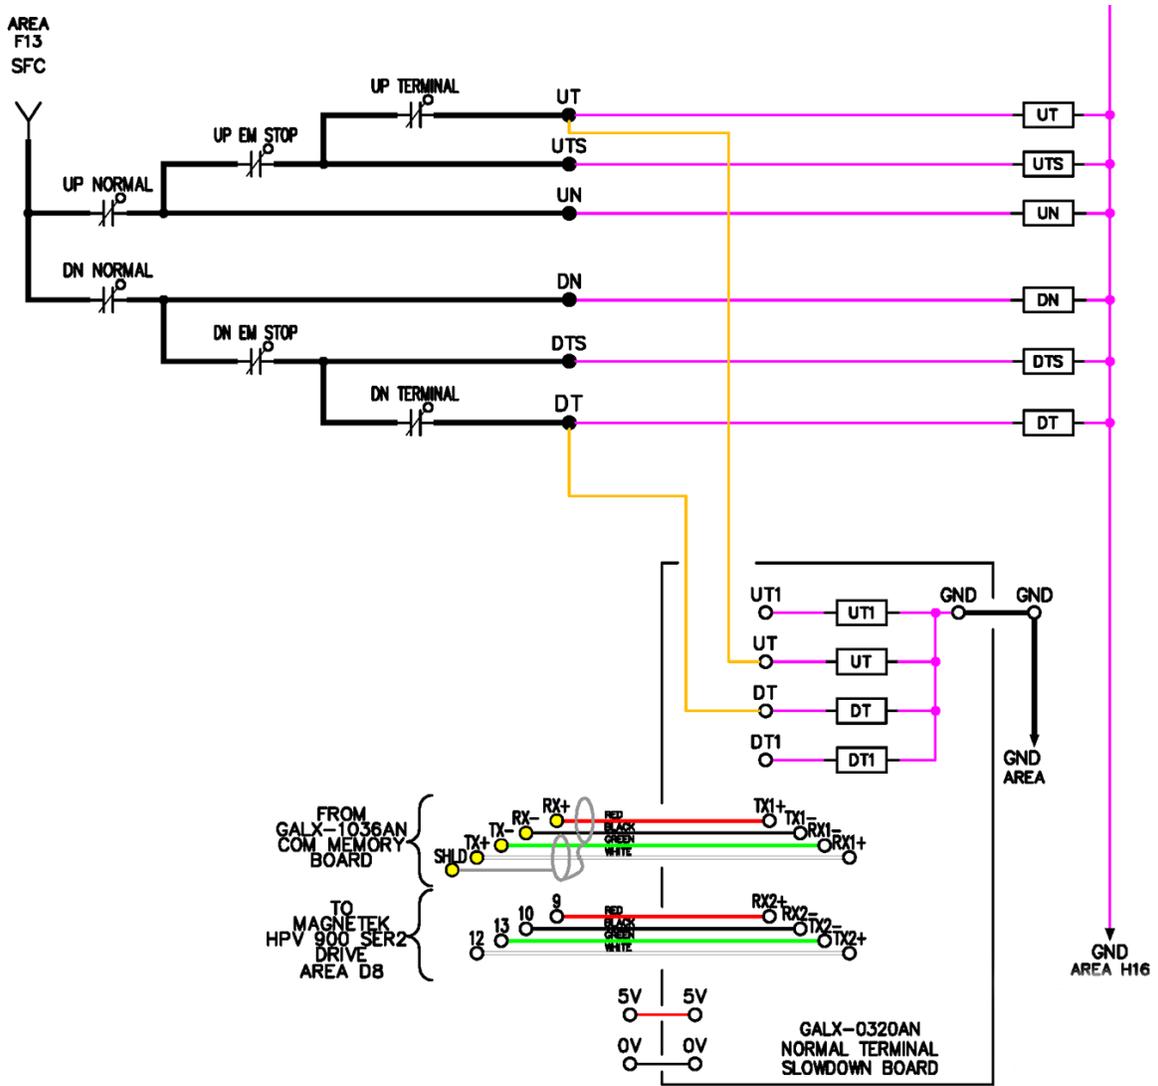

## Connections from GALX-0320AN to various drives

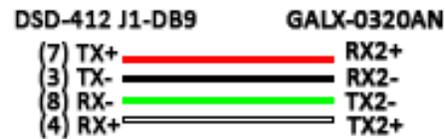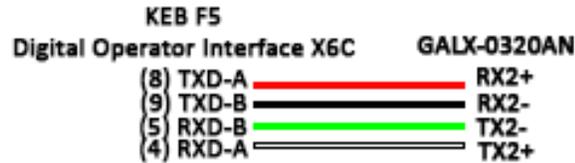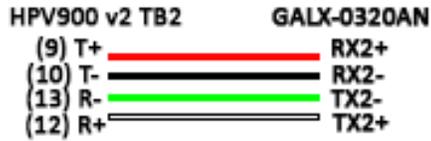

When the board is first installed the GALX-0320AN board has to be inserted into the controller/drive communications. The communications wiring is as follows: Controller -> GALX-0320AN -> Drive.

Next the adjustable variables must be set in the GALX-0320AN.

Top Speed – Number of Pairs of Limits – Drive Type – Drive Baud Rate, must all be set.

The limit velocities in the adjustable variables must be determined using the “Lim Vel” menu. If running on construction mode set the limit velocities to car speed.

Make long runs to the top and bottom floors and write down the values in “Lim Vel” for each of your limits. This menu will display values for the UT limits when you reach the top landing and the DT limits when you reach the bottom landing.

Add 20 to the numbers obtained from the “Lim Vel” menu and enter these numbers in Adj Var->UT Vel, UT1 Vel, etc.

The table below can be used to determine how many limits you should have.

FPM	UT/ DT	UT1/ DT1	UT2/ DT2	UT3/ DT3	UT4/ DT4	UT5/ DT5	UT6/ DT6	UT7/ DT7
50	10"							
100	21"							
150	31"							
200	41"							
250	52"							
300	31"	62"						
350	40"	80"						
400	50"	99"						
450	60"	120"						
500	71"	143"						
600	65"	130"	195"					
700	85"	170"	255"					
800	80"	160"	240"	320"				
900	98"	196"	293"	391"				
1000	93"	187"	280"	374"	467"			
1100	110"	219"	329"	439"	548"			
1200	106"	211"	317"	422"	528"	633"		
1300	103"	206"	310"	413"	516"	619"	723"	
1400	102"	204"	306"	408"	510"	612"	714"	816"

<b>GALX-0320AN Menu Structure</b>		
Run Stat	Normal / Com	Run / Com status
Car Dmd	FPM	Current demand speed from controller
Drv Dmd	FPM	Current demand speed from drive
Car Com	CTX / CRX	Car Com status
Drv Com	DTX / DRX	Drive Com status
Can Com	NTX / NRX	Can Bus Comm status
<b>Adj Var</b>		
Top Spd	FPM	Top Speed of Car
Dec Rate	FPM	Decel Rate
Lev Vel	FPM	Leveling Velocity
Num Limit		Total number of limit pairs (UT/DT= 1 pair)
UT Vel	FPM	Velocity limit for UT
UT1 Vel	FPM	Velocity limit for UT1
UT2 Vel	FPM	Velocity limit for UT2
UT3 Vel	FPM	Velocity limit for UT3
DT Vel	FPM	Velocity limit for DT
DT1 Vel	FPM	Velocity limit for DT1
DT2 Vel	FPM	Velocity limit for DT2
DT3 Vel	FPM	Velocity limit for DT3
Mtr RPM	RPM	Nameplate RPM
Drv Typ	0 - 3	0=HPV 1=DSD412 2=KEB 3=KEBlc (LCD Keypad)
Drv Baud	0 - 3	0=19.2 (HPV, DSD412) 1=38.4 (KEB) 2=57.6 3=115.2
Can Baud	0 - 1	0=115.2, 1=57.6
<b>Inp/Out</b>		
UT	1=made, 0=open	
UT1	1=made, 0=open	
UT2	1=made, 0=open	
UT3	1=made, 0=open	
DT	1=made, 0=open	
DT1	1=made, 0=open	
DT2	1=made, 0=open	
DT3	1=made, 0=open	

<b>Lim Vel</b>	
UT	Speed when limit is opened
UT1	Speed when limit is opened
UT2	Speed when limit is opened
UT3	Speed when limit is opened
DT	Speed when limit is opened
DT1	Speed when limit is opened
DT2	Speed when limit is opened
DT3	Speed when limit is opened
<b>Faults</b>	
UT Spd	UT speed clamp fault. Elevator speed exceeded limit when UT switch opened. Check UT speed clamp parameter.
UT1 SPD	UT1 speed clamp fault. Elevator speed exceeded limit when UT1 switch opened. Check UT1 speed clamp parameter.
UT2 Spd	UT2 speed clamp fault. Elevator speed exceeded limit when UT2 switch opened. Check UT2 speed clamp parameter.
UT3 Spd	UT3 speed clamp fault. Elevator speed exceeded limit when UT3 switch opened. Check UT3 speed clamp parameter.
DT Spd	DT speed clamp fault. Elevator speed exceeded limit when DT switch opened. Check DT speed clamp parameter.
DT1 Spd	DT1 speed clamp fault. Elevator speed exceeded limit when DT1 switch opened. Check DT1 speed clamp parameter.
DT2 Spd	DT2 speed clamp fault. Elevator speed exceeded limit when DT2 switch opened. Check DT2 speed clamp parameter.
DT3 Spd	DT3 speed clamp fault. Elevator speed exceeded limit when DT3 switch opened. Check DT3 speed clamp parameter.
<b>Clr Faults</b>	Clears all current faults
<b>Reset</b>	Resets board
<b>GALaxy Version</b>	Firmware version

## Appendix A - Mnemonics

---

Appendix A will help with the identification of common mnemonics.

Mnemonic	I/O Name
1C-29C	1st – 29th Floor Car Call Inputs
1CA-29CA	1st – 29th Floor Car Call Acknowledge Outputs
1CAR-29CAR	1st – 29th Floor Rear Car Call Acknowledge Outputs
1CR-29CR	1st – 29th Floor Rear Car Call Inputs
1U-28U	1st – 28th Floor Up Hall Call Inputs
1UA-28UA	1st – 28th Floor Up Hall Call Acknowledge Outputs
1UAR-28UAR	1st – 28th Floor Rear Up Hall Call Acknowledge Outputs
1UR-28UR	1st – 28th Floor Rear Up Hall Call Inputs
2D-29D	2nd – 29TH Floor Down Hall Call Inputs
2DA-29DA	2nd – 29th Floor Down Hall Call Acknowledge Outputs
2DAR-29DAR	2nd – 29th Floor Rear Down Hall Call Acknowledge Outputs
2DR-29DR	2nd – 29TH Floor Rear Down Hall Call Inputs
ACC	Access Operation Input.
AD	Automatic Door Switch Input
AD0-AD11	Analog to Digital Input Data
ALT	Alternate Fire Smoke Detector Sensor Input
ATT	Attendant Operation Input.
ATTDN	Attendant Down Input.
ATTUP	Attendant Up Input.
AUTO	Automatic Operation Input.
B16	Binary Position Sensor 16 Input
BAD	Bottom Access Down Input.
BAU	Bottom Access Up Input.
BKC	Brake Cool Pilot Output

<b>Mnemonic</b>	<b>I/O Name</b>
BKS	Brake Switch Input
BP	Fire Phase I Smoke Detector Bypass Input
BP1	Binary Position Sensor 1 Input
BP2	Binary Position Sensor 2 Input
BP4	Binary Position Sensor 4 Input
BP8	Binary Position Sensor 8 Input
BRK	Brake Pilot Output
BRKI	Brake Control Input.
CAR	Car number
CDL	Cab Down Lantern Output
CNV	DAC Convert Output
COL	Counter Weight Collision Switch Input (Traction Elevators)
CUL	Cab Up Lantern Output
DA0-DA7	Digital to Analog Output Data
DC	Door Close Output
DCB	Door Close Button Input
DCBR	Door Close Button Rear Input
DCC	DAC Clear Output
DCL	Door Close Limit Input
DCLR	Door Close Limit Rear Input
DCR	Door Close Rear Output
DCS	DAC Chip Select Output
DDA	Down Direction Arrow Output
DEL	Delta Relay Input
DF	Down Fast Pilot Output
DFI	Down Fast Input
DL	Down Level Sensor Input
DL-1	Down Level Sensor Secondary Input.
DLB	Door Lock Bottom Input.

Mnemonic	I/O Name
DLB-1	Door Lock Bottom Secondary Input
DLM	Door Lock Middle Input
DLM-1	Door Lock Middle Secondary Input
DLT	Door Lock Top Input.
DLT-1	Door Lock Top Secondary Input.
DN	Down Normal Limit Input
Dni	Down Run Input.
DNR	Down Pilot Output
DO	Door Open Output
DOB	Door Open Button Input
DOBR	Door Open Button Rear Input
DOL	Door Open Limit Input
DOLR	Door Open Limit Rear Input
DON	Drive On.
DOR	Door Open Rear Output
DPR	Door Protect Relay Input
DS	Down Slowdown Sensor Input
DT	Down Terminal Limit Input
DT1	Down Terminal Input 1
DT2	Down Terminal Input 2
DT3	Down Terminal Input 3
DZ	Door Zone Relay Input
EE	Electric Eye Input
EER	Electric Eye Rear Input
EMP	Emergency Power Input
EPS	Emergency Power Select Input
EQ	Earthquake Sensor Input
FB	Fire Buzzer Output
FF	Full Field Pilot Output

Mnemonic	I/O Name
FL	Fire Phase I Light Output
FS	Fire Phase I On Hall Switch Input
FS2	Fire Switch Phase II On Input
FS2C	Fire Switch Phase II Call Cancel Input
FS2H	Fire Switch Phase II Hold Input
FST	Fire Stop Switch Override Output
FSTi	Fire Stop Switch Override Input
GBP	Gate Switch Bypass Input.
GR1R	Rope Gripper 1 Relay Output.
GR2R	Rope Gripper 2 Relay Output.
GRT1	Rope Gripper Test Switch Input 1.
GRT2	Rope Gripper Test Switch Input 2.
GS	Car Gate Switch Input
GS-1	Gate Switch Secondary Input.
GTS	Rope Gripper Trip Switch Input.
HB	Handicap Buzzer Output
HBE	Handicap Buzzer Enable Input
HC	Hall Call Common Input
HWS	Hoistway Smoke Sensor Input
ICI	In-Car Inspection Input.
ICR	Inconspicuous Riser Input
ICS	In Car Stop Switch Input
ID	Car Top Inspection Down Input
IND	Independent Input
INS	Car Top Inspection Input
ISER	In Service Output
IU	Car Top Inspection Up Input
LBE	DAC Low Byte Enable Output
LBP	Lock Bypass Input

Mnemonic	I/O Name
LC	Logic Common Input
LD	Down Hall Lantern Output
LDR	Rear Down Hall Lantern Output
LE	Level Enable Output
LE1	Level Enable 1 Output.
LE2	Level Enable 2 Output.
LOA	DAC Load Output
LU	Up Hall Lantern Output
LUR	Rear Up Hall Lantern Output
LW	Load Weighing Bypass Input
MCA	Motor Contactor Output
MCAI	Motor Contactor Input.
MCC	Motor Contactor Output
MCCI	Motor Contactor Input.
MES	Main Egress Smoke Detector Sensor Input
MRI	Motor Room Inspection Input.
MRID	Motor Room Inspection Down Input.
MRIU	Motor Room Inspection Up Input.
MRS	Motor Room Smoke Sensor Input
NB	Nudging Buzzer Output
NUD	Door Nudging Output
NUDR	Door Nudging Rear Output
OT1	OT1 Job Specific Output 1/Fire Service On Output
OT2	OT2 Job Specific Output 2/Motor Starter Timer Relay Output
OT3	OT3 Job Specific Output 3/Generator Pilot Output
OT4	OT4 Job Specific Output 4/Field Weakening Pilot Output
OVL	Overload Input
P	Potential (Run Contactor) Input
P1-P29	1ST – 29th Discrete Floor Position Indicator Outputs

<b>Mnemonic</b>	<b>I/O Name</b>
PFC	Primary Fault Control Output.
RDY	Drive Ready Input
RGS	Rear Car Gate Switch Input.
RGS-1	Rear Car Gate Switch Secondary Input.
RLM	Rear Lock Middle Input.
RLM-1	Rear Lock Middle Secondary Input.
RST	Reset Drive Output
RTL	Return to Lobby Input
RUN	Run Pilot Output
RUNAi	Run Auxiliary Input.
RUNi	Run Input.
SC1	Speed Clamp 1 Output (Used by CPU for setup)
SC2	Speed Clamp 2 Output (Used by CPU for setup)
SC3	Speed Clamp 3 Output (Used by CPU for setup)
SC4	Speed Clamp 4 Output (Used by CPU for setup)
SC5	Speed Clamp 5 Output (Used by CPU for setup)
SE	Safety Edge Input
SER	Safety Edge Rear Input
SPI#	Spare Input, # references input number
SPO#	Spare Output, # references output number
SS	Safety String Input
TAD	Top Access Down Input.
TAU	Top Access Up Input.
TPL	Temp Low Input (Hydraulic Elevators)
UDA	Up Direction Arrow Output
UFi	Up Fast Input
UL	Up Level Sensor Input
UL-1	Up Level Sensor Secondary Input
UN	Up Normal Limit Input

Mnemonic	I/O Name
UP	Up Pilot Output
UPF	Up Fast Pilot Output
UPi	Up Run Input.
US	Up Slowdown Sensor Input
UT	Up Terminal Limit Input
UT1	Up Terminal Input 1
UT2	Up Terminal Input 2
UT3	Up Terminal Input 3

## ***Appendix B - Compliance Testing***

---

Appendix B is a useful guide to performing common compliance tests.

## 1.0 Overspeed Test on a DSD-412

To perform an overspeed test, the mechanic should follow the required precautions and procedures set forth in the local and national elevator codes.

1. With the car on automatic, run the car to the top or bottom (away from the desired test run direction).
2. Access the Overspeed Reference Multiplier parameter (Function #81) in the drive and set to the desired multiplier value (1.25 for 125%).
3. Set the Overspeed % (Function #12) fault trip value to a number greater than the desired over speed.
4. Set the Overspeed Test flag (Function
5. #80) in the drive. This will cause the drive to run over speed for one run.
6. Please note that the “Weak Field Current” parameter (Function #49) may need to be adjusted to allow the car to reach the desired overspeed velocity.
7. On the controller main LCD interface select “Run Overspeed Test” under the Elevator Setup menu. Follow the directions on the LCD display to make sure the automatic door switch is off and the car is level at the floor on automatic operation. Enabling the overspeed test will prevent the CPU from detecting an overspeed condition for one run.
8. Place a car call to run the car in the desired direction to perform the overspeed test.
9. Place the car on inspection and inspect the car.
10. Reset the Overspeed % (Function #12) back to the original setting.
11. When the test is complete, return the car to automatic operation.

If there is any uncertainty about performing this tests with a GALaxy controller, please call toll free at 1 (877) 425-7763 for free technical assistance.

## **2.0 Overspeed Test on a KEB Drive (For AC Geared & PM Gearless)**

To perform an overspeed test, the mechanic should follow the required precautions and procedures set forth in the local and national elevator codes.

1. With the car on automatic, run the car to the top or bottom (away from the desired test run direction).
2. Set LF.20 (car speed) to 135% of the value already there.
3. Set LF.42 (high speed) to 135% of the value already there.
4. In the controller change the following: Adj Var -> Car Motion -> MTR RPM to 125% (or more if necessary) of the value already there.
5. In the controller, go to: Elevator Setup -> Overspeed Test and press "Enter". You can now place a car call in the direction you need to test. The car will overspeed in the desired direction.
6. Return all parameters to the original values.

If there is any uncertainty about performing this tests with a GALaxy controller, please call toll free at 1 (877) 425-7763 for free technical assistance.

## **3.0 Overspeed Test on a HPV-600/900 W Distance Feedback (Also For Quattro Cube)**

To perform an overspeed test, the mechanic should follow the required precautions and procedures set forth in the local and national elevator codes.

7. With the car on automatic, run the car to the top or bottom (away from the desired test run direction).
8. Access the Overspeed Mult parameter (sub menu A1) in the drive and set the % overspeed.
9. Set the Overspeed Test Flag (sub menu U4) in the drive. This will cause the drive to over speed for one run.
10. On the controller main LCD interface, select "Run Overspeed Test" under the Elevator Setup menu. Follow the directions on the LCD display to make sure the automatic door switch is off and the car is level at the floor on automatic operation. Enabling the overspeed test will prevent the CPU from detecting an overspeed condition for one run.
11. Place a car call to run the car in the desired direction to perform the overspeed test.
12. Place the car on inspection and inspect the car.
13. Return the car to automatic operation.

If there is any uncertainty about performing this tests with a GALaxy controller, please call toll free at 1 (877) 425-7763 for free technical assistance.

## 4.0 Buffer Test

To perform a buffer test, the mechanic should follow the required precautions and procedures set forth in the local and national elevator codes. The following test procedure is written to show how to override the car's position system so that it will run into the terminal landing at contract speed but is not intended to circumvent any procedure mandated by the elevator code.

Inspect and prepare the car according to the "Elevator Industry Inspection Handbook". Make sure that the car is loaded properly for the test and that the appropriate car or counterweight safety is tied.

14. For the car buffer test, jump DT, DT1, DT2, DT3 and DTS terminal limits to SFC (110VAC). For the counterweight buffer test, jump UT, UT1, UT2, UT3 and UTS terminal limits also to SFC. Refer to the job schematics specific terminal wiring locations.
15. From the Controller's LCD display, select the "Elevator Setup" menu and then select "Car Buffer Test" or Counterweight Buffer Test".
16. Turn off the automatic door switch. To execute the test, the car must be level at the floor and on automatic operation.
17. The test also cannot be started from a terminal landing. If the car is at a terminal landing, the LCD display will show "To position the car press Enter". Pressing "Enter" will place a car call in the middle of the hoistway. If the car is already positioned properly for the run, the display will give the option to position the car or the skip to the next step.
18. Once the car is located in the correct starting position, select "Run Buffer Test". When the "Enter" button is pressed, the car's position will be modified internally to the top of the hoistway for a car buffer test or to the bottom of the hoistway for a counterweight buffer test. The car will then run high speed to the appropriate buffer.
19. While the car is in motion, the LCD display will change to "Press Enter Button to Cancel Buffer Test". Pressing the "Enter" button will cause the car to execute an emergency slowdown.
20. After the test is complete, place the car on inspection and inspect the car and buffer.
21. Remove all jumpers, remove load weights and untie the car or counterweight safeties if previously tied.
22. Return the car to automatic operation.

If there is any uncertainty about performing this tests with a GALaxy controller, please call G.A.L. toll free at 1 (877) 425-7778 for free technical assistance.

## 5.0 Normal Terminal Slowdown Test

To perform a normal terminal slowdown test, the mechanic should follow the required precautions and procedures set forth in the local and national elevator codes. The following test procedure is written to show how to override the car's position system so that it will run into the terminal landing at contract speed but is not intended to circumvent any procedure mandated by the elevator code.

Inspect and prepare the car according to the "Elevator Industry Inspection Handbook". Make sure that the car is loaded properly for the test.

1. For the bottom normal terminal slowdown test, jump DTS terminal limit to SFC (110VAC). For the top normal terminal slowdown limit test jump UTS terminal limit also to SFC. Refer to the job schematics for specific terminal wiring locations.
2. From the Controller's LCD display, select the "Elevator Setup" menu and then select "Car Buffer Test" to perform a bottom normal terminal slowdown test or "Counterweight Buffer Test" to perform a top terminal slowdown limit test.
3. Turn off the automatic door switch. To execute the test, the car must be level at the floor and on automatic operation.
4. For this test only adjust parameters UT Vel and DT Vel on the Safety Processor Board to contract speed.
5. The test also cannot be started from a terminal landing. If the car is at a terminal landing, the LCD display will show "To position the car press Enter". Pressing "Enter" will place a car call in the middle of the hoistway. If the car is already positioned properly for the run, the display will give the option to position the car or the skip to the next step.
6. Once the car is located in the correct starting position, select "Run Buffer Test". When the "Enter" button is pressed, the car's position will be modified internally to the top of the hoistway for a car buffer test or to the bottom of the hoistway for a counterweight buffer test. The car will then run once high speed to the appropriate limit.
7. While the car is in motion, the LCD display will change to "Press Enter Button to Cancel Buffer Test". Pressing the "Enter" button will cause the car to execute an emergency slowdown.
8. After the test is complete remove all jumpers and adjust the UT Vel and DT Vel parameters on the Safety Processor Board back to their original values.

If there is any uncertainty about performing this tests with a GALaxy controller, please call G.A.L. toll free at 1 (877) 425-7778 for free technical assistance.

## 6.0 Emergency Terminal Limit Test

To perform an emergency terminal limit test, the mechanic should follow the required precautions and procedures set forth in the local and national elevator codes. The following test procedure is written to show how to override the car's position system so that it will run into the terminal landing at contract speed but is not intended to circumvent any procedure mandated by the elevator code.

Inspect and prepare the car according to the "Elevator Industry Inspection Handbook".

Make sure that the car is loaded properly for the test.

1. For the bottom emergency terminal limit test, jump the bottom normal terminal slowdown limit switches DT, DT1, DT2, DT3 depending on how many normal slowdown switches the job has to SFC (110VAC). For the top emergency terminal limit test jump the top normal terminal slowdown limit switches UT, UT1, UT2, UT3 also to SFC. Refer to the job schematics specific terminal wiring locations.
2. From the Controller's LCD display, select the "Elevator Setup" menu and then select "Car Buffer Test" to perform a bottom emergency terminal limit test or "Counterweight Buffer Test" to perform a top emergency terminal limit test.
3. Turn off the automatic door switch. To execute the test, the car must be level at the floor and on automatic operation.
4. The test also cannot be started from a terminal landing. If the car is at a terminal landing, the LCD display will show "To position the car press Enter". Pressing "Enter" will place a car call in the middle of the hoistway. If the car is already positioned properly for the run, the display will give the option to position the car or the skip to the next step.
5. Once the car is located in the correct starting position, select "Run Buffer Test". When the "Enter" button is pressed, the car's position will be modified internally to the top of the hoistway for a car buffer test or to the bottom of the hoistway for a counterweight buffer test. The car will then run once high speed to the appropriate limit.
6. While the car is in motion, the LCD display will change to "Press Enter Button to Cancel Buffer Test". Pressing the "Enter" button will cause the car to execute an emergency slowdown.
7. After the test is complete remove all jumpers.

If there is any uncertainty about performing this tests with a GALaxy controller, please call G.A.L. toll free at 1 (877) 425-7763 for free technical assistance.

## **7.0 Reset Gripper Fault or Emergency Brake Fault**

To reset a rope gripper fault, first verify that the cause of the rope gripper fault has been corrected and then follow the directions below:


1. Place the car on machine room inspection.
2. From the LCD Interface, select the Elevator Setup menu and press the enter button.
3. Use the up or down button to select the “Reset Rope Gripper” menu and press enter.
4. Follow the directions on the screen to press and hold the enter button to reset the gripper.

The enter button must be held for approximately 10 seconds. If the car moves unexpectedly within the 10 second delay time, releasing the enter button will cause the gripper to re-engage.

When the gripper is full reset the screen will display “Gripper is Reset”.

## Appendix C – GALX-1100 CPU

Appendix C is a guide for the latest GAL CPU, the GALX-1100. Please note that this CPU is backwards compatible with previous versions.

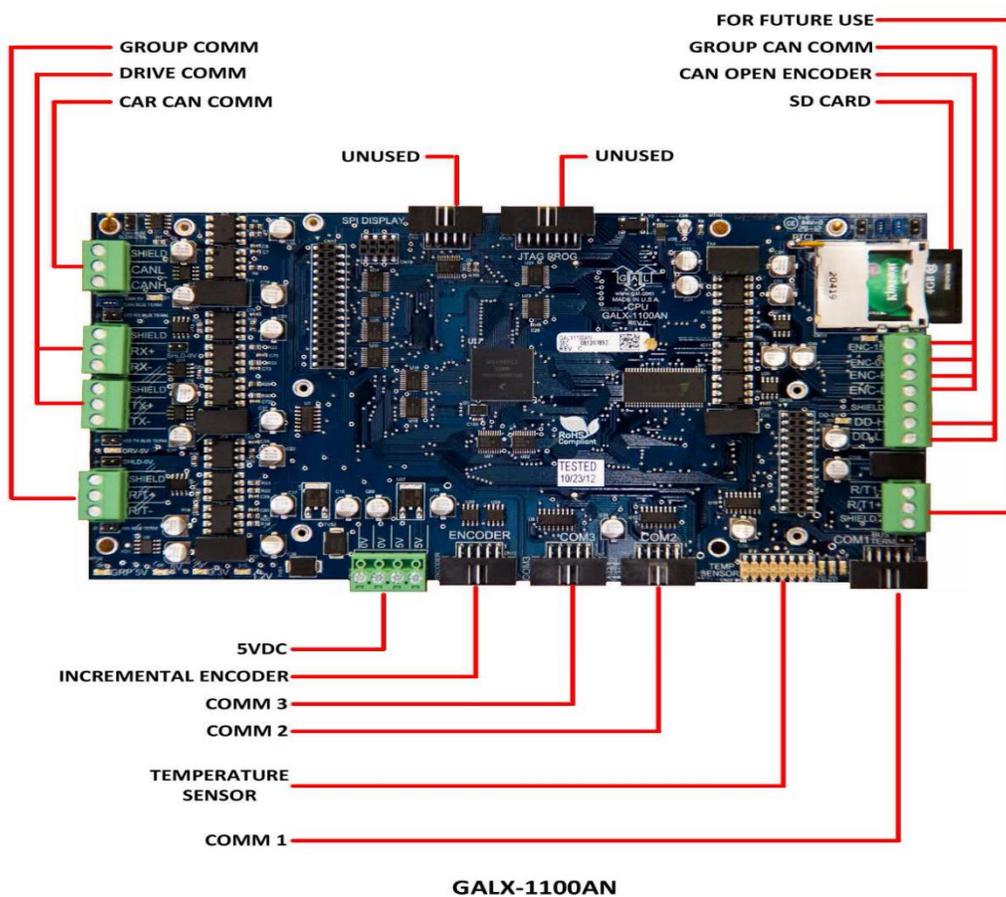

## **GALX-1100 CPU (Replacement CPU for TS-5300 board)**

### **GALX-1100 CPU**

The GALaxy GALX-1100 CPU has been implemented as the replacement board for the previously used TS-5300 CPU (now obsolete). The new CPU uses a dual-core 32-bit Freescale CPU that include all the components and features used on the GALX-1036 COMM Memory Board, the GALX-1092 Encoder Board, the TS-SER2 serial expansion board and the existing TS-5300 CPU. It uses Secured Digital Card storage instead of Compact Flash so that program upgrades and data/parameter storage can be easily transferred to any device that can copy text files from an SD Card file.

The TS-9500 VGA board and GALX- 1021 board combination is replaced with a single GALX-1101 LCD/VGA board. The single GALX-1021/1101/1005 LCD board is replaced with a GALX-1005 LCD board.

### **GALX-1100 CPU Board Replacement- Installation**

Items required for installations: Laptop (to copy configuration file from CF card to SD card), small common screwdriver, USB Card Reader to read and write CF card and SD card, GALX-1100 CPU board, 10-pin encoder cable (supplied with CPU), GALX-1101 LCD/VGA board or GALX- 1005 LCD board, SD card with one of the following controller files: tract.mot, tracthr.mot or hydro.mot files.

The procedure to replace an existing CPU, COMM Memory board and Encoder board is as follows:

Place the car on inspection.

Power the controller off.

Remove the CF card from the existing CPU and copy the cons.dat or conshr.dat file to the SD card for the GALX-1100 CPU.

Disconnect the encoder connector from the encoder board on the stack and then remove all boards off the stack except the 1036 comm memory board.

Disconnect the comm connectors from 1036 board.

Plug in the new CPU on to PC-104 connector on top of the 1036 board.

Install spacers onto new CPU board to support the LCD or LCD/VGA display board and plug in the display board.

Wire the power connector to the new CPU board and then power up the controller.

From the LCD screen, select the Software Utilities menu and then select to "Load 1036 Field Variables". If data is read successful, the field variables are now stored in the new CPU. If not, the parameters must be added manually and the car must be re- adjusted.

From the LCD screen select the menu "Load 1036 Hoistway Setup". If data is read successful, the hoistway setup data and the load weigher data is now stored in the new CPU. If not, the load weigher

must be setup and a hoistway learn must be done once the 1036 board is removed. It is recommended to do a hoistway learn regardless of the outcome of the hoistway read.

Once both the parameter and hoistway data tables are read from the 1036 board, power down the controller, remove the LCD or LCD/VGA board, remove the new CPU and then remove the 1036 board.

Re-install the new CPU adding the required screws and then re- install the LCD or LCD/VGA board also adding the required screws.

Connect the communications connectors that were previously on the 1036 board to the new CPU board.

The new CPU board is supplied with an encoder cable. If the existing system had used a 1092 board, plug in the encoder cable from the 1092 board to the CPU board encoder connector (left most 10-pin connector on the board). If the existing system used a 4130 encoder, replace the encoder cable with the supplied cable from the encoder isolation board to the CPU board.

Power up the controller.

Run the car on inspection making sure the CPU pulse count is incrementing or decrementing in the correct direction. If the direction needs to be reversed, then change the “Encoder Dir” parameter to the opposite value under the “Car Motion” menu listed under the “Adjustable Variables” menu.

Run the hoistway learn setup procedure. (Recommended)

Place the car on automatic with the door service turned off and run the car to verify all is good.

Once the car operation is verified, place the car on inspection and from the “Software Utilities” menu; select the “SD Card Read/Write Data” menu. Select the following menus to save the field variables, job setup, hoistway table, and security and timer information to the SD card: “Write Field Variables”, “Write Job Setup Data”, “Write Hoistway Data”, “Write Service Timers”, and “Write Security Data”.

Remove the SD Card and copy the data to a laptop using an SD card reader.

Replace the SD Card back into the controller CPU. The SD card must be installed in the CPU SD card slot in order for the car to power up properly. The car will not run after power up if the SD card is not installed.

Place the car on automatic service and enable door operation.

Load job software to CPU

The following procedure is used to load the job software to the new CPU:

When the CPU is powered up, the program must be operating in the Power- Up Mode and have an SD Card with the appropriate “.dat” and “.mot” files installed. If controller software is already copied into Flash, either place the car on inspection and from the Software Utilities menu, select to run Power-Up Mode or cycle power on the CPU board while pressing the Mode and Enter button on the LCD Display.

Disconnect the Car to Car communications cable. While the CPU flash is being programmed, the output pins for the Car to Car communications port may be left in an unfavorable state that can prevent it from working properly. It is best to disconnect the cable to avoid loss of communications between the remaining cars.

Once in Power-Up Mode, select the "Update/Verify Program" menu and then select the "Load Program from SDCard" menu.

Press the Enter button to begin the file transfer when prompted to do so. The flash memory will be erased and then the new program will be copied to the onboard flash. Power must be kept on the CPU throughout the entire process.


The display will show "Operation Complete" once the load is finished.

Cycle power on the CPU or hit the Mode button and then select the "Run Controller Program" menu, to run the controller software.

## **LCD Display**


The main menu on the LCD display now shows Software Utilities instead of Software Version to allow for additional features implemented with the new GALX-1100 CPU board. The diagram below shows the new menu items, in yellow, and also includes the latest menu changes.

1100 LCD Interface Main Menu

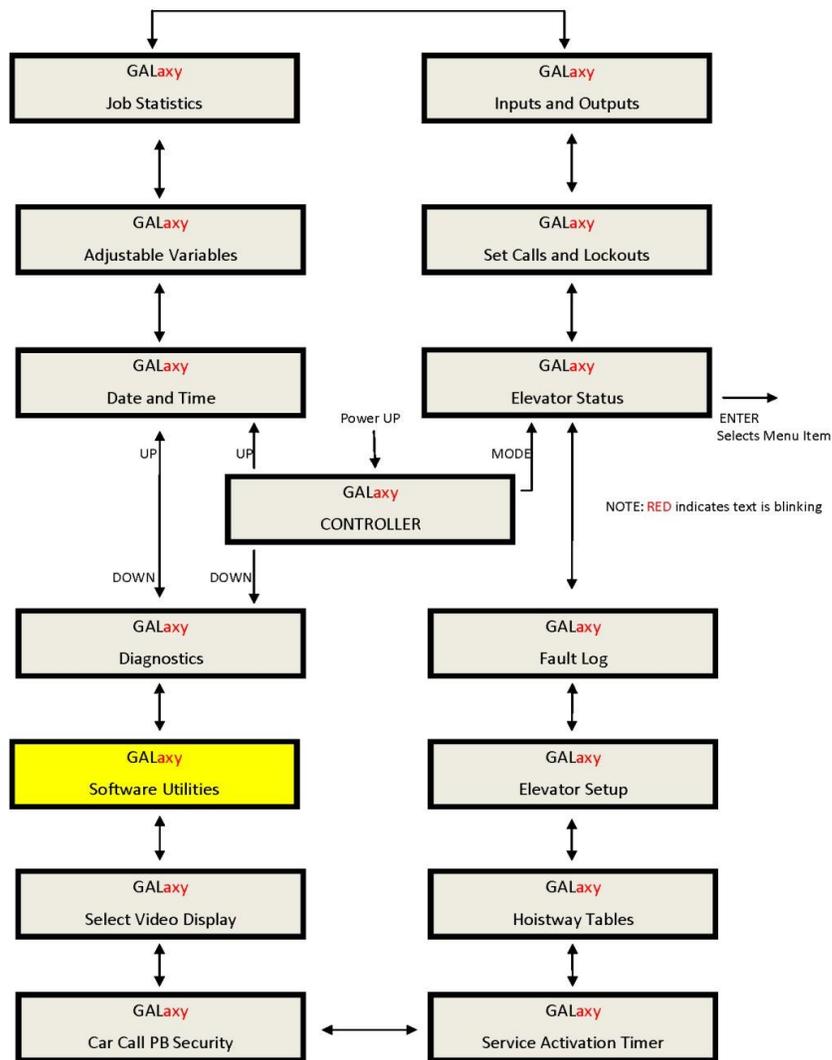

## Software Utilities Menu

The Software Utilities menu provides access to special functions that do not directly affect the adjustment and setup of the controller. Most functions in this menu require that the car be on inspection to execute the operation. The diagram of this menu is shown below:

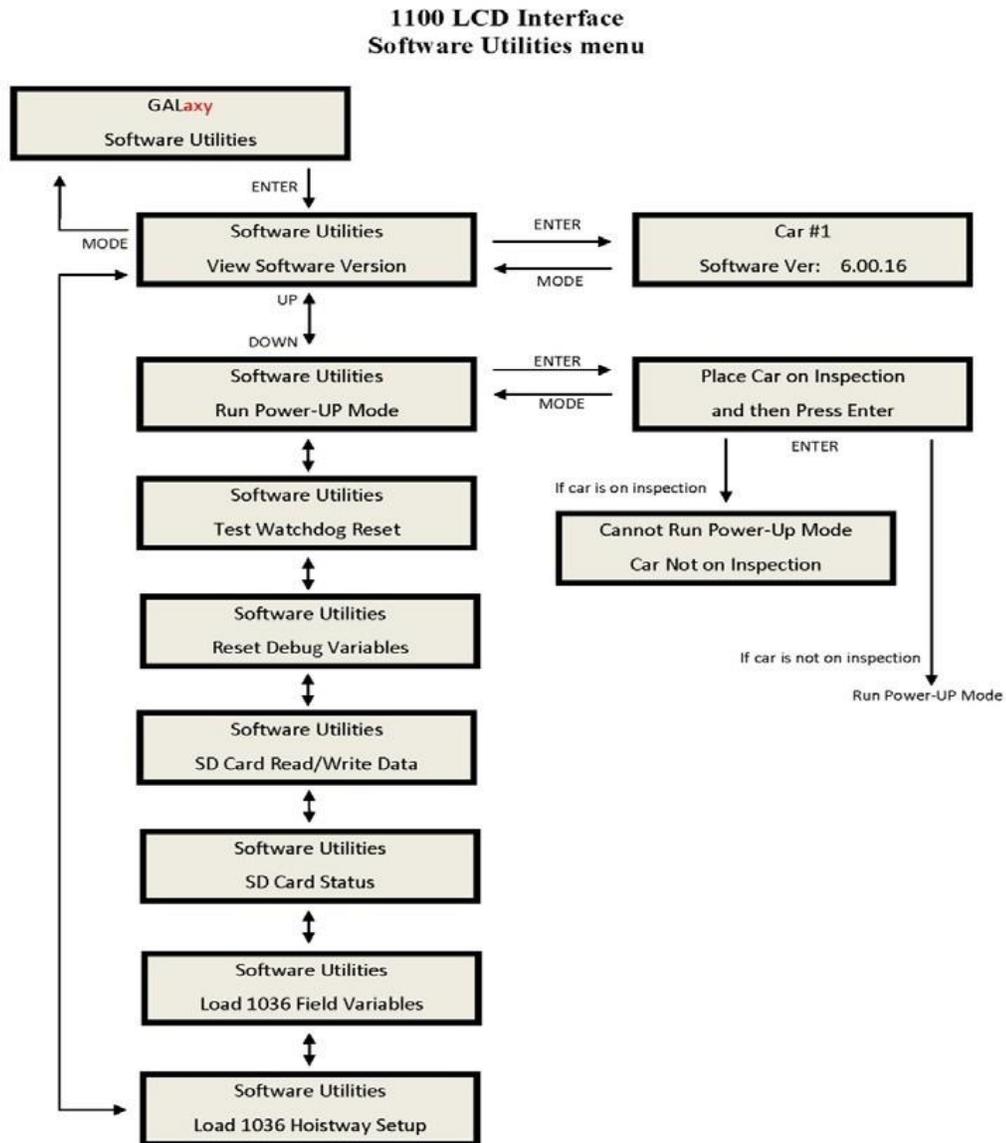


Below is a list of the Software Utilities menu items and the function of each menu:

- **View Software Version** – Display the software version, revision and interim revision in the form 6.00.18.
- **Run Power-Up Mode** – The Power-Up Mode is a program that executes first upon power up of the controller. It checks that there is a valid controller program in memory and that a valid cons.dat file is on the SD Card. Once this is validated, the power up program runs the controller program. If the power up program is executed from the controller program or if during power up, the user presses and holds the enter and mode buttons, this routine does not run the controller program but stays in the power up routine to allow for updates of the controller program.
- **Test Watchdog Reset** – The watchdog is a CPU timer that must be updated periodically in software to confirm that the program is still running correctly. If the watchdog is not updated, the timer will expire and cause the CPU to do a hard reset to allow the program to restart. To test the watchdog timer, when the command is given, the controller program sits in an infinite software loop without updating the watchdog time to test that the reset function works.
- **Reset Debug Variables** – The debug variables are set by a software engineer to aid in debugging a software problem. Some problems are especially difficult to catch because they occur infrequently or at seemingly random times. The debug variables are displayed in the detailed Elevator Status Menu so that a mechanic view the variable and report back to the software engineer. The reset debug variables menu allows the mechanic to reset the variables to zero to aid in debugging.
- **SD Card Read/Write Data** – This menu item allows the user to read and write controller data to and from the SD Card. This menu is explained in detail in the next section.
- **SD Card Status** – This is the Secured Digital Card Status showing if the card has been initialized (Init=1), if it is standard or High Capacity (HC=1), and if it can operate at an acceptable voltage level (VStat=1).
- **Load 1036 Field Variables** – If replacing a TS-5300 CPU board with a GALX-1100 CPU board, the user can have the GALX-1100 CPU read the Adjustable Field Variables from the 1036 board memory before removing the 1036 board.
- **Load 1036 Hoistway Setup** – If replacing a TS-5300 CPU board with a GALX-1100 CPU board, the user can have the GALX-1100 CPU read the Hoistway Setup Data from the 1036 board memory before removing the 1036 board. The Hoistway Data includes the floor position counts, the normal slowdown limit counts, the selector top and bottom counts, the DZU and DZD distances, the up and down floor level distances, the floor offset values, the speed clamp data, the car call security mask, the load weigher setup data and the service timers.

## SD Card Read/Write Data

The SD Card Read/Write Data Menu give the user the ability to store, retrieve and transfer controller data, to and from the controller, the SD Card and to a PC or Laptop. The SD Card Read/Write Data menu is shown below:

### 1100 LCD Interface SD Read/Write Data Sub-menu

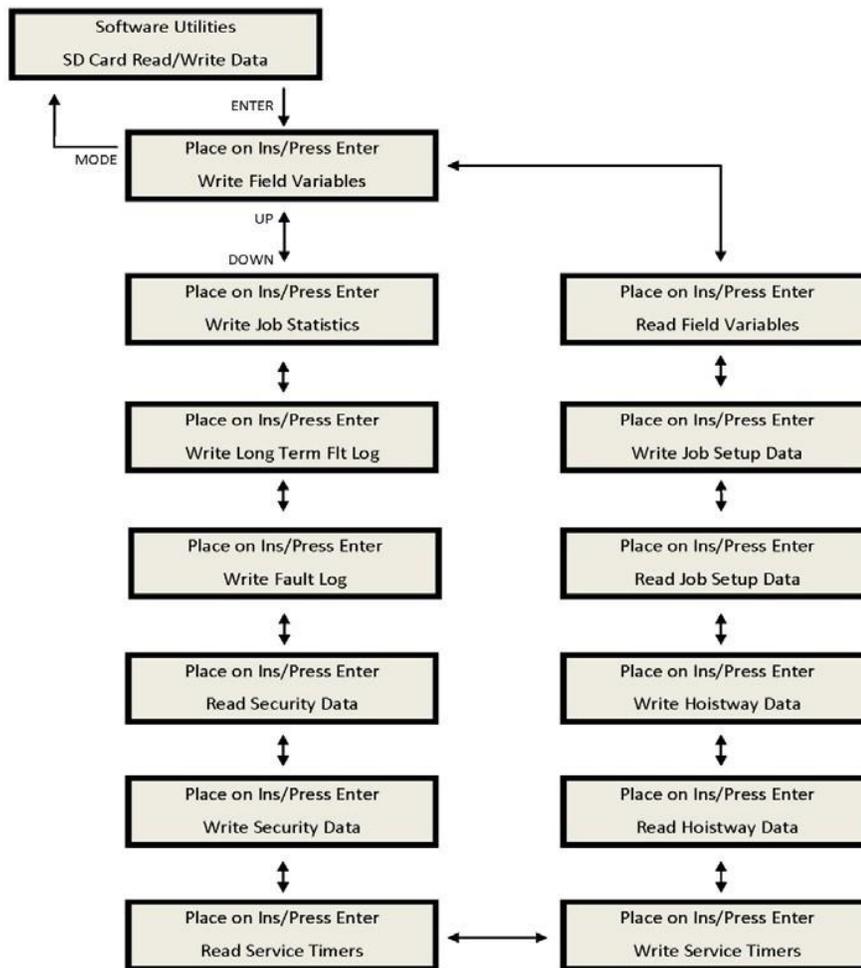


Below is a list of the “SD Card Read/Write Data” menu items and the purpose of each menu. The files written to the SD Card are text files that can be viewed from a Windows text editor such as Note Pad or Word Pad.

- **Write Field Variables** – Write Adjustable Field Variables to a text file, fvars.txt, on the SD Card.
- **Read Field Variables** – Read Adjustable Field Variables from the text file, fvars.txt, on the SD Card.
- **Write Job Setup Data** – Write the job setup data to the setup.txt file on the SD Card.
- The job setup data includes the speed clamp data, car call security mask and load weigher setup data.
- **Read Job Setup Data** – Read the job setup data from the setup.txt file on the SD Card.
- **Write Hoistway Data** – Write the learned hoistway data to the hoistway.txt file on the SD Card. The hoistway data includes the floor position counts, the normal slowdown limit counts, the selector top and bottom counts, the DZU and DZD distances, the up and down floor level distances, and the floor offset values.
- **Read Hoistway Data** – Read the hoistway data from the hoistway.txt file on the SD Card.
- **Write Service Timers** – Write the service timer tables to the SD Card file, svctmr.txt.
- **Read Service Timers** – Read the service timer tables from the SD Card file svctmr.txt.
- **Write Security Data** – Write the security data to the security.txt file on the SD Card.
- This data is the codes tables for each floor for the Push Button Car Call Security option. There are 200 codes per floor.
- **Read Security Data** – Read the security data from the security.txt file on the SD Card.
- **Write Fault Log** – Write the detailed fault data from the standard 50 fault buffer to the SD Card file fault.txt.
- **Write Long Term Fault Log** – Write the long term detailed data to the SD Card file ltfault.txt. Each time a fault occurs, the fault data is stored in the 50 fault buffer and in the long term fault buffer. The long term fault buffer stores the data for 600 faults in a circular buffer that cannot be erased. Since there is so much data, the only way to view the data is by writing the fault data to the SD Card, copying the data to a PC or Laptop and then viewing the data with Note Pad or Word Pad.

Below is an example of the “Write Field Variables” Menu. All other SD Card Read/Write Data menus function in a similar manner.

### 1100 LCD Interface SD Card Read/Write Data Sub-menu

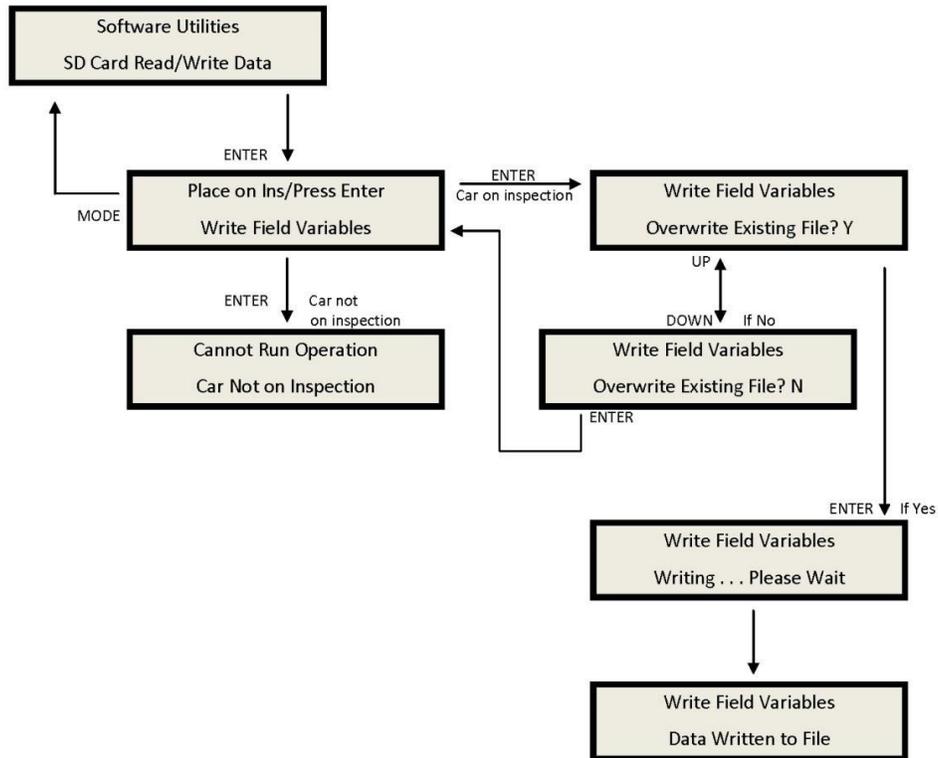

## Detailed Fault Data

The Detailed Fault Data includes additional information from the Safety Processor Board. The typical Detailed Fault would be written to the SD Card as follows:

3 Position Fault 11:18:06 6/05/2007 Position = 1 Occurrences = 1 srv=001, prc=015, drf=000, rdf=000, dpr=000, dir=000, emp=000, med=000 cbl=000, equ=000, fir=000, rfi=000, hsf=000, stf=000, cal=000, esp=000 nst=000, rlv=000, ste=001, pdo=000, st0=000, ins=00h, nds=000, dev=00h pf1=00h, pf2=00h, dv2=00h, io0=02h, io1=f0h, io2=0fh, io3=dch, io4=00h io5=e8h, io6=7fh, io7=84h, io8=3dh, io9=30h, ioA=d0h, ioB=21h, ioC=01h ioD=ffh, statusf=00000100h

DPP Count = 4831446, Target = 815660, Dmd Vel = 0, Enc Vel = 0 SPB Poscnt = 504433, SPB Serv = 0h, SPB Vel = 0, SPB

Stat = 0h

The additional Safety Processor data included in the fault log is described in the table below:

Detailed Fault Data	Description
SPB Poscnt	Safety Processor Board Position Count
SPB Serv	<p>Safety Processor Board Service: 0: Automatic</p> <p>1: Car Top Inspection  2: Gate Bypass Operation  3: Lock Bypass Operation 4: Access  5: Motor Room Inspection  6: In Car Inspection  7: Inspection Error  8: Gate or Lock Bypass Err  9: Velocity Error  10: UP Error on pwrup  11: DNR Error on pwrup  12: Both UNI and DNI inputs  13: EEprom Error  14: No UTS error  15: No DTS error  16: Pulse Error  17: Unintended Motion Error</p>
SPB Vel	Safety Processor Board Velocity in fpm
SPB Stat	<p>Safety Processor Board Status:</p> <p>Bit 0: Secondary Fault Control (SFC Relay 0 = On)  Bit 1: Pic Enable (SPB CPU 1=Okay)  Bit 2: Leveling Speed Control (1=Speed &lt; 150 fpm)  Bit 3: Comm Fault (1=fault)  Bit 4: Velocity Fault (1=fault)  Bit 5: Position Count Initialized (1=initialized)  Bit 6: Active Fault (1=fault)  Bit 7: Position Count updated (1=count updated)</p>